

ESSEX

THE CHALLENGER

BODY PARTS LIST

1 9 3 0

Brougham

Coach Standard Sedan

Touring Sedan Coupe

Cars Numbered 1165674 and Upward

HUDSON MOTOR CAR COMPANY

DETROIT, MICHIGAN, U. S. A.

ESSEX

BODY PARTS LIST



IMPORTANT

The use of genuine Essex parts will insure the satisfactory operation of your car.

There are Hudson-Essex distributors and dealers in all principal cities and towns, equipped to serve you.

For your own protection, insist upon obtaining genuine Essex Parts,

January 1930



HUDSON MOTOR CAR COMPANY
DETROIT, MICHIGAN, U. S. A.

INSTRUCTIONS

FOR ORDERING PARTS

Over 6,800 repair parts stocks are maintained by Essex and Hudson Dealers throughout the United States and Canada, and owners are urged to avail themselves of this service.

- 1 - Order parts through the nearest Distributor or Dealer.
- 2 - Always give PART NUMBER and NAME of each part ordered.
- 3 - Mail and Parcel Post orders should be accompanied by an amount sufficient to cover POSTAGE.
- 4 - Specify how shipments are to be made.
- 5 - Orders for parts should be written separately from correspondence pertaining to other matters.

TELEGRAPHIC CODE

To save expense, to expedite ordering and for your convenience we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts:

Sultex - Ship to me (us) by express.

Sulcline - Ship by express to

Sulkate - Ship to me (us) by freight.

Sulmost - Ship to me (us) by parcel post.

Sulwire - When and how did you ship parts called for in my (our) telegram of

Sultwich - When and how will you ship parts called for in my (our) telegram of

Sulteen - When and how will you ship parts called for in my (our) letter of

WARRANTY

The factory obligation with respect to replacement of alleged defective parts is fully covered by our warranty as follows:

“We warrant the vehicles manufactured by us, whether passenger cars or commercial vehicles, to be free from defects in material under normal use and service, our obligation under this warranty being limited to making good any part or parts thereof which shall, within ninety (90) days after delivery of such vehicle to the original purchaser, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been defective.

“his warranty is expressly in lieu of all other warranties expressed or implied, and of all other obligations or liabilities on our part, and we neither assume nor authorize any other person to assume for us any other liability in connection with the sale of our motor car.

“This warranty shall not apply to any Essex motor car which shall have been repaired or altered outside of our factory in any way so as, in our judgment, to affect its stability or reliability, or which has been subject to misuse, negligence or accident.

“We make no warranty whatsoever in respect to tires, rims, ignition apparatus, tops, upholstery, horns, or other signaling devices, batteries, speedometers or other trade accessories.”

HUDSON MOTOR CAR COMPANY


Detroit, Michigan



The factory does not participate in any labor costs incident to the replacement of parts under the warranty. The warranty under which Essex motor cars are sold will be interpreted by the Distributor or Dealer from whom the car was purchased. If you are touring and require service, be sure to get in touch with your nearest authorized Essex Distributor or Dealer.

INDEX

	Brougham	Coach	Coupe 2-Pass.	Coupe 4-Pass.	Std. Sedan	Touring Sedan
Bodies Complete	7	17	27	27	37	47
Cowl and Dash	7	17	27	27	37	47
Cowl Ventilator	7	17	27	27	37	47
Dome Lamp.	12	22	32	32	42	53
Doors	10	20	30	30	40	50
Door Dovetails and Bumpers	11	21	31	31	41	51
Door Finish Moulding	12	21	31	31	42	51
Door Glass and Channels.	11	21	31	31	41	51
Door Handles	11	20	31	31	41	51
Door Hinges	10	20	30	30	40	50
Door Locks	11	20	30	30	41	51
Door Window Regulator	11	21	30	30	41	51
Floor Carpets	14	24	33	33	44	54
Floor Mats and Pads	14	24	33	33	44	54
Foot Rest	13	...	...	...	...	53
Front Pillar and Windshield Panels	8	18	28	28	38	48
Instrument Panels	8	18	28	28	38	48
Landau Arms	...	12	...	...	...	...
Pillars	9	19	29	29	39	49
Quarter Window.	...	21	...	...	...	52
Quarter Window Regulator	...	22	...	...	...	52
Rear Deck Lid-4-Pass	...	...	...	34	...	...
Rear Deck Lid-2-Pass	...	...	33	...	...	...
Rear Window	12	22	31	31	42	52
Rear Window Regulator	...	...	31	31	...	...
Robe Rail	13	...	...	...	43	53
Rumble Seat	...	...	...	33	...	...
Rumble Seat Steps	...	...	...	34	...	...
Seat and Back Cushions-Front .	13	22	32	32	42	53
Seat and Back Cushions-Rear	13	23	...	...	43	53
Sill Wood Fillers	14	24	33	33	44	54
Smoking Sets	13	...	...	...	43	53
Toe, Floor Boards and Scuff Plates.	13	23	33	33	43	54
Top	12	22	32	32	42	52
Trim Panels-Door, Quarter, Pillar and Header	10	19	29	29	40	50
Weatherstrips, Windlace and Retainers	9	19	29	29	39	49
Windshield	8	18	28	28	38	48
Windshield Visor	...	19	29	29	39	49

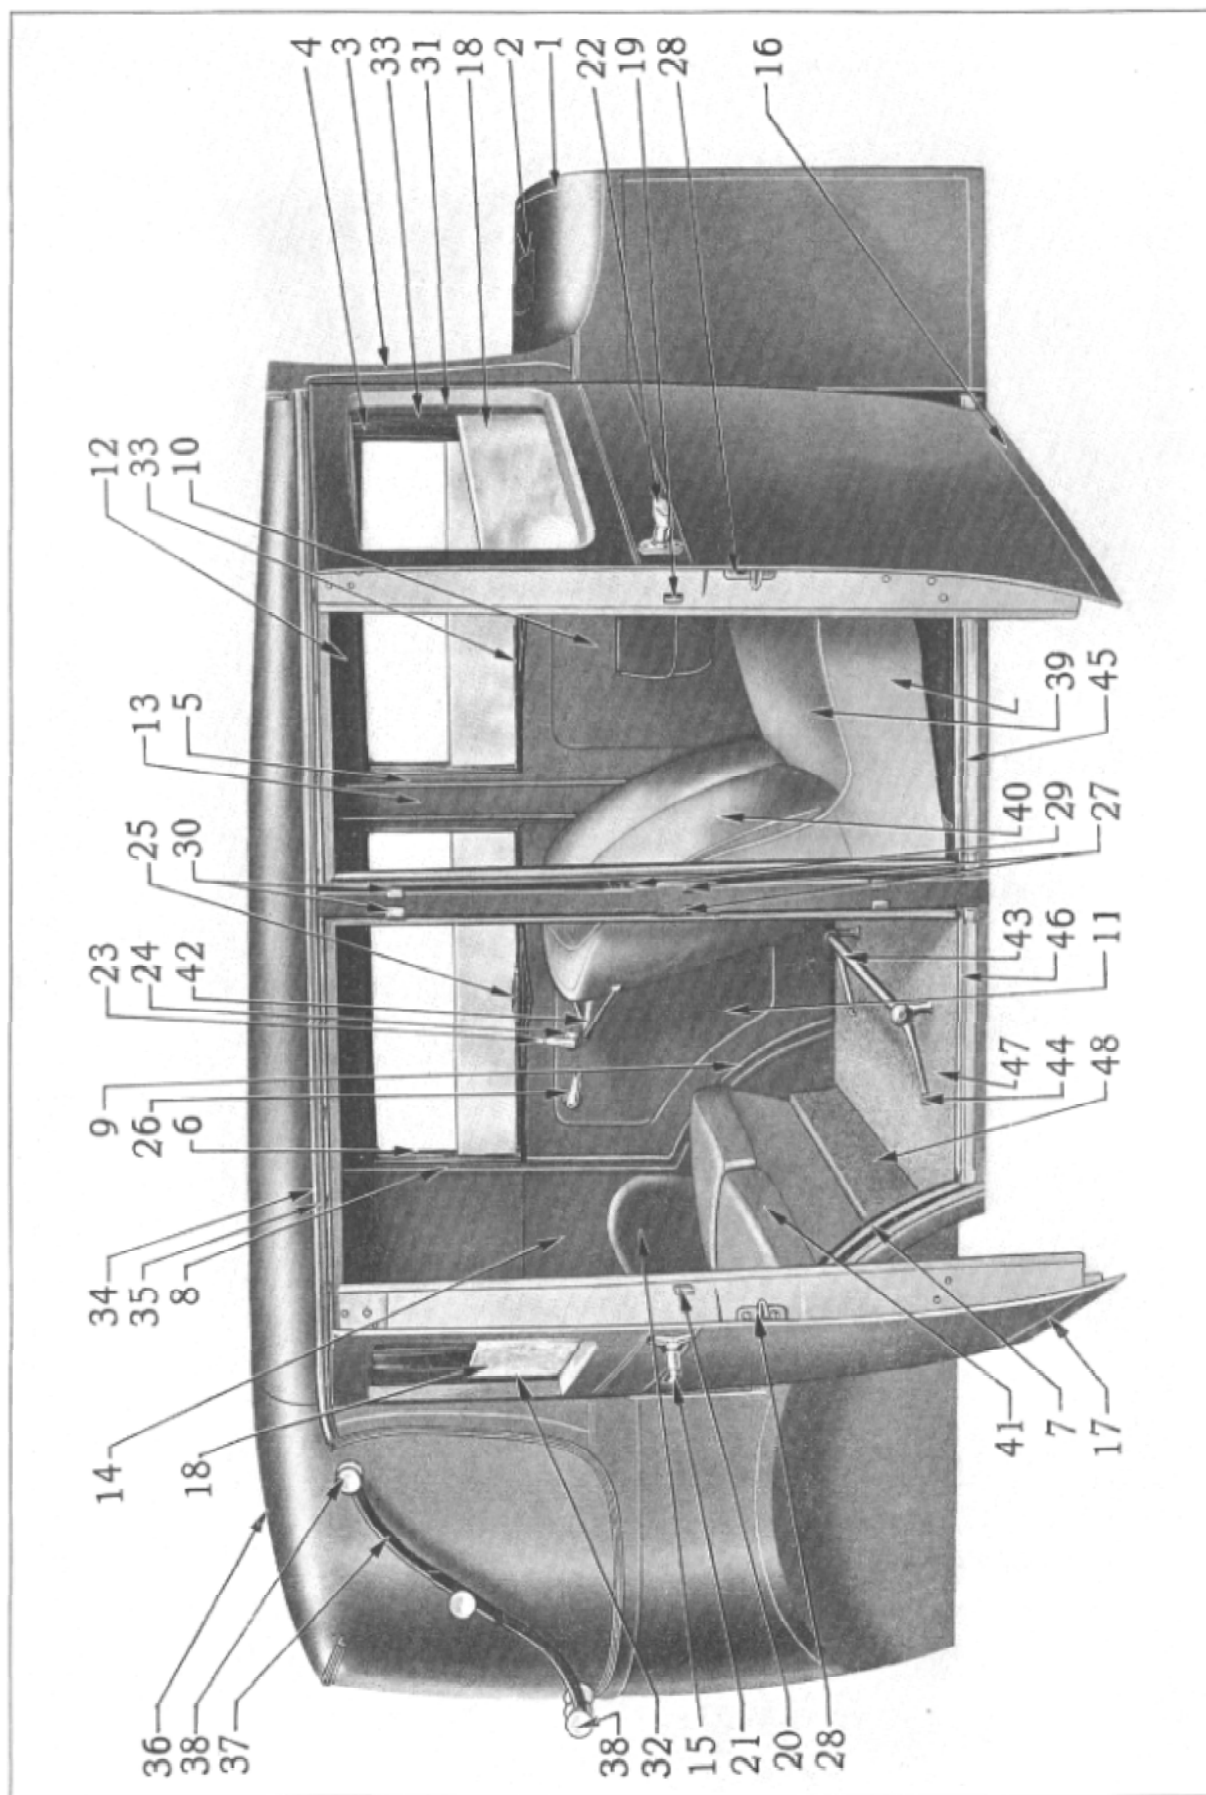

ESSEX BROUGHAM

BROUGHAM BODY

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 85801	Body complete - L. H. D.		1
...	CO 85802	Body complete - R. H. D.		1
...	BO 80472	Body to chassis shim		8
...	BO 87156	Body to chassis shim		2
...	BO 12320	Body bolt	7/16"-14X3-1/4"	8
...	BO 70011	Body bolt	7/16"-14X1-3/4"	2
...	BO 70573	Body bolt nut	7/16"-14x3/8"	10

COWL AND DASH

1	CO 87173	Cowl and dash assembly		1
...	BO 85952	Cowl to windshield belt panel shim		1
...	BO 18392	Cowl to windshield belt panel shim rivet		6
...	BO 85953	Cowl to hinge pillar shim		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 85957	Radiator to bonnet shim		2
...	BO 18353	Radiator to bonnet shim rivet		16
...	BO 85958	Dash to bonnet shim		2
...	BO 70733	Dash to bonnet shim drive screw		20
...	BO 85929	Cowl lamp reinforcement plate assembly		2
...	CO 86322	Cowl quarter kick panel - R. H.		1
...	CO 86323	Cowl quarter kick panel - L. H.		1
...	CO 87604	Cowl quarter kick panel - R. H. (export leather jobs only)		1
...	CO 87605	Cowl quarter kick panel - L. H. (export leather jobs only)		1
...	BO 18470	Cowl quarter kick panel screw		4
...	GO 12316	Cowl quarter kick panel screw finish washer		4
...	BO 70396	Cowl quarter kick panel screw clinch nut		4
...	BO 85776	Cowl quarter kick panel retainer		2
...	BO 85216	Bonnet top hinge cowl bracket assembly		1
...	BO 2352	Bonnet top hinge cowl bracket to dash screw		1
...	BO 86077	Cowl top finish moulding washer (leather)		4
...	CO 85110	Cowl and windshield finish panel reinforcement		1
...	BO 70697	Cowl top finish moulding washer (steel)		4
...	BO 86076	Cowl top finish moulding gasket		1
...	CO 86002	Cowl top finish moulding assembly		1
...	BZ 12799	Cowl top finish moulding stud nut		4
...	BO 70086	Dash panel bonnet hinge bracket clinch nut		1
...	BO 70243	Dash panel rubber ferrule - large		6
...	BO 70504	Radiator shutter wire rubber ferrule		1
...	BO 70142	Dash panel to toe plate flange rubber ferrule		2
...	BO 70662	Spare tire brace rubber ferrule (special equipment)		1
...	BO 70397	Dash panel wire and tubing clip clinch nut		4
...	BO 70399	Dash panel toe plate clinch nut		5
...	BO 70398	Toe plate clinch nut		5

COWL VENTILATOR

2	BO 85788	Cowl ventilator cover assembly - R. H		1
...	BO 86006	Cowl ventilator cover assembly - L. H		1
...	BO 81641	Cowl ventilator drain pipe		2
...	BO 85091	Cowl ventilator cover hinge (cars 1165674 to)		2
...	BO 87600	Cowl ventilator cover hinge - R. H. (cars and upward)		2
...	BO 87601	Cowl ventilator cover hinge - L. H. (cars and upward)		2
...	BO 85421	Cowl ventilator roller guide - R. H		2
...	BO 85422	Cowl ventilator roller guide - L. H		2
...	BO 85417	Cowl ventilator ratchet		2
...	BO 70028	Cowl ventilator ratchet to trough rivet		4
...	BO 18447	Cowl ventilator roller guide to cover hinge screw		2
...	BO 12799	Cowl ventilator roller guide to cover hinge screw nut		2
...	BO 85419	Cowl ventilator handle		2
...	BO 70304	Cowl ventilator handle to roller guide screw		4
...	BO 12799	Cowl ventilator handle to roller guide screw nut		4

COWL VENTILATOR - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85423	Cowl ventilator ratchet roller		2
...	BO 85424	Cowl ventilator trough hinge spacer		4
...	BO 85425	Cowl ventilator spring		2
...	BO 85426	Cowl ventilator weatherstrip		2
...	BO 85880	Cowl ventilator drain tube		2
...	BO 85747	Cowl ventilator drain tube clip		2

FRONT PILLAR AND WINDSHIELD PANELS

3	CO 85461	Front pillar assembly (includes windshield panels)		1
...	BO 18464	Finish panel screw		4
...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	BO 85459	Front hinge pillar to dash brace and toe board riser assembly - R. H.		1
...	BO 85460	Front hinge pillar to dash brace and toe board riser assembly - L. H.		1
...	BO 85074	Front hinge pillar tapping strip		2
...	BO 18464	Front hinge pillar tapping strip screw		4
...	BO 70398	Windshield header finish panel clinch nut		2
...	BO 85777	Windshield garnish moulding - R. H.		1
...	BO 85778	Windshield garnish moulding - L. H.		1
...	BO 70397	Front hinge pillar clinch nut		2
...	BO 70395	Windshield panel reinforcement clinch nut		6
...	BO 70128	Windshield header finish panel screw		4
...	BO 70452	Windshield header finish panel screw finish washer		4
...	BO 70396	Rear view mirror clinch nut		2
...	CO 86517	Windshield header finish panel assembly (cloth)		1
...	CO 86518	Windshield header finish panel assembly (leather)		

INSTRUMENT PANELS

...	CO 86302	Instrument panel assembly - L. H. D.		
...	CO 86303	Instrument panel assembly - R. H. D.		
...	BO 70455	Instrument panel to belt reinforcement screw		6
...	BO 85096	Instrument panel steering column bracket		2
...	BM 219	Instrument panel steering column bracket bolt		4
...	BO 18464	Instrument panel steering column bracket screw		4
...	BO 12120	Instrument panel steering column bracket screw nut		4
...	BO 85211	Steering column bracket tapping plate		2
...	BO 85464	Steering column to dash brace and bracket assembly		1
...	BO 85071	Steering column bracket to dash brace		2
...	BO 70028	Rivet		12
...	BO 18474	Rivet		4
...	BZ 85744	Steering column bracket anchor bar		1
...	BO 86218	Steering column jacket tube bracket assembly		1
...	GO 18062	Steering column jacket tube bracket screw		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 86306	Instrument mounting bracket assembly - upper		1
...	BO 86307	Instrument mounting bracket assembly - lower		1

WINDSHIELD

...	CO 85779	Windshield assembly (less glass)		1
...	87419	Windshield glass (not supplied)		1
...	BO 87518	Windshield hinge-body half		1
...	BO 18447	Windshield hinge screw		9
...	BO 18479	Windshield hinge screw nut		9
...	BO 85210	Windshield regulator tapping plate		1
...	BO 86116	Windshield hinge weatherstrip		1
...	BO 85873	Windshield bumper		2
...	BO 75152	Windshield bumper retainer		2
...	BO 70128	Windshield bumper retainer screw		2
...	BO 86096	Windshield regulator assembly		1

WINDSHIELD - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86277	Windshield regulator finish plate		1
...	BO 87153	Windshield regulator spring escutcheon		1
...	BO 86391	Windshield regulator finish plate screw		2
...	BO 86392	Windshield regulator finish plate screw sleeve		2
...	BO 87591	Windshield glass clip - R. H.		1
...	BO 87592	Windshield glass clip - L. H.		1
...	BO 87593	Windshield glass clip screw - male		2
...	BO 87594	Windshield glass clip screw - female		2
...	BO 87598	Windshield weatherstrip - sides and bottom.		1
...	85656	Windshield cleaner complete (not supplied)		1
		(Windshield cleaners and parts are serviced direct by the Trico Products Corporation, Buffalo, N. Y.)		
...	BO 87515	Windshield hinge corner rubber		2
...	BO 87516	Windshield hinge corner rubber clip - R. H.		1
...	BO 87517	Windshield hinge corner rubber clip - L. H.		1

PILLARS

...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	CO 85503	Center pillar assembly - R. H.		1
...	CO 87134	Center pillar assembly - L. H.		1
...	CO 85508	Rear body pillar assembly - R. H.		1
...	CO 85509	Rear body pillar assembly - L. H.		1

WEATHERSTRIPS, WINDLACE AND RETAINERS

...	CO 86434	Front door bottom weatherstrip and retainer assembly		2
...	CO 86461	Rear door bottom weatherstrip and retainer assembly		2
...	BO 85869	Door window belt weatherstrip - inner		4
...	CO 86435	Door window belt weatherstrip and retainer assembly - outer		4
...	BO 85870	Door window glass header weatherstrip (cement to header)		4
...	CO 86422	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
4	CO 86423	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86426	Front and rear door lock pillar and windlace retainer assembly - R. H.		2
5	CO 86427	Front and rear door lock trim and windlace retainer assembly - L. H.		2
...	CO 86475	Rear window header trim and retainer assembly		1
...	CO 86416	Windlace and retainer assembly-over door - R. H. (on body)		2
...	CO 86417	Windlace and retainer assembly-over door - L. H. (on body)		2
...	CO 86452	Rear door hinge pillar and windlace retainer assembly - R. H.		1
6	CO 86453	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
7	CO 86444	Rear body pillar extension trim retainer assembly		2
8	CO 86436	Rear body pillar trim and retainer assembly		2
9	CO 86462	Rear door extension windlace and retainer assembly		2
...	CO 87205	Center pillar windlace assembly		2
...	BO 87421	Locktite binding (specify amount)		*
...	BO 87431	Locktite binding tip - R. H. (acorn type)		1
...	BO 87432	Locktite binding tip - L. H. (acorn type) -		1
...	BO 87429	Locktite binding tip - R. H. (square end type)		2
...	BO 87430	Locktite binding tip - L. H. (square end type)		2
...	BO 87423	Locktite binding (specify amount) leather		*

LEATHER

...	CO 86424	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86425	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86418	Body door header windlace and retainer assembly - R. H. (over door)		2
...	CO 86419	Body door header windlace and retainer assembly - L. H. (over door)		2
...	CO 86458	Rear door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86459	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86476	Rear window header trim and retainer assembly		1
...	CO 86447	Rear body pillar extension trim retainer assembly		2
...	CO 86439	Rear body pillar trim and retainer assembly		2
...	CO 86465	Rear door extension windlace and retainer assembly		2
...	CO 86428	Door lock pillar trim and windlace retainer assembly - R. H.		2
...	CO 86429	Door lock pillar trim and windlace retainer assembly - L. H.		2

TRIM PANELS

DOOR, QUARTER, PILLAR AND HEADER

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 86648	Front door trim panel assembly - R. H.		1
10	CO 86649	Front door trim panel assembly - L. H.		1
...	CO 86691	Rear door trim panel assembly - R. H.		1
11	CO 86692	Rear door trim panel assembly - L. H.		1
...	CO 86521	Door header trim panel assembly - R. H.		2
12	CO 86522	Door header trim panel assembly - L. H.		2
...	CO 86517	Windshield header trim panel assembly		1
...	CO 86410	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86411	Front hinge pillar trimstick assembly - L. H.		1
...	CO 86669	Center pillar trimstick and windlace assembly - R. H.		1
13	CO 86670	Center pillar trimstick and windlace assembly - L. H.		1
...	BO 85620	Center pillar trim retainer clip		2
...	CO 86545	Lower quarter trim panel and arm rest assembly - R. H.		1
14	CO 86546	Lower quarter trim panel and arm rest assembly - L. H.		1
...	CO 86573	Rear seat arm rest assembly - R. H.		1
15	CO 86574	Rear seat arm rest assembly - L. H.		1
...	CO 86321	Lower back panel protector (back of rear seat)		1
...	BO 70324	Body hinge pillar trimstick to roof brace screw		2
...	BO 70703	Body hinge pillar trimstick to roof brace screw finish washer		2
...	BO 70704	Body hinge pillar trimstick to pillar screw		6
...	BO 70690	Body hinge pillar trimstick to pillar screw finish washer		6
...	BO 18479	Body hinge pillar trimstick to pillar screw nut		4

LEATHER

...	CO 86650	Front door trim panel assembly - R. H.		1
...	CO 86651	Front door trim panel assembly - L. H.		1
...	CO 86693	Rear door trim panel assembly - R. H.		1
...	CO 86694	Rear door trim panel assembly - L. H.		1
...	CO 86523	Door header trim panel assembly - R. H.		2
...	CO 86524	Door header trim panel assembly - L. H.		2
...	CO 86518	Windshield header trim panel assembly		1
...	CO 86412	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86413	Front hinge pillar trimstick assembly - L. H.		1
...	CO 86671	Center pillar trimstick and windlace assembly - R. H.		1
...	CO 86672	Center pillar trimstick and windlace assembly - L. H.		1
...	CO 86547	Lower quarter trim panel and arm rest assembly - R. H.		1
...	CO 86548	Lower quarter trim panel and arm rest assembly - L. H.		1
...	CO 86575	Rear seat arm rest assembly - R. H.		1
...	CO 86576	Rear seat arm rest assembly - L. H.		1

DOORS

16	CO 85562	Front door complete - R. H.		1
...	CO 85563	Front door complete - L. H.		1
17	CO 85564	Rear door complete - R. H.		1
...	CO 85565	Rear door complete - L. H.		1
...	CO 85546	Front door assembly-skeleton - R. H.		1
...	CO 85547	Front door assembly-skeleton - L. H.		1
...	CO 85548	Rear door assembly-skeleton - R. H.		1
...	CO 85549	Rear door assembly-skeleton - L. H.		1
...	BO 85327	Check strap		4
...	BO 85224	Check strap attaching plate		4
...	BO 85234	Check strap clamp		4
...	BO 18465	Check strap attaching plate screw		8
...	BO 85218	Door window regulator and remote control tie bar assembly		4
18	86010	Door window glass (not supplied)		4
		(Door upholstered panels see above)		

DOOR HINGES

...	BO 85070	Door hinge and reinforcement assembly-body half		4
...	BO 85078	Door hinge-door half		4
...	BO 85746	Door hinge rod		4
...	BO 18464	Door hinge screw		68

DOOR HINGES - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86248	Front door hinge upper filler		4
...	BO 86249	Front door hinge upper filler retainer		4
...	BO 18465	Front door hinge upper filler retainer screw		4

DOOR LOCKS

19	BO 85066	Door lock assembly - R. H. - front		1
...	BO 85067	Door lock assembly - L. H. - rear		1
20	BO 85068	Door lock assembly - L. H. - front and R. H. - rear		2
...	BO 18464	Door lock to frame screw		16
...	BO 85929	Door lock reinforcement plate		4
...	BO 87152	Door lock remote control assembly - R. H. - front.		1
...	BO 86124	Door lock remote control assembly - R. H. - rear		1
...	BO 86125	Door lock remote control assembly - L. H.		2
...	BO 18447	Door lock remote control screw		6
...	BO 18479	Door lock remote control screw nut		6

DOOR HANDLES

21	BO 85981	Door outside handle assembly (not lock type)		3
22	BO 85982	Door outside handle and cylinder assembly		1
...	BO 70526	Door outside handle screw		8
23	BO 85977	Remote control handle		4
...	BO 79308	Remote control handle pin		4
...	BO 79709	Remote control handle spring		4
24	BO 85973	Remote control handle escutcheon plate		4
25	BO 85975	Door "pull-to" grip		4
...	BO 70701	Door "pull-to" grip screw		8

DOOR WINDOW REGULATOR

...	BO 86255	Door window regulator assembly - R. H.		1
...	BO 86256	Door window regulator assembly - L. H.		1
...	BO 18464	Door window regulator to frame screw		2
...	BO 18458	Door window regulator to frame screw		4
...	BO 18461	Countersunk shakeproof washer		4
...	BO 18475	Countersunk shakeproof washer		4
26	BO 85967	Door window regulator handle		4
...	BO 79308	Door window regulator handle pin		4
...	BO 79709	Door window regulator handle spring		4
...	BO 85973	Door window regulator handle escutcheon plate		4
...	BO 86272	Door window regulator handle attaching screw washer.		8

DOOR DOVETAILS AND BUMPERS

27	BO 87726	Dovetail complete - female		4
28	BO 85215	Dovetail-male		4
...	BO 18458	Dovetail screw		8
...	BO 78995	Dovetail plate		4
...	BO 86113	Dovetail rubber bumper		8
...	BO 79149	Dovetail rubber bumper retaining spring		4
29	BO 85297	Door lock striker plate		4
...	BO 70680	Door lock striker plate screw		4
...	BO 85291	Door lock striker plate tapping plate		4
...	BO 85289	Door lock striker plate tapping plate retainer		4
30	BO 75151	Door rubber bumper		8
...	BO 75152	Door rubber bumper retainer		8
...	BO 70399	Dovetail case clinch nut		8
...	BO 18458	Dovetail case pillar screw		8
...	BO 18458	Door bumper retaining screw		8

DOOR GLASS AND CHANNELS

18	86010	Door glass (not supplied)		4
31	BO 85861	Front and rear door window glass run assembly		6
32	BO 85862	Rear door window glass run assembly - rear		2
...	BO 86253	Door window rest channel assembly - R. H.		2

DOOR GLASS AND CHANNELS - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86254	Door window rest channel assembly - L. H.		2
...	BO 75261	Door glass run clip-lower		8
...	BO 85984	Door glass run clip-upper		8
...	BO 78724	Door glass rubber bumper		4

DOOR FINISH STRIPS

33	CO 87186	Door window finish moulding and weatherstrip assembly		4
...	BO 70740	Door window finish moulding screw		56

REAR WINDOW

...	86098	Rear window glass (not supplied)		
...	BO 85878	Rear window glass channel		1
...	CO 85437	Rear window finish moulding		1
...	BO 7189	Rear window finish moulding screw		1
...	BO 87538	Rear window frame to finish moulding shim		8
...	CO 85586	Rear window moulding - outer		2
...	CO 86367	Rear window moulding seal - outer		1
...	BO 87 BO	Rear window curtain and roller assembly		1
...	BO 86271	Rear window curtain bracket assembly		1
...	BO 87129	Rear window curtain and roller assembly (used on export leather jobs)		

TOP

...	CO 87587	Drip moulding - R. H.		1
...	CO 87588	Drip moulding - L. H.		1
...	CO 87546	Drip moulding finish strip - R. H.		1
...	CO 87547	Drip moulding finish strip - L. H.		1
...	CO 85675	Top bow No. 1		1
...	CO 85676	Top bow No. 2		1
...	CO 85677	Top bow No. 3		1
...	CO 85678	Top bow No. 4		1
...	CO 85679	Top bow No. 5		1
...	CO 85680	Top bow No. 6		1
...	CO 85686	Roof raft - front		1
...	CO 85687	Roof rail - rear		1
...	CO 85668	Roof side rail - R. H.		1
...	CO 85669	Roof side rail - L. H.		1
...	CO 85695	Roof auxiliary rail - R. H.		1
...	CO 85696	Roof auxiliary rail - L. H.		1
...	BO 18447	Drip moulding screw	No. 10-32 x 5/8"	18
...	BO 81710	Rear view mirror assembly		1
...	BO 70526	Rear view mirror screw	No. 10-32 x 5/8"	2
36	BO 86485	Top deck assembly		1
...	BO 70729	Roof moulding nail	1/16"x 7/8"	*

DOME LAMP

...	BO 85971	Dome lamp assembly		1
...	BO 85983	Dome lamp switch and escutcheon plate assembly		1
...	BO 86119	Dome lamp door assembly (includes lens)		1
...	BO 80101	Dome lamp switch tapping plate		1
...	BO 70467	Dome lamp switch wire screw	6-32x3/16"	2
...	BO 70416	Dome lamp switch attaching screw	6-32x3/4"	2

LANDAU ARMS

...	BO 86209	Landau arm - R. H.		1
...	BO 87215	Landau arm - L. H.		1
...	BO 86215	Landau arm stud - upper		2
...	BO 86216	Landau arm stud - lower		2
...	BO 86210	Landau arm spacer - upper		2
...	BO 86211	Landau arm spacer - lower - inner		2
...	BO 86212	Landau arm spacer - lower - outer		2
...	BO 86213	Landau arm spacer finish washer		2
...	BO 86214	Landau arm prop nut		4
...	BO 86217	Landau arm prop nut lockwasher		4

SEAT AND BACK CUSHIONS

FRONT					Per Car
Illus. No.	Part No.	Description	Specifications		
39	CO 86826	Front seat cushion assembly			1
40	CO 86850	Front seat back cushion assembly			1
...	CO 86195	Front seat cushion spring assembly			1
...	CO 87149	Front seat back cushion spring assembly			1
...	CO 85490	Front seat tray assembly			1
...	BO 70399	Front seat tray clinch nut			9
...	BO 81497	Front seat hinge panel and hinge assembly			1
...	BO 75280	Nut cage			2
...	BO 18483	Nut cage nut	5/16"		2
...	BO 76989	Nut cage	1/4"		4
...	BO 12120	Nut cage nut			4
...	BO 81919	Front seat hinge assembly-upper and lower halves			2
...	BO 81925	Front seat adjusting screw			1
...	BO 85384	Front seat adjusting screw pivot			1
...	BO 81937	Front seat adjusting screw pivot plate			1
...	BO 81926	Front seat adjusting screw collar			1
...	BO 81927	Front seat adjusting screw trunnion - rear			1
...	BO 81929	Front seat adjusting screw trunnion anti-rattler			1
...	BO 81951	Front seat adjusting screw trunnion retainer			1
...	BO 81930	Front seat hinge rod			2
...	BO 81941	Front seat adjusting screw handle			1
...	BO 3037	Front seat adjusting screw handle taper pin			1
...	BO 82001	Front seat adjusting screw yoke			1
...	BO 82003	Front seat adjusting screw yoke bolt			1
...	BO 76258	Clinch core assembly			1
...	CO 81944	Front seat cushion frame assembly			1
...	CO 81945	Front seat back cushion frame assembly,			1
...	CO 86827	Front seat cushion assembly (leather)			1
...	CO 86851	Front seat back cushion assembly (leather)			1

REAR

41	CO 87026	Rear seat cushion assembly			1
...	CO 87032	Rear seat back cushion assembly			1
...	CO 86197	Rear seat cushion spring assembly			1
...	CO 86381	Rear seat back cushion spring assembly			1
...	CO 85925	Rear seat tray assembly			1
...	BO 70399	Rear seat tray clinch nut			2
...	BO 75149	Rear seat cushion dowel			2
...	BO 79040	Rear seat back hinge			2
...	BO 85489	Rear seat riser assembly			1
...	CO 85697	Rear seat cushion frame assembly			1
...	CO 86382	Rear seat back cushion frame assembly			1
...	CO 87027	Rear seat cushion assembly (leather)			1
...	CO 87033	Rear seat back cushion assembly (leather)			1

ROBE RAIL

42	BO 85979	Robe rail assembly			1
----	----------	--------------------	--	--	---

SMOKING SETS

...	BO 86095	Ash receiver and escutcheon plate assembly			1
-----	----------	--	--	--	---

FOOT REST

43	CO 86247	Foot rest assembly			1
44	BO 87595	Foot rest floor bracket-small			2

TOE, FLOOR BOARDS AND SCUFF PLATES

...	BO 85492	Toe board riser assembly - R. H.			1
...	BO 85493	Toe board riser assembly - L. H.			1
...	CO 85603	Toe plate assembly - L. H. D			1
...	CO 85604	Toe plate assembly - R. H. D			1
...	BO 85745	Toe plate steering gear cover - L. H. D. only			1

TOE, FLOOR BOARDS AND SCUFF PLATES-Continued


Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 18465	Toe plate steering gear cover screw		1
...	CO 87461	Front floor board assembly (steel)		1
...	BO 85951	Front floor board shim		1
...	BO 26554	Toe plate shim		15
45	BO 85993	Scuff plate - R. H. - front		1
...	BO 85994	Scuff plate - L. H. - front		1
46	BO 85741	Scuff plate-rear		2
...	BO 3009	Scuff plate screw		16
...	CO 85713	Front floor board spacer-rear .		1
...	CO 85709	Center floor board - R. H.		1
...	CO 85711	Rear floor board		1
...	BO 18455	Rear floor board screw	1/8"-20x1-1/2"	10
...	BO 86250	Front floor board spacer-side		6
...	BO 70398	Clinch nut		6
...	CO 85708	Battery cover assembly		1
...	BO 18453	Toe plate bolt	1/4"--20x7/16"	11

FLOOR MATS, PADS AND CARPETS

...	BO 86007	Front floor mat and pad complete - L. H. D.		1
...	BO 86008	Front floor mat and pad complete - R. H. D.		1
...	BO 12247	Front floor mat and pad socket plate		4
...	BO 18313	Front floor mat and pad socket .		4
...	BO 18359	Front floor mat and pad fastener stud		4
...	BO 70677	Front floor mat and pad fastener stud nut .		4
...	BO 85948	Toe plate steering gear cover pad - L. H. D. only		1
...	BO 85926	Dash pad assembly		1
...	BO 18359	Dash pad to dash clip	3/16"x1-1/2"	6
...	BO 18465	Steering gear toe plate cover pad screw	1/4"-20x7/8"	1
...	BO 87513	Hand brake cover-hole		1
47	BO 87358	Rear floor carpet assembly		1
...	BO 70010	Rear floor carpet fastener		5
...	BO 70256	Rear floor carpet fastener		2
...	BZ 12799	Rear floor carpet fastener nut		2
48	BO 87361	Rear seat heel carpet assembly		1
...	BO 70280	Heel board carpet fastener		8
...	BO 70256	Rear seat heel carpet fastener-on riser		3
...	BZ 12799	Rear seat heel carpet nut		3
...	BO 86890	Rear seat toe board carpet assembly (specify color)		1

SILL WOOD FILLERS

...	CO 85706	Sill wood filler - R. H.		1
...	CO 85707	Sill wood filler - L. H.		1

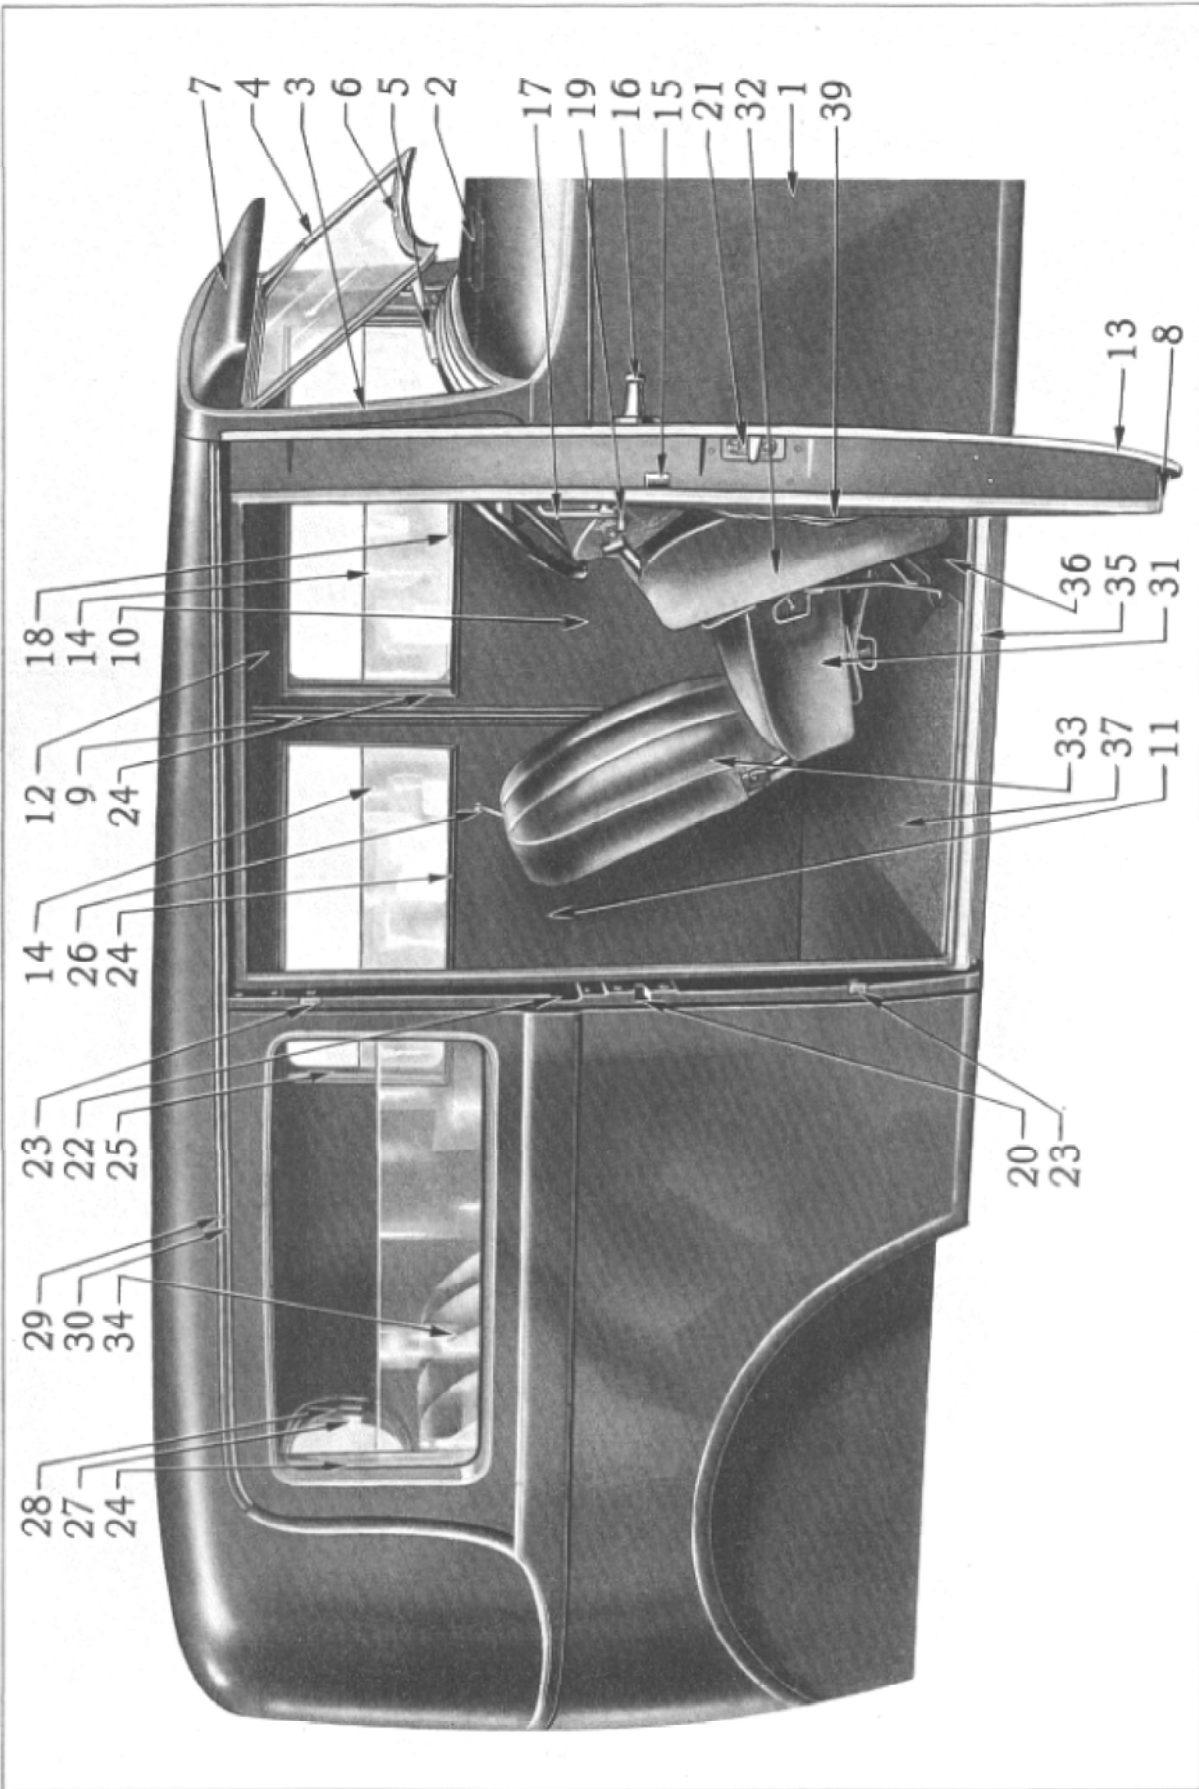

ESSEX COACH

COACH BODY

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 85835	Body complete - L. H. D.		1
...	CO 85836	Body complete - R. H. D.		1
...	BO 80472	Body to chassis shim		8
...	BO 87156	Body to chassis shim		2
...	BO 12320	Body bolt	7/16"-14x1-3/4"	8
...	BO 70011	Body bolt	7/16"-14x1-3/4"	2
...	BO 70573	Body bolt nut	7/16"-14x3/8"	10

FRONT SECTION COWL AND DASH

1	CO 87173	Cowl and dash assembly		1
...	BO 85952	Cowl to windshield belt panel shim		1
...	BO 18392	Cowl to windshield belt panel shim rivet		6
...	BO 85953	Cowl to hinge pillar shim		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 85957	Radiator to bonnet shim		2
...	BO 18353	Radiator to bonnet shim rivet	9/64"x5/16"	16
...	BO 85958	Dash to bonnet shim		2
...	BO 70733	Dash to bonnet shim drive screw		20
...	BO 85929	Cowl lamp reinforcement plate assembly		2
...	CO 86322	Cowl quarter kick panel-R. H.		1
...	CO 86323	Cowl quarter kick panel - L. H.		1
...	CO 87604	Cowl quarter kick panel - R. H. (export leather jobs only)		1
...	CO 87605	Cowl quarter kick panel - L. H. (export leather jobs only)		1
...	BO 18470	Cowl quarter kick panel screw	No. 10-32x5/8"	4
...	GO 12316	Cowl quarter kick panel finish washer		4
...	BO 70396	Cowl quarter kick panel screw clinch nut	1/4"x-20x5/64"	2
...	BO 85776	Cowl quarter kick panel retainer		2
...	BO 85216	Bonnet top hinge cowl bracket assembly		1
...	BO 2352	Bonnet top hinge cowl bracket to dash screw	5/16"-24x1"	1
...	BO 86077	Cowl top finish moulding washer (leather)		4
...	CO 85110	Cowl and windshield finish panel reinforcement		1
...	BO 70697	Cowl top finish moulding washer (steel)		4
...	BO 86076	Cowl top finish moulding gasket		1
...	BO 86002	Cowl top finish moulding assembly		1
...	BZ 12799	Cowl top finish moulding stud nut	No. 10-32x1/8"	4
...	BO 70086	Dash panel bonnet hinge bracket clinch nut	5/16"-24x5/64"	1
...	BO 70243	Dash panel rubber ferrule - large		6
...	BO 70504	Radiator shutter wire rubber ferrule		1
...	BO 70142	Dash panel to toe plate flange rubber ferrule		2
...	BO 70662	Spare tire brace rubber ferrule (special equipment)		1
...	BO 70397	Dash panel wire and tubing clip clinch nut	No. 10-32	4
...	BO 70399	Dash panel toe plate clinch nut	1/4"-20	5
...	BO 70398	Toe plate clinch nut	1/4"-20	5

COWL VENTILATOR

2	BO 85788	Cowl ventilator cover assembly-right		1
...	BO 86006	Cowl ventilator cover assembly-left		1
...	BO 81641	Cowl ventilator drain pipe		2
...	BO 85091	Cowl ventilator hinge (cars 1165674 to)		2
...	BO 87600	Cowl ventilator hinge - R. H. (cars and upward)		1
...	BO 87601	Cowl ventilator hinge - L. H. (cars and upward)		1
...	BO 85421	Cowl ventilator roller guide-right		2
...	BO 85422	Cowl ventilator roller guide-left		2
...	BO 85417	Cowl ventilator ratchet		2
...	BO 70028	Cowl ventilator ratchet to trough rivet .	3/16"x3/8"	4
...	BO 18447	Cowl ventilator roller guide to cover hinge screw	No. 10-32x5/8"	2
...	BZ 12799	Cowl ventilator roller guide to cover hinge screw nut	No. 10-32x1/8"	2
...	BO 85419	Cowl ventilator handle		2
...	BO 70304	Cowl ventilator handle to roller guide screw	No. 10-32x5/8"	4
...	BZ 12799	Cowl ventilator handle to roller guide screw nut	No. 10-32x1/8"	2

COWL VENTILATOR - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85423	Cowl ventilator ratchet roller		2
...	BO 85424	Cowl ventilator trough hinge spacer		4
...	BO 85425	Cowl ventilator spring		2
...	BO 85426	Cowl ventilator weatherstrip		2
...	BO 85880	Cowl ventilator drain tube		2
...	BO 85747	Cowl ventilator drain tube clip		2

FRONT PILLAR AND WINDSHIELD PANELS

...	CO 85461	Front pillar assembly - includes windshield panels)		1
...	BO 18464	Finish panel screw	1/4"-20x11/16"	4
...	CO 85449	Front hinge pillar assembly - R. H		1
...	CO 85450	Front hinge pillar assembly - L. H		1
...	BO 85459	Front hinge pillar to dash bracket and toe board riser assembly - R. H		1
...	BO 85460	Front hinge pillar to dash bracket and toe board riser assembly - L. H		1
...	BO 85074	Front hinge pillar tapping strip		2
...	BO 18464	Front hinge pillar tapping strip screw	1/4"-20x11/16"	4
...	BO 70398	Windshield header finish panel clinch nut	1/4"-20	2
...	BO 85777	Windshield garnish moulding - R. H		1
...	BO 85778	Windshield garnish moulding - L. H		1
...	BO 70397	Front hinge pillar clinch nut	No. 10-32	2
...	BO 70395	Windshield panel belt reinforcement clinch nut		6
...	BO 70128	Windshield header finish panel screw	1/4"-20x5/8"	4
...	BO 70452	Windshield header finish panel screw finish washer		4
...	BO 70396	Rear view mirror clinch nut	1/4"-20x5/64"	2
...	CO 86517	Windshield header finish panel assembly (cloth)		1
...	CO 86518	Windshield header finish panel assembly (leather)		1

INSTRUMENT PANEL

...	CO 86302	Instrument panel assembly - L. H. D.		1
...	CO 86303	Instrument panel assembly - R. H. D.		1
...	BO 70455	Instrument panel to belt reinforcement screw	8-32x3/4"	6
...	BO 85096	Instrument panel steering column bracket		2
...	BM 219	Instrument panel steering column bracket bolt	5/16"-18xy3/4"	4
...	BO 18464	Instrument panel steering column bracket screw	1/4"-20x11/16"	4
...	BO 12120	Instrument panel steering column bracket screw nut	1/4"-20x1/4"	4
...	BO 85211	Steering column bracket tapping plate		2
...	BO 85464	Steering column to dash brace and bracket assembly		1
...	BO 85071	Steering column bracket to dash brace		2
...	BO 70028	Rivet	3/16"x3/8"	12
...	BO 18474	Rivet		4
...	BO 85744	Steering column bracket anchor bar		1
...	BO 86218	Steering column jacket tube bracket assembly		1
...	GO 18062	Steering column jacket tube screw		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 86306	Instrument mounting bracket assembly-upper (86122 and clinch nut)		2
...	BO 86307	Instrument mounting bracket assembly-lower (86123 and clinch nut)		2

WINDSHIELD

...	CO 85779	Windshield assembly (less glass)		1
...	87419	Windshield glass (not supplied)		1
...	BO 87518	Windshield hinge - body half		2
...	BO 18447	Windshield hinge screw	No. 10-32x5/8"	9
...	BO 18479	Windshield hinge screw nut	No. 10-32x3/16"	9
...	BO 85210	Windshield regulator tapping plate		1
...	BO 86116	Windshield hinge weatherstrip		1
...	BO 85873	Windshield bumper		2
...	BO 75152	Windshield bumper retainer		2
...	BO 70128	Windshield bumper retainer screw	1/4"-20x5/8"	2
...	BO 86096	Windshield regulator assembly		1
...	BO 86277	Windshield regulator finish plate		1

WINDSHIELD-Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86391	Windshield regulator finish plate screw		2
...	BO 86392	Windshield regulator finish plate screw sleeve		2
...	BO 87153	Windshield regulator spring escutcheon		1
...	85656	Windshield cleaner complete (not supplied) (Windshield cleaner and parts are serviced direct by Trico Products Corporation, Buffalo, N. Y.)		1
...	BO 87591	Windshield glass clip - R. H.		1
...	BO 87592	Windshield glass clip - L. H.		1
...	BO 87593	Windshield glass clip screw - male.		2
...	BO 87594	Windshield glass clip screw - female		2
...	BO 87598	Windshield weatherstrip - sides and bottom		1
...	BO 87515	Windshield hinge cover rubber		2
...	BO 87516	Windshield hinge cover rubber clip - R. H.		1
...	BO 87517	Windshield hinge cover rubber clip - L. H.		1

WINDSHIELD VISOR

7	CO 85248	Visor panel		1
...	BO 18447	Visor panel to finish panel screw	No. 10-32x5/8"	9
...	BO 9159	Visor panel to finish panel screw		2
...	BO 70127	Visor panel to finish panel screw finish washer	1/4"	2

PILLARS

...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	CO 85504	Body lock pillar assembly - R. H.		1
...	CO 85505	Body lock pillar assembly - L. H.		1
...	CO 85510	Quarter pillar assembly - R. H.		1
...	CO 87506	Quarter pillar assembly - L. H.		1

WEATHERSTRIPS, WINDLACE AND RETAINERS

8	CO 86434	Front door bottom weatherstrip and retainer assembly		2
...	BO 85869	Door and quarter window belt weatherstrip - inner		4
...	CO 86435	Door and quarter window belt weatherstrip and retainer assembly-outer		4
...	BO 85870	Door and quarter window glass header weatherstrip (cement to header)		4
...	CO 86422	Door hinge pillar trim and windlace retainer assembly - R. H. .		1
...	CO 86423	Door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86426	Door lock pillar trim retainer assembly - R. H. .		1
...	CO 86427	Door lock pillar trim retainer assembly - L. H.		1
...	CO 86406	Body lock pillar trim and windlace retainer assembly - R. H. .		1
9	CO 86407	Body lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86466	Quarter window header weatherstrip and retainer assembly		2
...	CO 86475	Rear window header trim and retainer assembly		1
...	CO 86416	Windlace and retainer assembly-over door - R. H. (on body)		1
...	CO 86417	Windlace and retainer assembly-over door - L. H. (on body)		1
...	BO 85254	Trim retainer-rear quarter-not trimmed		2
...	BO 87423	Locktite binding (specify amount) leather		*

LEATHER

...	CO 86424	Door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86425	Door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86428	Door lock pillar trim and retainer assembly - R. H.		1
...	CO 86429	Door lock pillar trim and retainer assembly - L. H.		1
...	CO 86408	Body lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86409	Body lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86476	Rear window header trim and retainer assembly		1
...	CO 86418	Windlace and retainer assembly-over door - R. H.		1
...	CO 86419	Windlace and retainer assembly-over door - L. H.		1

TRIM PANELS DOOR, QUARTER, PILLAR AND HEADER

...	CO 86640	Front door trim panel assembly - R. H.		1
10	CO 86641	Front door trim panel assembly - L. H.		1
...	CO 86722	Lower quarter trim panel assembly - R. H.		1

DOOR, QUARTER, PILLAR AND HEADER - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
11	CO 86723	Lower quarter trim panel assembly - L. H.		1
...	CO 86521	Door header trim panel assembly - R. H.		1
12	CO 86522	Door header trim panel assembly - L. H.		1
...	CO 86517	Windshield header trim panel assembly		1
...	CO 86410	Body hinge pillar trimstick assembly - R. H.		1
...	CO 86411	Body hinge pillar trimstick assembly - L. H.		1
...	CO 86320	Lower back panel protector-back of rear seat		1
...	BO 70324	Body hinge pillar trimstick to roof brace screw		2
...	BO 70703	Body hinge pillar trimstick to roof brace screw finish washer		2
...	BO 70704	Body hinge pillar trimstick to pillar screw		6
...	BO 70690	Body hinge pillar trimstick to pillar screw finish washer		6
...	BO 18479	Body hinge pillar trimstick to pillar screw nut	No. 10-32x3/16"	4

LEATHER

...	CO 86642	Front door trim panel assembly - R. H.		1
...	CO 86643	Front door trim panel assembly - L. H.		1
...	CO 86724	Lower quarter trim panel assembly - R. H.		1
...	CO 86725	Lower quarter trim panel assembly - L. H.		1
...	CO 86523	Door header trim panel assembly - R. H.		1
...	CO 86524	Door header trim panel assembly - L. H.		1
...	CO 86518	Windshield header trim panel assembly		1
...	CO 86412	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86413	Front hinge pillar trimstick assembly - L. H.		1

DOORS

13	CO 85562	Door complete - R. H.		1
...	CO 85563	Door complete - L. H.		1
...	CO 85546	Door assembly - skeleton - R. H.		1
...	CO 85547	Door assembly - skeleton - L. H.		1
...	BO 85327	Check strap		2
...	BO 85224	Check strap attaching plate		2
...	BO 85234	Check strap clamp		2
...	BO 18465	Check strap attaching plate screw	1/4"-20X7/8"	4
...	BO 85218	Door window regulator and remote control tie bar assembly		2
14	86010	Door window glass (not supplied) (Door upholstered panel see above)		2

DOOR HINGES

...	BO 85070	Door hinge and reinforcement assembly - body half		2
...	BO 85078	Door hinge-door half		2
...	BO 85746	Door hinge rod		2
...	BO 18464	Door hinge screw	1/4"-20x11/16"	34
...	BO 86248	Door hinge upper filler		2
...	BO 86249	Door hinge upper filler retainer		2
...	BO 18465	Door hinge upper filler retainer screw	1/4"-20x7/8"	2

DOOR LOCK

15	BO 85066	Door lock assembly - R. H.		1
...	BO 85068	Door lock assembly - L. H.		1
...	BO 18464	Door lock screw	1/4"-20x11/16"	8
...	BO 85929	Door lock reinforcement plate		2
...	BO 87152	Door lock remote control assembly - R. H.		1
...	BO 86125	Door lock remote control assembly - L. H.		1
...	BO 18447	Door lock remote control screw	No. 10-32x5/8"	6
...	BO 18479	Door lock remote control screw nut	No. 10-32x3/16"	6

DOOR HANDLES

...	BO 85981	Door outside handle assembly		1
16	BO 85982	Door outside handle and cylinder assembly		1
...	BO 70526	Door outside handle screw	No. 10-32x5/8"	4
17	BO 85977	Remote control handle		2
...	BO 79308	Remote control handle pin		2

DOOR HANDLES - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 79709	Remote control handle pin spring		2
...	BO 85973	Remote control handle escutcheon plate		2
18	BO 85975	Door "pull-to" grip		2
...	BO 70701	Door "pull-to" grip screw		4

DOOR WINDOW REGULATOR

...	BO 86255	Door window regulator assembly - R. H.		1
...	BO 86256	Door window regulator assembly - L. H.		1
...	BO 18464	Door window regulator to frame screw	1/4"-20x11/16"	2
...	BO 18458	Door window regulator to frame screw	1/4"-20x11/16"	4
...	BO 18461	Countersunk shakeproof washer		4
...	BO 18475	Countersunk shakeproof washer		4
19	BO 85967	Door window regulator handle		2
...	BO 79308	Door window regulator handle pin		2
...	BO 79709	Door window regulator handle spring		2
...	BO 85973	Door window regulator handle escutcheon plate		2
...	BO 86272	Door window regulator handle attaching screw washer		4

DOOR DOVETAILS AND BUMPERS

20	BO 87726	Dovetail complete - female		2
21	BO 85215	Dovetail - male		2
...	BO 18458	Dovetail screw	1/4"-20x11/16	4
...	BO 78995	Dovetail plate		2
...	BO 86113	Dovetail rubber bumper		4
...	BO 79149	Dovetail rubber bumper retaining spring		2
22	BO 85297	Door lock striker plate		2
...	BO 70680	Door lock striker plate screw		2
...	BO 85291	Door lock striker plate tapping plate		2
...	BO 85289	Door lock striker plate tapping plate retainer		2
23	BO 75151	Door rubber bumper		4
...	BO 75152	Door rubber bumper retainer		4
...	BO 70399	Dovetail case clinch nut	1/4"-20	4
...	BO 18458	Dovetail case pillar screw	1/4"-20x11/16"	4
...	BO 18458	Door bumper retaining screw	1/4-20x11/16	4
...	BO 70680	Door lock striker plate screw		4

DOOR GLASS AND CHANNELS

14	86010	Door glass (not supplied)		2
...	BO 85861	Door glass run assembly		4
...	BO 86253	Door window rest channel assembly - R. H.		1
...	BO 86254	Door window rest channel assembly - L. H.		1
...	BO 75261	Door glass run clip - lower		8
...	BO 85984	Door glass run clip-upper		4
...	BO 78724	Door glass bumper		4

DOOR FINISH STRIPS

24	CO 87186	Door and quarter window finish moulding and weatherstrip assembly		4
...	BO 70740	Door and quarter window finish moulding screw	No. 10-32x5/8"	28

QUARTER GLASS AND CHANNELS

14	86010	Quarter window glass (not supplied)		2
...	BO 85861	Quarter window glass run assembly		2
25	BO 85863	Quarter window glass run assembly-rear		2
...	BO 85883	Quarter window glass run attaching plate		4
24	CO 87186	Door and quarter window finish moulding and weatherstrip assembly		2
...	BO 70740	Door and quarter window finish moulding screw		28
...	BO 86252	Quarter window rest channel assembly - R. H.		1
...	BO 86253	Quarter window rest channel assembly - L. H.		1

QUARTER WINDOW REGULATOR

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86103	Quarter window regulator assembly - R. H.		1
...	BO 86104	Quarter window regulator assembly - L. H.		1
...	BO 70242	Quarter window regulator to frame screw	1/4"-20x3/4"	8
...	BO 18461	Quarter window regulator to frame screw lockwasher		8
26	BO 85967	Quarter window regulator handle		2
...	BO 85973	Quarter window regulator handle escutcheon plate		2
...	BO 79308	Quarter window regulator handle pin		2
...	BO 79709	Quarter window regulator handle spring		2
..	BO 86272	Quarter window regulator attaching screw washer		4

REAR WINDOW

27	86013	Rear window glass		1
...	BO 85878	Rear window glass channel		1
28	BO 85437	Rear window moulding assembly		1
...	BO 7189	Rear window moulding screw		8
...	BO 87129	Rear window curtain and roller assembly (also used on export leather jobs)		1
...	BO 86271	Rear window curtain bracket complete		1

TOP

29	CO 85755	Drip moulding - R. H.		1
...	CO 85756	Drip moulding - L. H.		1
30	CO 85757	Drip moulding finish strip - R. H.		1
...	CO 85758	Drip moulding finish strip - L. H.		1
...	CO 85681	Top bow No. 1		1
...	CO 85682	Top bow No. 2		1
...	CO 85683	Top bow No. 3		1
...	CO 85684	Top bow No. 4		1
...	CO 85685	Top bow No. 5		2
...	CO 85139	Roof rail - front		1
...	CO 85141	Roof auxiliary rail - R. H.		1
...	CO 85142	Roof auxiliary rail - L. H.		1
...	CO 85140	Roof rail-rear		1
...	CO 85143	Roof side rail - R. H.		1
...	CO 85144	Roof side rail - L. H.		1
...	BO 18447	Drip moulding screw	No. 10-32x5/8"	18
...	BO 81710	Rear view mirror		1
...	BO 70526	Rear view mirror screw	No. 10-32x5/8"	2
...	BO 86481	Top deck-cut to size		*
...	CO 87218	Roof corner moulding - front		2
...	CO 87219	Roof corner moulding - rear		2
...	CO 87222	Roof moulding - front		1
...	CO 87223	Roof moulding - side and rear		1
...	CO 87224	Roof moulding - side		2
...	BO 70729	Roof moulding nail	1/16"x7/8"	*

DOME LAMP

...	BO 85971	Dome lamp assembly		1
...	BO 85983	Dome lamp switch and escutcheon plate assembly		1
...	BO 86119	Dome lamp door assembly		1
...	BO 80101	Dome lamp switch tapping plate		1
...	BO 70467	Dome lamp switch screw	6-32x3/16"	2
...	BO 70416	Dome lamp switch attaching screw	6-32x1/4"	2

SEAT AND CUSHIONS

FRONT

31	CO 86782	Driver's folding seat complete		1
32	CO 86783	Passenger's folding seat complete		1
...	CO 86193	Folding seat cushion springs assembly		2
...	CO 86194	Folding seat back cushion springs assembly		2
33	CO 86790	Folding seat back assembly (includes supports)		2

SEATS AND CUSHIONS-Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 86134	Folding seat back frame assembly (includes supports)		2
...	CO 79723	Folding seat bottom trim panel		2
...	CO 87603	Folding seat bottom trim panel (export leather jobs only)		2
...	BO 82580	Driver's seat hinge panel and bracket assembly		1
...	BO 82581	Passenger's seat hinge panel and bracket assembly		1
...	BO 76977	Folding seat hinge-upper and lower halves		2
...	BO 76978	Folding seat adjusting bracket		2
...	BO 76982	Folding seat adjusting bracket cross arm		2
...	BO 82561	Folding seat adjusting screw nut pivot assembly		1
...	BO 81937	Folding seat adjusting screw nut pivot plate		1
...	BO 81925	Folding seat adjusting screw		1
...	BO 81926	Folding seat adjusting screw lock collar		1
...	BO 75280	Folding seat nut cage	516"	12
...	BO 76989	Folding seat nut cage	1/4"	6
...	BO 81941	Folding seat adjusting screw handle		1
...	BZ 3037	Folding seat adjusting screw handle taper pin	No. 2x1"	1
...	BO 82001	Folding seat adjusting screw yoke		1
...	BO 82003	Folding seat adjusting screw yoke bolt		1
...	BO 76980	Folding seat hinge rod-upper		2
...	BO 76981	Folding seat hinge rod-lower		2
...	BO 81929	Folding seat adjusting screw spring washer		2
...	BO 76979	Folding seat slide		4
...	BO 76426	Folding seat adjusting slide pin spring		4
...	BO 76985	Folding seat adjusting slide pin		4
...	BO 86132	Folding seat back support - R. H.		2
...	BO 86133	Folding seat back support - L. H.		2
...	BO 18442	Folding seat back support adjusting screw	1/4"-20x5/8"	4
...	BO 70706	Folding seat back support check nut		4
...	BO 70095	Folding seat back support bolt		4
...	CO 82563	Folding seat wood frame		2
...	BO 9159	Folding seat hinge to sill bolt		6
...	BO 70053	Folding seat hinge to seat bolt	1/4"-20x3/8"	6
...	BO 70412	Folding seat slide bolt	5/16"-18x1-3/4"	8
...	CO 86784	Driver's folding seat complete (leather trim)		1
...	CO 86785	Passenger's folding seat complete (leather trim)		1
...	CO 86791	Folding seat back assembly (includes supports - leather trim)		2

REAR

...	CO 87022	Rear seat cushion assembly		1
34	CO 87028	Rear seat back cushion assembly		1
...	CO 86197	Rear seat cushion spring assembly		1
...	CO 86198	Rear seat back cushion spring assembly		1
...	CO 85489	Rear seat riser assembly		1
...	CO 85925	Rear seat tray assembly		2
...	BO 75149	Rear seat cushion dowel		2
...	BO 79040	Rear seat back hinge		1
...	CO 85697	Rear seat cushion frame assembly		1
...	CO 85698	Rear seat back cushion frame assembly		1
...	CO 87023	Rear seat cushion complete (leather)		1
...	CO 87029	Rear seat back complete (leather)		1

TOE, FLOOR BOARDS AND SCUFF PLATES

...	BO 85492	Toe board riser assembly - R. H.		1
...	BO 85493	Toe board riser assembly - L. H.		1
...	CO 85603	Toe plate assembly - L. H. D.		1
...	CO 85604	Toe plate assembly - R. H. D.		1
...	BO 85745	Toe plate steering gear cover - L. H. D. only		1
...	BO 18465	Toe plate steering gear cover screw		1
...	CO 87461	Front floor board assembly (steel)		1
...	BO 85951	Front floor board shim		1
...	BO 26554	Toe plate shim		15
35	BO 85993	Scuff plate - R. H.		1


TOE, FLOOR BOARDS AND SCUFF PLATES-Continued					
Illus. No.	Part No.	Description	Specifications	Per Car	
...	BO 85994	Scuff plate - L. H.		1	
...	CO 85713	Front floor board spacer		1	
...	CO 85709	Center floor board-R. H.		1	
...	CO 85710	Rear floor board		1	
...	BO 18455	Rear floor board screw	1/4"-20x1-1/2"	10	
...	BO 86250	Front floor board spacer-side		6	
...	BO 70398	Clinch nut	1/4"-20	6	
...	CO 85708	Battery cover assembly		1	
...	BO 18453	Toe plate bolt	1/4"-20x7/16"	11	

FLOOR MATS, PADS AND CARPETS

36	BO 86007	Front floor mat and pad complete - L. H. D.		1	
...	BO 86008	Front floor mat and pad complete - R. H. D.		1	
...	BO 12247	Front floor mat and pad socket plate		4	
...	BO 18313	Front floor mat and pad socket		4	
...	BO 18349	Front floor mat and pad fastener stud		4	
...	BO 70677	Front floor mat and pad fastener stud nut		4	
...	BO 87513	Hand brake hole cover		1	
...	BO 85926	Dash pad assembly		1	
...	BO 18359	Dash pad to dash clip	3/16"x1-1/2"	6	
...	BO 85948	Steering gear hole toe plate pad - L. H. D. only		1	
...	BO 18465	Steering gear hole toe plate cover screw	1/4"-20x7/8"	1	
37	CO 87355	Rear floor carpet assembly		1	
...	BO 70010	Rear floor carpet fastener		5	
...	BO 70256	Rear floor carpet fastener		4	
...	BZ 12799	Rear floor carpet fastener nut		4	
...	BO 87361	Rear seat heel carpet assembly		1	
...	BO 70280	Heelboard carpet fastener		8	
...	BO 70256	Rear seat heel carpet button - on riser		3	
...	BZ 12799	Rear seat heel carpet button nut	10-32x1/8"	3	

SILL WOOD FILLERS

...	CO 85706	Sill wood filler - R. H.		1	
...	CO 85707	Sill wood filler - L. H.		1	

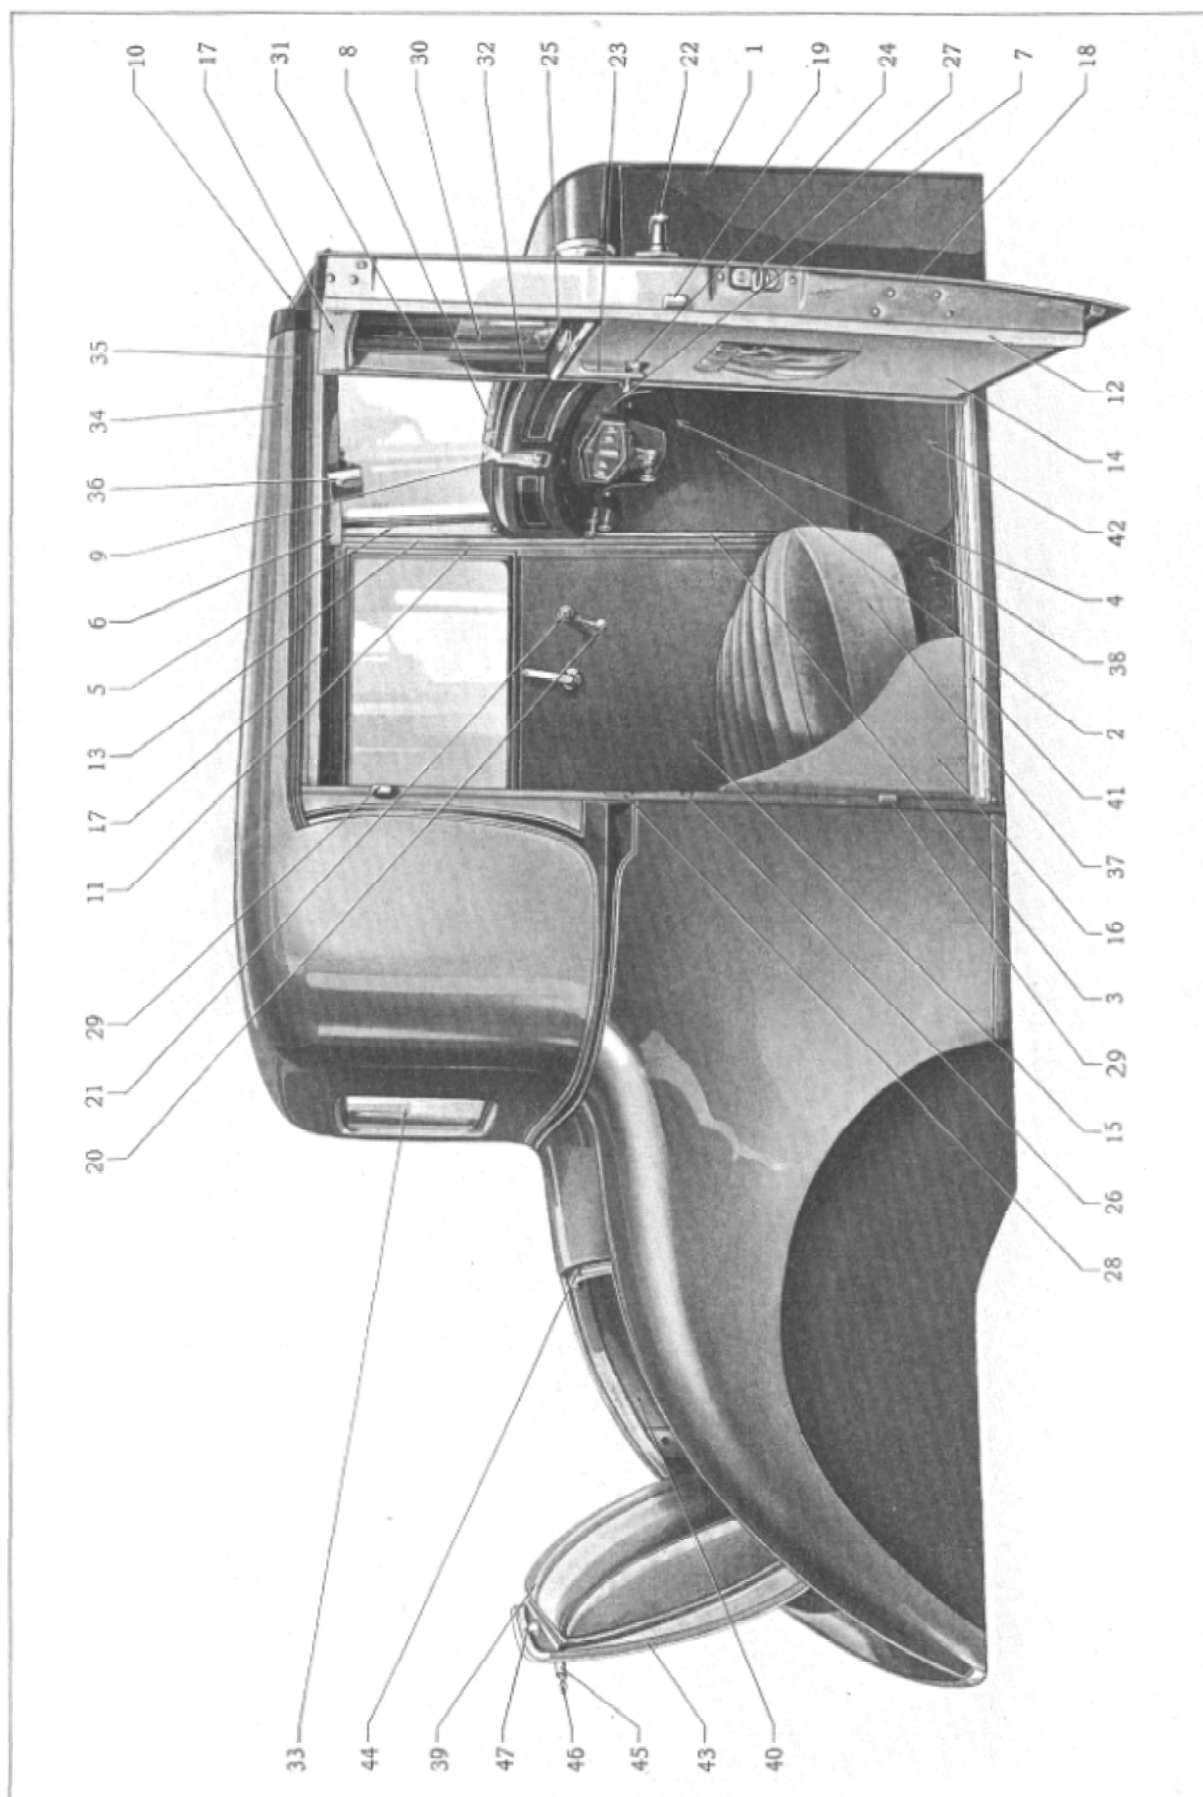

ESSEX COUPE

COUPE
TWO AND FOUR-PASSENGER
BODY

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 85840	Body complete - L. H. D. - two-passenger		1
...	CO 85841	Body complete - R. H. D. - two-passenger		1
...	CO 85845	Body complete - L. H. D. - four-passenger		1
...	CO 85846	Body complete - R. H. D. - four-passenger		1
...	BO 80472	Body shim		8
...	BO 87156	Body shim		2
...	BO 12329	Body bolt	7/16"-14x3-1/4"	8
...	BO 70011	Body bolt	7/16"-14x3-1/4"	2
...	BO 70573	Body bolt	7/16"-14x3/8"	10

COWL AND DASH

...	CO 87173	Cowl and dash assembly		1
...	BO 85952	Cowl to windshield belt panel shim		1
...	BO 18392	Cowl to windshield belt panel shim rive	9/64"x1/4" tub.	6
...	BO 85953	Cowl to hinge pillar shim		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 85957	Radiator to bonnet shim		2
...	BO 18353	Radiator to bonnet shim rivet	9-64"x5/16"	16
...	BO 85958	Dash to bonnet shim		2
...	BO 70733	Dash to bonnet shim drive screw		20
...	BO 85929	Cowl lamp reinforcement plate assembly		2
...	CO 86322	Cowl quarter kick panel - R. H.		1
...	CO 86323	Cowl quarter kick panel - L. H.		1
...	CO 87604	Cowl quarter kick panel - R. H. (export leather jobs only)		1
...	BO 87605	Cowl quarter kick panel - L. H. (export leather jobs only)		1
...	BO 18470	Cowl quarter kick panel screw	No. 10-32x5/8"	4
...	CO 12316	Cowl quarter kick panel screw finish washer	No. 10	4
...	BO 70396	Cowl quarter kick panel screw clinch nut	1/4"-20x5/64"	4
...	BO 85776	Cowl quarter kick panel retainer		2
...	BO 85216	Bonnet top hinge cowl bracket assembly		1
...	BO 2352	Bonnet top hinge cowl bracket to dash screw	5/16"-24x1"	1
...	BO 86077	Cowl top finish moulding washer (leather)		4
...	CO 85110	Cowl and windshield finish panel reinforcement		1
...	BO 70697	Cowl top finish moulding washer (steel)		4
...	BO 86076	Cowl top finish moulding gasket		1
...	CO 86002	Cowl top finish moulding		1
...	BZ 12799	Cowl top finish moulding stud nut	No. 10-32x1/8"	4
...	BO 70086	Dash panel bonnet hinge bracket clinch nut	5/64"-24x5/64"	1
...	BO 70243	Dash panel rubber ferrule-large		6
...	BO 70504	Radiator shutter wire rubber ferrule		1
...	BO 70142	Dash panel to toe plate flange rubber ferrule		2
...	BO 70662	Spare tire brace rubber ferrule (special equipment)		
...	BO 70397	Dash panel wire and tubing clip clinch nut	No. 10-32	4
...	BO 70399	Dash panel toe plate clinch nut	1/4"-20	5
...	BO 70398	Toe plate clinch nut	1/4"-20	5

COWL VENTILATOR

...	BO 85788	Cowl ventilator cover assembly - R. H.		1
...	BO 86006	Cowl ventilator cover assembly - L. H.		1
...	BO 81641	Cowl ventilator drain pipe		2
...	BO 85091	Cowl ventilator cover hinge (cars 1165674 to)		2
...	BO 87600	Cowl ventilator cover hinge - R. H. (cars and upward)		1
...	BO 87601	Cowl ventilator cover hinge - L. H. (cars and upward)		1
...	BO 85421	Cowl ventilator roller guide - R. H.		2
...	BO 85422	Cowl ventilator roller guide - L. H.		2
...	BO 85417	Cowl ventilator ratchet		2
...	BO 70028	Cowl ventilator ratchet to trough rivet	3/16"x3/8"	4
...	BO 18447	Cowl ventilator roller guide to cover hinge screw	10-32x5/8"	2
...	BZ 12799	Cowl ventilator roller guide to cover hinge screw nut	10-32x1/8"	2
...	BO 85419	Cowl ventilator handle		2

COWL VENTILATOR - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 70304	Cowl ventilator handle to roller guide screw	10-32x5/8"	4
...	BO 12799	Cowl ventilator handle to roller guide screw nut	10-32x1/8"	4
...	BO 85423	Cowl ventilator roller		2
...	BO 85424	Cowl ventilator trough hinge spacer		4
...	BO 85425	Cowl ventilator spring		2
...	BO 85426	Cowl ventilator weatherstrip		2
...	BO 85880	Cowl ventilator drain tube		2
...	BO 85747	Cowl ventilator drain tube clip		2

FRONT PILLAR AND WINDSHIELD PANELS

...	CO 85461	Front pillar assembly (includes windshield panels)		1
...	BO 18464	Finish panel screw	1/4"-20x11/16"	4
...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	BO 85459	Front hinge pillar to dash bracket and toe board riser assembly - R. H.		1
...	BO 85460	Front hinge pillar to dash bracket and toe board riser assembly - L. H.		1
...	BO 85074	Front hinge pillar tapping strip		2
...	BO 18464	Front hinge pillar tapping strip screw	1/4"-20x11/16"	4
...	BO 70398	Windshield header finish panel clinch nut	1/4"-20	2
...	BO 85777	Windshield garnish moulding - R. H.		1
5	BO 85778	Windshield garnish moulding - L. H.		1
...	BO 70397	Front hinge pillar clinch nut		2
...	BO 70395	Windshield panel belt reinforcement clinch nut		6
...	BO 70128	Windshield header finish panel screw	1/4"-20x5/8"	4
...	BO 70452	Windshield header finish panel screw finish washer		4
...	BO 70396	Rear view mirror clinch nut	1/4-20x5/64"	2
6	CO 86517	Windshield header finish panel assembly (cloth)		1
...	CO 86518	Windshield header finish panel assembly (leather)		1
...	BO 70128	Windshield header finish panel screw	1/4"-20x 5/8"	4
...	BO 70452	Windshield header finish panel screw washer	1/4"	4

INSTRUMENT PANELS

7	CO 86302	Instrument panel assembly - L. H. D.		1
...	CO 86303	Instrument panel assembly - R. H. D.		1
...	BO 70455	Instrument panel to belt reinforcement screw	No. 8-32x3/4"	6
...	BO 85096	Instrument panel to steering column bracket		2
...	BM 219	Instrument panel to steering column bracket bolt	5/16"-18x3/4"	4
...	BO 18464	Instrument panel to steering column bracket screw	1/4"-20x11/16"	4
...	BO 12120	Instrument panel to steering column bracket screw nut	1/4"-20x1/4"	4
...	BO 85211	Steering column bracket tapping plate		2
...	BO 85464	Steering column to dash brace and bracket assembly		1
...	BO 85071	Steering column bracket to dash brace		2
...	BO 70028	Rivet	3/16"x3/8"	12
...	BO 18474	Rivet		4
...	BZ 85744	Steering column bracket anchor bar		1
...	BO 86218	Steering column jacket tube bracket assembly		1
...	GO 18062	Steering column jacket tube bracket screw	5/16"-18X1"	2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 86306	Instrument mounting bracket assembly-upper		2
...	BO 86307	Instrument mounting bracket assembly-lower		2

WINDSHIELD

8	CO 85779	Windshield assembly (less glass)		1
...	87419	Windshield glass (not supplied)		1
...	BO 87518	Windshield hinge - body half		1
...	BO 18447	Windshield hinge screw	No. 10-32x5/8"	9
...	BO 18479	Windshield hinge screw nut	No. 10-32x3/16"	9
...	BO 85210	Windshield regulator tapping plate		1
...	BO 86116	Windshield hinge weatherstrip		1
...	BO 85873	Windshield bumper		2
...	BO 75152	Windshield bumper retainer		2
...	BO 70128	Windshield bumper retainer screw	1/4"-20x5/8"	2
9	BO 86096	Windshield regulator assembly		1

WINDSHIELD - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 86277	Windshield regulator finish plate		1
...	BO 87153	Windshield regulator spring escutcheon		1
...	BO 86391	Windshield regulator finish plate screw		2
...	BO 86392	Windshield regulator finish plate screw sleeve		2
...	BO 87591	Windshield glass clip - R. H.		1
...	BO 87592	Windshield glass clip - L. H.		1
...	BO 87593	Windshield glass clip screw - male		2
...	BO 87594	Windshield glass clip screw - female		2
...	BO 87598	Windshield weatherstrip - sides and bottom		1
...	85656	Windshield cleaner complete (not supplied)		1
...	BO 87515	Windshield hinge corner rubber		2
...	BO 87516	Windshield hinge corner rubber clip - R. H.		1
...	BO 87517	Windshield hinge corner rubber clip - L. H.		1
		(Windshield cleaners and parts are serviced direct by Trico Products Corporation, Buffalo, N. Y.)		

WINDSHIELD VISOR

10	CO 85248	Visor panel (specify color)		1
...	BO 18447	Visor panel to finish panel screw	No. 10 - 32x"8"	9
...	BO 9159	Visor panel to finish panel screw		2
...	BO 70127	Visor panel to finish panel screw finish washer		2

PILLARS

...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	CO 85795	Body lock pillar assembly - R. H.		1
...	CO 85796	Body lock pillar assembly - L. H.		1

WEATHERSTRIP, WINDLACE AND RETAINERS

...	CO 86434	Door bottom weatherstrip and retainer assembly		1
...	BO 79034	Rear window header weatherstrip		1
...	BO 85869	Door window belt weatherstrip - inner		2
...	CO 86435	Door window belt weatherstrip and retainer assembly - outer		2
...	BO 85870	Door window glass header weatherstrip (cement to header)		2
...	CO 86422	Door hinge pillar trim and windlace retainer assembly - R. H.		1
11	CO 86423	Door hinge pillar trim and windlace retainer assembly - L. H.		1
12	CO 86426	Door lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86427	Door lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86406	Body lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86407	Body lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86416	Windlace and retainer assembly - over door - R. H. (on body)		1
...	CO 86417	Windlace and retainer assembly - over door - L. H. (on body)		1
...	CO 86410	Body hinge pillar trimstick assembly - R. H.		1
13	CO 86411	Body hinge pillar trimstick assembly - L. H.		1
...	BO 87423	Locktite binding (specify amount)		*
...	BO 87439	Deck door windlace assembly - four - passenger only (specify amount)		*

LEATHER

...	CO 86424	Door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86425	Door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86428	Door lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86429	Door lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86408	Body lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86409	Body lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86418	Windlace and retainer assembly - over door - R. H.		1
...	CO 86419	Windlace and retainer assembly - over door - L. H.		1

TRIM PANELS DOOR, PILLAR AND HEADER

14	CO 86640	Door trim panel assembly - R. H.		1
15	CO 86641	Door trim panel assembly - L. H.		1
16	CO 86673	Seat side shield trim panel assembly - R. H.		1
...	CO 86674	Seat side shield trim panel assembly - L. H.		1
17	CO 86521	Door header trim panel assembly - R. H.		1
...	CO 86522	Door header trim panel assembly - L. H.		1

DOOR, PILLAR AND HEADER-Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 86517	Windshield header trim panel assembly		1
...	CO 86746	Glove box bottom trim board assembly		1
...	BO 70324	Body hinge pillar trimstick to roof base screw		2
...	BO 70703	Body hinge pillar trimstick to roof base screw finish washer		2
...	BO 70704	Body hinge pillar trimstick to roof pillar screw		6
...	BO 70690	Body hinge pillar trimstick to roof pillar screw finish washer		6
...	BO 18479	Body hinge pillar trimstick to roof pillar screw nut No.	10-32x3/16"	4

LEATHER

...	CO 86642	Door trim panel assembly - R. H.		1
...	CO 86643	Door trim panel assembly - L. H.		1
...	CO 86675	Seat side shield trim panel assembly - R. H.		1
...	CO 86676	Seat side shield trim panel assembly - L. H.		1
...	CO 86523	Door header trim panel assembly - R. H.		1
...	CO 86524	Door header trim panel assembly - L. H.		1
...	CO 86518	Windshield header trim panel assembly		1
...	CO 86747	Glove box bottom trimboard assembly I		
...	BO 86412	Body hinge pillar trimstick assembly - R. H.		1
...	BO 86413	Body hinge pillar trimstick assembly - L. H.		1

DOORS

...	CO 85562	Door complete - R. H.		1
...	CO 85563	Door complete - L. H.		1
...	CO 85546	Door assembly-skeleton - R. H.		1
...	CO 85547	Door assembly-skeleton - L. H.		1
...	BO 85327	Check strap		2
...	CO 85224	Check strap attaching plate		2
...	BO 85234	Check strap clamp		2
...	BO 18465	Check strap attaching plate screw	1/4"-20x7/8"	4
...	BO 85218	Door window regulator and remote control tie bar assembly		2
...	86010	Door window glass (not supplied) (Door upholstery panels see Page 291)		2

DOOR HINGES

...	BO 85070	Door hinge and reinforcement assembly-body half		2
...	BO 85078	Door hinge-door half		2
...	BO 85746	Door hinge rod		2
...	BO 18464	Door hinge screw	1/4"-20x10/16"	34
...	BO 86248	Door hinge upper filler		2
...	BO 86249	Door hinge upper filler retainer		2
...	BO 18465	Door hinge upper filler retainer screw	1/4"-20x7/8"	2

DOOR LOCKS

...	BO 85066	Door lock assembly - R. H.		1
...	BO 85068	Door lock assembly - L. H.		1
...	BO 18464	Door lock screw	1/4"-20x11/16"	8
...	BO 85929	Door lock reinforcement plate		2
...	BO 87152	Door lock remote control assembly - R. H.		1
...	BO 86125	Door lock remote control assembly - L. H.		1
...	BO 18447	Door lock remote control screw.	No. 10-32x5/8"	6
...	BO 18479	Door lock remote control screw nut	No. 10-32x3/16"	6

DOOR WINDOW REGULATOR

...	BO 86255	Door window regulator assembly - R. H.		1
...	BO 86256	Door window regulator assembly - L. H.		1
...	BO 18464	Door window regulator to frame screw	1/4"-20x11/16"	2
...	BO 18458	Door window regulator to frame screw	1/4"-20x11/16"	4
...	BO 18461	Countersunk shakeproof washer		4
...	BO 18475	Countersunk shakeproof washer		4
...	BO 85967	Door window regulator handle		2
...	BO 79308	Door window regulator handle pin		2
...	BO 79709	Door window regulator handle spring		2
...	BO 85973	Door window regulator handle escutcheon plate		2
...	BO 86272	Door window regulator handle attaching screw washer		4

DOOR HANDLES

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85981	Door outside handle assembly (not lock type)		1
22	BO 85982	Door outside handle and cylinder assembly		1
...	BO 70526	Door outside handle screw	No. 10-32x5/8"	4
23	BO 85977	Remote control handle		2
...	BO 79308	Remote control handle pin		2
...	BO 79709	Remote control handle spring		2
24	BO 85973	Remote control handle escutcheon plate		2
25	BO 85975	Door "pull-to" grip		2
...	BO 70701	Door "pull-to" grip screw		4

DOOR DOVETAILS AND BUMPERS

26	BO 87726	Dovetail complete-female		2
27	BO 85215	Dovetail-male		2
...	BO 18458	Dovetail screw		4
...	BO 78995	Dovetail plate		2
...	BO 86113	Dovetail rubber bumper		4
...	BO 79149	Dovetail rubber bumper retaining spring		2
28	BO 85297	Door lock striker plate		2
...	BO 70680	Door lock striker plate screw		2
...	BO 85291	Door lock striker plate tapping plate		2
...	BO 85289	Door lock striker plate tapping plate retainer		2
29	BO 75151	Door rubber bumper		4
...	BO 75152	Door rubber bumper retainer		4
...	BO 70399	Dovetail case clinch nut	1/4"-20	4
...	BO 18458	Dovetail case pillar screw	1/4"-20x11/16"	4
...	BO 18458	Door bumper retaining screw		4

DOOR GLASS AND CHANNELS

30	86010	Door glass (not supplied)		2
31	BO 85861	Door window glass run assembly		4
...	BO 86253	Door window rest channel assembly - R. H.		1
...	BO 86254	Door window rest channel assembly - L. H.		1
...	BO 75261	Door glass run clip-lower		4
...	BO 85984	Door glass run clip-upper		4
...	BO 78724	Door glass bumper		4

DOOR FINISH STRIPS

32	CO 87186	Door window finish moulding and weatherstrip assembly		2
...	BO 70740	Door window finish moulding screw	10-32x5/8"	28

REAR WINDOW

...	81627	Rear window glass (cars 1165674 to (not supplied)		1
33	86012	Rear window glass (not supplied) (cars and upward)		1
...	BO 86253	Rear window glass rest channel assembly		1
...	BO 81533	Rear window glass run (cars to)		2
...	BO 85867	Rear window glass run (cars and upward)		2
...	CO 81579	Rear window finish moulding assembly		1
...	BO 7189	Rear window finish moulding screw	No. 8x7/8"	12
...	BO 87128	Rear window curtain and roller assembly		1
...	BO 87131	Rear window curtain bracket (for use on curtains that have one bracket attached)		1
...	BO 87132	Rear window curtain bracket - R. H.		1
...	BO 87133	Rear window curtain bracket - L. H.		1
...	BO 87402	Rear window curtain and roller assembly (used on leather trim jobs)		1
...	CO 85672	Rear window frame and regulator board		1

REAR WINDOW REGULATOR

...	BO 86103	Rear window regulator assembly		1
...	BO 70242	Rear window regulator to frame screw	1/4"-20x3/4"	4
...	BO 18461	Rear window regulator to frame screw washer		4
...	BO 85969	Rear window regulator handle		1
...	BO 79308	Rear window regulator handle pin		1
...	BO 79709	Rear window regulator handle spring		1
...	BO 85973	Rear window regulator handle escutcheon plate		1

TOP

Illus. No.	Part No.	Description	Specifications	Per Car
34	CO 85767	Drip moulding - R. H.		1
...	CO 85768	Drip moulding - L. H.		1
35	CO 85769	Drip moulding finish strip - R. H.		1
...	CO 85770	Drip moulding finish strip - L. H.		1
...	CO 85681	Top bow No. 1		1
...	CO 85682	Top bow No. 2		1
...	CO 85683	Top bow No. 3		2
...	CO 85139	Roof rail - front		1
...	CO 85688	Roof rail - rear		1
...	CO 85693	Roof auxiliary rail - R. H.		1
...	CO 85694	Roof auxiliary rail - L. H.		1
...	CO 85666	Roof side rail - R. H.		1
...	CO 85667	Roof side rail - L. H.		1
...	BO 18447	Drip moulding screw	No. 10-32x5/8"	10
36	BO 81710	Rear view mirror assembly		1
...	BO 70526	Rear view mirror screw	No. 10-32x5/8"	2
...	BO 86483	Top deck material (specify amount)		*
...	CO 87218	Roof corner moulding - front		2
...	CO 87220	Roof corner moulding - rear		2
...	CO 87222	Roof moulding - front		1
...	CO 87223	Roof moulding - side and rear		3
...	BO 70729	Roof cover nail	1/16"x7/8"	*

DOME LAMP

...	BO 85971	Dome lamp assembly		1
...	BO 85983	Dome lamp switch and escutcheon plate assembly		1
...	BO 86119	Dome lamp door assembly - includes lens		1
...	BO 80101	Dome lamp switch tapping plate		1
...	BO 70467	Dome lamp switch wire screw	No. 6-32x3/16"	2
...	BO 70416	Dome lamp switch attaching screw	No. 6-32x3/4"	2

SEAT AND BACK CUSHIONS FRONT

37	CO 86832	Front seat cushion assembly		1
...	CO 86844	Front seat back cushion assembly		1
...	CO 86189	Front seat cushion spring assembly		1
...	CO 86190	Front seat back cushion spring assembly		1
38	CO 85490	Front seat tray assembly		1
...	CO 85700	Front seat adjusting frame		1
...	BO 70399	Front seat tray clinch nut	1/4"-20	9
...	BO 81497	Front seat hinge panel and hinge assembly		1
...	BO 82509	Nut and nut cage assembly	1/4"	4
...	BO 75280	Nut cage	5/16"	2
...	BO 18483	Nut cage nut	5/16"	2
...	BO 76989	Nut cage	1/4"	4
...	BO 12120	Nut cage nut	1/4"	4
...	BO 81919	Front seat hinge assembly-upper and lower halves		2
...	BO 81925	Front seat adjusting screw		1
...	BO 85384	Front seat adjusting screw pivot		1
...	BO 81937	Front seat adjusting screw pivot plate		1
...	BO 81926	Front seat adjusting screw collar		1
...	BO 3037	Front seat adjusting screw collar taper pin	No. 2 x 1"	1
...	BO 81927	Front seat adjusting screw trunnion - rear		1
...	BO 81929	Front seat adjusting screw trunnion anti-rattler		1
...	BO 81951	Front seat adjusting screw trunnion retainer		1
...	BO 81930	Front seat hinge rod		2
...	BO 81941	Front seat adjusting screw handle		1
...	BO 3037	Front seat adjusting screw handle taper pin	No. 2 x 1"	1
...	BO 82001	Front seat adjusting screw yoke		1
...	BO 82003	Front seat adjusting screw yoke bolt		1
...	CO 85699	Front seat cushion frame assembly		1
...	CO 86072	Front seat back cushion frame assembly		1
...	CO 86833	Front seat cushion assembly-leather trim		1
...	CO 86845	Front seat back cushion assembly-leather trim		1

RUMBLE SEAT

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 87339	Rumble seat cushion complete		1
...	CO 86191	Rumble seat cushion spring assembly		1
39	CO 87341	Rumble seat back cushion complete		1
...	CO 86192	Rumble seat back cushion spring assembly		1
...	BO 87360	Rumble seat compartment carpet assembly		1
...	BO 70256	Rumble seat compartment carpet fastener		2
...	BO 12799	Rumble seat compartment carpet fastener nut		2
...	CO 86348	Rumble seat side trim panel - R. H.		1
40	CO 86349	Rumble seat side trim panel - L. H.		1
...	BO 75149	Rumble seat cushion dowel		2
...	BO 70010	Rumble seat carpet fastener		5

TOE, FLOOR BOARDS AND SCUFF PLATES

...	BO 85492	Toe board riser assembly - R. H.		1
...	BO 85493	Toe board riser assembly - L. H.		1
...	CO 85603	Toe plate assembly - L. H. D.		1
...	CO 85604	Toe plate assembly - R. H. D.		1
...	BO 85745	Toe plate steering gear cover - L. H. D. only		1
...	BO 18465	Toe plate steering gear cover screw.		1
...	CO 87461	Front floor board assembly (steel)		1
...	BO 85951	Front floor board shim		1
...	BO 26554	Toe plate shim		15
41	BO 85993	Scuff plate - R. H.		1
...	BO 85994	Scuff plate - L. H.		1
...	CO 85713	Front floor board spacer		1
...	CO 85709	Center floor board - R. H.		1
...	CO 85711	Rear floor board (rumble seat)		1
...	CO 85715	Rear toe board (rumble seat)		1
...	BO 18455	Rear floor board screw	1/4"-20x1-1/2"	10
...	BO 86250	Front floor board spacer - side		6
...	BO 70398	Clinch nut	1/4"-20	6
...	CO 85708	Battery cover assembly		1
...	BO 18453	Toe plate bolt	1/4"-20x7/16"	11

FLOOR MATS, PADS AND CARPETS

42	BO 86007	Front floor mat and pad assembly - L. H. D.		1
...	BO 86008	Front floor mat and pad assembly - R. H. D.		1
...	BO 12247	Front floor mat and pad socket plate		4
...	BO 18313	Front floor mat and pad socket	3/16"x1-1/2"	4
...	BO 18349	Front floor mat and pad stud		4
...	BO 70677	Front floor mat and pad stud nut		4
...	BO 85948	Toe plate steering gear hole cover pad - L. H. D. only		1
...	BO 87513	Hand brake hole cover		1
...	BO 85926	Dash pad assembly		1
...	BO 18359	Dash pad to dash clip	3/16"x1-1/2	6
...	BO 87360	Rumble seat compartment carpet assembly		1
...	BO 70010	Rumble seat compartment carpet fastener		5

SILL WOOD FILLERS

...	CO 85706	Sill wood filler - R. H.		1
...	CO 85707	Sill wood filler - L. H.		1

REAR DECK
TWO-PASSENGER

...	CO 87185	Deck lid assembly		1
...	BO 83195	Deck lid check arms and bracket assembly - R. H.		1
...	BO 83196	Deck lid check arms and bracket assembly - L. H.		1
...	BO 18453	Deck lid check arms and bracket screws	1/4"-20x7/16"	8
...	BO 12120	Deck lid check arms and bracket screws nuts	1/4"-20xy1/4"	4
...	BO 85445	Deck lid hinge and bracket assembly		2
...	BO 83191	Deck lid check bracket attaching plate		2

REAR DECK-Continued


Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 83193	Deck lid striker attaching plate		1
...	BO 85188	Deck drain trough - R. H. side		1
...	BO 85189	Deck drain trough - L. H. side		1
...	BO 85500	Deck lid lock striker plate		2
...	BO 85413	Deck lower inside panel tapping plate		1
...	BO 85596	Deck lid bumper bracket		2
...	BO 86009	Deck lid handle and cylinder assembly		1
...	BO 86109	Deck lid lock assembly		1
...	CO 85427	Rear deck vertical moulding - R. H.		1
...	CO 85428	Rear deck vertical moulding - L. H.		1
...	BO 85190	Deck quarter panel reinforcing plate		2
...	BO 85200	Deck panel upper reinforcement		2

REAR DECK FOUR-PASSENGER

43	CO 86005	Deck lid assembly		1
...	BO 80202	Deck lid bumper		2
...	BO 85578	Deck lid hinge - R. H. - body half		1
...	BO 85579	Deck lid hinge - L. H. - body half		1
...	BO 85188	Deck drain trough - R. H.		1
...	BO 85189	Deck drain trough - L. H.		1
44	BO 85202	Deck lid lock striker plate		2
...	BO 85413	Deck lower inside tapping plate		2
...	BO 85743	Deck lid hinge bolt		2
...	BO 80203	Deck lid bumper retainer		2
45	BO 86009	Deck lid handle and cylinder assembly		1
46	BO 31240	Key		1
47	BO 81950	Deck lid lock assembly		
...	BO 80262	Deck lid lock reinforcement assembly		
...	BO 85184	Deck lid hinge-door half		2
...	BO 85190	Deck quarter panel reinforcing plate		2
...	BO 85200	Deck upper reinforcement		1

RUMBLE SEAT STEPS

...	BO 86001	Upper step plate		1
...	BO 70381	Upper step plate to fender bolt - long		1
...	BO 70235	Upper step plate to fender bolt - short		1
...	BO 70675	Upper step plate to fender bolt washer		2
...	BO 70674	Upper step plate to fender bolt nut		2
...	BO 85998	Lower step plate		1
...	BO 86042	Lower step plate arm		1
...	BO 70238	Lower step plate bolt	3/8"-16x1-3/8"	1
...	BO 70047	Lower step plate bolt nut	3/8"-16x3/8"	2
...	BO 12310	Lower step plate arm to bumper bolt	3/8"-24x1-3/8"	2
...	BO 12415	Lower step plate arm to bumper bolt nut	3/8"-24x21/64"	2

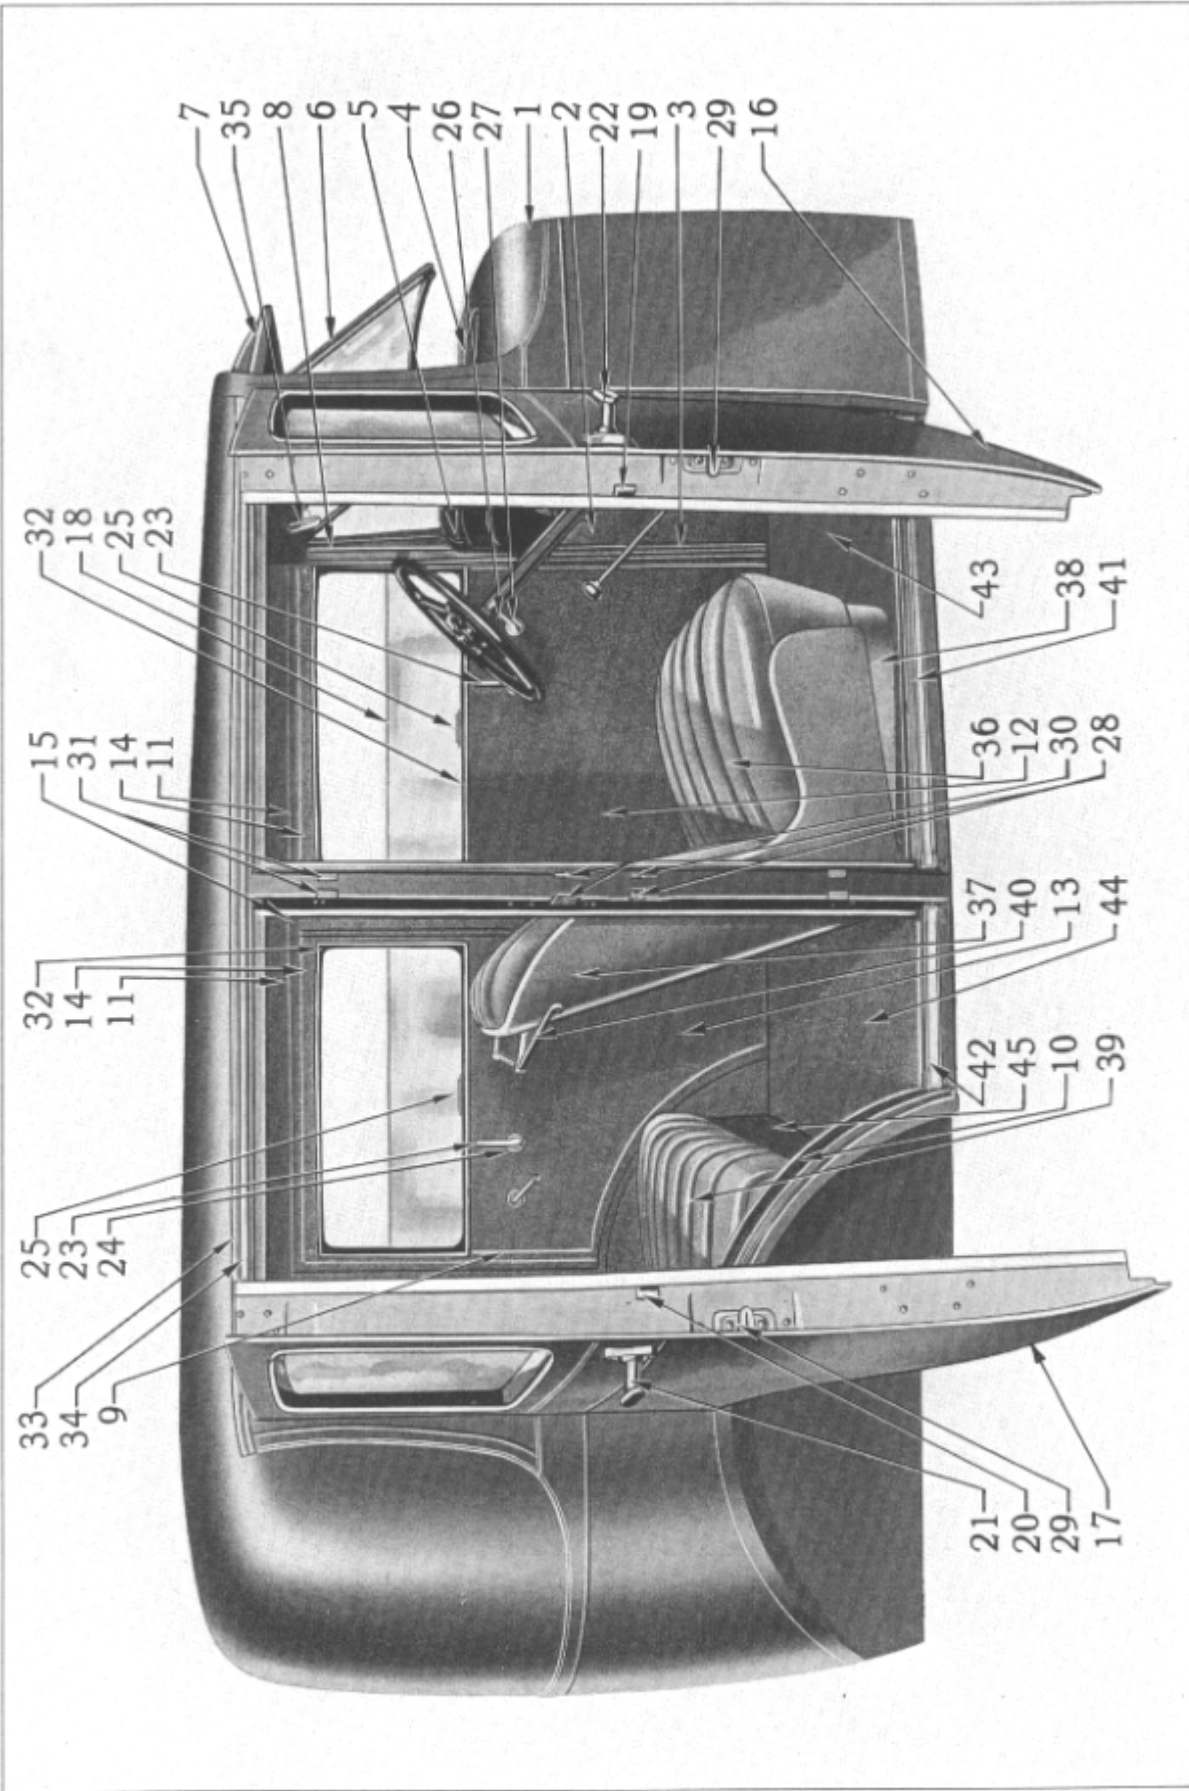

ESSEX STANDARD SEDAN

STANDARD SEDAN BODY

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 85830	Body complete - L. H. D.		1
...	CO 85831	Body complete - R. H. D.		1
...	BO 80472	Body to chassis shim		8
...	BO 87136	Body to chassis shim		2
...	BO 12320	Body bolt	7/16"-14x3-1/4"	8
...	BO 70011	Body bolt	7/16"-14x1-3/4	2
..	BO 70573	Body bolt nut	7/16"-14x3/8"	10

COWL AND DASH

1	CO 87173	Cowl and dash assembly		1
...	BO 85952	Cowl to windshield belt panel shim		1
...	BO 18392	Cowl to windshield belt panel shim rivet		6
...	BO 85953	Cowl to hinge pillar shim		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 85957	Radiator to bonnet shim		2
...	BO 18353	Radiator to bonnet shim rivet		16
...	BO 85958	Dash to bonnet shim		2
...	BO 70733	Dash to bonnet shim drive screw		20
...	BO 85929	Cowl lamp reinforcement plate assembly		2
...	CO 86322	Cowl quarter kick panel - R. H.		1
2	CO 86323	Cowl quarter kick panel - L. H.		1
...	CO 87604	Cowl quarter kick panel - R. H. (export leather jobs only)		1
...	CO 87605	Cowl quarter kick panel - L. H. (export leather jobs only)		1
...	BO 18470	Cowl quarter kick panel screw		4
...	GO 12316	Cowl quarter kick panel screw finish washer		4
...	BO 70396	Cowl quarter kick panel screw clinch nut		4
3	BO 85776	Cowl quarter kick panel retainer		2
...	BO 85216	Bonnet top hinge cowl bracket assembly		1
...	BO 2352	Bonnet top hinge cowl bracket to dash screw		1
...	BO 86077	Cowl top finish moulding washer (leather)		4
...	CO 85110	Cowl and windshield finish panel reinforcement		1
...	BO 70697	Cowl top finish moulding washer (steel)		4
...	BO 86076	Cowl top finish moulding gasket		1
...	BO 86002	Cowl top finish moulding		1
...	BO 12799	Cowl top finish moulding stud nut		4
...	BO 70086	Dash panel bonnet hinge bracket clinch nut		1
...	BO 70243	Dash panel rubber ferrule - large		6
...	BO 70504	Radiator shutter wire rubber ferrule		1
...	BO 70142	Dash panel to toe plate flange rubber ferrule		2
...	BO 70662	Spare tire brace rubber ferrule		1
...	BO 70397	Dash panel wire and tubing clip clinch nut		4
...	BO 70399	Dash panel toe plate clinch nut		5
...	BO 70398	Toe plate clinch nut		5

COWL VENTILATOR

4	BO 85788	Cowl ventilator cover assembly - R. H.		1
...	BO 86006	Cowl ventilator cover assembly - L. H.		1
...	BO 81641	Cowl ventilator drain pipe		2
...	BO 85091	Cowl ventilator cover hinge (cars 1165674 to)		2
...	BO 87600	Cowl ventilator cover hinge - R. H. (cars and upward)		1
...	BO 87601	Cowl ventilator cover hinge - L. H. (cars and upward)		1
...	BO 85421	Cowl ventilator roller guide - R. H.		2
...	BO 85422	Cowl ventilator roller guide - L. H.		2
...	BO 85417	Cowl ventilator ratchet		2
...	BO 70028	Cowl ventilator ratchet to trough rivet	3/6"x3/8"	4
...	BO 18447	Cowl ventilator roller guide to cover hinge screw No.	10-32x5/8"	2
...	BO 12799	Cowl ventilator roller guide to cover hinge screw nut No.	10-32xy1/8"	2
...	BO 85419	Cowl ventilator handle		2
...	BO 70304	Cowl ventilator handle to roller guide screw	No. 10-32x5/8"	4
...	BO 12799	Cowl ventilator handle to roller guide screw nut	No. 10-32x1/8"	4
...	BO 85423	Cowl ventilator roller		2
...	BO 85424	Cowl ventilator trough hinge spacer		4

COWL VENTILATOR - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85425	Cowl ventilator spring		2
...	BO 85426	Cowl ventilator weatherstrip		2
...	BO 85880	Cowl ventilator drain tube		2
...	BO 85747	Cowl ventilator drain tube clip		2

FRONT PILLAR AND WINDSHIELD PANELS

...	CO 85461	Front pillar assembly (includes windshield panels)		1
...	BO 18464	Finish panel screw	1/4"-20x11/16"	4
...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	BO 85459	Front hinge pillar to dash brace and toe board riser assembly-R. H.		1
...	BO 85460	Front hinge pillar to dash brace and toe board riser assembly-L. H.		1
...	BO 85074	Front hinge pillar tapping strip		2
...	BO 18464	Front hinge pillar tapping strip screw	1/4"-20x11/16"	4
..	BO 70398	Windshield header finish panel clinch nut	1/2"-20	2
...	BO 85777	Windshield garnish moulding - R. H.		1
...	BO 85778	Windshield garnish moulding - L. H.		1
...	BO 70397	Front hinge pillar clinch nut	No. 16-32	2
...	BO 70395	Windshield panel belt reinforcement clinch nut		6
...	BO 70128	Windshield header finish panel screw	1/4"-20x5/8"	4
...	BO 70452	Windshield header finish panel screw finish washer		4
...	BO 70396	Rear view mirror clinch nut	1/4"-20x5/64"	2
...	CO 86517	Windshield header trim panel assembly (cloth)		1
...	CO 86518	Windshield header trim panel assembly (leather)		1

INSTRUMENT PANELS

...	CO 86302	Instrument panel assembly - L. H. D.		1
...	CO 86303	Instrument panel assembly - R. H. D.		1
...	BO 70455	Instrument panel to belt reinforcement screw	8-32x3/4"	6
...	BO 85096	Instrument panel steering column bracket		2
...	BM 219	Instrument panel steering column bracket bolt	5/16"-18x3/4"	4
...	BO 18464	Instrument panel steering column bracket screw	1/4"-20x11/16"	4
...	BO 12120	Instrument panel steering column bracket screw nut	1/4"-20xy1/4"	4
...	BO 85211	Steering column bracket tapping plate		2
...	BO 85464	Steering column to dash brace and bracket assembly		1
...	BO 85071	Steering column bracket to dash brace		2
...	BO 70028	Rivet	3/16"x3/8"	12
...	BO 18474	Rivet		4
...	BZ 85744	Steering column bracket nut		1
...	BO 86218	Steering column jacket tube bracket assembly		2
...	GZ 18062	Steering column jacket tube bracket screw		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 86306	Instrument mounting bracket assembly - upper (86122 and clinch nut)		2
...	BO 86307	Instrument mounting bracket assembly - lower (86123 and clinch nut)		2

WINDSHIELD

6	CO 85779	Windshield assembly (less glass)		1
...	87419	Windshield glass (not supplied)		1
...	BO 87518	Windshield hinge - body half		1
...	BO 18447	Windshield hinge screw	No. 10-32x5/8"	9
...	BO 18479	Windshield hinge screw nut	No. 10-32x3/16"	9
...	BO 85210	Windshield regulator tapping plate		1
...	BO 86116	Windshield hinge weatherstrip		1
...	BO 85873	Windshield bumper		2
...	BO 75152	Windshield bumper retainer		2
...	BO 70128	Windshield bumper retainer screw	1/4"-20x5/8"	2
...	BO 86096	Windshield regulator assembly		1
...	BO 86277	Windshield regulator finish plate		1
...	BO 87153	Windshield regulator spring escutcheon		1
...	BO 86391	Windshield regulator finish plate screw		2
...	BO 86392	Windshield regulator finish plate screw sleeve		2

WINDSHIELD - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 87591	Windshield glass clip - R. H.		1
...	BO 87592	Windshield glass clip - L. H.		1
...	BO 87593	Windshield glass clip - male		2
...	BO 87594	Windshield glass clip screw - female		2
...	85656	Windshield cleaner complete (not supplied) (Windshield cleaner and parts are serviced direct by Trico Products Corporation, Buffalo, N. Y.)		
...	BO 87598	Windshield weatherstrip - side and bottom		1
...	BO 87515	Windshield hinge corner rubber		2
...	BO 87516	Windshield hinge corner rubber clip - R. H.		1
...	BO 87517	Windshield hinge corner rubber clip - L. H.		1

WINDSHIELD VISOR

7	CO 85248	Visor panel (specify color)		1
...	BO 18447	Visor panel to finish panel screw	No. 10-32x5/8"	9
...	BO 9159	Visor panel to finish panel screw		9
...	BO 70127	Visor panel to finish panel screw finish washer	1/4"	2

PILLARS

...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	CO 85503	Center pillar assembly - R. H.		1
...	CO 87134	Center pillar assembly - L. H.		1
...	CO 85506	Rear body pillar assembly - R. H.		1
...	CO 85507	Rear body pillar assembly - L. H.		1
...	BO 85233	Rear body pillar tapping strip		2

WEATHERSTRIPS, WINDLACE AND RETAINERS

...	CO 86434	Front door bottom weatherstrip and retainer assembly		2
...	CO 86460	Rear door bottom weatherstrip and retainer assembly		2
...	BO 85869	Door window belt weatherstrip - inner		4
...	CO 86435	Door window belt weatherstrip and retainer assembly		4
...	BO 85870	Door window glass header weatherstrip (cement to header)		4
...	CO 86422	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
8	CO 86423	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86426	Front door lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86427	Front door lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86452	Rear door hinge pillar trim and windlace retainer assembly - R. H.		1
9	CO 86453	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86462	Rear door extension windlace and retainer assembly		2
10	BO 86444	Rear body pillar extension trim retainer assembly		2
...	CO 86475	Rear window header trim and retainer assembly		1
...	CO 86416	Windlace and retainer assembly-over doors - R. H.		2
11	CO 86417	Windlace and retainer assembly-over doors - L. H.		2
...	CO 86436	Rear body pillar trim and retainer assembly		2
...	CO 87204	Center pillar windlace assembly		2
...	BO 87423	Locktite binding (specify amount)		

LEATHER

...	BO 86476	Rear window header trim and retainer assembly		1
...	CO 86424	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86425	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86428	Front door lock pillar trim and windlace retainer assembly - R. H.		1
...	CO 86429	Front door lock pillar trim and windlace retainer assembly - L. H.		1
...	CO 86454	Rear door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86455	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86463	Rear door extension windlace and retainer assembly		2
...	BO 86445	Rear body pillar extension trim retainer assembly		2
...	BO 86418	Windlace and retainer assembly - over doors - R. H.		2
...	BO 86419	Windlace and retainer assembly - over doors - L. H.		2
...	BO 87423	Locktite binding (specify length)		*

TRIM PANELS

DOOR, QUARTER, PILLAR AND header

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 86640	Front door trim panel assembly - R. H.		1
12	CO 86641	Front door trim panel assembly - L. H.		1
...	CO 86683	Rear door trim panel assembly - R. H.		1
13	CO 86684	Rear door trim panel assembly - L. H.		1
...	CO 86726	Lower quarter trim panel assembly - R. H.		1
...	CO 86727	Lower quarter trim panel assembly - L. H.		1
...	CO 86521	Door header trim panel assembly - R. H.		2
14	CO 86522	Door header trim panel assembly - L. H.		2
...	CO 86517	Windshield header trim panel assembly		1
...	CO 96669	Center pillar trim panel assembly - R. H.		1
15	CO 86670	Center pillar trim panel assembly - L. H.		1
...	CO 86410	Body hinge pillar trimstick assembly - R. H.		1
...	CO 86411	Body hinge pillar trimstick assembly - L. H.		1
...	CO 86320	Lower back panel protector (back of rear seat)		1
...	BO 70324	Body hinge pillar trimstick to roof brace screw		2
...	BO 70703	Body hinge pillar trimstick to roof brace screw finish washer		2
...	BO 70704	Body hinge pillar trimstick to pillar screw		6
...	BO 70690	Body hinge pillar trimstick to pillar screw finish washer		6
...	BO 18479	Body hinge pillar trimstick to pillar screw nut	No. 10-32x3/16"	4

LEATHER

...	CO 86642	Front door trim panel assembly - R. H.		1
...	CO 86643	Front door trim panel assembly - L. H.		1
...	CO 86685	Rear door trim panel assembly - R. H.		1
...	CO 86686	Rear door trim panel assembly - L. H.		1
...	CO 86728	Lower quarter trim panel assembly - R. H.		1
...	CO 86729	Lower quarter trim panel assembly - L. H.		1
...	CO 86518	Windshield header trim panel assembly		1
...	CO 86523	Door header trim panel assembly - R. H.		2
...	CO 86524	Door header trim panel assembly - L. H.		2
...	CO 86671	Center pillar trim panel assembly - R. H.		1
...	CO 86672	Center pillar trim panel assembly - L. H.		1
...	CO 86412	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86413	Front hinge pillar trimstick assembly - L. H.		1

DOORS

16	CO 85562	Front door complete - R. H.		1
...	CO 85563	Front door complete - L. H.		1
...	CO 85564	Rear door complete - R. H.		1
17	CO 85565	Rear door complete - L. H.		1
...	CO 85546	Front door assembly - skeleton - R. H.		1
...	CO 85547	Front door assembly - skeleton - L. H.		1
...	CO 85548	Rear door assembly - skeleton - R. H.		1
...	CO 85549	Rear door assembly - skeleton - L. H.		1
...	BO 85327	Check strap		4
...	BO 85224	Check strap attaching plate		4
...	BO 85234	Check strap clamp		4
...	BO 18465	Check strap attaching plate screw	1/4"-20x7/8"	8
...	BO 85218	Door window regulator and remote control tie bar assembly		4
18	86010	Door window glass (not supplied)		4
...		(Door upholstered panels see above)		

DOOR HINGESS

...	BO 85070	Door hinge and reinforcement assembly - body half		4
...	BO 85078	Door hinge - door half		4
...	BO 85746	Door hinge rod		4
...	BO 18464	Door hinge screw	1/4"-20x11/16"	68
...	BO 86248	Front door hinge upper filler		4
...	BO 86249	Front door hinge upper filler retainer		4
...	BO 18465	Front door hinge upper filler retainer screw	1/4"-20x7/8"	4

DOOR LOCKS

Illus. No.	Part No.	Description	Specifications	Per Car
19	BO 85066	Door lock assembly - R. H. - front		1
...	BO 85067	Door lock assembly - L. H. - rear		1
20	BO 85068	Door lock assembly - L. H. - front and R. H. - rear		2
...	BO 18464	Door lock to frame screw	1/4"-20x11/16"	16
...	BO 85929	Door lock reinforcement plate		4
...	BO 87152	Door lock remote control assembly - R. H.		2
...	BO 86125	Door lock remote control assembly - L. H.		2
...	BO 18447	Door lock remote control screw	No. 10-32x5/8"	12
...	BO 18479	Door lock remote control screw nut	No. 10-32x3/16"	12

DOOR HANDLES

21	BO 85981	Door outside handle assembly		3
22	BO 85982	Door outside handle and cylinder assembly		1
...	BO 70526	Door outside handle screw	No. 10 - 32x5/8"	8
23	BO 85977	Remote control handle		4
...	BO 79308	Remote control handle pin		4
...	BO 79709	Remote control handle spring		4
24	BO 85973	Remote control handle escutcheon plate		4
25	BO 85975	Door "pull - to" grip		4
...	BO 70701	Door "pull - to" grip screw		8

DOOR - WINDOW REGULATOR

...	BO 86255	Door window regulator assembly - R. H.		2
...	BO 86256	Door window regulator assembly - L. H.		2
...	BO 18464	Door window regulator to frame screw	1/4"-20x11/16"	2
...	BO 18458	Door window regulator to frame screw	1/4"-20x11/16"	4
...	BO 18461	Countersunk shakeproof washer		4
...	BO 18475	Countersunk shakeproof washer		4
26	BO 85967	Door window regulator handle		4
...	BO 79308	Door window regulator handle pin		4
...	BO 79709	Door window regulator handle spring		4
27	BO 85973	Door window regulator handle escutcheon plate		4
...	BO 86272	Door window regulator handle attaching screw washer		4

DOOR DOVETAILS AND BUMPERS

28	BO 87726	Dovetail complete - female		4
29	BO 85215	Dovetail - male		4
...	BO 18458	Dovetail screw	1/4"-20x11/16"	8
...	BO 78995	Dovetail plate		4
...	BO 86113	Dovetail rubber bumper		8
...	BO 79149	Dovetail rubber bumper retaining spring		4
30	BO 85297	Door lock striker plate		4
...	BO 70680	Door lock striker plate screw		4
...	BO 85291	Door lock striker plate tapping plate		4
...	BO 85289	Door lock striker plate tapping plate retainer		4
31	BO 75151	Door rubber bumper		8
...	BO 75152	Door rubber bumper retainer		8
...	BO 70399	Dovetail case clinch nut	1/4"-20	8
...	BO 18458	Dovetail case pillar screw	1/4"-20x11/16"	8
...	BO 18458	Door bumper retaining screw	1/4"-20x11/16"	4

DOOR GLASS AND CHANNELS

18	86010	Door glass (not supplied)		4
...	BO 85861	Front and rear door window glass run assembly		6
...	BO 85862	Rear door window glass run assembly - rear		2
...	BO 86253	Door window rest channel assembly - right front and left rear		2
...	BO 86254	Door window rest channel assembly - left front and right rear		2
...	BO 75261	Door window glass run clip - lower		8
...	BO 85984	Door window glass run clip - upper		8
...	BO 78724	Door window glass bumpers		8

DOOR FINISH STRIPS

Illus. No.	Part No.	Description	Specifications	Per Car
32	CO 87186	Door window finish moulding and weatherstrip assembly		4
...	BO 70740	Door window finish moulding screw	No. 10-32x5/8"	24

REAR WINDOW

...	86013	Rear window glass (not supplied)		1
...	BO 85878	Rear window glass channel		1
...	CO 85437	Rear window finish moulding		1
...	BO 87129	Rear window curtain and roller assembly (this curtain also used for export leather jobs)		1
...	BO 86271	Rear window curtain bracket complete		1

TOP

33	CO 85759	Drip moulding - R. H.		1
...	CO 85760	Drip moulding - L. H.		1
34	CO 85761	Drip moulding finish strip - R. H.		1
...	CO 85762	Drip moulding finish strip - L. H.		1
...	CO 85681	Top bow No. 1		1
...	CO 85682	Top bow No. 2		1
...	CO 85683	Top bow No. 3		1
...	CO 85684	Top bow No. 4		1
...	CO 85685	Top bow No. 5		2
...	CO 85139	Roof rail-front		1
...	CO 85140	Roof rail-rear		1
...	CO 85141	Roof auxiliary rail - R. H.		1
...	CO 85142	Roof auxiliary rail - L. H.		1
...	CO 85143	Roof side rail - R. H.		1
...	CO 85144	Roof side rail - L. H.		1
...	BO 18447	Drip moulding screw		18
35	BO 81710	Rear view mirror assembly		1
...	BO 70526	Rear view mirror screw		2
...	BO 86481	Top deck material (specify length)		*
...	CO 87218	Roof corner moulding - front		2
...	CO 87219	Roof corner moulding - rear		2
...	CO 87222	Roof moulding - front		1
...	CO 87223	Roof moulding - side and rear		1
...	CO 87224	Roof moulding - side		2
...	BO 70729	Roof moulding nail	1/16"x7/8"	*

DOME LAMP

...	BO 85971	Dome lamp assembly		1
...	BO 85983	Dome lamp switch and escutcheon plate assembly		1
...	BO 86119	Dome lamp door assembly		1
...	BO 80101	Dome lamp switch tapping plate		1
...	BO 70467	Dome lamp switch wire screw		2
...	BO 70416	Dome lamp switch attaching screw		2

SEAT AND BACK, CUSHIONS

FRONT

36	CO 86830	Front seat cushion assembly		1
37	CO 86840	Front seat back cushion assembly		1
...	CO 86195	Front seat cushion springs assembly		1
...	CO 86196	Front seat back cushion springs assembly		1
38	CO 85490	Front seat tray assembly		1
...	BO 70399	Front seat tray clinch nut	1/4"-20	9
...	BO 81497	Front seat hinge panel and hinge assembly		1
...	BO 81931	Front seat adjusting screw assembly		1
...	BO 75280	Nut cage	5/16"	2
...	BO 18483	Nut cage nut	5/16"	2
...	BO 76989	Nut cage	1/4"	4
...	BO 12120	Nut cage nut	1/4"	4
...	BO 81919	Front seat hinge assembly - upper and lower halves		2
...	BO 81925	Front seat adjusting screw		1

SEAT AND BACK CUSHIONS-Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85384	Front seat adjusting screw pivot		1
...	BO 81937	Front seat adjusting screw pivot plate		1
...	BO 81926	Front seat adjusting screw collar		1
...	BO 3037	Front seat adjusting screw collar taper pin	No. 2x1"	1
...	BO 81927	Front seat adjusting screw trunnion - rear		1
...	BO 81929	Front seat adjusting screw trunnion spring washer		1
...	BO 81951	Front seat adjusting screw trunnion retainer		1
...	BO 81930	Front seat hinge rod		2
...	BO 81941	Front seat adjusting screw handle		1
...	BO 3037	Front seat adjusting screw handle taper pin	No. 2x1"	1
...	BO 82001	Front seat adjusting screw yoke.		1
...	BO 82003	Front seat adjusting screw yoke bolt		1
...	BO 76258	Clinch core assembly		*
...	CO 81944	Front seat cushion frame assembly		1
...	CO 81946	Front seat back cushion frame assembly		1
...	CO 86831	Front seat cushion assembly - leather trim		1
...	CO 86841	Front seat back cushion assembly - leather trim		1
(Standard Sedans using folding seats see Essex Coach)				

REAR

39	CO 87022	Rear seat cushion assembly		1
...	CO 87028	Rear seat back cushion assembly		1
...	CO 86197	Rear seat cushion springs assembly		1
...	CO 87150	Rear seat back cushion springs assembly		1
...	CO 85925	Rear seat tray assembly		1
...	BO 70399	Rear seat tray clinch nut	1/4"x20	2
...	BO 75149	Rear seat cushion dowel		2
...	BO 79040	Rear seat back hinge		2
...	CO 85489	Rear seat riser assembly		1
...	CO 85697	Rear seat cushion frame assembly		1
...	CO 85698	Rear seat back cushion frame assembly		1
...	CO 87023	Rear seat cushion assembly-leather trim		1
...	CO 87029	Rear seat back cushion assembly-leather trim		1

ROBE RAIL

40	CO 85979	Robe rail assembly (not used with folding seats)		1
----	----------	--	--	---

SMOKING SETS

...	BO 86095	Ash receiver and escutcheon plate assembly (not used with folding seats)		1
-----	----------	--	--	---

TOE AND FLOOR BOARDS


...	BO 85492	Toe board riser assembly - R. H.		1
...	BO 85493	Toe board riser assembly - L. H.		1
...	CO 85603	Toe plate assembly - L. H. D.		1
...	CO 85604	Toe plate assembly - R. H. D.		1
...	BO 85745	Toe plate steering gear cover - L. H. D. only		1
...	BO 18465	Toe plate steering gear cover screw		1
...	CO 87461	Front floor board assembly (steel)		1
...	BO 85951	Front floor board shim		1
...	BO 26554	Toe plate shim		15
41	BO 85993	Scuff plate - R. H. - front		1
...	BO 85994	Scuff plate - L. H. - front		1
42	BO 85741	Scuff plate-rear		2
...	CO 85713	Front floor board spacer		1
...	CO 85709	Center floor board - R. H.		1
...	CO 85710	Rear floor board		1
...	BO 18455	Rear floor board screw	1/4"-20x1-1/2"	10
...	BO 86250	Front floor board spacer-side		6
...	BO 70398	Clinch nut	1/4"-20	6
...	CO 85708	Battery cover assembly		1
...	BO 18453	Toe plate bolt	1/4"-20x7/16"	1

FLOOR MATS, PADS AND CARPETS

Illus. No.	Part No.	Description	Specifications	Per Car
43	BO 86007	Front floor mat and pad assembly - L. H. D		1
...	BO 86008	Front floor mat and pad assembly - R. H. D		1
...	BO 12247	Front floor mat and pad socket plate		4
...	BO 18313	Front floor mat and pad socket		4
...	BO 18349	Front floor mat and pad fastener stud		4
...	BO 70677	Front floor mat and pad fastener stud nut		1
...	BO 85948	Toe plate steering gear hole cover pad - L. H. D. only		1
...	BO 85926	Dash pad assembly		1
...	BO 18359	Dash pad to dash clip	3/16"x1-1/2"	6
...	BO 87513	Hand brake hole cover		1
44	BO 87354	Rear floor carpet assembly (bench seat)		1
...	BO 87355	Rear floor carpet assembly (used only with folding seats)		1
...	BO 70010	Rear floor carpet fastener		5
...	BO 70256	Rear floor carpet fastener		2
...	BO 12799	Rear floor carpet fastener nut		2
45	BO 87361	Rear seat heel carpet assembly		1
...	BO 70280	Rear seat heel carpet fastener		8
...	BO 70256	Rear seat heel carpet button-on riser		3
...	BO 12799	Rear seat heel carpet button nut		3
...	BO 86890	Rear seat toe board carpet assembly (specify color)		1

SILL WOOD FILLERS

...	CO 85706	Sill wood filler - R. H		1
...	CO 85707	Sill wood filler - L. H		1

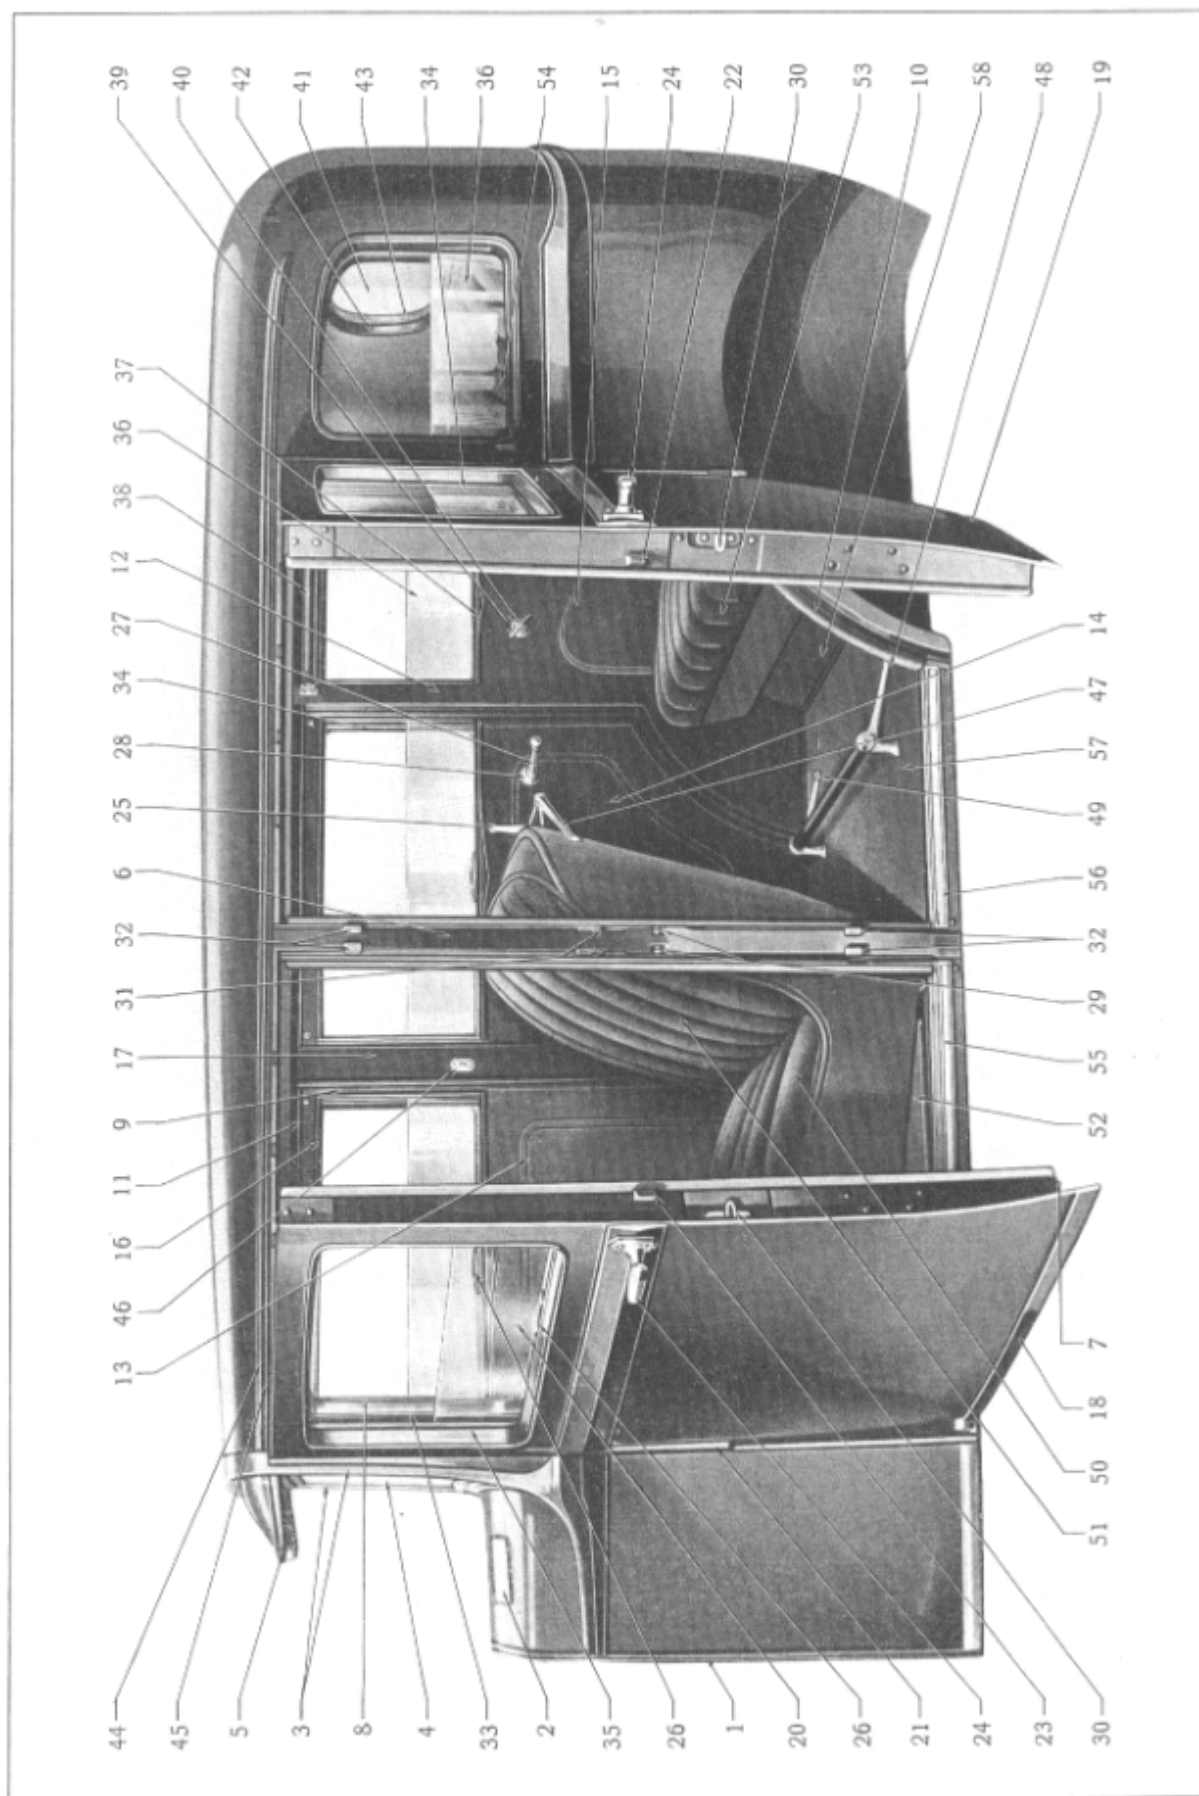

ESSEX TOURING SEDAN

TOURING SEDAN BODY

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 85850	Body complete - L. H. D.		1
...	CO 85851	Body complete - R. H. D.		8
...	BO 87156	Body to chassis shim		2
...	130 12320	Body bolt	7/16"-14x1/4"	8
...	BO 70011	Body bolt	7/16"-14x1-3/4"	2
...	BO 70573	Body bolt nut	7/16"-14X3/8"	10

COWL AND DASH

1	CO 87173	Cowl and dash assembly		1
...	BO 85952	Cowl to windshield belt panel shim		1
...	BO 18392	Cowl to windshield belt panel shim rivet	9/64"x1/4" Tub.	6
...	BO 85953	Cowl to hinge pillar shim		2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 85957	Radiator to bonnet shim		2
...	BO 18353	Radiator to bonnet shim rivet	9/64"x5/16"	16
...	BO 85958	Dash to bonnet shim		2
...	BO 70733	Dash to bonnet shim drive screw		20
...	BO 85929	Cowl lamp reinforcement plate assembly		2
...	CO 86322	Cowl quarter kick panel - R. H.		1
...	CO 86323	Cowl quarter kick panel - L. H.		1
...	CO 87604	Cowl quarter kick panel - R. H. (export leather jobs only)		1
...	CO 87605	Cowl quarter kick panel - L. H. (export leather jobs only)		1
...	BO 18470	Cowl quarter kick panel screw	No. 10-32x5/8"	4
...	BO 12316	Cowl quarter kick panel screw finish washer	No. 10	4
...	BO 70396	Cowl quarter kick panel clinch nut	1/4"x25/64"	4
...	BO 85776	Cowl quarter kick panel retainer		2
...	BO 85216	Bonnet top hinge cowl bracket assembly		1
...	BO 2352	Bonnet top hinge cowl bracket to dash screw	5/16"-24x1"	1
...	BO 86077	Cowl top finish moulding washer (leather)		4
...	CO 85110	Cowl and windshield finish panel reinforcement		1
...	BO 70697	Cowl top finish moulding washer (steel)		4
...	BO 86076	Cowl top finish moulding gasket		1
...	CO 86002	Cowl top finish moulding		1
...	BO 12799	Cowl top finish moulding stud nut	No. 10-32x1/8"	4
...	BO 70086	Dash panel bonnet hinge bracket clinch nut	5/16"-24x5/64"	1
...	BO 70243	Dash panel rubber ferrule-large		6
...	BO 70504	Radiator shutter wire rubber ferrule		1
...	BO 70142	Dash panel to toe plate flange rubber ferrule		2
...	BO 70662	Spare tire brace rubber ferrule		1
...	BO 70397	Dash panel wire and tubing clip clinch nut	No. 10-32	4
...	BO 70399	Dash panel toe plate clinch nut	1/4"-20	5
...	BO 70398	Toe plate clinch nut	1/4"-20	5

COWL VENTILATOR

...	BO 85788	Cowl ventilator cover assembly - R. H.		1
2	BO 86006	Cowl ventilator cover assembly - L. H.		1
...	BO 81641	Cowl ventilator drain pipe		2
...	BO 85091	Cowl ventilator cover hinge (cars 1165674 to)		2
...	BO 87600	Cowl ventilator cover hinge - R. H. (cars and upward)		1
...	BO 87601	Cowl ventilator cover hinge - L. H. (cars and upward)		1
...	BO 85421	Cowl ventilator roller guide - R. H.		2
...	BO 85422	Cowl ventilator roller guide - L. H.		2
...	BO 85417	Cowl ventilator ratchet		2
...	BO 70028	Cowl ventilator ratchet to trough rivet	3/16"x3/8"	4
...	BO 18447	Cowl ventilator roller guide to cover hinge screw	No. 10-32x5/8"	2
...	BO 12799	Cowl ventilator roller guide to cover hinge screw nut	No. 10-32x1/8"	2
...	BO 85419	Cowl ventilator handle		2
...	BO 70304	Cowl ventilator handle to roller guide screw	No. 10-32x5/8"	4
...	BO 12799	Cowl ventilator handle to roller guide screw nut	No. 10-32x1/8"	4
...	BO 85423	Cowl ventilator roller		2
...	BO 85424	Cowl ventilator trough hinge spacer		4

COWL VENTILATOR - Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85425	Cowl ventilator spring		2
...	BO 85426	Cowl ventilator weatherstrip		2
...	BO 85880	Cowl ventilator drain tube		2
...	BO 85747	Cowl ventilator drain tube clip		2

FRONT PILLAR AND WINDSHIELD PANELS

3	CO 85461	Front pillar assembly (includes windshield panels)		1
...	BO 18464	Finish panel screw	1/4"-20x11/16"	4
...	CO 85449	Front hinge pillar assembly - R. H.		1
...	CO 85450	Front hinge pillar assembly - L. H.		1
...	BO 85459	Front hinge pillar to dash brace and toe board riser assembly - R. H.		1
...	BO 85460	Front hinge pillar to dash brace and toe board riser assembly - L. H.		1
...	BO 85074	Front hinge pillar tapping strip		2
...	BO 18464	Front hinge pillar tapping strip screw	1/4"-20x11/16"	4
...	BO 70398	Windshield header finish panel clinch nut	1/4"-20	2
...	BO 85777	Windshield garnish moulding - R. H.		1
...	BO 85778	Windshield garnish moulding - L. H.		1
...	BO 70397	Front hinge pillar clinch nut	No. 10-32	2
...	BO 70395	Windshield panel reinforcement clinch nut		6
...	BO 70128	Windshield header finish panel screw	1/4"-20x5/8"	4
...	BO 70452	Windshield header finish panel screw finish washer		4
...	BO 70396	Rear view mirror clinch nut		2
...	CO 86517	Windshield header finish panel assembly (cloth)		1
...	CO 86518	Windshield header finish panel assembly (leather)		1

INSTRUMENT PANELS

...	CO 86302	Instrument panel assembly - L. H. D.		1
...	CO 86303	Instrument panel assembly - R. H. D.		1
...	BO 70455	Instrument panel to belt reinforcement screw	No. 8-32x3/4"	6
...	BO 85096	Instrument panel steering column bracket		2
...	BM 219	Instrument panel steering column bracket bolt	5/16"-18x3/4"	4
...	BO 18464	Instrument panel steering column bracket screw	1/4"-20x11/16"	4
...	BO 12120	Instrument panel steering column bracket screw nut	1/4"-20x1/4"	4
...	BO 85211	Steering column bracket tapping plate		2
...	BO 85464	Steering column to dash brace and bracket assembly		1
...	BO 85071	Steering column bracket to dash brace,		2
...	BO 70028	Rivet	3/16"x3/8"	12
...	BO 18474	Rivet		4
...	BZ 85744	Steering column bracket anchor bar		1
...	BO 86218	Steering column jacket tube bracket assembly		1
...	GZ 18062	Steering column jacket tube bracket screw	5/16"-18x1"	2
...	BO 85949	Instrument panel to windshield belt panel shim		2
...	BO 86306	Instrument mounting bracket assembly-upper		2
...	BO 86307	Instrument mounting bracket assembly-lower		2

WINDSHIELD

4	CO 85779	Windshield assembly (less glass)		1
...	87419	Windshield glass (not supplied)		1
...	BO 87518	Windshield hinge - body half		1
...	BO 18447	Windshield hinge screw	No. 10-32x5/8"	9
...	BO 18479	Windshield hinge screw nut	No. 10-32x3/16"	9
...	BO 85210	Windshield regulator tapping plate		1
...	BO 86116	Windshield hinge weatherstrip		1
...	BO 85873	Windshield bumper		2
...	BO 75152	Windshield bumper retainer		2
...	BO 70128	Windshield bumper retainer screw	1/4"-20x5/8"	2
...	BO 86096	Windshield regulator assembly		1
...	BO 86277	Windshield regulator finish plate		1
...	BO 87153	Windshield regulator spring escutcheon		1
...	BO 86391	Windshield regulator finish plate screw		2
...	BO 86392	Windshield regulator finish plate screw sleeve		2
...	BO 87591	Windshield glass clip - R. H.		1
...	BO 87592	Windshield glass clip - L. H.		1

WINDSHIELD-Continued

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 87593	Windshield glass clip screw - male		2
...	BO 87594	Windshield glass clip screw - female		2
...	BO 87598	Windshield weatherstrip - sides and bottom		1
...	85656	Windshield cleaner complete (not supplied) (Windshield cleaner and parts are serviced direct by Trico Products Corporation, Buffalo, N. Y.)		1
...	BO 87515	Windshield hinge corner rubber		2
...	BO 87516	Windshield hinge corner rubber clip - R. H		1
...	BO 87517	Windshield hinge corner rubber clip - L. H		1

WINDSHIELD VISOR

5	CO 85248	Visor panel (specify color)		1
...	BO 18447	Visor panel to finish panel screw	No. 10-32x5/8"	9
...	BO 9159	Visor panel to finish panel screw		9
...	BO 70127	Visor panel to finish panel screw finish washer	1/4"	2

PILLARS

...	CO 85449	Front hinge pillar assembly - R. H		1
...	CO 85450	Front hinge pillar assembly - L. H		1
...	CO 85503	Center pillar assembly - R. H		1
6	CO 87134	Center pillar assembly - L. H		1
...	CO 85506	Rear body pillar assembly - R. H		1
...	CO 85507	Rear body pillar assembly - L. H		1
...	CO 85233	Rear body pillar tapping strip		2
...	BO 85620	Center pillar trim retainer clip		2

WEATHERSTRIPS, WINDLACE AND RETAINERS

7	CO 86434	Front door bottom weatherstrip and retainer assembly		2
...	CO 86460	Rear door bottom weatherstrip and retainer assembly		2
...	BO 85869	Door window belt weatherstrip - inner		4
...	CO 86435	Door window belt weatherstrip and retainer assembly		4
...	BO 85870	Door window glass header weatherstrip (cement to header)		4
...	BO 85872	Door header weatherstrip		4
...	BO 86467	Quarter window header weatherstrip and retainer assembly		2
...	BO 81504	Quarter window belt weatherstrip - inner		2
...	BO 85868	Quarter window belt weatherstrip - inner		2
...	BO 86475	Rear window header trim and retainer assembly		1
8	CO 86422	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86423	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86452	Rear door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86453	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 87205	Center pillar windlace assembly		2
9	CO 86426	Door lock pillar trim and retainer assembly - R. H.		2
...	CO 86427	Door lock pillar trim and retainer assembly - L. H.		2
...	CO 86462	Rear door extension windlace and retainer assembly		2
10	BO 86444	Rear body extension retainer assembly		2
11	BO 86416	Windlace and retainer assembly - over doors - R. H.		2
...	BO 86417	Windlace and retainer assembly - over doors - L. H.		2
12	CO 86436	Rear body pillar trim and retainer assembly		2
...	BO 87423	Locktite binding (specify amount)		

LEATHER

...	BO 86476	Rear window header trim and retainer assembly		1
...	CO 86424	Front door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86425	Front door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86454	Rear door hinge pillar trim and windlace retainer assembly - R. H.		1
...	CO 86455	Rear door hinge pillar trim and windlace retainer assembly - L. H.		1
...	CO 86428	Door lock pillar trim and retainer assembly - R. H.		2
...	CO 86429	Door lock pillar trim and retainer assembly - L. H.		2
...	CO 86463	Rear door extension windlace and retainer assembly		2
...	BO 86445	Rear body extension retainer assembly		2
...	BO 86418	Windlace and retainer assembly - over doors - R. H.		2
...	BO 86419	Windlace and retainer assembly - over doors - L. H.		2
...	CO 86437	Rear body pillar trim and retainer assembly		2

TRIM PANELS DOOR, QUARTER, PILLAR AND HEADER

Illus. No.	Part No.	Description	Specifications	Per Car
...	CO 86517	Windshield header finish panel assembly		1
13	CO 86644	Front door trim panel assembly - R. H.		1
...	CO 86645	Front door trim panel assembly - L. H.		1
14	CO 86687	Rear door trim panel assembly - R. H.		1
...	CO 86688	Rear door trim panel assembly - L. H.		1
...	CO 86730	Lower quarter trim panel assembly - R. H.		1
...	CO 86731	Lower quarter trim panel assembly - L. H.		1
15	CO 86714	Lower quarter trim panel and arm rest assembly - R. H.		1
...	CO 86715	Lower quarter trim panel and arm rest assembly - L. H.		1
16	CO 86521	Door header trim panel assembly - R. H.		1
...	CO 86522	Door header trim panel assembly - L. H.		1
17	CO 86669	Center pillar trim panel assembly - R. H.		1
...	CO 86670	Center pillar trim panel assembly - L. H.		1
...	CO 86410	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86411	Front hinge pillar trimstick assembly - L. H.		1
...	CO 86320	Lower back panel protector (back of rear seat)		1
...	BO 70324	Body hinge pillar trimstick to roof brace screw		2
...	BO 70703	Body hinge pillar trimstick to roof brace screw finish washer		2
...	BO 70704	Body hinge pillar trimstick to pillar screw		6
...	BO 70690	Body hinge pillar trimstick to pillar screw finish washer		6
...	BO 18479	Body hinge pillar trimstick to pillar screw nut	No. 10-32x3/16"	4

LEATHER

...	CO 86518	Windshield header finish panel assembly		1
...	CO 86646	Front door trim panel assembly - R. H.		1
...	CO 86647	Front door trim panel assembly - L. H.		1
...	CO 86689	Rear door trim panel assembly - R. H.		1
...	CO 86690	Rear door trim panel assembly - L. H.		1
...	CO 86732	Lower quarter trim panel assembly - R. H.		1
...	CO 86733	Lower quarter trim panel assembly - L. H.		1
...	CO 86716	Lower quarter trim panel and arm rest assembly - R. H.		1
...	CO 86717	Lower quarter trim panel and arm rest assembly - L. H.		1
...	CO 86523	Door header trim panel assembly - R. H.		2
...	CO 86524	Door header trim panel assembly - L. H.		2
...	CO 86412	Front hinge pillar trimstick assembly - R. H.		1
...	CO 86671	Center pillar trim panel assembly - R. H.		1
...	CO 86672	Center pillar trim panel assembly - L. H.		1

DOORS

...	CO 85562	Front door complete - R. H.		1
18	CO 85563	Front door complete - L. H.		1
...	CO 85564	Rear door complete - R. H.		1
19	CO 85565	Rear door complete - L. H.		1
...	CO 85546	Front door assembly - skeleton - R. H.		1
...	CO 85547	Front door assembly - skeleton - L. H.		1
...	CO 85548	Rear door assembly - skeleton - R. H.		1
...	CO 85549	Rear door assembly - skeleton - L. H.		1
...	BO 85327	Check strap		4
...	BO 85224	Check strap attaching plate		4
...	BO 85234	Check strap clamp		4
...	BO 18465	Check strap attaching plate screw	1/4"-20x7/8"	8
...	BO 85218	Door window regulator and remote control tie bar assembly		4
20	86010	Door window glass (not supplied) (Door upholstered panels see above)		4

DOOR HINGES

21	BO 85070	Door hinge and reinforcement assembly-body half		4
...	BO 85078	Door hinge-body half		4
...	BO 85746	Door hinge rod		4
...	BO 18464	Door hinge screw	1/4"-20x11/16"	68
...	BO 86248	Front door hinge upper filler		4
...	BO 86249	Front door hinge upper filler retainer		4
...	BO 18465	Front door hinge upper filler retainer screw	1/4"-20x7/8"	4

DOOR LOCKS

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85066	Door lock assembly - R. H. - front		1
22	BO 85067	Door lock assembly - L. H. - rear		1
23	BO 85068	Door lock assembly - L. H. - front and R. H. - rear		2
...	BO 18464	Door lock to frame screw	1/4"-20x11/16"	16
...	BO 85929	Door lock reinforcement plate		4
...	BO 87152	Door lock remote control assembly - R. H.		2
...	BO 86125	Door lock remote control assembly - L. H.		2
...	BO 18447	Door lock remote control screw	No. 10-32x5/8"	12
...	BO 18479	Door lock remote control screw nut	No. 10-32x3/16"	12

DOOR HANDLES

24	BO 85981	Door outside handle assembly		3
...	BO 85982	Door outside handle and cylinder assembly		1
...	BO 70526	Door outside handle screw	No. 10-32X5/8"	8
25	BO 85977	Remote control handle		4
...	BO 79308	Remote control handle pin		4
...	BO 79709	Remote control handle spring		4
...	BO 85973	Remote control handle escutcheon plate		4
26	BO 85975	Door "pull-to" grip		4
...	BO 70701	Door "pull-to" grip screw		8

DOOR WINDOW REGULATOR

...	BO 86255	Door window regulator assembly - R. H.		2
...	BO 86256	Door window regulator assembly - L. H.		2
...	BO 18464	Door window regulator to frame screw	1/4"-20x11/16"	2
...	BO 18458	Door window regulator to frame screw	1/4"-20x11/16"	4
...	BO 18461	Countersunk shakeproof washer		4
...	BO 18475	Countersunk shakeproof washer		4
27	BO 85967	Door window regulator handle		4
...	BO 79308	Door window regulator handle pin		4
...	BO 79709	Door window regulator handle spring		4
28	BO 85973	Door window regulator handle escutcheon plate		4

DOOR DOVETAILS AND BUMPERS

29	BO 87726	Dovetail complete-female		4
30	BO 85215	Dovetail-male		4
...	BO 18458	Dovetail screw	1/4"-20x11/16"	8
...	BO 78995	Dovetail plate		4
...	BO 86113	Dovetail rubber bumper		8
...	BO 79149	Dovetail rubber bumper retaining spring		4
31	BO 85297	Door lock striker plate		4
...	BO 70680	Door lock striker plate screw		4
...	BO 85291	Door lock striker plate tapping plate		4
...	BO 85289	Door lock striker plate tapping plate retainer		4
32	BO 75151	Door rubber bumper		8
...	BO 75152	Door rubber bumper retainer		8
...	BO 70399	Dovetail case clinch nut	1/4"-20	8
...	BO 18458	Dovetail case pillar screw	1/4"-20x11/16"	8
...	BO 18458	Door bumper retaining screw	1/4"-20x11/16"	8

DOOR GLASS AND CHANNELS

...	86010	Door glass (not supplied)		4
33	BO 85861	Front and rear door window glass run assembly		6
34	BO 85862	Rear door window glass run assembly - rear		2
...	BO 86253	Door window rest channel assembly - right front and left rear		2
...	BO 86254	Door window rest channel assembly - left front and right rear		2
...	BO 75261	Door glass run clip-lower		8
...	BO 85984	Door glass run clip-upper		8
...	BO 78724	Door glass bumper		8

DOOR FINISH STRIPS

35	CO 87186	Door window finish moulding and weatherstrip assembly		4
...	BO 70740	Door window finish moulding screw	No. 10-32x5/8"	28

QUARTER WINDOW GLASS AND CHANNELS

Illus. No.	Part No.	Description	Specifications	Per Car
36	86011	Quarter window glass (not supplied)		2
...	BO 85863	Quarter window glass run assembly		4
...	BO 85883	Quarter window glass attaching plate		4
37	BO 87190	Quarter window finish moulding and weatherstrip assembly - R. H.		1
...	BO 87191	Quarter window finish moulding and weatherstrip assembly - L. H.		1
...	BO 85406	Quarter window rest channel assembly - R. H.		1
...	BO 85407	Quarter window rest channel assembly - L. H.		1
...	BO 81504	Quarter window belt weatherstrip - outer		2
...	BO 85868	Quarter window belt weatherstrip - inner		2
38	BO 87127	Quarter window curtain and roller assembly		2
...	BO 87131	Quarter window curtain and bracket (used on curtains with one bracket attached)		1
...	BO 87132	Quarter window curtain end bracket - R. H.		1
...	BO 87133	Quarter window curtain end bracket - L. H.		1
...	BO 87403	Quarter window curtain and roller assembly (used on export leather jobs)		2
...	BO 87127	Quarter window curtain and roller assembly		2

QUARTER WINDOW REGULATOR

...	BO 86273	Quarter window regulator assembly - R. H.		1
...	BO 86274	Quarter window regulator assembly - L. H.		1
...	BO 70242	Quarter window regulator to frame screw		8
...	BO 18461	Countersunk shakeproof washer		8
39	BO 85967	Quarter window regulator handle		2
40	BO 85973	Quarter window regulator handle escutcheon plate		2
...	BO 79308	Quarter window regulator handle pin		2
...	BO 79709	Quarter window regulator handle spring		2
...	BO 86272	Quarter window regulator attaching screw washer		8

REAR WINDOW

41	86013	Rear window glass (not supplied)		1
...	BO 85878	Rear window glass channel		1
42	CO 85437	Rear window finish moulding		1
...	BO 86271	Rear window curtain bracket complete		1
43	CO 85586	Rear window finish moulding - outer		1
...	BO 87130	Rear window curtain and roller assembly (cloth)		1
...	BO 87129	Rear window curtain and roller assembly (leather)		1

TOP

...	CO 85763	Drip moulding - R. H.		1
44	CO 85764	Drip moulding - L. H.		1
...	CO 85765	Drip moulding finish strip - R. H.		1
45	CO 85766	Drip moulding finish strip - L. H.		1
...	BO 18447	Drip moulding screw	No. 10 - 32x5/8"	22
...	CO 85681	Top bow No. 1		1
...	CO 85682	Top bow No. 2		1
...	CO 85683	Top bow No. 3		1
...	CO 85684	Top bow No. 4		1
...	CO 85685	Top bow No. 5		2
...	CO 85139	Roof rail - front		1
...	CO 85140	Roof rail - rear		1
...	CO 85691	Roof auxiliary rail R. H.		1
...	CO 85692	Roof auxiliary rail - L. H.		1
...	CO 85662	Roof side rail - R. H.		1
...	CO 85663	Roof side rail - L. H.		1
...	BO 81710	Rear view mirror assembly		1
...	BO 70526	Rear view mirror screw	No. 10 - 32x5/8"	2
...	BO 86482	Top deck material (specify amount)		1
...	CO 87218	Roof corner moulding - front		2
...	CO 87219	Roof corner moulding - rear		2
...	CO 87222	Roof moulding - front		1
...	CO 87223	Roof moulding - side and rear		1
...	CO 87225	Roof moulding - side		2
...	BO 70729	Roof moulding nail	1/16"x7/8"	*

DOME LAMP

Illus. No.	Part No.	Description	Specifications	Per Car
...	BO 85971	Dome lamp assembly		1
46	BO 85983	Dome lamp switch and escutcheon plate assembly		1
...	BO 86119	Dome lamp door assembly		1
...	BO 80101	Dome lamp switch tapping plate		1
...	BO 70467	Dome lamp switch wire screw	No. 6-32x3/16"	2
...	BO 70416	Dome lamp switch attaching screw	No. 6-32x3/4"	2

ROBE RAIL

47	CO 85979	Robe rail assembly		1
----	----------	--------------------	--	---

SMOKING SETS

...	BO 86095	Ash tray and escutcheon plate assembly		1
-----	----------	--	--	---

FOOT REST

48	CO 86247	Foot rest assembly		1
49	BO 87595	Foot rest floor bracket-small		2

SEAT AND BACK CUSHIONS

FRONT

50	CO 86830	Front seat cushion assembly		1
51	CO 86842	Front seat back cushion assembly		1
...	CO 86195	Front seat cushion springs assembly		1
...	CO 86196	Front seat back cushion springs assembly		1
52	CO 85490	Front seat tray		1
...	BO 70399	Front seat tray clinch nut	1/4"-20	9
...	BO 81497	Front seat hinge panel and hinge assembly		1
...	BO 81931	Front seat adjusting screw assembly		1
...	BO 75280	Nut cage	5/16"	2
...	BO 18483	Nut cage nut	5/16"	2
...	BO 76989	Nut cage	1/4"	4
...	BO 12120	Nut cage nut	1/4"	4
...	BO 81919	Front seat hinge assembly-upper and lower halves		2
...	BO 81925	Front seat adjusting screw		1
...	BO 85384	Front seat adjusting screw pivot		1
...	BO 81937	Front seat adjusting screw pivot plate		1
...	BO 81926	Front seat adjusting screw collar		1
...	BO 3037	Front seat adjusting screw collar taper pin	No. 2x1"	1
...	BO 81927	Front seat adjusting screw trunnion - rear		1
...	BO 81929	Front seat adjusting screw trunnion anti-rattler		1
...	BO 81951	Front seat adjusting screw trunnion retainer		1
...	BO 81930	Front seat hinge rod		2
...	BO 81941	Front seat adjusting screw handle		1
...	BO 3037	Front seat adjusting screw handle taper pin	No. 2x1"	1
...	BO 82001	Front seat adjusting screw yoke		1
...	BO 82003	Front seat adjusting screw yoke bolt		1
...	CO 81944	Front seat cushion frame assembly		1
...	CO 81945	Front seat back cushion frame assembly		1
...	BO 76258	Clinch core assembly (specify amount)		1
...	CO 81944	Front seat cushion frame assembly		1
...	CO 81945	Front seat back cushion frame assembly		1
...	CO 86831	Front seat cushion assembly (leather trim)		1
...	CO 86843	Front seat back cushion assembly (leather trim).		1

REAR

53	CO 87022	Rear seat cushion assembly		1
54	CO 87025	Rear seat back cushion assembly		1
...	CO 86197	Rear seat cushion springs assembly		1
...	CO 87150	Rear seat back cushion springs assembly		1
...	CO 85925	Rear seat tray assembly		1
...	BO 70399	Rear seat tray clinch nut	1/4"-20	2
...	BO 75149	Rear seat cushion dowel		2
...	BO 79040	Rear seat back hinge		2

SEAT AND BACK CUSHIONS-Continued

Illus. No.	Part No.	REAR		Per Car
		Description	Specifications	
...	CO 85489	Rear seat riser assembly		1
...	CO 85697	Rear seat cushion frame assembly		1
...	CO 85698	Rear seat back cushion frame assembly		1
...	CO 87023	Rear seat cushion assembly (leather trim)		1
...	CO 87029	Rear seat back cushion assembly (leather trim)		1

TOE, FLOOR BOARDS AND SCUFF PLATES

...	BO 85492	Toe board riser assembly - R. H.		1
...	BO 85493	Toe board riser assembly - L. H.		1
...	CO 85603	Toe plate assembly - L. H. D.		1
...	CO 85604	Toe plate assembly - R. H. D.		1
...	BO 85945	Toe plate steering gear cover - L. H. D. only		1
...	BO 18465	Toe plate steering gear cover screw		1
...	CO 87461	Front floor board assembly (steel)		1
...	BO 85951	Front floor board shim		1
...	BO 26554	Toe plate shim		15
...	BO 85993	Scuff plate - R. H.		1
55	BO 85994	Scuff plate - L. H.		1
56	BO 85741	Scuff plate-rear		2
...	CO 85713	Front floor board spacer		1
...	CO 85709	Center floor board-R. H.		1
...	CO 85711	Rear floor board		1
...	BO 18455	Rear floor board screw	1/4"-20x1-1/2"	10
...	BO 86250	Front floor board spacer-side		6
...	BO 70398	Clinch nut	1/4"-20	6
...	CO 85708	Battery cover assembly		1
...	BO 18453	Toe plate bolt	1/4"-20x7/16"	11

FLOOR MATS, PADS AND CARPETS

...	BO 86007	Front floor mat and pad complete - L. H. D.		1
...	BO 86008	Front floor mat and pad complete - R. H. D.		1
...	BO 12247	Front floor mat and pad socket plate		4
...	BO 18313	Front floor mat and pad socket		4
...	BO 18349	Front floor mat and pad fastener stud		4
...	BO 70677	Front floor mat and pad fastener stud nut		4
...	BO 85948	Toe plate steering gear hole cover pad - L. H. D. only		1
...	BO 85926	Dash pad assembly		1
...	BO 18359	Dash pad to dash clip	3/16"x1-1/2"	6
...	BO 87513	Hand brake hole cover		1
57	BO 87356	Rear floor carpet assembly		1
...	BO 70010	Rear floor carpet fastener		5
...	BO 70256	Rear floor carpet fastener		2
...	BO 12799	Rear floor carpet fastener nut		2
58	BO 87361	Rear seat heel carpet assembly		1
...	BO 70280	Rear seat heel carpet fastener		8
...	BO 70256	Rear seat heel carpet button - on riser		3
...	BO 12799	Rear seat heel carpet button nut		3
...	BO 86890	Rear seat toe board carpet assembly (specify color)		1

SILL WOOD FILLERS

...	CO 85706	Sill wood filler - R. H.		1
...	CO 85707	Sill wood filler - L. H.		1