

H
U
D
S
O
N

AND

T E R R A P L A N E

PARTS LIST
FEBRUARY

1935

HUDSON MOTOR CAR COMPANY
DETROIT, MICHIGAN



INSTRUCTIONS

FOR ORDERING PARTS

- 1—Order parts through the nearest Distributor or Dealer.
- 2—Always give PART NUMBER and NAME of each part ordered.
- 3—SPECIFY SERIAL NUMBER, BODY MODEL AND COLOR ON ALL PAINTED AND TRIMMED PARTS
- 4—Mail and Parcel Post orders should be accompanied by an amount sufficient to cover POSTAGE.
- 5—Specify how shipments are to be made
- 6—Orders for parts should be written separately from correspondence pertaining to other matters.

TELEGRAPH CODE

To save expense, to expedite ordering and for your convenience we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts:

Sultex—Ship to me (us) by express.

Sulkline—Ship by express to


Sulkate—Ship to me (us) by freight.

Su/most—Ship to me (us) by parcel post.


Sulwire—When and how did you ship parts called for in my (our) telegram of

Sultwich—When and how will you ship parts called for in my (our) telegram of

Sulteen—When and how will you ship parts called for in my (our) letter of

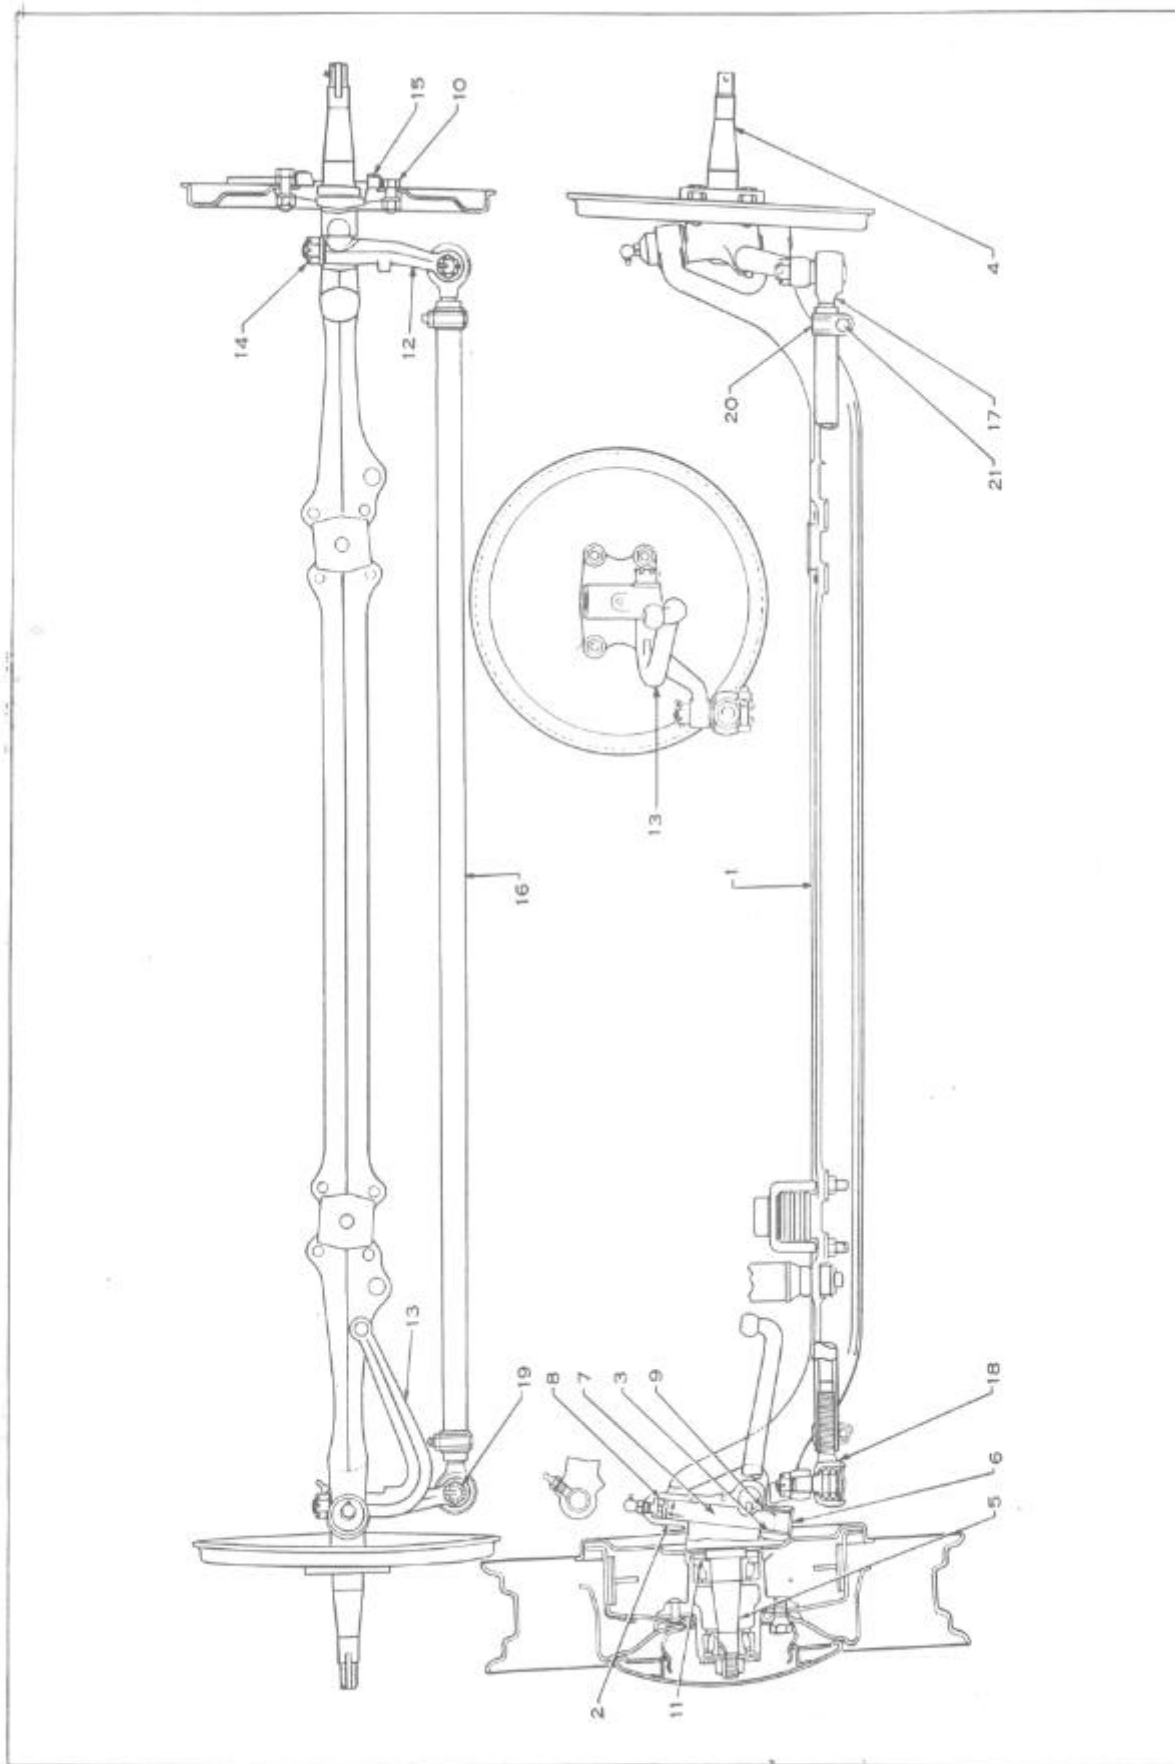

FRONT AXLE

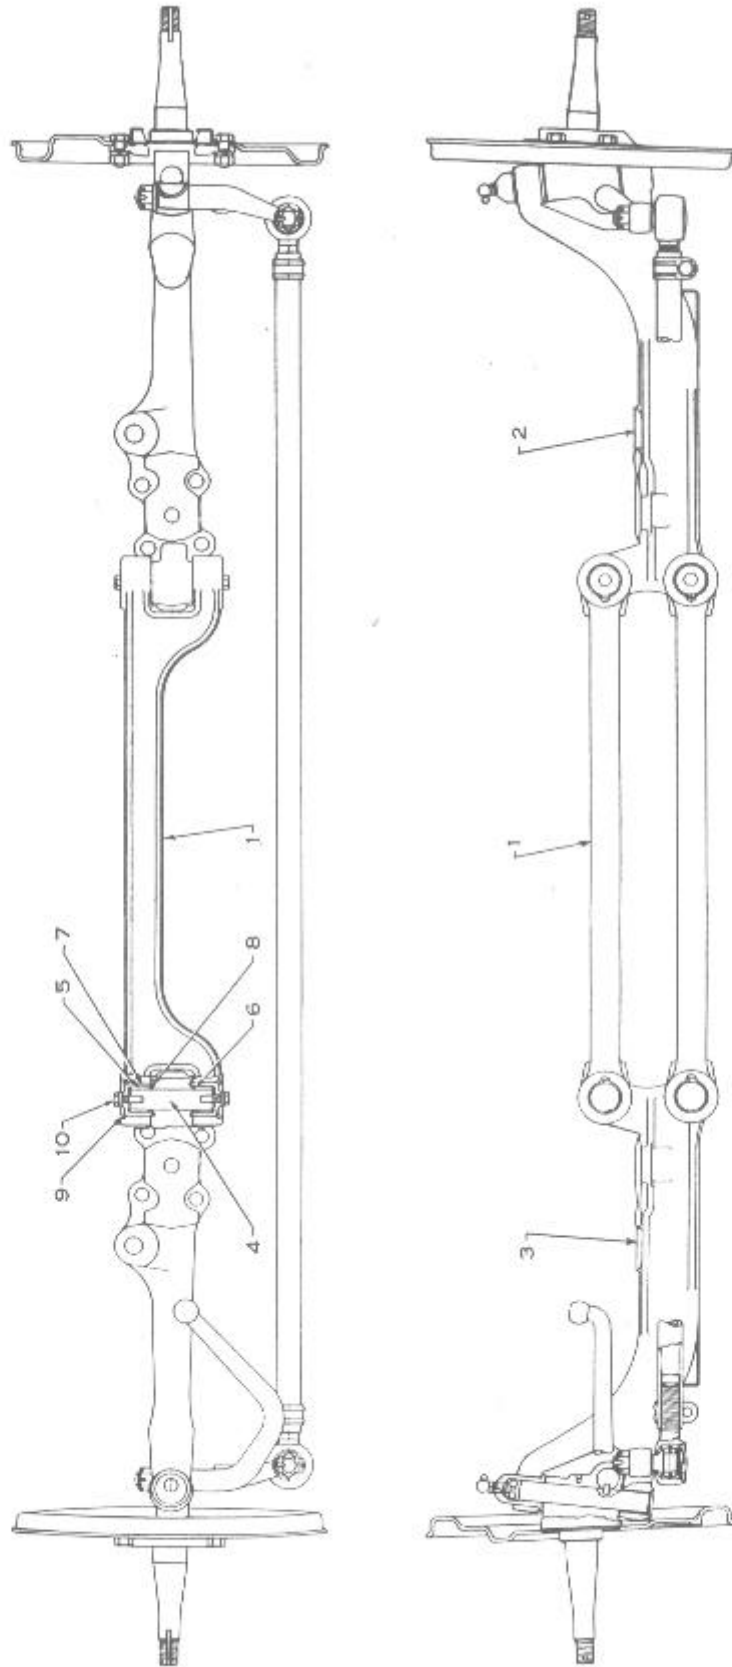

FRONT AXLE—AXLEFLEX

FRONT AXLE—SOLID TYPE


Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 47280	FRONT AXLE ASSEMBLY		*	1	..	..	..	..
...	C 47038	FRONT AXLE ASSEMBLY		*	..	1	..	..	..
...	C 47040	FRONT AXLE ASSEMBLY		*	..	..	1	1	..
...	C 47042	FRONT AXLE ASSEMBLY		*	..	..	..	..	1
1	C 44508	AXLE CENTER ASSEMBLY			1	1	1	1	1
2	BX 42143	PIVOT PIN THRUST WASHER AND BALL							
	F 42145	CUP ASSEMBLY			2	2	2	2	2
3		Pivot pin bushing			2	2	2	2	2

STEERING SPINDLE

4	BX 47054	Steering spindle—R. H		*	1	1	1	1	1
5	BX 47055	Steering spindle—L. H		*	1	1	1	1	1
6	BM 14112	Expansion plug			2	2	2	2	2
7	F 42144	Pivot pin			2	2	2	2	2
3	F 42145	Pivot pin bushing			2	2	2	2	2
2	BX 42143	PIVOT PIN THRUST WASHER AND BALL CUP ASSEMBLY			2	2	2	2	2
8	BX 103	Pivot pin thrust ball			10	10	10	10	10
9	BX 43539	Pivot pin shim—thin			As required				
9	BX 40017	Pivot pin shim—medium			As required				
9	BX 40018	Pivot pin shim—thick			As required				
10	BX 71206	Spindle to backing plate bolt	3/8"-24x7/8"		8	8	8	8	8
...	BZ 62	Spindle to backing plate bolt nut	3/8"-24x21/64"		8	8	8	8	8
...	BX 71155	Spindle nut	5/8"-18x35/64"		2	2	2	2	2
...	BX 40008	Spindle washer			2	2	2	2	2
...	BX 71154	Spindle pivot pin key			2	2	2	2	2
11	F 43797	SPINDLE GREASE WASHER RETAINER ASSEMBLY			2	2	2	2	2
...	BX 40020	Washer retainer—inner			2	2	2	2	2
...	BX 43798	Washer retainer—outer			2	2	2	2	2
...	BX 40022	Washer			2	2	2	2	2
12	BX 44514	Steering arm—R. H			1	1	1	1	1
13	BX 47057	Steering arm—L. H		*	1	1	1	1	1
14	BX 71156	Steering arm nut			2	2	2	2	2
...	BZ 70906	Steering arm washer	1/2"-20x1/2"		2	2	2	2	2
15	BX 40172	Wheel grease deflector			2	2	2	2	2

...	C 47060	TIE ROD ASSEMBLY		*	1	..	..	..	..
...	C 46587	TIE ROD ASSEMBLY			..	1	1	1	1
	C 47061	Tie rod		*	1	..	..	..	..
16	C 44519	Tie rod			..	1	1	1	1
...	BX 47482	TIE ROD END ASSEMBLY—R. H.		*	1	..	..	..	..
...	BX 47483	TIE ROD END ASSEMBLY—L.H.		*	1	..	..	..	..
17	BX 46588	TIE ROD END ASSEMBLY—R. H.			..	1	1	1	1
18	BX 46589	TIE ROD END ASSEMBLY—L. H.			..	1	1	1	1
19	BX 71156	Tie rod end stud nut	1/2"-20x1/2"		2	2	2	2	2
...	BX 46287	Tie rod end dirt seal			..	2	2	2	2
...	BX 46288	Tie rod end dirt seal retainer			..	2	2	2	2
...	BX 46289	Tie rod end dirt seal spring			..	2	2	2	2
...	BX 47496	Tie rod clamp			2	..	..	..	..
20	BX 45460	Tie rod clamp			..	2	2	2	2
...	BZ 70200	Tie rod clamp bolt			2	..	..	..	..
21	BX 71269	Tie rod clamp bolt			..	2	2	2	2
...	BO 12481	Tie rod clamp bolt nut	5/16"-24x17/64"		2	2	2	2	2
...	BX 47492	Tie rod end dust cover—small		*	2	..	..	..	..
...	BX 47493	Tie rod end dust cover—large		*	2	..	..	..	..
...	BX 47494	Tie rod end stud felt washer		*	2	..	..	..	..


...	C 47284	FRONT AXLE ASSEMBLY		*	1	..	..	..	..
...	C 47046	FRONT AXLE ASSEMBLY		*	..	1	..	..	..
...	C 47048	FRONT AXLE ASSEMBLY		*	..	..	1	1	..
...	C 47050	FRONT AXLE ASSEMBLY		*	..	..	..	..	1

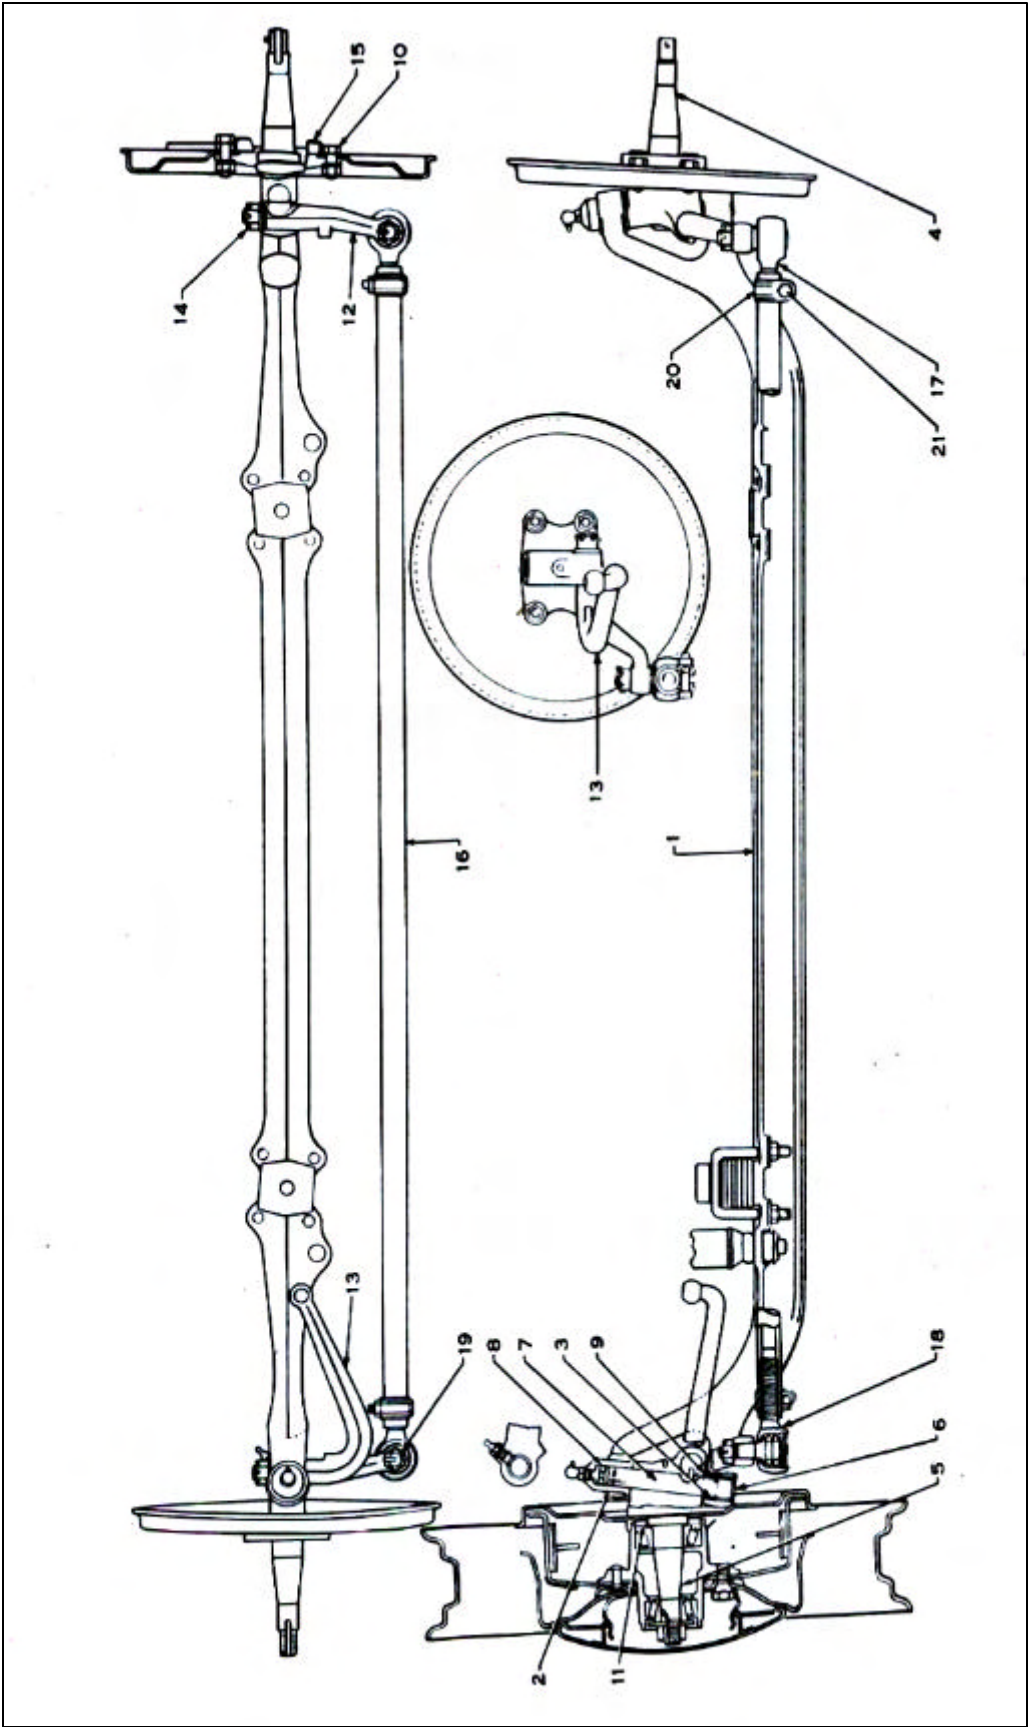

FRONT AXLE

FRONT AXLE—SOLID TYPE

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 45342	AXLE CENTER AND ENDS ASSEMBLY		1	1	1	1	1	1
1	C 45790	Axle center		2	2	2	2	2	2
2	C 45778	AXLE END ASSEMBLY—R. H		1	1	1	1	1	1
3	C 45779	AXLE END ASSEMBLY—L. H		1	1	1	1	1	1
4	BX 45793	Axle end pivot pin		4	4	4	4	4	4
5	BX 45794	Axle end pivot pin needle roller		224	224	224	224	224	224
6	BX 45795	Axle end pivot pin roller thrust washer		8	8	8	8	8	8
7	BX 45796	Axle end pivot pin roller		8	8	8	8	8	8
8	BX 45797	Axle end pivot pin roller race seal		8	8	8	8	8	8
9	BX 45798	Axle end pivot pin roller race retainer		8	8	8	8	8	8
10	BX 71390	Axle end pivot pin roller race screw		8	8	8	8	8	8
	BX 71391	Axle end pivot pin roller race screw washer		8	8	8	8	8	8
		Balance of "Axleflex" parts same as in standard axle group.		1	1	1	1	1	1
...	C 47281	FRONT AXLE ASSEMBLY		*	1	..	..	..	..
...	C 47039	FRONT AXLE ASSEMBLY		*	..	1	..	..	..
...	C 47041	FRONT AXLE ASSEMBLY		*	..	..	1	1	..
...	C 47043	FRONT AXLE ASSEMBLY		*	..	..	..	..	1
...	BX 47058	Steering arm—R. H.		*	1	1	1	1	1
...	BX 44517	Steering arm—L. H			1	1	1	1	1
...	C 47285	FRONT AXLE ASSEMBLY		*	1	..	..	..	..
...	C 47047	FRONT AXLE ASSEMBLY		*	..	1	..	..	..
...	C 47049	FRONT AXLE ASSEMBLY		*	..	..	1	1	..
...	C 47051	FRONT AXLE ASSEMBLY		*	..	..	..	..	1
...	BX 47058	Steering arm—R. H.		*	1	1	1	1	1
...	BX 44517	Steering arm—L. H.			1	1	1	1	1
...	C 44530	REAR AXLE ASSEMBLY	4-1/9 to 1	1	1	..	..	..	..
...	C 45155	REAR AXLE ASSEMBLY		..	..	1	..	..	..
...	C 44531	REAR AXLE ASSEMBLY		..	..	..	1	1	..
...	C 44640	REAR AXLE ASSEMBLY		..	..	..	..	..	1
...	C 44532	REAR AXLE ASSEMBLY	4-1/9 to 1	1	1	..	..	..	..
...	C 45156	REAR AXLE ASSEMBLY		..	..	1	..	..	..
...	C 44533	REAR AXLE ASSEMBLY		..	..	..	1	1	..
...	C 47002	REAR AXLE ASSEMBLY		..	..	..	..	..	1
1	C 44547	HOUSING ASSEMBLY (Complete less brake shoes)	5/16"x3/4"	1	1	..	..	..	..
...	C 46436	HOUSING ASSEMBLY (Complete less brake shoes)		..	..	1	..	..	..
1	C 44548	HOUSING ASSEMBLY (Complete less brake shoes)		..	..	..	1	1	..
1	C 44549	HOUSING ASSEMBLY (Complete less brake shoes)		..	..	..	..	..	1
2	BZ 326	Housing to backing plate rivet		4	4	4	4	4	4
3	BM 120	Hole plug		2	2	2	2	2	2
4	BM 322	Drain plug		1	1	1	1	1	1
...	C 44537	DIFFERENTIAL CARRIER AND GEAR SET ASSEMBLY	4-1/9 to 1	1	1	1	1	1	1
...	BX 44539	Drive gear and pinion—matched and wired		1	1	1	1	1	1
5	BX 42256	Drive gear		1	1	1	1	1	1
6	BX 44542	Drive pinion		1	1	1	1	1	1
...	C 44538	DIFFERENTIAL CARRIER AND GEAR SET ASSEMBLY	4-5/9 to 1	1	1	1	1	1	1
5	BX 44540	Drive gear and pinion—matched and wired		1	1	1	1	1	1
6	BX 44541	Drive gear		1	1	1	1	1	1
7	BX 44543	Drive pinion		1	1	1	1	1	1
...	BZ 71178	Drive gear screw	3/8"-24x7/8"	6	6	6	6	6	6
8	BX 40157	Drive gear screw lock		3	3	3	3	3	3
9	BM 71261	Drive pinion nut	7/8"x18x9/16"	1	1	1	1	1	1
	BM 71051	Drive pinion washer		1	1	1	1	1	1

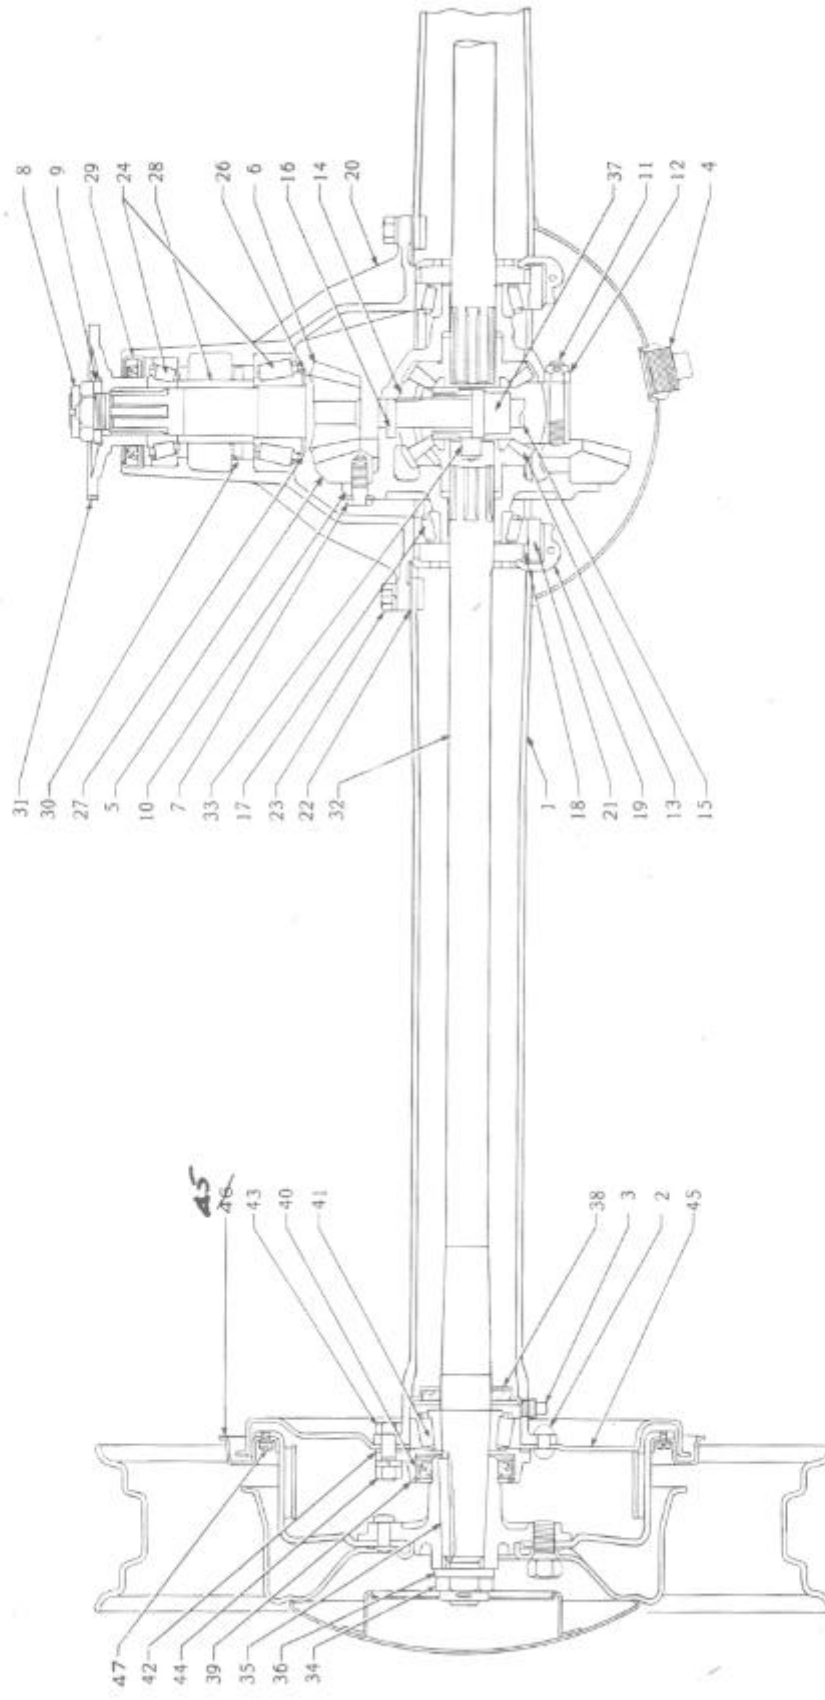

REAR AXLE

DIFFERENTIAL AND CARRIER—Continued


Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
20	BX 44580	DIFFERENTIAL CARRIER AND CAP ASSEMBLY		1	1	1	1	1	1
...	BX 71480	Bearing cap screw (Plain)		4	4	4	4	4	4
...	BO 70867	Bearing cap screw lockwasher	7/16"-14x2"	4	4	4	4	4	4
...	BX 44634	DIFFERENTIAL CASE AND STUD ASSEMBLY	7/16" Shakeproof	1	1	1	1	1	1
11	BX 71248	Stud		4	4	4	4	4	4
12	BZ 124	Stud nut		4	4	4	4	4	4
13	BX 42272	Differential gear		2	2	2	2	2	2
...	BX 41225	Differential gear thrust		2	2	2	2	2	2
14	BX 40190	Differential pinion		2	2	2	2	2	2
...	BX 41226	Differential pinion thrust washer		2	2	2	2	2	2
15	BX 40191	Differential pinion shaft		1	1	1	1	1	1
16	BZ 71175	Differential pinion shaft locating pin		1	1	1	1	1	1
17	BX 71281	DIFFERENTIAL BEARING ASSEMBLY		2	2	2	2	2	2
...	BX 71282	Bearing cone		2	2	2	2	2	2
...	BX 71283	Bearing cup		2	2	2	2	2	2
18	BX 44578	Differential bearing adjusting nut		2	2	2	2	2	2
19	BX 40194	Differential bearing adjusting nut lock		2	2	2	2	2	2
22	F 44584	Differential carrier gasket		1	1	1	1	1	1
23	BZ 44263	Differential carrier to housing bolt		8	8	8	8	8	8
...	BZ 62	Differential carrier to housing bolt nut	3/8"-24x21/64"	8	8	8	8	8	8
...	BO 71076	Differential carrier to housing lockwasher	3/8" Shakeproof	8	8	8	8	8	8
24	BX 71181	PINION BEARING ASSEMBLY		2	2	2	2	2	2
...	BX 71182	Bearing cone		2	2	2	2	2	2
...	BX 71192	Bearing cup		2	2	2	2	2	2
26	BX 40212	Pinion rear bearing shim—thin		As required					
26	BX 41099	Pinion rear bearing shim—medium		As required					
26	BX 40213	Pinion rear bearing shim—thick		As required					
28	BX 40192	Pinion rear bearing shim retainer)		1	1	1	1	1	1
...	BX 44585	Pinion bearing spacer		1	1	1	1	1	1
...	BX 44586	Pinion bearing spacer shim—thin		As required					
...	BX 44587	Pinion bearing spacer shim—medium		As required					
...	BX 44588	Pinion bearing spacer thick		As required					
30	BX 44589	Pinion oil seal.		1	1	1	1	1	1
31	BX 44590	Pinion housing oil baffle		1	1	1	1	1	1
	BX 44583	Companion flange		1	1	1	1	1	1

DRIVE SHAFT

32	F 44562	DRIVE SHAFT ASSEMBLY		2	2	2	..	..	..
32	F 44563	DRIVE SHAFT ASSEMBLY		..	..	..	2	2	2
33	BX 35360	Thrust button		2	2	2	2	2	2
34	BX 71179	Drive shaft nut	3/4"-20x9/16"	2	2	2	2	2	2
35	BX 71180	Drive shaft key		2	2	2	2	2	2
36	BX 71055	Drive shaft nut washer		2	2	2	2	2	2
37	BX 46161	Drive shaft thrust spacer		1	1	1	1	1	1
38	BX 44566	DRIVE SHAFT FELT WASHER ASSEMBLY		2	2	2	..	..	..
38	BX 44567	DRIVE SHAFT FELT WASHER ASSEMBLY		..	..	..	2	2	2
...	BX 42268	Felt washer		2	2	2	..	..	..
...	BX 44568	Felt washer		..	..	..	2	2	2
...	BX 44569	Felt washer retainer—inner		2	2	2	2	2	2
...	BX 44570	Felt washer retainer—outer		2	2	2	2	2	2

REAR WHEEL BEARING

39	BX 44606	WHEEL BEARING ADJUSTING CAP ASSEMBLY		2	2	2	..	..	..
38	BX 44554	WHEEL BEARING ADJUSTING CAP ASSEMBLY		..	..	..	2	2	2
40	BX 42613	Oil seal.		2	2	2	..	..	..
40	BX 44556	Oil seal		..	..	..	2	2	2
...	BX 44557	Oil seal snap ring		..	..	..	2	2	2
41	BX 71244	WHEEL BEARING ASSEMBLY		2	2	2	..	..	..
...	BX 71245	Cone (2581T)		.2	.2	.2	..	..	..
...	BX 71185	Cup (2523)		2	2	2	..	..	..
41	BX 71278	WHEEL BEARING ASSEMBLY		..	..	..	2	2	2
...	BX 71279	Cone (2788T)		..	..	..	2	2	2
...	BX 71280	Cup (2720)		..	..	..	2	2	2

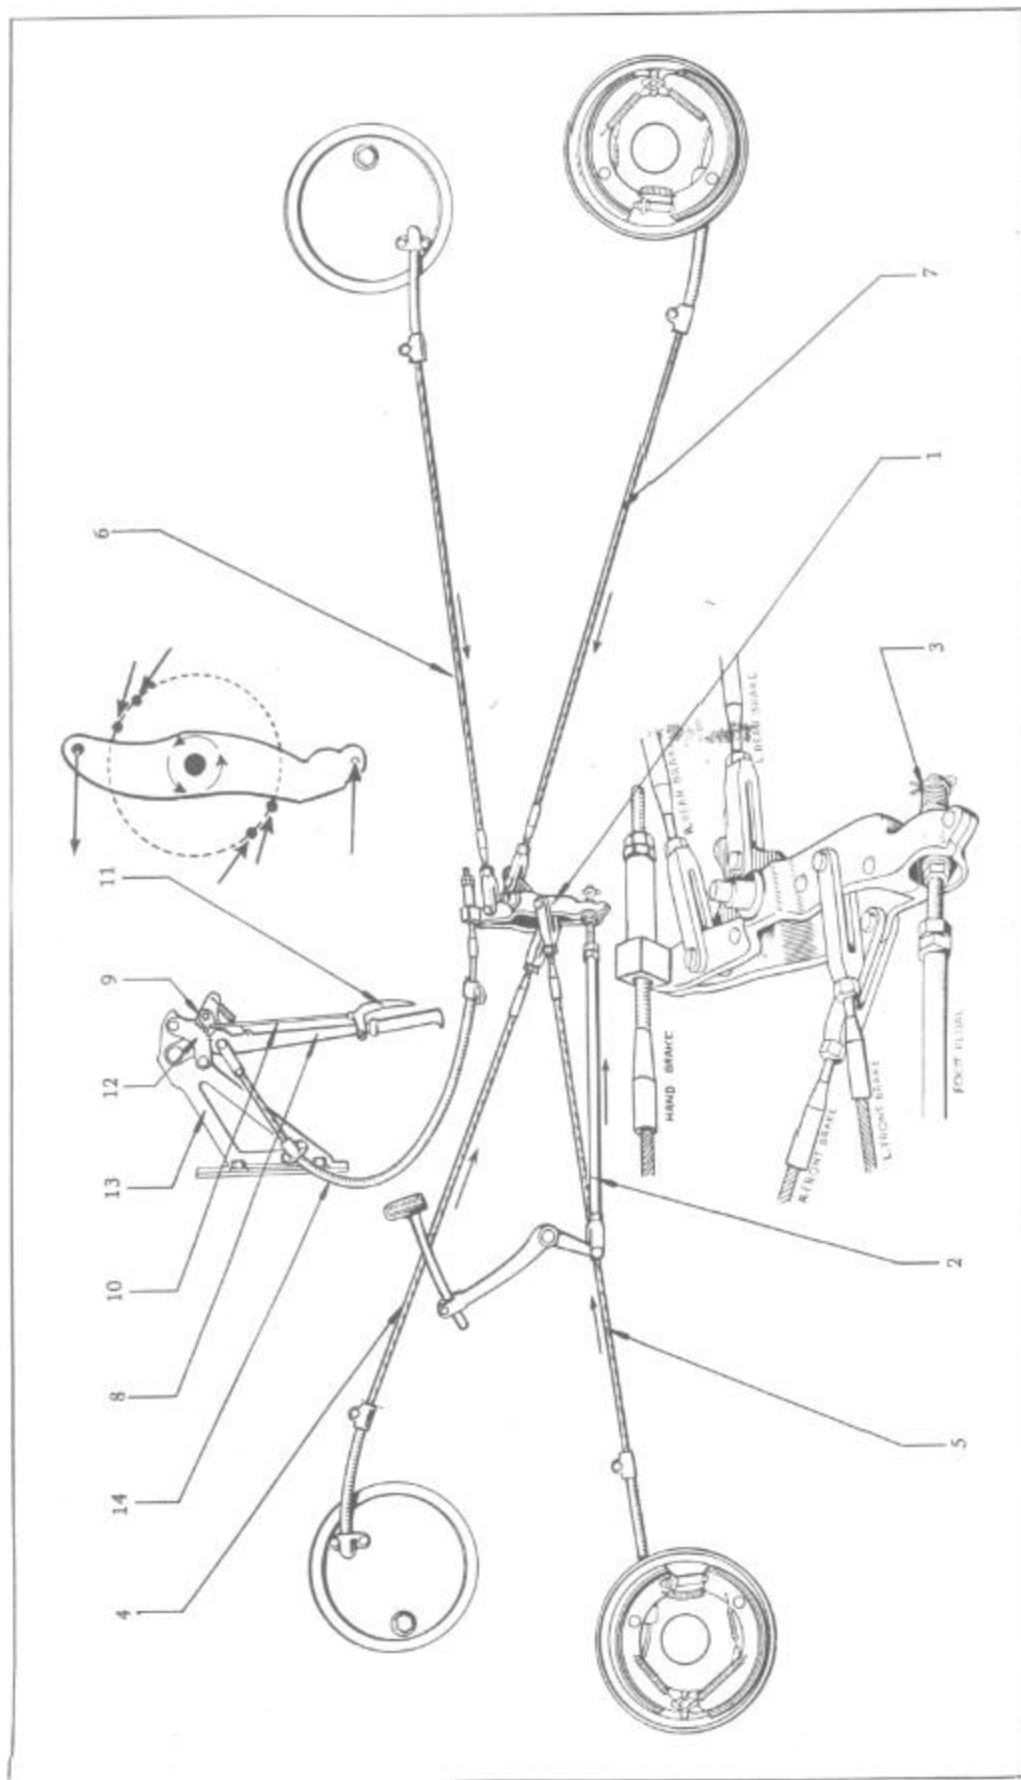

BRAKE CONTROL

74—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
42	BX 40176	Wheel bearing adjusting cap shim—thin	As required	X	X	X	..	..	..
42	BX 40177	Wheel bearing adjusting cap shim—medium		X	X	X	..	..	..
42	BX 40178	Wheel bearing adjusting cap shim—thick		X	X	X	..	..	..
42	BX 44558	Wheel bearing adjusting cap shim—thin		..	..	..	X	X	X
42	BX 44559	Wheel bearing adjusting cap shim—medium		..	..	..	X	X	X
42	BX 44560	Wheel bearing adjusting cap shim—thick		..	..	..	X	X	X
43	BX 44561	Wheel bearing adjusting cap bolt		8	8	8	8	8	8
44	BX 71237	Wheel bearing adjusting cap nut		8	8	8	8	8	8

BRAKES—FRONT AND REAR

...	BX 45376	BACKING PLATE ASSEMBLY—R. H. front		1	1	..	..	..	..
...	BX 45377	BACKING PLATE ASSEMBLY—L. H. front		1	1	..	..	..	..
...	BX 45384	BACKING PLATE ASSEMBLY—R. H. front		..	..	1	1	1	..
...	BX 45385	BACKING PLATE ASSEMBLY—L. H. front		..	..	1	1	1	..
...	BX 47415	BACKING PLATE ASSEMBLY—R. H. front		*	..	..	..	..	1
...	BX 47416	BACKING PLATE ASSEMBLY—L. H. front		*	..	..	..	..	1
...	BX 45378	BACKING PLATE ASSEMBLY—R. H. rear		1	1	..	..	..	..
45	BX 45379	BACKING PLATE ASSEMBLY—L. H. rear		1	1	..	..	..	..
...	BX 45386	BACKING PLATE ASSEMBLY—R. H. rear		..	..	1	1	1	..
45	BX 45387	BACKING PLATE ASSEMBLY—L. H. rear		..	..	1	1	1	..
...	BX 45394	BACKING PLATE ASSEMBLY—R. H. rear		..	..	..	..	..	1
45	BX 45395	BACKING PLATE ASSEMBLY—L. H. rear		..	..	..	..	..	1
...	BX 45404	Conduit abutment cap—R. H		2	2	2	2	2	..
...	BX 45405	Conduit abutment cap—L. H		2	2	2	2	2	..
...	BX 45406	Conduit abutment cap		..	..	..	..	..	4
...	BX 45407	Conduit abutment cap felt seal		4	4	4	4	4	..
...	BX 45408	Conduit abutment cap felt seal		..	..	..	..	..	4
...	BZ 71264	Conduit abutment cap bolt	5/16"x24x3/4"	8	8	8	8	8	8
...	BX 47394	BRAKE SHOES AND LINING ASSEMBLY (For one wheel)		..	..	..	..	..	..
...	BX 47395	BRAKE SHOES AND LINING ASSEMBLY (For one wheel)		*	4	4	..	..	..
...	BX 47599	BRAKE SHOES AND LINING ASSEMBLY (For one wheel)		*	..	..	4	4	..
...	...	...		*	..	..	..	..	4
...	F 46810	Brake shoes lining package		1	1	..	..	..	..
...	F 46798	Brake shoes lining package		..	..	1	1	1	..
...	F 46811	Brake shoes lining package		..	..	..	..	..	1
...	BX 40730	Brake shoe to anchor pin spring (Small.)		4	4	4	4	4	..
...	BX 45422	Brake shoe to anchor pin spring (Small)		..	..	..	..	..	4
...	BX 43378	Brake shoe to anchor pin spring (Lever side)		4	4	4	4	4	..
...	BX 45423	Brake shoe to anchor pin spring (Lever side).		..	..	..	..	..	4
...	BX 37997	Brake shoe hold-down spring		8	8	8	8	8	..
...	BX 45424	Brake shoe hold-down spring		..	..	..	..	..	8
...	BX 43379	Brake shoe hold-down spring pin		8	8	..	..	..	..
...	BX 37998	Brake shoe hold-down spring pin		..	..	..	..	..	8
...	BX 46883	Brake shoe hold-down spring pin		..	..	8	8	8	..
...	BX 37999	Brake shoe hold-down spring cup		8	8	8	8	8	8
...	BX 38000	Brake shoe hold-down spring centralizing cup		8	8	8	8	8	8
...	BX 45425	BRAKE ANCHOR PIN AND SHOE GUIDE ASSEMBLY		4	4	4	4	4	4
...	BT 398	Brake anchor pin nut	5/8"-18x35/64"	4	4	4	4	4	4
...	BX 45427	BRAKE CAM AND RETURN SPRING ARM ASSEMBLY—R. H.		2	2	2	2	2	..
...	BX 45428	BRAKE CAM AND RETURN SPRING ARM ASSEMBLY—L. H.		2	2	2	2	2	..
...	BX 45433	BRAKE CAM AND RETURN SPRING ARM ASSEMBLY—R. H.		..	..	..	..	..	2
...	BX 45434	BRAKE CAM AND RETURN SPRING ARM ASSEMBLY—L. H		..	..	..	..	..	2
...	BX 45439	Brake cam return spring arm to shoe spring		4	4	4	4	4	..
...	BX 45440	Brake cam return spring arm to shoe spring		..	..	..	..	..	4
...	BX 45441	Brake cam operating lever—R. H.		2	2	2	2	2	..
...	BX 45442	Brake cam operating lever—L. H.		2	2	2	2	2	..
...	BX 45409	Brake cam operating lever		..	..	..	..	..	4
...	BX 40735	Brake eccentric		4	4	..	4	4	..
...	BX 37977	BRAKE ECCENTRIC ASSEMBLY		..	..	4	..	..	4
...	BX 45445	Brake eccentric spacer		8	8	..	8	8	..
...	BZ 70122	Brake eccentric nut	3/8"-24x5/16"	4	4	8	4	4	..
...	BZ 62	Brake eccentric nut	3/8"-24x21/64"	..	..	4	..	..	4

BRAKES—FRONT AND REAR—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BX 40739	Brake adjusting screw		4	4	4	4	4	..
...	BX 45447	Brake adjusting screw		..	..	..	..	..	4
...	BX 40740	Brake adjusting screw pivot nut		4	4	4	4	4	..
...	BX 45448	Brake adjusting screw pivot nut		..	..	..	..	..	4
...	BX 40741	Brake adjusting screw socket		4	4	4	4	4	..
...	BX 45449	Brake adjusting screw socket		..	..	..	..	..	4
...	BX 40742	Brake adjusting screw spring		4	4	4	4	4	..
...	BX 37985	Brake adjusting screw spring		..	..	..	..	..	4
...	BX 63974	Brake adjusting screw cover		4	4	4	4	4	4

BRAKE CONTROL

1	BZ 47342	BRAKE CONTROL LEVER ASSEMBLY		*	1	1	1	1	1	1
...	BZ 47337	Control lever-lower-plug		*	2	2	2	2	2	2
...	BZ 47377	Control lever return spring		*	1	1	1	1	1	1
...	BZ 47345	CONTROL LEVER PIVOT PIN AND BRACKET ASSEMBLY			1	1	1	1	1	1
..	BM 219	Control lever pivot pin bracket bolt			2	2	2	2	2	2
...	BZ 122	Control lever pivot pin bracket bolt nut			2	2	2	2	2	2
...	BZ 47348	Control lever pivot pin felt		*	1	1	1	1	1	1
2	BZ 47349	Brake pedal push rod		*	1	1	1	1	1	1
...	BZ 47351	Brake pedal push rod adjusting end		*	1	1	1	1	1	1
...	BZ 62	Brake pedal push rod adjusting end lock nut			2	2	2	2	2	2
3	BZ 47352	Brake pedal push rod adjusting end tension spring		*	1	1	1	1	1	1
...	BZ 8683	Brake pedal push rod yoke clevis pin (Pedal)			1	1	1	1	1	1
4	C 47367	FRONT BRAKE CABLE ASSEMBLY—R.H.		*	1	1	..	1	..	..
5	C 47368	FRONT BRAKE CABLE ASSEMBLY—L. H.		*	1	1	..	1	..	..
4	C 47369	FRONT BRAKE CABLE ASSEMBLY—R. H.		*	..	..	1	1	1	..
5	C 47370	FRONT BRAKE CABLE ASSEMBLY—L. H.		*	..	..	1	1	1	..
4	C 47371	FRONT BRAKE CABLE ASSEMBLY—R. H.		*	..	..	..	..	..	1
5	C 47372	FRONT BRAKE CABLE ASSEMBLY—L. H.		*	..	..	..	..	..	1
6	C 47373	REAR BRAKE CABLE ASSEMBLY—R. H.		*	1	1	1	1	1	..
7	C 47374	REAR BRAKE CABLE ASSEMBLY—L. H.		*	1	1	1	1	1	..
6	C 47834	REAR BRAKE CABLE ASSEMBLY—R. H.		*	..	..	..	..	..	1
7	C 47835	REAR BRAKE CABLE ASSEMBLY—L. H.		*	..	..	..	..	..	1
...	BZ 5777	Brake cable clevis			4	4	4	4	4	4
...	BZ 12481	Brake cable clevis nut	5/16"-24x17 /64"		4	4	4	4	4	4
...	BZ 8683	Brake cable clevis pin			4	4	4	4	4	4
...	BZ 47365	Front brake cable mounting bracket		*	2	2	..	..	..	..
...	BZ 47390	Front brake cable mounting bracket—R. H.		*	..	..	1	1	1	1
...	BZ 47391	Front brake cable mounting bracket—L. H.		*	..	..	1	1	1	1
...	BZ 47375	Rear cable support mounting bracket		*	2	2	2	2	2	2
..	BZ 12275	Brake cable mounting bracket bolt			2	2	2	2	2	2
...	BZ 122	Brake cable mounting bracket bolt nut			2	2	2	2	2	2
...	BZ 37611	Brake cable support bracket—front and rear			4	4	4	4	4	4
...	BZ 12275	Brake cable support bracket bolt			8	8	4	4	4	4
...	BZ 122	Brake cable support bracket bolt nut			8	8	4	4	4	4

BRAKE CONTROL—R.H.D.

...	BZ 47581	BRAKE CONTROL LEVER ASSEMBLY—UPPER		*	1	1	1	1	1	1
...	BZ 47583	BRAKE CONTROL LEVER ASSEMBLY—LOWER		*	1	1	1	1	1	1
...	BZ 43033	Brake control lever bushing (Upper and lower)			4	4	4	4	4	4
...	BZ 47585	Brake control lever pivot pin washer	Leather	*	1	1	1	1	1	1
...	BZ 47587	Brake pedal pull rod		*	1	1	1	1	1	1
...	BZ 5777	Brake pedal pull rod adjusting end	5/16"		1	1	1	1	1	1
...	BO 12481	Brake pedal pull rod adjusting end lock nut			1	1	1	1	1	1
...	BZ 8683	Brake pedal pull rod adjusting end clevis pin	5/16"		1	1	1	1	1	1
...	BZ 47588	Brake pedal push link		*	1	1	1	1	1	1
...	BZ 71380	Brake pedal push link clevis pin	5/16"x25/32"		2	2	2	2	2	2
...	BZ 47589	BRAKE PEDAL PUSH LINK DOUBLE END LEVER COMPLETE		*	1	1	1	1	1	1
...	BZ 43033	Brake pedal push link double end lever bushing			1	1	1	1	1	1
...	BZ 47593	BRAKE PEDAL LINK DOUBLE END LEVER PIVOT BOLT AND BRACKET COMPLETE		*	1	1	1	1	1	1

BRAKE CONTROL R.H.D.—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 47999	Brake pedal link double end lever pivot bolt		*	1	1	1	1	1
...	BZ 124	Brake pedal link double end lever pivot bolt nut			1	1	1	1	1
...	BM 219	Double end lever pivot pin bracket bolt	5/16"-18x3/4"		4	4	4	4	4
...	BZ 122	Double end lever pivot pin bracket bolt nut	5/16"-18x5/16"		4	4	4	4	4
...	BZ 47644	Brake cable clevis pin safety clip			2	2	2	2	2

HAND BRAKE—FLOOR TYPE

...	BT 47831	HAND BRAKE LEVER ASSEMBLY		*	1	..	..	..	..
...	BT 45239	PAWL AND ROD ASSEMBLY			1	..	..	..	..
...	BT 36318	Pawl spring			1	..	..	..	..
...	BT 36319	Pawl button			1	..	..	..	..
...	BT 36320	Pawl button pin			1	..	..	..	..
...	BT 44926	Lever ratchet (Sector)			1	..	..	..	..
...	BT 41036	Lever ratchet pivot bolt			1	..	..	..	..
...	BZ 124	Lever ratchet bolt nut	3/8"-24x13/32"		1	..	..	..	..
...	BZ 2404	Lever ratchet to bracket bolt	3/8"-16x5/8"		2	..	..	..	..
...	BM 110	Lever ratchet to bracket bolt nut	3/8"-16x3/8"		2	..	..	..	..
...	BT 44927	Lever ratchet to bracket spacer			2	..	..	..	..
...	BZ 18251	Lever pawl clevis pin	5/16"x3/4"		1	..	..	..	..
...	BT 44928	Lever bracket.			1	..	..	..	..
...	BM 219	Lever bracket bolt	5/16"-18x3/4"		3	..	..	..	..
...	BZ 122	Lever bracket bolt nut	5/16"-18x5/16"		3	..	..	..	..
...	BT 45361	LEVER BRACKET BOLT NUT RETAINER ASSEMBLY			2	..	..	..	..
...	BO 70096	Lever bracket bolt—upper			2	..	..	..	..
...	BT 44929	LEVER TO BELL CRANK ROD ASSEMBLY			1	..	..	..	..
...	BZ 18251	Lever to bell crank rod clevis pin	5/16x3/4"		1	..	..	..	..
...	BZ 8683	Lever to bell crank rod clevis pin	5/16"		1	..	..	..	..
...	BT 30868	Lever, bell crank and rod return spring clip			1	..	..	..	..
...	BT 44931	Lever bell crank			1	..	..	..	..
...	BT 44932	Lever bell crank pivot bolt			1	..	..	..	..
...	BZ 62	Lever bell crank pivot bolt nut	3/4"-24x21/64"		1	..	..	..	..
...	BT 44933	Lever bell crank to bracket spacer			1	..	..	..	..
...	BT 22699	Lever bell crank to bracket spacer spring			1	..	..	..	..
...	BT 47336	Lever bell crank to control lever rod		*	1	..	..	..	..
...	BO 12481	Lever bell crank to control lever rod nut			1	..	..	..	..

HAND BRAKE—UNDER DASH TYPE

8	BT 47464	HAND BRAKE LEVER ASSEMBLY		*	1	1	1	1	1
9	BT 47162	Hand brake lever pawl		*	1	1	1	1	1
...	BT 47163	Hand brake lever pawl return spring		*	1	1	1	1	1
...	BT 40456	Hand brake lever pawl tension spring washer			1	1	1	1	1
...	BZ 8683	Hand brake lever pawl clevis pin	5/16"		1	1	1	1	1
10	BT 47164	Hand brake lever pawl rod		*	1	1	1	1	1
...	BT 47165	Hand brake lever pawl rod anti-rattle spring		*	1	1	1	1	1
...	BT 71499	Hand brake lever pawl rod anti-rattle spring washer		*	1	1	1	1	1
11	BT 47166	Hand brake lever pawl release spoon		*	1	1	1	1	1
...	BT 47167	Hand brake lever pawl release spoon rivet		*	1	1	1	1	1
...	BT 47159	Hand brake lever pivot bolt		*	1	1	1	1	1
...	BZ 71463	Hand brake lever pivot bolt nut	3/8"-16x5/16"		1	1	1	1	1
...	BT 70727	Hand brake lever pivot bolt lockwasher			1	1	1	1	1
...	BZ 70716	Hand brake lever pivot bolt plain washer			1	1	1	1	1
12	BT 47160	Hand brake lever sector		*	1	1	1	1	1
...	BT 47161	Hand brake lever sector spacer		*	2	2	2	2	2
...	BO 2352	Hand brake lever sector to bracket bolt	3/8"-24x1"		2	2	2	2	2
...	BT 71	Hand brake lever sector to bracket bolt lockwasher			2	2	2	2	2
13	BT 47168	Hand brake lever bracket		*	1	1	1	1	1
...	BM 219	Hand brake lever bracket to dash bolt	5/16"-18x3/4"		3	3	3	3	3
...	BZ 122	Hand brake lever bracket to dash bolt nut	5/16"-18x5/16"		3	3	3	3	3
...	BT 71	Hand brake lever bracket to dash bolt lockwasher			3	3	3	3	3
...	BO 771	Hand brake lever bracket to dash bolt plain washer			6	6	6	6	6
14	BT 47170	HAND BRAKE CABLE AND CONDUIT ASSEMBLY		*	1	1	1	1	1
...	BZ 37611	Hand brake cable support bracket—upper			1	1	1	1	1

HAND BRAKE—UNDER DASH TYPE—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 219	Hand brake cable support bracket bolt	5/16"-18x3/4"	2	2	2	2	2	2
...	BZ 122	Hand brake cable support bracket bolt nut	5/16"-18x5/16"	2	2	2	2	2	2
...	BT 71	Hand brake cable support bracket bolt lockwasher		2	2	2	2	2	2
...	BT 47171	Hand brake cable mounting bracket		*	1	1	1	1	1
...	BM 219	Hand brake cable mounting bracket bolt	5/16"-18x3/4"	1	1	1	1	1	1
...	BZ 122	Hand brake cable mounting bracket bolt nut	5/16"-18x5/16"	1	1	1	1	1	1
...	BT 71	Hand brake cable mounting bracket bolt lockwasher		1	1	1	1	1	1
...	BZ 37611	Hand brake cable support bracket—lower		1	1	1	1	1	1
...	BM 219	Hand brake cable support bracket—lower—bolt		1	1	1	1	1	1
...	BZ 122	Hand brake cable support bracket—lower—bolt nut		1	1	1	1	1	1
...	BT 71	Hand brake cable support bracket—lower—bolt lockwasher		1	1	1	1	1	1
...	BZ 12275	Hand brake cable support bracket to frame bolt	5/16"-18x1"	1	1	1	1	1	1
...	BT 47317	HAND BRAKE CABLE END SWIVEL ASSEMBLY		*	1	1	1	1	1
...	BO 12481	Hand brake cable stud lock nut	5/16"-24x17/64"	2	2	2	2	2	2
...	BO 771	Hand brake cable stud washer		1	1	1	1	1	1
...	BZ 71554	Hand brake cable conduit clip		2	2	2	2	2	2
...	BT 395	Hand brake cable conduit clip bolt	5/16"-18x5/8"	1	1	1	1	1	1
...	BZ 122	Hand brake cable conduit clip bolt nut	5/16"-18x5/16"	1	1	1	1	1	1

HAND BRAKE—UNDER DASH TYPE—R.H.D.

...	BT 47465	HAND BRAKE LEVER ASSEMBLY		*	1	1	1	1	1
...	BT 47169	Hand brake lever bracket		*	1	1	1	1	1
...	C 47393	HAND BRAKE CABLE AND CONDUIT ASSEMBLY		*	..	1	1	1	1
...	C 47393	HAND BRAKE CABLE AND CONDUIT ASSEMBLY (With Pre-Selector Control)		*	1	..	..	..	..
...	BT 47392	Hand brake cable mounting bracket		*	..	1	1	1	1
...	BT 47392	Hand brake cable mounting bracket (With Pre-Selector Control)		*	1	..	..	..	..

PEDALS

...	BZ 40301	BRAKE PEDAL ASSEMBLY		1	1	1	1	1	1
...	BZ 40676	CLUTCH PEDAL ASSEMBLY		1	1	1	1	1	1
...	BZ 40531	Pedal pad cover (Black rubber)		2	2	2	2	2	2
...	BZ 43558	Pedal pad cover (Brown rubber)		..	..	..	..	..	..
...	BZ 42982	CLUTCH PEDAL LEVER ASSEMBLY		1	1	1	1	1	1
...	BZ 40308	Bushing		2	2	2	2	2	2
...	BZ 47135	BRAKE PEDAL LEVER ASSEMBLY		*	1	1	1	1	1
...	BZ 40308	Brake pedal lever bushing		2	2	2	2	2	2
...	BZ 45158	Brake pedal lever return spring		1	1	1	1	1	1
...	BZ 30868	Brake pedal lever return spring clip		1	1	1	1	1	1
...	BZ 12310	Pedal lever bolt	3/8"-24xl-3/8"	2	2	2	2	2	2
...	BZ 62	Pedal lever bolt nut	3/8"-24xl-2164"	2	2	2	2	2	2
...	BZ 40309	Pedal lever shaft		1	1	1	1	1	1
...	BZ 71174	Pedal lever shaft taper pin	No. 4xl-1/2"	1	1	1	1	1	1
...	BZ 42990	Pedal bracket		1	1	1	1	1	1
...	BM 219	Pedal bracket screw	5/16"-18x3/4"	3	3	3	3	3	3
...	BZ 44978	Pedal toe plate bumper		2	2	2	2	2	2
...	BZ 44998	Pedal toe plate bumper spring (Clutch pedal)		1	1	1	1	1	1

PEDALS—R.H.D.

...	BZ 40319	CLUTCH PEDAL ASSEMBLY		1	1	1	1	1	1
...	BZ 42983	CLUTCH PEDAL LEVER ASSEMBLY		1	1	1	1	1	1
...	BZ 40323	Brake pedal lever		1	1	1	1	1	1
...	BZ 2354	Brake pedal lever pin		2	2	2	2	2	2
...	BM 1374	Brake pedal lever stop bolt	5/16"-18xl-1/2"	1	1	1	1	1	1
...	BZ 30868	Brake pedal lever return spring clip		2	2	2	2	2	2
...	BZ 42988	PEDAL LEVER SHAFT ASSEMBLY		1	1	1	1	1	1
...	BZ 40355	PEDAL BRACKET ASSEMBLY		1	1	1	1	1	1
...	BZ 40308	Pedal bracket bushing		3	3	3	3	3	3

WHEELS

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 47424	WHEEL ASSEMBLY (Steel artillery)		*	5	..	..	..	..
...	C 47426	WHEEL ASSEMBLY (Steel artillery)		*	..	5	5	5	..
...	C 45218	WHEEL ASSEMBLY (Wood artillery)			..	..	..	..	5
...	C 46344	Wheel trim ring (16" wheel) Service only			5	5	5	5	5
...	BZ 42964	Hub bolt			16	16	16	16	..
...	BZ 37815	Hub bolt (Artillery wheels)			..	..	..	..	20
...	BZ 45003	Hub cap—outer			4	4	..	..	..
...	BZ 45004	Hub cap—outer			..	..	4	4	..
...	BZ 45005	Hub cap—outer			..	..	..	..	4
...	BZ 47428	Hub cap—outer (For tire cover)		*	..	..	..	..	1
...	C 47429	HUB ASSEMBLY—FRONT (Includes brake drum and bearing cups)		*	2	2	..	..	..
...	C 47430	HUB ASSEMBLY—FRONT (Includes brake drum and bearing cups)		*	..	..	2	2	..
...	C 45009	HUB ASSEMBLY—FRONT (Includes brake drum and bearing cup)			..	..	..	..	2
...	BZ 47438	Hub—front		*	2	2	2	2	..
...	BZ 44972	Hub—front			..	..	..	..	2
...	C 47443	Brake drum—front		*	2	2	..	..	..
...	C 47444	Brake drum—front			..	..	2	2	..
...	C 37880	Brake drum—front			..	..	..	..	2
...	BZ 37878	Brake drum rivet			16	16	..	..	..
...	BZ 45006	Brake drum rivet			..	..	16	16	20
...	BZ 35572	Brake drum inspection hole cover			4	4	4	4	..
...	BZ 37882	Brake drum inspection hole cover			..	..	..	..	4
...	BZ 35573	Brake drum inspection hole cover screw			4	4	4	4	..
...	BZ 38574	Brake drum inspection hole cover re w			..	..	..	..	4
...	BZ 40558	Hub cap—inner—front wheels.			2	2	2	2	..
...	BZ 45075	Hub cap—inner—front wheels			..	..	..	..	2
...	BZ 71213	FRONT WHEEL BEARING ASSEMBLY—INNER			2	2	2	2	2
...	BZ 71214	Cone			2	2	2	2	2
...	BZ 71215	Cup			2	2	2	2	2
...	BZ 71210	FRONT WHEEL BEARING ASSEMBLY—OUTER			2	2	2	2	..
...	BZ 71211	Cone			2	2	2	2	..
...	BZ 71212	Cup			2	2	2	2	..
...	BZ 71025	FRONT WHEEL BEARING ASSEMBLY—OUTER			..	..	..	..	2
...	BZ 71026	Cone			..	..	..	..	2
...	BZ 71027	Cup			..	..	..	..	2
...	C 47431	HUB COMPLETE—REAR (Includes brake drum assembly)		*	2	2	..	..	..
...	C 47432	HUB COMPLETE—REAR (Includes brake drum assembly)		*	..	..	2	..	..
...	C 47433	HUB COMPLETE—REAR (Includes brake drum assembly)		*	..	..	..	2	..
...	C 45225	HUB COMPLETE REAR (Includes brake drum assembly)			..	..	..	..	2
...	BZ 47439	Hub—rear		*	2	2	2	..	..
...	BZ 47440	Hub—rear		*	..	..	..	2	..
...	BZ 44975	Hub—rear			..	..	..	..	2
...	C 47441	BRAKE DRUM ASSEMBLY—REAR		*	2	2	..	..	..
...	C 47442	BRAKE DRUM ASSEMBLY—REAR		*	..	..	2	2	..
...	C 45015	BRAKE DRUM ASSEMBLY—REAR			..	..	..	..	2
...	C 47445	Brake drum—rear		*	2	2	..	..	..
...	C 47446	Brake drum—rear		*	..	..	2	2	..
...	C 45278	Brake drum—rear			..	..	..	..	2
...	BZ 47437	Brake drum—rear—dust shield		*	2	2	2	2	..
...	BZ 44977	Brake drum—rear—dust shield			..	..	..	..	2
...	BZ 70174	Brake drum—rear—dust shield screw	No. 10-24x1/4"		8	8	8	8	8
...	BZ 45002	Hub cap carrier			..	..	..	..	5
...	BZ 71101	Hub cap carrier screw	1/4"-20x5/16"		..	..	..	..	15
...	BO 46428	Tire tube valve stem extension (For tire carrier)			..	..	..	..	1

SPARE WHEEL CARRIER—REAR ENCLOSED MOUNT

...	C 112485	CARRIER ASSEMBLY (Coach) Without trunk		*	1	1	1	1	..
...	C 112484	CARRIER ASSEMBLY (Sedan) Without trunk		*	1	1	1	1	1
...	C 114238			*	1	1	1	1	..
...	C 114236			*	1	1	1	1	1

SPARE WHEEL CARRIER—REAR ENCLOSED MOUNT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 107842	SPARE TIRE ANCHOR PLATE—COMPLETE (Coach and Sedan)		1	1	1	1	1	..
...	BO 107843	SPARE TIRE ANCHOR PLATE—COMPLETE (Sedan and Brougham—wire wheels)		..	..	..	..	..	1
...	BZ 100467	Spare wheel carrier pilot stud (Coach and Sedan)		1	1	1	1	1	..
...	BZ 100467	Spare wheel carrier pilot stud (wire wheels)		..	..	..	..	..	1
...	BO 108013	SPARE TIRE ANCHOR PLATE—COMPLETE (Sedan and Brougham—wood wheels)		..	..	..	..	..	1
...	BO 108014	Spare wheel carrier pilot stud—wood wheels		..	..	..	..	..	1
...	BO 102484	Spare wheel carrier clamp bolt—wood wheels		..	..	..	..	..	1
...	BO 102485	Spare wheel carrier clamp bolt		1	1	1	1	1	..
...	BO 102489	SPARE WHEEL CARRIER LOCK CAGE ASSEMBLY		1	1	1	1	1	..
...	BO 102481	Spare wheel carrier clamp (Wire and wood wheels)		..	..	..	..	..	1
...	BZ 109323	SPARE TIRE LOCK ASSEMBLY		1	1	1	1	1	1
...	BZ 109078	SPARE TIRE LOCK CYLINDER AND KEYS ASSEMBLY		1	1	1	1	1	1
...	BO 45986	Key		2	2	2	2	2	2
...	BO 70692	Spare tire anchor plate to carrier bolt	5/16"-18x3/4"	4	4	4	4	4	4
...	BO 70674	Spare tire anchor plate to carrier bolt nut	5/16"-18x5/16"	4	4	4	4	4	4
...	BZ 1031	Tire carrier to frame bolt	3/8"-24x1"	4	4	4	4	4	4
...	BX 12415	Tire carrier to frame bolt nut	3/8"-24x21/64"	4	4	4	4	4	4
...	BZ 71359	Tire carrier to panel reinforcement bolt	5/16"-24x7/8"	2	2	2	2	2	2
...	BO 12481	Tire carrier to panel reinforcement bolt nut	5/16"-24x17/64"	2	2	2	2	2	2

SPARE WHEEL CARRIER—REAR

...	C 107950	SPARE WHEEL CARRIER ASSEMBLY (2-Passenger Coupe)		1	1	1	1	1	..
...	C 107951	SPARE WHEEL CARRIER ASSEMBLY (4-Passenger Coupes and Convertible Coupes)		1	1	1	1	1	..
...	BZ 100467	Spare wheel carrier pilot stud		2	2	2	2	2	..
...	BZ 100466	Spare wheel carrier lock stud		1	1	1	1	1	..
...	BZ 96858	Spare wheel carrier lock stud nut		1	1	1	1	1	..
...	BZ 100465	SPARE WHEEL CARRIER LOCK CAGE ASSEMBLY		1	1	1	1	1	..
...	BZ 107956	Spare wheel carrier brace ferrule		2	2	2	2	2	..
...	BX 1061	Spare wheel carrier attaching bolt ..	3/8"-24x11/8"	4	4	4	4	4	..
...	BX 12415	Spare wheel carrier attaching bolt nut	3/8"-24x21/64 "	4	4	4	4	4	..
...	BZ 107586	Spare wheel carrier frame bracket		1	1	1	1	1	..
...	BZ 70883	Spare wheel carrier frame bracket bolt	5/16"-18x7/8"	4	4	4	4	4	..
...	BO 70674	Spare wheel carrier frame bracket bolt nut	5/16"-18x5/16"	4	4	4	4	4	..
...	BZ 107618	Tire carrier support		1	1	1	1	1	..
...	BZ 1062	Tire carrier support to frame member bolt	3/8"-24x7/8"	2	2	2	2	2	..
...	BX 12415	Tire carrier support to frame member bolt nut		2	2	2	2	2	..
...	BZ 109323	SPARE TIRE LOCK ASSEMBLY		1	1	1	1	1	..
...	BZ 109078	CYLINDER AND KEYS ASSEMBLY		1	1	1	1	1	..
...	BZ 45986	Key		2	2	2	2	2	..

SPARE WHEEL CARRIER—SIDE

...	C 112234	SIDE WHEEL CARRIER COMPLETE—R. H.		1	1	..	..	..	..
...	C 112235	SIDE WHEEL CARRIER COMPLETE—L. H.		1	1	..	..	..	..
...	C 108652	SIDE WHEEL CARRIER COMPLETE—R. H.		..	..	1	1	1	..
...	C 108653	SIDE WHEEL CARRIER COMPLETE—L. H.		..	..	1	1	1	..
...	C 108656	SIDE WHEEL CARRIER COMPLETE—R. H.		..	..	..	..	..	1
...	C 108657	SIDE WHEEL CARRIER COMPLETE—L. H.		..	..	..	..	..	1
...	C 108602	Side wheel carrier—R. H.		1	1	1	1	1	..
...	C 108603	Side wheel carrier—L. H.		1	1	1	1	1	..
...	C 108604	Side wheel carrier—R. H.		..	..	..	..	..	1
...	C 108605	Side wheel carrier—L. H.		..	..	..	..	..	1
...	BO 108636	SIDE WHEEL TO COWL BRACKET ASSEMBLY —R. H.		1	1	1	1	1	1
...	BO 108637	SIDE WHEEL TO COWL BRACKET ASSEMBLY —L. H.		1	1	1	1	1	1
...	BO 12264	Side wheel to cowl bracket to pillar rivet	1/4"x34"	2	2	2	2	2	2

SPARE WHEEL CARRIER—SIDE—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 9159	Side wheel to cowl bracket to cowl bolt	1/4"-20x5/8"	3	3	3	3	3	3
...	BZ 70676	Side wheel to cowl bracket bolt nut	1/4"-20x1/4"	3	3	3	3	3	3
...	BZ 112163	Tire carrier clamp anchor bracket	No. 4x1-1/8"	*	1	1	..	..	..
...	BZ 70983	Tire carrier clamp anchor bracket bolt		1	1	..	..	..	..
...	BO 12481	Tire carrier clamp anchor bracket bolt nut		1	1	..	..	..	..
...	BO 108640	Dash bracket to carrier screw brace		1	1	..	..	..	..
...	BO 108642	Dash bracket to carrier screw brace—R. H		..	..	1	1	1	1
...	BO 108643	Dash bracket to carrier screw brace—L. H		..	..	1	1	1	1
...	BZ 112159	Side wheel carrier screw		*	1	1	..	..	..
...	BO 108644	Side wheel carrier screw		..	..	1	1	1	1
...	BT 71174	Side wheel carrier screw taper pin		1	1	2	2	2	2
...	BO 108856	Side wheel carrier screw end		1	1	2	2	2	2
...	BO 102486	Side wheel carrier screw end seat	No. 4x1-1/8"	1	1	1	1	1	1
...	BO 102488	Dash bracket to carrier screw, clamp ferrule		1	1	1	1	1	1
...	BZ 71216	Dash bracket to carrier screw brace nut		2	2	2	2	2	2
...	BZ 102506	Side wheel to carrier clamp pilot		..	..	.	.	.	.
...	BO 102485	Side wheel to carrier clamp bolt		1	1	1	1	1	1
...	BO 102484	Side wheel to carrier clamp bolt (Wood wheels)		..	..	..	..	..	..
...	BO 102485	Side wheel to carrier clamp bolt (Wire wheels)		..	..	..	..	..	..
...	BO 102489	SIDE WHEEL LOCK CAGE ASSEMBLY		1	1	1	1	1	1
...	BO 102481	Side wheel to carrier clamp (Wood and wire wheels)		..	..	..	..	..	..
...	BZ 109323	SPARE TIRE LOCK ASSEMBLY		1	1	1	1	1	1
...	BZ 109078	CYLINDER AND KEYS ASSEMBLY	Key	1	1	1	1	1	1
...	BZ 45986	Key		2	2	2	2	2	2

TIRE COVER—METAL—REAR MOUNT

...	C 108873	TIRE COVER COMPLETE (Specify "Black," "Prime," or color)		1	1	1	1	1	..
...	C 108880	Rear plate—black enamel		1	1	1	1	1	..
...	C 108874	Rear plate—prime or lacquer		1	1	1	1	1	..
...	C 108881	FRONT PLATE ASSEMBLY (Black enamel) Includes moulding		1	1	1	1	1	..
...	C 108882	FRONT PLATE ASSEMBLY (Lacquer) Includes moulding	16x6.00	1	1	1	1	1	..
...	C 108875	Front plate (Less moulding) Prime	and	1	1	1	1	1	..
...	C 108876	Front plate moulding	16x6.25	1	1	1	1	1	..
...	BO 71328	Front plate moulding rivet	3/16"x3/16'	2	2	2	2	2	..
...	BO 109505	Valve hole cover (Enamel)		1	1	1	1	1	..
...	BO 111659	Valve hole cover (Lacquer)		1	1	1	1	1	..
...	BO 111589	Anti-rattler rubber bumper		10	10	10	10	10	..
...	BO 71464	Anti-rattler rubber bumper rivet	1/8"x14"	10	10	10	10	10	..
...	BZ 5523	Spare wheel cover lock stud nut	5/16"-15x1/4"	1	1	1	1	1	..

TIRE COVER—METAL—SIDE MOUNT

...	C 114439	TIRE COVER RING ASSEMBLY		*	1	1	..	..	..
...	C 114111	TIRE COVER RING ASSEMBLY (16x6.00 Tires)	Black	*	..	..	1	..	..
...	C 114113	TIRE COVER RING ASSEMBLY (16x6.25 and 16x6.50 Tires)	Enamel	*	..	..	..	1	1
...	C 114109	Tire cover ring (16x6.00 Tires)		*	1	1	..	..	..
...	C 114440	TIRE COVER RING ASSEMBLY		*	1	1	..	..	..
...	C 114117	TIRE COVER RING ASSEMBLY (16x6.00 Tires)		*	..	..	1	..	..
...	C 114123	TIRE COVER RING ASSEMBLY (16x6.25 Tires)		*	..	..	..	1	1
...	C 114110	Tire cover ring (Less moulding) (16x6.00 Tires)	Prime or	*	1	1	..	..	..
...	C 114112	Tire cover ring (Less moulding) 16x6.00 Tires)	Lacquer	*	..	..	1	..	..
...	C 114114	Tire cover ring (Less moulding) 16x6.25 Tires)		*	..	..	..	1	1
...	C 114270	Ring moulding		*	1	1	..	..	..
...	C 114124	Ring moulding		*	..	..	1	1	1
...	BO 70934	Ring moulding rivet			4	4	..	..	..
...	BO 71328	Ring moulding rivet			..	..	4	4	4
...	BZ 114271	Ring moulding spacer		*	2	..	..	..	..

TIRE COVER—METAL—SIDE MOUNT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 114118	DRUM SIDE PLATE ASSEMBLY—R. H.	(16x6.00 Tires)	*	1	1	..	..	..
...	C 114119	DRUM SIDE PLATE ASSEMBLY—L. H.	(16x6.00 Tires)	*	1	1	..	..	..
...	C 114120	DRUM SIDE PLATE ASSEMBLY—R. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114121	DRUM SIDE PLATE ASSEMBLY—L. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114122	DRUM SIDE PLATE ASSEMBLY	(16x6.50 Tires)	Prime	*	..	..	..	1
...	C 114103	Drum side plate—R. H.	(16x6.00 Tires)	or	*	1	1	..	..
...	C 114104	Drum side plate—L. H.	(16x6.00 Tires)	acquer	*	1	1	..	..
...	C 114107	Drum side plate—R. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114108	Drum side plate—L. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114116	Drum side plate	(16x6.50 Tires)	Black	*	..	..	..	1
...	C 114101	Drum side plate—R. H.	(16x6.00 Tires)	enamel	*	1	1	..	..
...	C 114102	Drum side plate—L. H.	(16x6.00 Tires)	*	1	1	..	..	..
...	C 114105	Drum side plate—R. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114106	Drum side plate—L. H.	(16x6.00 and 16x6.25 Tires)	*	..	..	1	1	1
...	C 114115	Drum side plate	16x6.50 Tires	*	..	..	..	..	1
...	BZ 102635	Side plate bumper			2	2	3	3	3
...	BO 71328	Side plate bumper rivet			2	2	3	3	3
...	BO 109219	Valve hole cover (Black enamel)			1	1	1	1	..
...	BO 109218	Valve hole cover (Prime or lacquer)			1	1	1	1	..
...	BZ 47428	Wheel hub cap (For tire cover)		*	..	..	..	..	1

SPRINGS—FRONT

...	F 45280	FRONT SPRING ASSEMBLY (Used without fender well)	31" long		2	2	..	..	..
...	F 47208	FRONT SPRING ASSEMBLY (Used with fender well)	32-1/2" long		2	2	..	..	..
...	F 45280	FRONT SPRING ASSEMBLY	31" long		..	..	2	..	..
...	F 47209	FRONT SPRING ASSEMBLY	32-1/2" long		..	..	2	2	2
...	C 45656	Leaf No. 1	Spring No. 45280		2	2	2	..	..
...	C 45657	Leaf No. 2			2	2	2	..	..
...	C 45658	Leaf No. 3			2	2	2	..	..
...	C 45659	Leaf No. 4			2	2	2	..	..
...	C 45660	Leaf No. 5			2	2	2	..	..
...	C 45661	Leaf No. 6			2	2	2	..	..
...	C 45662	Leaf No. 7			2	2	2	..	..
...	C 45663	Leaf No. 8			2	2	2	..	..
...	BZ 46205	CENTER BOLT ASSEMBLY			2	2	2	..	..
...	BZ 46211	Rebound clip (Clinch type)			2	2	2	..	..
...	BZ 46212	Rebound clip (Bolt type)			2	2	2	..	..
...	BZ 40893	Clip bolt	5/16"-18x2-3/8"1		2	2	2	..	..
...	BZ 18045	Clip bolt nut	5/16"-18 1		2	2	2	..	..
...	BZ 9652	Clip rivet	5/16"x9/16"		2	2	2	..	..
...	BZ 47218	Bumper			2	2	2	2	2
...	BZ 40579	Bumper retainer			2	2	2	2	2
...	BZ 42822	"U" bolt shackle			2	2	2	2	2
...	BZ 45291	SHACKLE THREADED BUSHING ASSEMBLY			2	2	4	2	2
...	F 45293	Rear pivot bolt			2	2	2	2	2
...	BZ 71289	Rear pivot bolt lockwasher			4	4	2	2	2
...	BZ 45294	Rear pivot bolt bushing			2	2	2	2	2
...	BZ 42750	Spring clip			4	4	4	..	..
...	BZ 45290	Spring clip			..	..	..	4	4
...	BZ 71238	Spring clip nut	7/16"-20x3/8"		8	8	8	8	8
...	BZ 45777	Shim (Service only)	1-1/2"		2	2	2	2	2
...	BZ 45970	Shim (Service only) 4°	4"		2	2	2	2	2
...	C 46850	Front spring leaf service kit (To add extra leaf to spring)	31" type		1	1	1	..	..

SPRINGS—FRONT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 46851	Front spring leaf service kit (To add extra leaf to spring)	31" type	..	..	..	1	1	1
...	BZ 45600	FRONT SPRING COVER ASSEMBLY—FRONT (Used without fender well)		..	2	..	..	..	..
...	BZ 47211	FRONT SPRING COVER ASSEMBLY—FRONT (Used with fender well)		..	2	..	..	..	..
...	BZ 45600	FRONT SPRING COVER ASSEMBLY—FRONT		..	..	2	..	..	..
...	BZ 47213	FRONT SPRING COVER ASSEMBLY—FRONT		..	..	..	2	2	2
...	BZ 45601	FRONT SPRING COVER ASSEMBLY—REAR (Used without fender well)		..	2	..	..	..	..
...	BZ 47212	FRONT SPRING COVER ASSEMBLY—REAR (Used with fender well)		..	2	..	..	..	..
...	BZ 45601	FRONT SPRING COVER ASSEMBLY—REAR		..	..	2	..	..	..
...	BZ 47214	FRONT SPRING COVER ASSEMBLY—REAR		..	..	..	2	2	2
...	BZ 46659	SPRING COVERS COMPLETE—FRONT AND REAR							
...	BZ 46660	SPRINGS (Service kit) Coach and Sedan		1	..	..	..	..	..
		SPRING COVERS COMPLETE—FRONT AND REAR							
		SPRINGS (Service kit) Coupes		1	..	..	..	..	..

SPRINGS—REAR

...	F 47215	REAR SPRING ASSEMBLY (Coach)	48-3/4" long	2	2	2	2	2	..
...	F 46473	REAR SPRING ASSEMBLY (Sedan)	48-3/4" long	2	2	2	2	2	..
...	F 47216	REAR SPRING ASSEMBLY (Coupes and Convertible)	48-3/4" long	2	2	2	..	..	..
...	F 45284	REAR SPRING ASSEMBLY (Coupes and Convertible)	48-3/4" long	..	..	..	2	2	..
...	F 47217	REAR SPRING ASSEMBLY	54-3/4" long	..	..	..	..	..	2
...	C 45678	Leaf No. 1		2	2	2	2	2	..
...	C 45679	Leaf No. 2		2	2	2	2	2	..
...	C 45680	Leaf No. 3		2	2	2	2	2	..
...	C 45681	Leaf No. 4		2	2	2	2	2	..
...	C 45682	Leaf No. 5	Spring	2	2	2	2	2	..
...	C 45683	Leaf No. 6	No. 46473	2	2	2	2	2	..
...	C 45684	Leaf No. 7		2	2	2	2	2	..
...	C 45685	Leaf No. 8		2	2	2	2	2	..
...	C 45686	Leaf No. 9		2	2	2	2	2	..
...	C 45678	Leaf No. 1		..	..	..	2	2	..
...	C 45679	Leaf No. 2		..	..	..	2	2	..
...	C 45687	Leaf No. 3		..	..	..	2	2	..
...	C 45688	Leaf No. 4	Spring	..	..	..	2	2	..
...	C 45689	Leaf No. 5	No. 45284	..	..	..	2	2	..
...	C 45690	Leaf No. 6		..	..	..	2	2	..
...	C 45691	Leaf No. 7		..	..	..	2	2	..
...	C 45692	Leaf No. 8		..	..	..	2	2	..
...	C 45694	Leaf No. 1		..	..	..	..	..	2
...	C 45695	Leaf No. 2		..	..	..	..	..	2
...	C 45696	Leaf No. 3		..	..	..	..	..	2
...	C 46217	Leaf No. 4		..	..	..	..	..	2
...	C 46218	Leaf No. 5	Spring	..	..	..	..	..	2
...	C 46219	Leaf No. 6	No. 47217	..	..	..	..	..	2
...	C 46220	Leaf No. 7		..	..	..	..	..	2
...	C 46221	Leaf No. 8		..	..	..	..	..	2
...	C 46222	Leaf No. 9		..	..	..	..	..	2
...	C 43790	Leaf No. 10		..	..	..	..	..	2
...	BZ 46208	CENTER BOLT ASSEMBLY (Spring No. 46473)		2	2	2	2	2	..
...	BZ 45307	CENTER BOLT ASSEMBLY (Spring No. 45284)		..	..	..	2	2	..
...	BZ 46209	CENTER BOLT ASSEMBLY (Spring No. 47217)		..	..	..	..	..	2
...	BZ 40890	Rebound clip (Clinch type No. 1) Springs No 46473-45284		2	2	2	2	2	..
...	BZ 46213	Rebound clip (Bolt type No. 2) Springs No. 46473-45284		2	2	2	2	2	..
...	BZ 46215	Rebound clip (Bolt type No. 2) (Spring No. 47217)		..	..	..	..	..	2
...	BZ 46214	Rebound clip (Bolt type No. 3) (Springs No 46473-45284)		2	2	2	2	2	..
...	BZ 46216	Rebound clip (Bolt type No. 3) (Spring No. 47217)		..	..	..	..	..	2
...	BZ 43642	Rebound clip (Band eye No. 4)		2	2	2	2	2	2

SPRINGS—REAR—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 46204	Rebound clip bolt	5/16"-18x2-3/8"	2	2	2	2	2	2
...	BZ 43643	Rebound clip bolt	3/8"-16x2-9/16"	2	2	2	2	2	2
...	BO 18045	Rebound clip nut	5/16"-18	2	2	2	2	2	2
...	BZ 5402	Rebound clip nut	3/8"-16	2	2	2	2	2	2
...	BZ 45304	"U" bolt shackle		2	2	2	2	2	2
...	BZ 42824	SHACKLE THREADS BUSHING ASSEMBLY		4	4	4	4	4	4
...	BZ 45295	FRONT BRACKET THREADED BUSHING ASSEMBLY		2	2	2	2	2	2
...	BZ 45296	Spring clip (Coupes and Convertible)		4	4	4	4	4	..
...	BZ 43679	Spring clip (Coach and Sedan)		4	4	4	4	4	..
...	BZ 46266	Spring clip		..	..	..	..	..	4
...	BX 3433	Spring clip nut	1/2"-20x7/16"	16	16	16	16	16	16
...	BZ 47288	Spring clip plate—R. H. (Used with fender well)		1	..	..	..	..	..
...	BZ 47289	Spring clip plate—L. H. (Used with fender well)		1	..	..	..	..	..
...	BZ 45299	Spring clip plate—R. H. (Used without fender well)		1	..	..	..	..	..
...	BZ 45300	Spring clip plate—L. H. (Used without fender well)		1	..	..	..	..	..
...	BZ 47288	Spring clip plate—R. H.		..	1	1	1	1	1
...	BZ 47289	Spring clip plate—L. H.		..	1	1	1	1	1
...	BZ 47221	Spring clip plate stud (Shock absorber mounting) (Used without fender well)		2	..	..	..	..	..
...	BZ 45302	Spring seat cushion		4	4	4	4	4	4
...	BZ 45303	Spring seat cushion retainer		4	4	4	4	4	4
...	BZ 45602	REAR SPRING COVER ASSEMBLY—FRONT (Coach, Sedan and Chassis)		..	2	2	2	2	..
...	BZ 45603	REAR SPRING COVER ASSEMBLY—REAR (Coach, Sedan and Chassis)		..	2	2	2	2	..
...	BZ 45952	REAR SPRING COVER ASSEMBLY—FRONT (Coupes and Convertible Coupes)		..	2	2	2	2	..
...	BZ 45953	REAR SPRING COVER ASSEMBLY—REAR (Coupes and and Convertible Coupes)		..	2	2	2	2	..
...	BZ 45604	REAR SPRING COVER ASSEMBLY—FRONT		..	..	..	..	..	2
...	BZ 45605	REAR SPRING COVER ASSEMBLY—REAR		..	..	..	..	..	2

REAR SPRING STABILIZER

Standard on Cars Equipped with Axleflex

...	BZ 47447	Torsion bar		*	1	1	1	1	1
...	BZ 47448	Torsion bar rubber washer		*	2	2	2	2	2
...	BX 18093	Torsion bar nut	5/8"-18x3/8"		2	2	2	2	2
...	BX 397	Torsion bar lockwasher			2	2	2	2	2
...	BZ 47449	Torsion bar mounting bracket		*	2	2	2	2	2
...	BM 219	Torsion bar mounting bracket bolt			8	8	8	8	8
...	BZ 122	Torsion bar mounting bracket bolt nut	5/8"-18x15/16"		8	8	8	8	8
...	BT 71	Torsion bar mounting bracket bolt lockwasher			8	8	8	8	8
...	BZ 47450	Torsion bar mounting bracket rubber bushing		*	2	2	2	2	2
...	BZ 47451	Torsion bar mounting bracket bushing liner		*	2	2	2	2	2
...	BZ 47453	Stabilizer arm		*	2	2	2	2	2
...	BZ 47454	Stabilizer arm grommet		*	2	2	2	2	2
...	BZ 47455	Stabilizer arm grommet bronze bushing		*	2	2	2	2	2
...	BZ 47456	Stabilizer arm bolt		*	2	2	2	2	2
...	BZ 47457	Stabilizer arm bolt spacer sleeve		*	2	2	2	2	2
...	BO 12481	Stabilizer arm bolt nut	5/8"-24x17/64"		2	2	2	2	2
...	BT 71	Stabilizer arm bolt lockwasher			2	2	2	2	2
...	BZ 47458	Stabilizer arm to spring plate connection		*	2	2	2	2	2
...	BZ 47459	Stabilizer arm to spring plate connection rubber cushion		*	4	4	4	4	4
...	BZ 47460	Stabilizer arm to spring plate connection cushion retainer		*	4	4	4	4	4
...	BZ 47461	Stabilizer arm to spring plate connection spacer sleeve		*	2	2	2	2	2
...	BM 232	Stabilizer arm to spring plate connection nut	7/16"-20x3/8"		4	4	4	4	4
...	BZ 47462	Stabilizer spring plate—R. H.		*	1	1	1	1	1
...	BZ 47463	Stabilizer spring plate—L. H.		*	1	1	1	1	1
...	HA 47989	REAR SPRING STABILIZER COMPLETE (Service kit		*	1	1	1	1	1

SHOCK ABSORBERS

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 47258	SHOCK ABSORBER ASSEMBLY—FRONT		*	2	2	..	..	..
...	BZ 47264	SHOCK ABSORBER ASSEMBLY—REAR		*	2	2	..	..	..
...	BZ 47740	PISTON AND VALVE ASSEMBLY—FRONT (Standard)		*	2	2	..	..	..
...	BZ 47741	PISTON AND VALVE ASSEMBLY—REAR (Standard)		*	2	2	..	..	..
...	BZ 47742	PISTON AND VALVE ASSEMBLY—FRONT (Heavy control)		*	2	2	..	..	..
...	BZ 47743	PISTON AND VALVE ASSEMBLY—REAR (Heavy control)		*	2	2	..	..	..
...	BZ 47744	PISTON AND VALVE ASSEMBLY—FRONT (Light control)		*	2	2	..	..	..
...	BZ 47745	PISTON AND VALVE ASSEMBLY—REAR (Light control)		*	2	2	..	..	..
...	BZ 611	Piston rod nut			4	4	..	..	..
...	BZ 48103	Piston rod guide		*	4	4	..	..	..
...	BZ 45501	Base oil filler screw			4	4	..	..	..
...	BZ 45502	Base oil filler screw gasket			4	4	..	..	..
...	BZ 48109	Filler screw wrench (Service)		*	1	1	..	..	..
...	BZ 47260	SHOCK ABSORBER ASSEMBLY—FRONT		*	..	..	2	2	2
...	BZ 47266	SHOCK ABSORBER ASSEMBLY—REAR		*	..	..	2	2	2
...	BZ 47746	Valve plate—front (Stamped No. 10) (Standard)		*	..	..	2	2	2
...	BZ 46026	Valve plate—rear (Stamped No. 7) (Standard)			..	..	2	2	2
...	BZ 47747	Valve plate—front (Stamped No. 11) (Heavy control)		*	..	..	2	2	2
...	BZ 47748	Valve plate—rear (Stamped No. 8) (Heavy control)		*	..	..	2	2	2
...	BZ 47748	Valve plate—front (Stamped No. 8) (Light control)		*	..	..	2	2	2
...	BZ 46028	Valve plate—rear (Stamped No. 6) (Light control)			..	..	2	2	2
...	BZ 611	Piston rod nut			..	..	4	4	4
...	BZ 48092	PISTON ROD GUIDE AND OIL SEAL ASSEMBLY		*	..	..	4	4	4
...	BZ 46029	Piston valve disc			..	..	4	4	4
...	BZ 46030	Piston valve spring			..	..	4	4	4
...	BZ 46031	Piston valve spring guide			..	..	4	4	4
...	BZ 48086	Head unlocking pin		*	..	..	4	4	4
...	BZ 48089	Base oil filler screw		*	..	..	4	4	4
...	BZ 48090	Base oil filler screw gasket		*	..	..	4	4	4
...	BZ 47278	Front and rear shock absorber head grommet		*	8	8	8	8	8
...	BZ 47278	Rear shock absorber base grommet		*	4	4	4	4	4
...	BZ 47279	Front shock absorber base cushion		*	4	4	4	4	4
...	BZ 46718	Front shock absorber base cushion retainer			2	2	2	2	2
...	BZ 47605	Front shock absorber base cushion cup washer		*	2	2	2	2	2
...	BZ 46720	Front shock absorber base nut			2	2	2	2	2
...	BZ 46719	Front shock absorber base plain washer			..	..	2	2	2
...	BZ 71532	Front shock absorber upper bracket cotter—special			2	2	2	2	2
...	BZ 613	Front shock absorber upper bracket washer—outer			2	2	2	2	2
...	BX 545	Front shock absorber upper bracket to fender support rivet			6	6	6	6	6
...	BZ 47277	Rear shock absorber bracket knurled pin (Used without fender well)		*	2	..	..	..	..
...	BZ 71511	Rear shock absorber bracket (upper) stud washer—inner			2	2	2	2	2
...	BZ 71532	Rear shock absorber bracket (upper) stud cotter—special			2	2	2	2	2
...	BZ 71511	Rear shock absorber clip plate stud washer—inner		*	2	2	2	2	2
...	BZ 613	Rear shock absorber clip plate stud washer—outer			2	2	2	2	2
...	BZ 71532	Rear shock absorber clip plate stud cotter—special			2	2	2	2	2
...	BZ 71543	Rear shock absorber bracket knurled pin washer, outer		*	2	..	..	..	..

BUMPERS—FRONT

...	C 112645	FRONT BUMPER ASSEMBLY		1	1	..	..	..	..
...	C 112646	FRONT BUMPER ASSEMBLY		..	..	1	1	..	..
...	C 112647	FRONT BUMPER ASSEMBLY		..	..	..	..	1	1
...	C 112633	Outside bar		1	1	..	..	..	..
...	C 112617	Outside bar		..	..	1	1	..	..
...	C 112627	Outside bar		..	..	..	..	1	1
...	C 112616	Inside bar		1	1	1	1	1	1
...	BZ 114048	Outside bar end bolt		2	2	..	..	..	..
...	BZ 114047	Outside bar end bolt		..	..	2	2	2	2
...	BZ 414	Outside bar end bolt nut		2	2	2	2	2	2
...	BZ 108099	Starting crank bracket		1	1	1	1	..	..
...	BZ 108100	Starting crank bracket		..	..	..	..	1	1
...	BZ 111524	Starting crank bracket bolt		1	1	..	..	..	..

BUMPERS—FRONT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 108499	Starting crank bracket bolt		*	..	1	1	1	1
...	BO 70573	Starting crank bracket bolt nut			1	1	1	1	1
...	C 108097	Front bumper frame bar—R. H.		*	1	1	1	1	1
...	C 108098	Front bumper frame bar—L. H.		*	1	1	1	1	1
...	BO 71252	Frame bar to inside bar bolt	3/8"-24x1-1/4"		4	4	4	4	4
...	BX 12415	Frame bar to inside bar bolt nut	3/8"-24x21/64"		4	4	4	2	2
...	BZ 70860	Frame bar to frame bolt	1/2"-13x2"		2	2	2	2	2
...	BZ 10214	Frame bar to frame bolt	1/2"-13x1-1/4"		2	2	2	2	2
...	BZ 70572	Frame bar to frame bolt nut			4	4	4	4	4
...	BZ 111636	FRONT BUMPER FENDER GUARD AND CLAMP ASSEMBLY			2	2	..	..	..
...	BZ 114202	FRONT BUMPER FENDER GUARD AND CLAMP ASSY.—R.H.			..	..	1	1	..
...	BZ 114203	FRONT BUMPER FENDER GUARD AND CLAMP ASSY.—L.H.			..	..	1	1	..
...	BZ 111260	FRONT BUMPER FENDER GUARD AND CLAMP ASSY.—R.H.			..	..	..	1	1
...	BZ 111261	FRONT BUMPER FENDER GUARD AND CLAMP ASSY.—L.H.			..	..	..	1	1
...	BZ 111637	FRONT BUMPER FENDER GUARD ASSEMBLY			2	2	..	..	..
...	BZ 114204	FRONT BUMPER FENDER GUARD ASSEMBLY—R. H.		*	..	..	1	1	..
...	BZ 114205	FRONT BUMPER FENDER GUARD ASSEMBLY—L. H.		*	..	..	1	1	..
...	BZ 111270	FRONT BUMPER FENDER GUARD ASSEMBLY—R. H.			..	..	..	1	1
...	BZ 111271	FRONT BUMPER FENDER GUARD ASSEMBLY—L. H.			..	..	..	1	1
...	BZ 111638	Front bumper fender guard clamp			2	2	..	..	..
...	BZ 111258	Front bumper fender guard clamp—R. H.			..	..	1	1	..
...	BZ 111259	Front bumper fender guard clamp—L. H.			..	..	1	1	..
...	BZ 111262	Front bumper fender guard clamp—R. H.			..	..	..	1	1
...	BZ 111263	Front bumper fender guard clamp—L. H.			..	..	..	1	1
...	BZ 71462	Front bumper fender guard clamp bolt			4	4	4	4	4
...	BZ 71463	Front bumper fender guard clamp bolt nut			4	4	4	4	4
...	HA 114272	FRONT BUMPER FENDER GUARD SERVICE KIT		*	..	..	1	1	..
...	HA 111309	FRONT BUMPER FENDER GUARD SERVICE KIT			..	..	..	1	1
...	HA 111639	BUMPER FENDER GUARD SERVICE KIT (Front or Rear)			2	2	..	..	..
...	BO 108306	FRONT LICENSE PLATE BRACKET ASSEMBLY			1	1	1	1	1
...	BZ 1031	Front license plate bracket bolt	3/8"-24x1"		1	1	1	1	1
...	BX 12415	Front license plate bracket bolt nut			1	1	1	1	1
...	BO 100341	Front license plate clamp			1	1	1	1	1
...	BO 70185	Front license plate clamp bolt	1/4"-20x7/7"		1	1	1	1	1
...	BZ 70676	Front license plate clamp bolt nut	1/4"-20x1/4"		1	1	1	1	1

Service Only

BUMPERS—REAR



...	C 112634	REAR BUMPER ASSEMBLY (Coach and Sedan)		*	1	1	..	..	..
...	C 112638	REAR BUMPER ASSEMBLY (Coupes and Convertibles)		*	1	1	..	..	..
...	C 112618	REAR BUMPER ASSEMBLY (Coach and Sedan)		*	..	..	1	1	..
...	C 112622	REAR BUMPER ASSEMBLY (Coupes and Convertibles)		*	..	..	1	1	..
...	C 112630	REAR BUMPER ASSEMBLY (Coupes and Convertibles)		*	..	..	..	1	..
...	C 112628	REAR BUMPER ASSEMBLY (Coach, Sedans and Brougham)		*	..	..	..	1	1
...	C 112635	Outside bar (Coach and Sedan)		*	1	1	..	..	..
...	C 112639	Outside bar (Coupes and Convertibles)		*	1	1	..	..	..
...	C 112619	Outside bar (Coach and Sedan)		*	..	..	1	1	..
...	C 112623	Outside bar (Coupes and Convertibles)		*	..	..	1	1	..
...	C 112631	Outside bar (Coupes and Convertibles)		*	..	..	..	1	..
...	C 112629	Outside bar (Coach, Sedans and Brougham)		*	..	..	..	1	1
...	C 112620	Inside bar—R. H. (Coach, Sedan and Brougham)		*	1	1	1	1	1
...	C 112621	Inside bar—L. H. (Coach, Sedan and Brougham)		*	1	1	1	1	1
...	C 112624	Inside bar—R. H. (Coupes and Convertibles)		*	1	1	1	1	..
...	C 112625	Inside bar—L. H. (Coupes and Convertibles)		*	1	1	1	1	..
...	BZ 114048	Outside bar end bolt		*	2	2	..	..	..
...	BZ 114047	Outside bar end bolt nut		*	..	..	2	2	2
...	BZ 414	Outside bar end bolt nut			2	2	2	2	2
...	BZ 111520	Outside bar to inside bar bolt			2	2	..	..	..
...	BZ 108498	Outside bar to inside bar bolt			..	..	2	2	2
...	BO 70573	Outside bar to inside bar bolt nut			2	2	2	2	2
...	C 108007	Frame bar—R. H. (Coach, Sedan and Brougham)	Without		1	1	1	1	1
...	C 108008	Frame bar—L. H. (Coach, Sedan and Brougham)	Trunk		1	1	1	1	1
...									
...	C 114043	Frame bar—R. H. (Coach, Sedan and Brougham)	With	*	1	1	1	1	1
...	C 114044	Frame bar—L. H. (Coach, Sedan and Brougham)	Trunk	*	1	1	1	1	1
...	C 108011	Frame bar—R. H. (Coupes and Convertibles)			1	1	1	1	..

BUMPERS—REAR—Continued

Illus. No.	Part No	Description	Specifications	Terraplane		Hudson			Custom 8
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	
...	C 108012	Frame bar—L. H. (Coupes and Convertibles)		1	1	1	1	1	..
...	BZ 1031	Frame bar bolt	3/8"-24x1"	4	4	4	4	4	4
...	BX 12415	Frame bar bolt nut	3/8"-24x21/64"	4	4	4	4	4	4
...	BM 1385	Frame bar to frame bolt	7/16"-14x11/2"	4	4	4	4	4	4
...	BO 70573	Frame bar to frame bolt nut	7/16"-14x3/8"	4	4	4	4	4	4
...	BZ 114206	REAR BUMPER FENDER GUARD AND CLAMP ASSEMBLY		*	..	2	2	..	..
...	BZ 111266	REAR BUMPER FENDER GUARD AND CLAMP ASSEMBLY			..	..	..	2	2
...	BZ 111636	REAR BUMPER FENDER GUARD AND CLAMP ASSEMBLY		2	2	..	..	..	..
...	BZ 114207	REAR BUMPER FENDER GUARD ASSEMBLY		..	..	2	2	..	..
...	BZ 111273	REAR BUMPER FENDER GUARD ASSEMBLY		*	..	..	..	2	2
...	BZ 111637	REAR BUMPER FENDER GUARD ASSEMBLY		2	2	..	..	..	..
...	BZ 111265	Rear bumper fender guard clamp		..	..	2	2	..	..
...	BZ 111267	Rear bumper fender guard clamp		..	..	..	..	2	2
...	BZ 111638	Rear bumper fender guard clamp		2	2	..	..	..	..
...	BZ 71462	Rear bumper fender guard clamp bolt		4	4	4	4	4	4
...	BZ 71463	Rear bumper fender guard clamp bolt nut		4	4	4	4	4	4
...	HA 114273	REAR BUMPER FENDER GUARD SERVICE KIT		*	..	1	1	..	..
...	HA 111311	REAR BUMPER FENDER GUARD SERVICE KIT		..	..	..	..	1	1
...	HA 111639	BUMPER FENDER GUARD SERVICE KIT (Front or rear)		2	2	..	..	..	..

FRAME

...	C 47512	FRAME ASSEMBLY (Without fender well)		*	1	..	..	..	..
...	C 47514	FRAME ASSEMBLY (With fender well)		*	1	..	..	..	..
...	C 47513	FRAME ASSEMBLY (Without fender well)		*	..	1	..	..	..
...	C 47516	FRAME ASSEMBLY (With fender well)		*	..	1	..	..	..
...	C 47518	FRAME ASSEMBLY		*	..	..	1	..	..
...	C 47520	FRAME ASSEMBLY		*	..	..	..	1	1
...	C 47522	FRAME ASSEMBLY		*	..	..	..	..	1
1	C 47534	SIDE MEMBER ASSEMBLY—R. H. (Without fender well)		*	1	1	..	..	..
2	C 47535	SIDE MEMBER ASSEMBLY—L. H. (Without fender well)		*	1	1	..	..	..
1	C 47536	SIDE MEMBER ASSEMBLY—R. H. (With fender well)		*	1	1	..	..	..
2	C 47537	SIDE MEMBER ASSEMBLY—L. H. (With fender well)		*	1	1	..	..	..
1	C 47539	SIDE MEMBER ASSEMBLY—R. H.		*	..	..	1	..	..
2	C 47540	SIDE MEMBER ASSEMBLY—L. H.		*	..	..	1	..	..
1	C 47542	SIDE MEMBER ASSEMBLY—R. H.		*	..	..	..	1	1
2	C 47543	SIDE MEMBER ASSEMBLY—L. H.		*	..	..	..	1	1
1	C 47545	SIDE MEMBER ASSEMBLY—R. H.		*	..	..	..	..	1
2	C 47546	SIDE MEMBER ASSEMBLY—L. H.		*	..	..	..	..	1
3	BZ 44864	Front spring front bracket—R. H. (Without fender well)		*	1	1	..	..	..
4	BZ 44865	Front spring front bracket—L. H. (Without fender well)		*	1	1	..	..	..
3	BZ 47553	Front spring front bracket—R. H. (With fender well)		*	1	1	..	..	..
4	BZ 47554	Front spring front bracket—L. H. (With fender well)		*	1	1	..	..	..
3	BZ 44866	Front spring front bracket—R. H.			..	..	1	..	..
4	BZ 44867	Front spring front bracket—L. H.			..	..	1	..	..
3	BZ 47555	Front spring front bracket—R. H.		*	..	..	..	1	1
4	BZ 47556	Front spring front bracket—L. H.		*	..	..	..	1	1
5	BZ 44868	Front spring rear bracket:			2	2	..	..	..
5	BZ 44869	Front spring rear brackets			..	..	2	2	2
...	BZ 44870	Front spring rear bracket reinforcement			2	2	..	..	..
...	BZ 44871	Front spring rear bracket reinforcement			..	..	2	2	2
6	BZ 44872	Rear spring front bracket—R. H.			1	1	1	1	1
7	BZ 44873	Rear spring front bracket—L. H.			1	1	1	1	1
6	BZ 44874	Rear spring front bracket—R. H.			..	..	..	..	1
7	BZ 44875	Rear spring front bracket—L. H.			..	..	..	..	1
8	BZ 47550	REAR SHOCK ABSORBER BRACKET ASSEMBLY (Without fender well)		*	2	..	..	..	..
...	BZ 47557	Rear shock absorber bracket—R. H. (With fender well)		*	1	..	..	..	..
...	BZ 47558	Rear shock absorber bracket—L. H. (With fender well)		*	1	..	..	..	..
...	BZ 47557	Rear shock absorber bracket—R. H.		*	..	1	1	1	1
...	BZ 47558	Rear shock absorber bracket—L. H.		*	..	1	1	1	1
...	BZ 46692	Rear shock absorber bracket reinforcement—inner (Without fender well)			2	..	..	..	..
...	BX 3197	Rear shock absorber bracket rivet			4	4	4	4	4

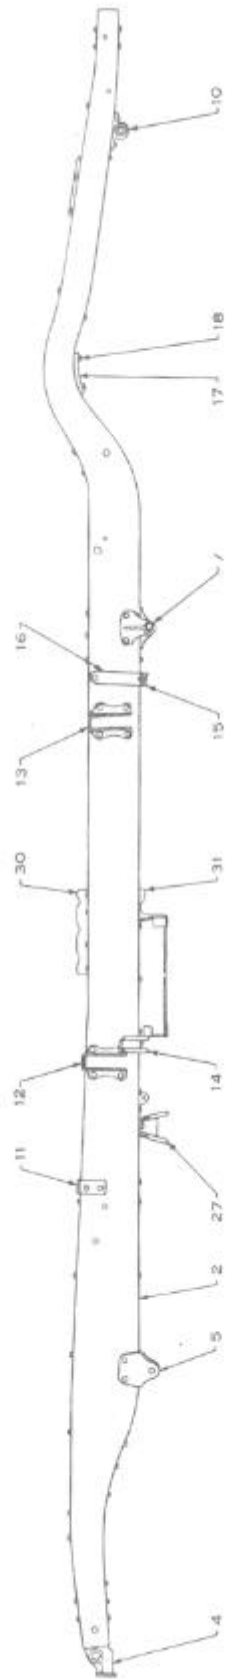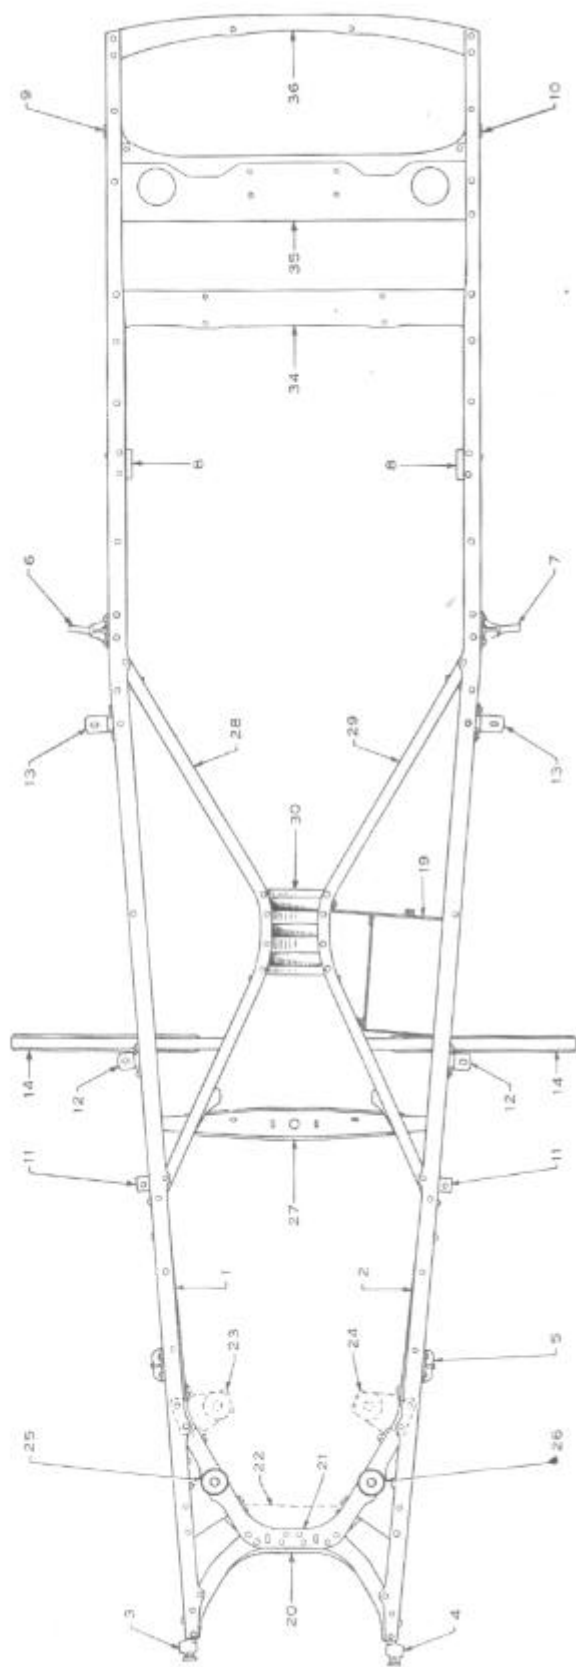

FRAME

FRAME—Continued


Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
9	BZ 44878	Rear spring rear bracket—R. H.		1	1	1	1	1	..
10	BZ 44879	Rear spring rear bracket—L. H.		1	1	1	1	1	..
9	BZ 44880	Rear spring rear bracket—R. H.		..	..	..	..	..	1
10	BZ 44881	Rear spring rear bracket—L. H.		..	..	..	..	..	1
...	BZ 44882	Rear spring rear bracket reinforcement		..	..	..	..	..	2
11	BZ 40505	Body bolt bracket No. 1		2	2	2	2	2	2
12	BZ 44883	Body bolt bracket No. 2		2	2	2	2	2	2
13	BZ 44884	Body bolt bracket No. 3—R. H.		1	1	1	1	1	..
...	BZ 44885	Body bolt bracket No. 3—L. H.		1	1	1	1	1	..
...	BZ 44886	Body bolt bracket No. 3		..	..	..	..	..	2
14	BZ 44887	Running board bracket		2	2	2	2	2	2
...	BM 219	Running board bracket—right front—bolt	5/16"-18x3/4"	2	2	2	2	2	2
...	BZ 122	Running board bracket bolt nut	5/16"-18x5/16"	2	2	2	2	2	2
17	BZ 42226	Rear axle bumper		2	2	2	2	2	4
18	BZ 2490	Rear axle bumper bolt	5/16"-18x1-1/4"	4	4	4	4	4	4
...	BZ 122	Rear axle bumper bolt nut	5/16"-18x5/16"	4	4	4	4	4	4
19	BZ 44890	BATTERY TRAY ASSEMBLY		1	1	1	..	..	..
19	BZ 44891	BATTERY TRAY ASSEMBLY		..	..	..	1	1	1
...	BZ 40514	Battery seat		2	2	2	2	2	2
...	BM 71231	Battery clamp bolt		2	2	2	2	2	2
...	BZ 40515	Battery clamp bolt bracket		2	2	2	2	2	2
...	BZ 44897	Battery clamp bolt insulator (Wood)		2	2	2	2	2	2
...	BZ 40504	Battery clamp bolt clip nut		2	2	2	2	2	2
...	BM 219	Battery tray to frame bolt	5/16"-18x3/4"	5	5	5	5	5	5
...	BZ 122	Battery tray to frame bolt nut	5/16"-18x5/16"	5	5	5	5	5	5
...	BX 545	Frame rivet	5/16"-18x1"	As required					
...	BZ 80	Frame rivet	5/16"-18x1-1/8"	As required					
...	BZ 326	Frame rivet	5/16"x3/4"	As required					
...	BX 3197	Frame rivet	5/16"x5/8"	As required					
...	BZ 82	Frame rivet		As required					
...	BZ 85	Fame rivet	3/8"x1"						

FRAME—CROSS MEMBER

20	C 44839	Front cross member—front		1	1	..	..	..	..
..	C 44840	Front cross member—front		..	..	1	1	1	1
...	C 44841	FRONT CROSS MEMBER ASSEMBLY—REARS)		1	1	..	..	..	..
...	C 44842	FRONT CROSS MEMBER ASSEMBLY—REAR		..	..	1	..	..	..
...	C 44843	FRONT CROSS MEMBER ASSEMBLY—REAR		..	..	..	1	1	1
22	C 44846	Front cross member—rear—radiator support		..	..	1	..	..	..
23	BZ 44847	FRONT CROSS MEMBER ENGINE SUPPORT ASSEM- BLY—R. H.		..	..	1	..	..	..
24	BZ 44848	FRONT CROSS MEMBER ENGINE SUPPORT ASSEM- BLY—L. H.		..	..	1	..	..	..
25	BZ 44904	Front cross member engine support—R. H.		1	1	..	..	..	..
26	BZ 44905	Front cross member engine support—L. H.		1	1	..	..	..	..
25	BZ 44906	Front cross member engine support—R. H.		..	..	..	1	1	1
26	BZ 44907	Front cross member engine support—L. H.		..	..	..	1	1	1
...	BZ 40479	Engine support grommet cup		2	2	2	2	2	2
27	C 41108	ENGINE SUPPORT CROSS MEMBER ASSEMBLY		1	1	1	1	1	1
28	C 44852	Brace—R. H.		1	1	1	1	1	..
29	C 44853	Brace—L. H.		1	1	1	1	1	..
28	C 44855	Brace—R. H.		..	..	..	..	..	1
29	C 44856	Brace—L. H.		..	..	..	..	..	1
30	BZ 44857	Brace plate—upper		1	1	1	1	1	1
31	BZ 40490	Brace plate—lower		1	1	1	1	1	1
34	C 44898	GAS TANK SUPPORT MEMBER (FRONT) ASSEMBLY		1	..	..	..	..	..
...	C 44899	GAS TANK SUPPORT MEMBER (FRONT) ASSEMBLY		..	1	1	1	1	1
35	C 44902	GAS TANK SUPPORT MEMBER ASSEMBLY—REAR		1	1	1	1	1	1
36	C 44903	REAR CROSS MEMBER ASSEMBLY		1	1	1	1	1	1

ENGINE AND MOUNTING

...	C 47772	ENGINE ASSEMBLY (Standard)		*	1	..	..	..	..
...	C 47778	ENGINE ASSEMBLY (Standard)		*	..	1	..	..	..
...	C 47784	ENGINE ASSEMBLY (Standard)		*	..	..	1	..	..

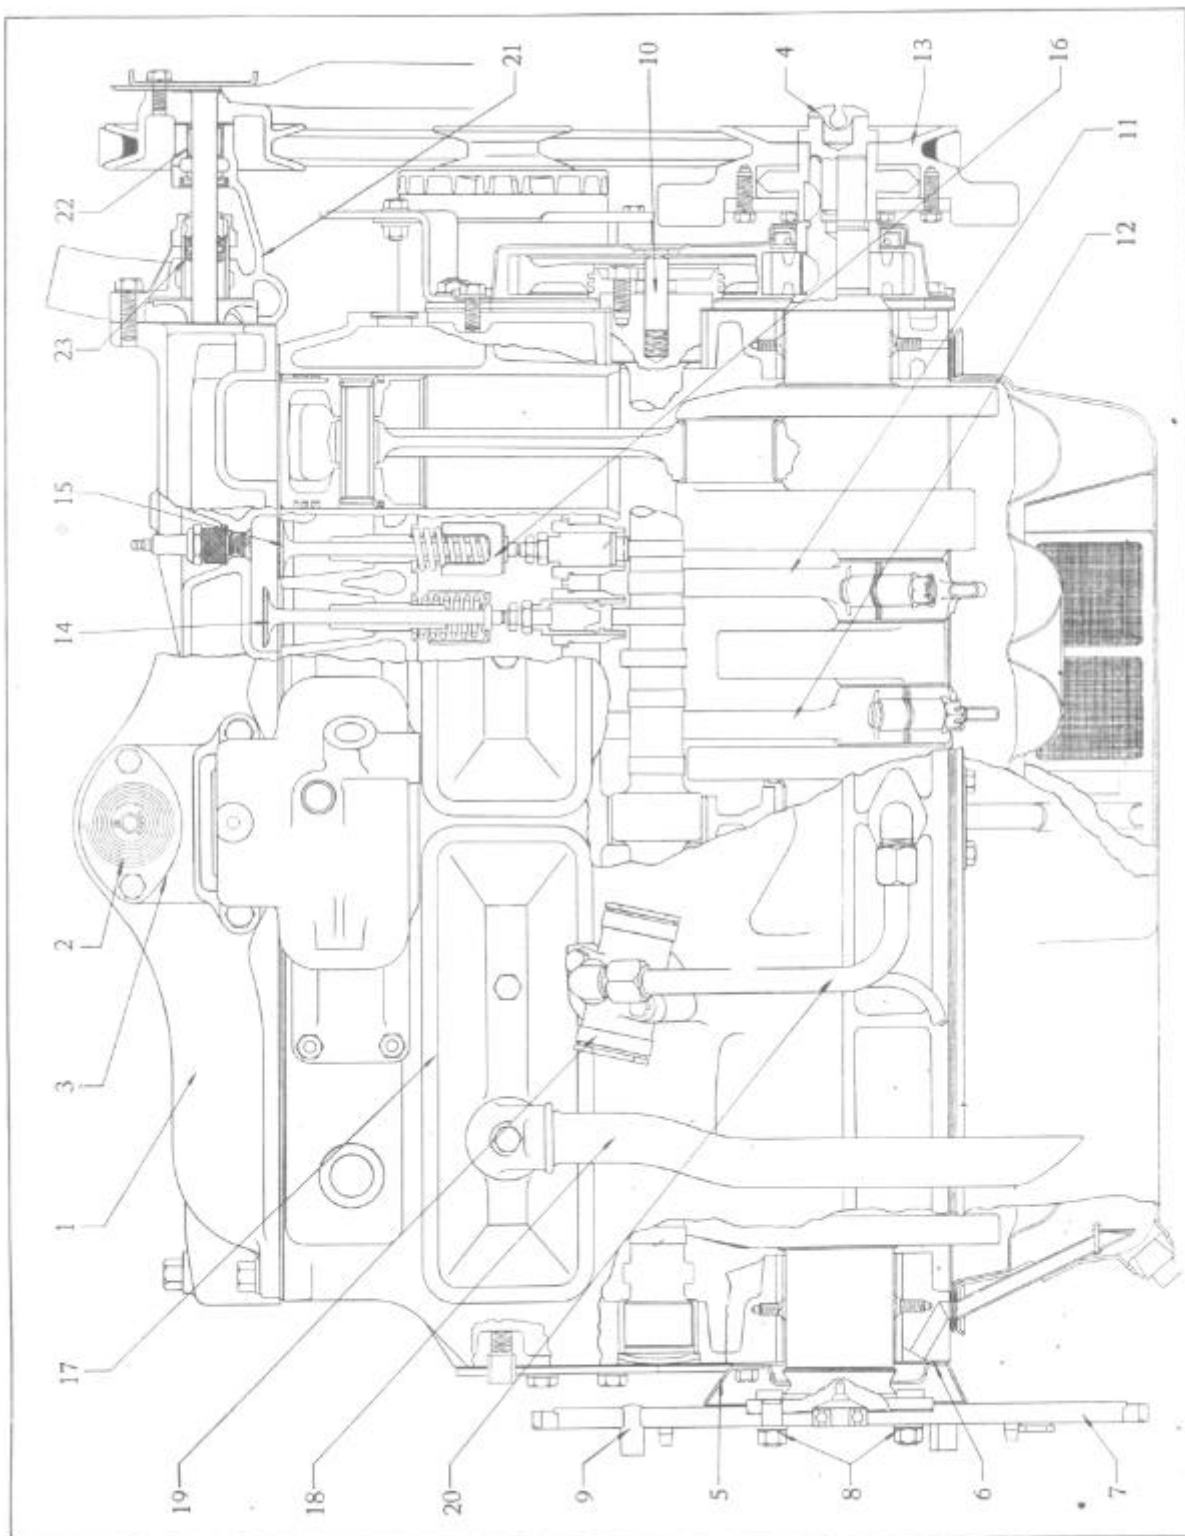

ENGINE—TERRAPLANE DE LUXE

ENGINE AND MOUNTING—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 47796	ENGINE ASSEMBLY (Standard)		*	..	..	1	1	1
...	C 47775	ENGINE ASSEMBLY (With high compression head)		*	1	..	..	..	..
...	C 47781	ENGINE ASSEMBLY (With high compression head)		*	..	1	..	..	..
...	C 47787	ENGINE ASSEMBLY (With high compression head)		*	..	..	1	..	..
...	C 47799	ENGINE ASSEMBLY (With high compression head)		*	..	..	1	1	1
...	BM 71251	Engine front mounting bolt—long	7/16"-20x2-15/16"	1	1	1	1	1	1
...	BM 71207	Engine front mounting bolt—short	7/16"-20x2-2-3/4"	1	1	1	1	1	1
...	BT 3488	Engine front mounting bolt nut	7/16"-20x29/64"	2	2	2	2	2	2
...	BM 40638	Engine front mounting bolt sleeve		2	2	2	2	2	2
...	BM 71219	Engine front mounting bolt washer		4	4	4	4	4	4
...	BM 40639	Engine front mounting grommet—upper		2	2	2	2	2	2
...	BM 42530	Engine front mounting grommet—upper		..	..	..	..	..	..
...	BM 40640	Engine front mounting bolt grommet—lower		2	2	2	2	2	2
...	BM 42531	Engine front mounting bolt grommet—lower		..	..	..	..	..	..
...	BM 42545	Engine rear mounting		1	1	1	1	1	1
...	BM 42532	Engine rear mounting		..	..	..	..	..	..
...	BM 40642	Engine rear mounting to clutch housing bolt		1	1	1	1	1	1
...	BZ 908	Engine rear mounting to frame bolt	5/16"-18x7/8"	2	2	2	2	2	2
...	BZ 122	Engine rear mounting to frame bolt nut	5/16"-18x5/16"	2	2	2	2	2	2

CYLINDERS

...	C 44719	CYLINDER AND PISTONS ASSEMBLY (Std. compression)		1	1	1	..	..	..
...	C 45326	CYLINDER AND PISTONS ASSEMBLY (With hi-compression head)		..	..	..	..	..	..
...	C 44720	CYLINDER AND PISTONS ASSEMBLY		1	1	1	..	..	..
...	BM 14112	Cylinder expansion plug		..	..	..	1	1	1
...	BM 71049	Cylinder expansion plug (camshaft)		7	7	7	4	4	4
...	BM 70568	Cylinder intake inspection expansion plug		1	1	1	1	1	1
...	BM 227	Cylinder stud (for generator adjusting bracket)		..	..	..	2	2	2
...	BM 45519	CYLINDER WATER JACKET COVER ASSEMBLY		1	1	1	1	1	1
...	BM 45520	CYLINDER WATER JACKET COVER ASSEMBLY		1	1	1	..	..	..
...	BM 37196	Cylinder water jacket cover gasket		..	..	..	1	1	1
...	F 33144	Cylinder water jacket cover gasket		1	1	1	..	..	..
...	BM 395	Cylinder water jacket cover bolt	5/16"-18x5/8"	..	..	..	1	1	1
...	BZ 70177	Cylinder water jacket cover washer	Brass	18	18	18	23	23	23
...	BZ 908	Cylinder water jacket cover bolt	5/16"-18x7/8"	21	21	21	29	29	29
...	BM 120	Cylinder water jacket drain		..	..	..	3	3	3
...	BM 42787	CYLINDER SUPPORT PLATE ASSEMBLY—FRONT		..	..	..	1	1	1
...	F 40339	Cylinder support plate gasket		1	1	1	1	1	1
...	BM 1157	Cylinder support plate—front—bolt	3/8"-16x3/4"	1	1	1	1	1	1
...	BM 61446	Cylinder support plate—front—bolt lock		8	8	8	8	8	8
...	BM 47110	Cylinder support plate—rear		2	2	2	2	2	2
...	BM 40342	Cylinder support plate—rear—gasket		*	1	1	1	1	1
...	BM 40343	Cylinder support plate—rear—to cylinder dowel		1	1	1	1	1	1
...	BM 9168	Cylinder support plate—rear—to cylinder bolt	7/16"-14x1-3/8"	2	2	2	2	2	2
...	BM 1157	Cylinder support plate—rear—bolt	3/8"-16x3/4"	1	1	1	1	1	1
...	BM 46901	OIL LEVEL GAUGE ASSEMBLY		4	4	4	4	4	4
...	BM 46903	OIL LEVEL GAUGE ASSEMBLY		1	1	1	..	..	..
...				..	..	..	1	1	1

CYLINDER HEAD—STANDARD

...	C 47111	CYLINDER HEAD ASSEMBLY (6 to 1 compression ratio)		1	1	..	..	..	..
...	C 47112	CYLINDER HEAD ASSEMBLY (6.2 to 1 compression ratio)		..	..	1	..	..	..
...	C 47113	CYLINDER HEAD ASSEMBLY (6 to 1 compression ratio)		..	..	..	1	1	1
...	F 47117	Cylinder head gasket		*	1	1	..	..	..
...	F 47118	Cylinder head gasket		*	..	..	1	1	1
...	BM 9751	Cylinder head expansion plug		4	4	4	4	4	4
...	BM 42891	Cylinder head stud	3-11/32" long	9	9	9	..	..	..
...	BM 45588	Cylinder head stud	3-1/2" long	2	2	2	..	..	..
...	BM 42961	Cylinder head stud	3-23/32" long	2	2	2	..	..	..
...	BM 42893	Cylinder head stud	3-13/16" long	8	8	8	..	..	..
...	BM 37764	Cylinder head stud	3-3/8" long	..	..	..	16	16	16
...	BM 38555	Cylinder head stud	4-1/32" long	..	..	..	4	4	4
...	BM 45592	Cylinder head stud	4-9/16" long	..	..	..	3	3	3

CYLINDER HEAD—STANDARD—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 45594	Cylinder head stud	4-15/16" long	*	..	..	4	4	4
...	BM 45596	Cylinder head stud	5-15/16" long	..	..	..	3	3	3
...	BM 110	Cylinder head nut		..	..	..	..	..	..
...	BM 71065	Cylinder head nut		21	21	21	30	30	30

**HIGH COMPRESSION CYLINDER HEAD
(SPECIAL EQUIPMENT)**

...	C 44776	CYLINDER HEAD ASSEMBLY	(7.00 to 1 compression ratio)	1	1	1	..	..	..
...	C 44726	CYLINDER HEAD ASSEMBLY	(7.00 to 1 compression ratio)	..	..	..	1	1	1
...	C 44774	Cylinder head	(7.00 to 1 compression ratio)	1	1	1	..	..	..
...	C 45537	Cylinder head	(7.00 to 1 compression ratio)	..	..	..	1	1	1
...	BM 47603	Fuel plate		*	1	1	1	1	1
...	BM 71249	Fuel plate drive sere		2	2	2	2	2	2
...	C 45540	Cylinder head cover		1	1	1	..	..	..
...	C 45541	Cylinder head cover		..	..	..	1	1	1
...	F 40899	Cylinder head to cover gasket		1	1	1	..	..	..
...	F 45542	Cylinder head to cover gasket		..	..	..	1	1	1
...	BM 40900	Cylinder head to cover screw		4	4	4	3	3	3
...	BM 42895	Cylinder head stud	5-13/32" long	7	7	7	..	..	..
...	BM 42961	Cylinder head stud	3-23/32" long	2	2	2	..	..	..
...	BM 42893	Cylinder head stud	3-13/16" long	4	4	4	..	..	..
...	BM 42891	Cylinder head stud	3-11/16" long	8	8	8	..	..	..
...	BM 37764	Cylinder head stud	3-3/8" long	..	..	..	16	16	16
...	BM 45592	Cylinder head stud	4-9/16" long	..	..	..	3	3	3
...	BM 38555	Cylinder head stud	4-1/32" long	..	..	..	4	4	4
...	BM 45594	Cylinder head stud	4-15/16" long	..	..	..	4	4	4
...	BM 45596	Cylinder head stud	5-15/16" long	..	..	..	3	3	3
...	C 44783	CYLINDER HEAD—SERVICE KIT-7.00 to 1		1	1	1	..	..	..
...	C 44726	CYLINDER HEAD—SERVICE KIT-7.00 to 1		..	..	..	1	1	1

EXHAUST MANIFOLD

...	C 46466	EXHAUST MANIFOLD ASSEMBLY		1	..	..	..	..	..
1	C 46420	EXHAUST MANIFOLD ASSEMBLY		..	1	1	..	..	..
...	C 46421	EXHAUST MANIFOLD ASSEMBLY)		..	..	..	1	1	1
...	BM 40707	Exhaust manifold stud—long		1	1	1	..	..	..
...	BM 4131	Exhaust manifold stud		1	1	1	3	3	3
...	BM 227	Exhaust manifold stud		4	4	4	7	7	7
...	BM 71058	Exhaust manifold stud nut	3/8"-16x3/8"	6	6	6	10	10	10
...	F 38038	Exhaust manifold gasket—end		2	2	2	..	..	..
...	F 38039	Exhaust manifold gasket—center)		1	1	1	..	..	..
...	F 33190	Exhaust manifold gasket—end		..	..	..	2	2	2
...	F 33191	Exhaust manifold gasket—intermediate		..	..	..	2	2	2
...	F 33192	Exhaust manifold gasket—center		..	..	..	1	1	1
...	BM 45536	Exhaust damper and shaft assembly		..	1	1	1	1	1
...	BM 38089	Exhaust damper shaft bushing		..	2	2	2	2	2
...	BM 37946	Exhaust damper spring—front		..	1	1	1	1	1
...	BM 45751	Exhaust damper spring—rear		..	1	1	..	..	..
...	BM 45531	Exhaust damper spring—rear		..	..	..	1	1	1
...	BM 37947	Exhaust damper spring—front—retainer		..	1	1	1	1	1
...	BM 45731	Exhaust damper spring—rear—retainer	No. 0 Taper pin	..	1	1	1	1	1
...	BM 37949	Exhaust damper spring—front—stud		..	1	1	..	..	..
...	BM 45533	Exhaust damper spring—front—stud		..	..	..	1	1	1
...	BM 45533	Exhaust damper spring—rear—stud		..	1	1	..	..	..
...	BM 37949	Exhaust damper spring—rear—stud		..	..	..	1	1	1
2	BM 45528	Exhaust damper thermostat		..	1	1	1	1	1
3	BM 45535	Exhaust damper cover		..	1	1	1	1	1
...	F 38090	Exhaust damper cover gasket		..	1	1	1	1	1
...	BM 38088	Exhaust damper cover damper stop		..	2	2	2	2	2
...	BM 13073	Exhaust damper cover stud	5/16"-18x1-1/4"	..	2	2	2	2	2
...	BM 71259	Exhaust damper cover stud nut	5/16"-18x5/16"	..	2	2	2	2	2
...	BM 40351	Exhaust damper		1	..	..	..	..	..
...	BM 40352	Exhaust damper gasket		1	..	..	..	..	..

EXHAUST MANIFOLD—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 40353	Exhaust damper retainer		1	..	..	..	..	..
...	BM 71218	Exhaust damper retainer stud		2	..	..	..	..	..
...	BZ 70177	Exhaust damper retainer stud washer		2	..	..	..	..	..
...	BM 71108	Exhaust damper retainer stud nut		2	..	..	..	..	..

INTAKE MANIFOLD

...	C 47378	INTAKE MANIFOLD ASSEMBLY		1	1	1	..	..	..
...	C 47108	INTAKE MANIFOLD ASSEMBLY		..	..	..	1	1	1
...	BM 70568	Expansion plug		1	1	1	..	..	..
...	BM 71288	Carburetor stud		2	2	2	2	2	2
...	BM 71100	Intake manifold pipe plug (Without clutch vac. control)		1	1	1	1	1	1
...	BM 71091	Intake manifold vacuum control pipe union (With clutch vac. control)		..	..	..	1	1	..
...	BM 43099	Intake manifold vacuum control pipe elbow (With clutch vac. control)		1	1	1	..	..	..
...	BM 71091	Intake manifold vacuum pipe union (Pre-selector control)		1	1	1	..	..	..
...	BM 71092	Intake manifold vacuum pipe elbow (Pre-selector control)		..	..	..	1	1	1
...	BM 71100	Intake manifold pipe plug (Without pre-selector control)		1	1	1	1	1	1
...	BM 13073	Intake manifold to cylinder stud	5/16"-18x1-1/4"	8	8	8	..	..	..
...	BM 4131	Intake manifold to cylinder stud		..	..	..	8	8	8
...	BZ 122	Intake manifold to cylinder stud nut	5/16"-18x5/16"	8	8	8	..	..	..
...	BM 110	Intake manifold to cylinder stud nut	3/8"-16x3/8"	..	..	..	8	8	8
...	BM 40626	Intake manifold to exhaust manifold gasket		1	1	1	..	..	..
...	BM 42019	Intake manifold to exhaust manifold gasket		..	..	..	1	1	1
...	BM 71044	Intake manifold to exhaust manifold bolt	3/8"-16x1/8"	2	2	2	..	..	..
...	BM 71243	Intake manifold to exhaust manifold bolt	3/8"-16x1-1/4"	..	..	..	4	4	4
...	F 38007	Intake manifold to cylinder gasket—small		1	1	1	..	..	..
...	F 33171	Intake manifold to cylinder gasket—small		..	..	..	2	2	2
...	F 33172	Intake manifold to cylinder gasket—large		..	..	..	2	2	2
...	BM 40630	Intake manifold windshield wiper tube (Convertible Coupe only)		..	1	1	1	1	..
...	BM 71226	Intake manifold windshield wiper tube nipple (Convertible Coupe only)		..	1	1	1	1	..
...	BM 71225	Intake manifold windshield wiper tube nut (Convertible Coupe only)		..	1	1	1	1	..
...	BM 40633	Intake manifold windshield wiper tube (Except Convertible Coupe)		1	1	1	1	1	1
...	BM 11841	Intake manifold windshield wiper tube nipple (Except Convertible Coupe)		1	1	1	1	1	1
...	BM 11842	Intake manifold windshield wiper tube nut (Except Convertible Coupe)		1	1	1	1	1	1

FLYWHEEL AND CRANKSHAFT

...	C 44670	Crankshaft		1	1	1	..	..	..
...	C 44685	Crankshaft		..	..	..	1	1	1
4	BM 44671	Crankshaft starting jaw.		1	1	1	1	1	1
...	BM 37015	Crankshaft starting jaw washer		1	1	1	1	1	1
...	BM 40314	BEARING CAP ASSEMBLY No. 1		1	1	1	..	..	..
...	BM 42005	BEARING CAP ASSEMBLY No. 1		..	..	..	1	1	1
...	BM 40315	Bearing cap		1	1	1	..	..	..
...	BM 42006	Bearing cap		..	..	..	1	1	1
...	BM 37234	Bearing—upper		1	1	1	..	..	..
...	BM 37334	Bearing—upper		..	..	..	1	1	1
...	BM 37235	Bearing—lower		1	1	1	..	..	..
...	BM 37335	Bearing—lower		..	..	..	1	1	1
...	BM 37236	Bearing cap shim—thin (No. 1 bearing)		6	6	6	..	..	..
...	BM 37336	Bearing cap shim—thin (No. 1 bearing)		..	..	..	6	6	6
...	BM 37237	Bearing cap shim—thick (No. 1 bearing)		6	6	6	..	..	..
...	BM 37337	Bearing cap shim—thick (No. 1 bearing)		..	..	..	6	6	6
...	BM 44672	BEARING CAP ASSEMBLY No. 2		1	1	1	..	..	..

FLYWHEEL AND CRANKSHAFT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 37338	BEARING CAP ASSEMBLY No. 2		..	..	..	1	1	1
...	BM 35077	Bearing cap		1	1	1	..	..	..
...	BM 33109	Bearing cap		..	..	..	1	1	1
...	BM 44673	Bearing—upper		1	1	1	..	..	..
...	BM 37339	Bearing—upper		..	..	..	1	1	1
...	BM 44674	Bearing—lower		1	1	1	..	..	..
...	BM 37340	Bearing—lower		..	..	..	12	12	12
...	BM 37241	Bearing cap shim—thin (Nos. 2 and 4 Bearing)		6	6	6	..	..	..
...	BM 37341	Bearing cap shim—thin (Nos. 2 and 4 Bearing)		..	..	..	12	12	12
...	BM 37242	Bearing cap shim—thick (Nos. 2 and 4 Bearing)		6	6	6	..	..	..
...	BM 37342	Bearing cap shim—thick (Nos. 2 and 4 Bearing)		..	..	..	1	1	1
...	BM 37026	BEARING CAP ASSEMBLY No. 3		1	1	1	..	..	..
...	BM 37343	BEARING CAP ASSEMBLY No. 3		..	..	..	1	1	1
...	BM 37016	Bearing cap		1	1	1	..	..	..
...	BM 33114	Bearing		..	..	..	1	1	1
...	BM 37017	Bearing—upper		1	1	1	..	..	..
...	BM 37344	Bearing—upper		..	..	..	1	1	1
...	BM 37018	Bearing—lower		1	1	1	..	..	..
...	BM 37345	Bearing—lower		..	..	..	6	6	6
...	BM 38762	Bearing cap shim—thin (No. 3 Bearing)		6	6	6	..	..	..
...	BM 37346	Bearing cap shim—thin (No. 3 Bearing)		..	..	..	6	6	6
...	BM 38763	Bearing cap shim—thick (No. 3 Bearing)		6	6	6	..	..	..
...	BM 37347	Bearing cap shim—thick (No. 3 Bearing)		..	..	..	6	6	6
...	BM 37348	BEARING CAP ASSEMBLY No. 4		..	..	..	1	1	1
...	BM 33119	Bearing cap		..	..	..	1	1	1
...	BM 37349	Bearing—upper		..	..	..	1	1	1
...	BM 37350	Bearing—lower		..	..	..	1	1	1
		(Shims for No. 4 Bearing same as No. 2)		..	..	..			
...	BM 37353	BEARING CAP ASSEMBLY No. 5		..	..	..	1	1	1
...	BM 37352	Bearing cap		..	..	..	1.	1.	1.
...	BM 37354	Bearing—upper		..	..	..	1	1	1
...	BM 37355	Bearing—lower		..	..	..	1	1	1
...	BM 38764	Bearing cap shim—thin		..	..	..	6	6	6
...	BM 38765	Bearing cap shim—thick		..	..	..	6	6	6
...	BM 2335	Bearing screw (Part of all cap assemblies)		6	6	6	10	10	10
...	BM 13569	Bearing cap No. 1 packing		As required					
...	BM 37027	Bearing cap stud (No. 2 bearing)		2	2	2	..	..	..
...	BM 60041	Bearing cap stud—short		4	4	4	8	8	8
...	BM 60042	Bearing cap stud—long		2	2	2	2	2	2
...	BM 33801	Bearing cap stud nut		8	8	8	10	10	10
5	BM 44675	CRANKSHAFT OIL THROW ASSEMBLY—UPPER		1	1	1	1	1	1
6	BM 44677	Crankshaft oil throw—lower		1	1	1	1	1	1
...	BM 37327	Crankshaft oil throw gasket—upper		1	1	1	1	1	1
...	BM 37328	Crankshaft oil throw gasket—lower		1	1	1	1	1	1
...	BM 38948	Crankshaft oil throw reinforcement—lower		2	2	2	2	2	2
...	BM 70484	Crankshaft oil throw bolt		5	5	5	5	5	5
...	BO 9159	Crankshaft oil throw—lower—bolt		2	2	2	2	2	2
7	C 44678	FLYWHEEL ASSEMBLY		1	1	1	..	..	..
...	C 44679	FLYWHEEL ASSEMBLY		..	..	..	1	1	1
...	F 44079	Starter gear ring		1	1	1	..	..	..
...	F 44729	Starter gear ring		..	..	..	1	1	1
8	BM 40280	Flywheel bolt		6	6	6	6	6	6
...	BM 71237	Flywheel bolt nut	3/8"-24x21/64"	6	6	6	6	6	6
...	BM 40281	Flywheel drain plug		2	2	2	2	2	2
...	BM 12117	Flywheel drain plug gasket		2	2	2	2	2	2
...	BM 40282	Flywheel dowel pin		2	2	2	2	2	2
9	BM 44684	Flywheel driving pin		3	3	3	3	3	3
CAMSHAFT									
...	C 43803	Camshaft		1	1	1	..	..	..
...	C 43804	Camshaft		..	..	..	1	1	1
...	BM 45480	Camshaft bearing No. 1		1	1	1	..	..	..
...	BM 45481	Camshaft bearing No. 1		..	..	..	1	1	1

CAMSHAFT—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 45482	Camshaft bearing No. 2		1	1	1	..	..	..
...	BM 45483	Camshaft bearing No. 2		..	..	..	1	1	1
...	BM 45484	Camshaft bearing No. 3		1	1	1	..	..	..
...	BM 45485	Camshaft bearing No. 3		..	..	..	1	1	1
...	BM 45486	Camshaft bearing No. 4		..	..	..	..	..	..
...	BM 45487	Camshaft bearing No. 5		..	..	..	..	..	..
...	BM 61074	Camshaft bearing anchor plug		3	3	3	3	3	3
...	BM 61978	Camshaft bearing anchor plug seal		3	3	3	3	3	3
10	BM 43435	Camshaft thrust button		1	1	1	1	1	1
...	BM 61614	Camshaft thrust button spring		1	1	1	1	1	1
...	BM 40006	Camshaft thrust plate (On timing gear cover)		1	1	1	1	1	1
...	BM 555	Camshaft thrust plate rivet		2	2	2	2	2	2
...	BM 60701	Camshaft thrust plate washer		1	1	1	1	1	1

CONNECTING RODS

11	F 44704	CONNECTING ROD COMPLETE—R. H.		3	3	3	3	3	3
12	F 44705	CONNECTING ROD COMPLETE—L. H.		3	3	3	3	3	3
...	BM 44710	Shim—thin		36	36	36	36	36	36
...	BM 44711	Shim—medium		36	36	36	36	36	36
...	BM 44712	Shim—thick		24	24	24	24	24	24
...	BM 44713	Bolt		12	12	12	12	12	12
...	BM 44714	Bolt nut		12	12	12	12	12	12

PISTON

...	F 47097	PISTON (See reference sheet for correct sizes)		6	6	6	6	6	6
...	BM 43460	Ring pin		12	12	12	12	12	12
...	F 37029	Piston pin (Furnished in .002", .005", .010" oversize)		6	6	6	6	6	6
...	F 33332	Piston pin bushing		6	6	6	6	6	6
...	BM 60063	Piston pin lock ring		12	12	12	12	12	12
...	F 43452	Piston ring—compression		12	12	12	12	12	12
...	F 43453	Piston ring—compression (.010" oversize)		12	12	12	12	12	12
...	F 43456	Piston ring—oil		12	12	12	12	12	12
...	F 43457	Piston ring—oil (.010" oversize)		12	12	12	12	12	12

VIBRATION DAMPNER

13	BM 44610	VIBRATION DAMPENER ASSEMBLY		1	1	1	1	1	1
...	BM 44611	Fan belt pulley		1	1	1	1	1	1
...	BM 44786	Hub		1	1	1	1	1	1
...	BM 37024	Facing		2	2	2	2	2	2
...	BM 37025	Cover plate		1	1	1	1	1	1
...	BZ 908	Cover plate screw	5/16"-18x7/8"	6	6	6	6	6	6
...	BM 40286	Dampener spacer		1	1	1	1	1	1
...	BM 71199	Dampener key		1	1	1	1	1	1

VALVES

...	BM 47064	Valve tappet		12	12	12	16	16	16
...	BM 45444	Valve tappet guide.		12	12	12	16	16	16
...	BM 61512	Valve tappet adjusting screw		12	12	12	16	16	16
...	BM 45359	Valve tappet adjusting screw nut		12	12	12	16	16	16
...	BM 60681	Tappet clamp		6	6	6	8	8	8
...	BM 908	Tappet clamp bolt	5/16"-18x7/8"	6	6	6	8	8	8
14	F 44612	Inlet valve		6	6	6	..	..	..
...	F 33094	Inlet valve		..	..	..	8	8	8
...	F 61360	Valve stem guide (Inlet)		6	6	6	8	8	8
...	BM 61591	Valve guide (Exhaust)		6	6	6	8	8	8
15	F 44613	Exhaust valve		6	6	6	..	..	..
...	F 44647	Exhaust valve		..	..	..	8	8	8
...	BM 45586	Valve spring		12	12	12	16	16	16
...	BM 35391	Valve spring		12	12	12	16	16	16
...	BM 60104	Valve spring seat retainer		12	12	12	16	16	16

VALVES—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
16	BM 45587	Valve spring dampener		12	12	12	16	16	16
17	BM 44618	VALVE CHAMBER COVER ASSEMBLY		2	2	2	..	..	..
...	BM 44620	Valve chamber cover		..	..	..	2	2	2
...	BM 44629	Valve chamber cover plate		..	..	..	2	2	2
...	F 44621	Valve chamber cover gasket		2	2	2	..	..	..
...	F 44622	Valve chamber cover gasket		..	..	..	2	2	2
...	BM 44623	Valve chamber cover screw		2	2	2	..	..	..
...	BM 70204	Valve chamber cover screw		..	..	..	2	2	2
...	BM 44624	Valve chamber cover screw—long		2	2	2	..	..	..
...	BM 40429	Valve chamber cover screw gasket		4	4	4	..	..	..
18	BM 44625	Breather tube		2	2	2	2	2	2
...	BM 33154	Breather tube support		2	2	2	2	2	2
...	BM 44626	Breather tube support gasket		2	2	2	2	2	2
...	BM 44627	Breather tube clip		2	2	2	2	2	2
...	BZ 2704	Breather tube clip screw	1/4"-20x3/4"	2	2	2	2	2	2

OIL PAN

...	C 44730	OIL PAN ASSEMBLY		1	1	1	..	..	..
...	C 46768	OIL PAN ASSEMBLY		..	..	..	1	1	1
...	BM 38023	OIL RETURN PIPE ASSEMBLY		1	1	1	..	..	..
...	BM 36406	OIL RETURN PIPE ASSEMBLY		..	..	..	1	1	1
...	BM 44746	Suction pipe		1	1	1	..	..	..
...	BM 44747	Suction pipe		..	..	..	1	1	1
...	BM 44749	Suction pipe flange		1	1	1	..	..	..
...	BM 44750	Suction pipe flange		..	..	..	1	1	1
...	BM 44751	Suction pipe soldering plate		1	1	1	1	1	1
...	F 44734	Oil pan gasket		2	2	2	..	..	..
...	F 44735	Oil pan gasket		..	..	..	2	2	2
...	BM 219	Oil pan bolt	5/16"-18x3/4"	23	23	23	29	29	29
...	BZ 12275	Oil pan bolt (At suction pipe)	5/16"-18x1"	2	2	2	2	2	2
...	BZ 70177	Oil pan bolt washer		2	2	2	6	6	6
...	BM 5710	Oil pan drain plug		1	1	1	1	1	1
...	BM 44754	OIL PAN TRAY ASSEMBLY		1	1	1	..	..	..
...	BM 44756	OIL PAN TRAY ASSEMBLY		..	..	..	1	1	1
...	BM 46791	Oil pan tray overflow screen		1	1	1	1	1	1

OIL PUMP AND CHECK VALVE

19	BM 44686	OIL PUMP COMPLETE		1	1	1	1	1	1
...	BM 44687	Body		1	1	1	1	1	1
...	BM 44688	Body plug		2	2	2	2	2	2
...	BM 44689	Body plug gasket		2	2	2	2	2	2
...	BM 44690	Plunger		1	1	1	1	1	1
...	BM 44692	Shaft		1	1	1	1	1	1
...	BM 44693	Shaft bushing		1	1	1	1	1	1
...	BM 43723	Gear		1	1	1	1	1	1
...	BM 71195	Gear pin		1	1	1	1	1	1
...	BM 40293	Shaft bushing retaining screw		1	1	1	1	1	1
...	BM 33179	Oil pump body gasket		1	1	1	1	1	1
...	BM 71067	Oil pump body bolt		2	2	2	2	2	2
...	BM 45200	OIL CHECK VALVE ASSEMBLY		1	1	1	1	1	1
...	BM 40296	Body		1	1	1	1	1	1
...	BM 19960	Body plug		1	1	1	1	1	1
...	BM 6791	Body plug gasket		1	1	1	1	1	1
...	BT 37270	Ball		1	1	1	1	1	1
...	BM 45201	Plunger		1	1	1	1	1	1
...	BM 37787	Plunger spring		1	1	1	1	1	1
...	BM 45203	Plunger pin		1	1	1	1	1	1
...	BM 45202	Plunger pin retainer		1	1	1	1	1	1
...	BM 37776	PRESSURE INDICATOR CONTACT PIN ASSEMBLY		1	1	1	1	1	1
...	BM 37777	Pressure indicator contact pin gasket		2	2	2	2	2	2
...	BM 71115	Pressure pin terminal nut		2	2	2	2	2	2
...	BM 37791	Pressure pin contact pin nut		1	1	1	1	1	1

OIL PIPES AND FITTINGS

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BM 44912	OIL PUMP TO CHECK VALVE PIPE ASSEMBLY		1	1	1	..	..	..
...	BM 44914	OIL PUMP TO CHECK VALVE PIPE ASSEMBLY		..	..	..	1	1	1
...	BM 36393	Oil pump to check valve pipe union (Pump end)		1	1	1	1	1	1
...	BM 11829	Oil pump to check valve pipe union elbow (Valve end)		1	1	1	1	1	1
...	BM 44916	OIL PUMP TO CYLINDER PIPE ASSEMBLY		1	1	1	..	..	..
...	BM 44918	OIL PUMP TO CYLINDER PIPE ASSEMBLY		..	..	..	1	1	1
...	BM 17976	Oil pump to cylinder pipe union (Pump end)		1	1	1	1	1	1
...	BM 11829	Oil pump to cylinder pipe union elbow (Cylinder end)		1	1	1	1	1	1
20	BM 44920	OIL PUMP SUCTION PIPE ASSEMBLY		1	1	1	..	..	..
...	BM 44922	OIL PUMP SUCTION PIPE ASSEMBLY		..	..	..	1	1	1
...	BM 71092	Oil pump suction pipe union elbow		2	2	2	2	2	2

WATER PUMP AND FAN

21	BM 47174	WATER PUMP ASSEMBLY		*	1	1	1	1	1
...	BM 47175	WATER PUMP ASSEMBLY		*	..	..	..	..	..
...	BM 47176	BODY ASSEMBLY		*	1	1	1	1	1
22	BM 46878	SHAFT BEARING ASEMBLY—FRONT (Needle bearing			1	1	1	1	1
...	BM 46879	SHAFT BEARING—FRONT—OIL SEAL ASSEMBLY			1	1	1	1	1
...	BM 40250	SHAFT BEARING ASSEMBLY—REAR			1	1	1	1	1
...	BM 46871	SHAFT ASSEMBLY (Includes pulley)			1	1	1	1	1
...	BM 46872	PULLEY, SHAFT AND EXTENSION ASSEMBLY			..	..	..	..	..
...	BM 47598	Shaft thrust washer—rear		*	1	1	1	1	1
...	BM 44787	Shaft thrust washer—front			1	1	1	1	1
...	BM 47178	Shaft impeller		*	1	1	1	1	1
23	BM 45277	Shaft packing (Service only)			1	1	1	1	1
...	BM 40257	Shaft packing retainer			1	1	1	1	1
...	BM 44636	Shaft packing nut			1	1	1	1	1
...	BM 45929	Shaft packing nut lock			1	1	1	1	1
...	BM 40245	Water pump gasket			1	1	1	1	1
...	BZ 2490	Water pump body bolt	5/16"-18x1/2"		3	3	3	3	3
...	BM 45925	Fan blade			2	2	2	2	2
...	BM 45926	Fan blade cushion			1	1	1	1	1
...	BT 395	Fan blade bolt	5/16"-18x1/2"		4	4	..	4	4
...	BX 3820	Fan blade bolt	5/16"-18x1/2"		..	..	4	..	..
...	BM 46086	Fan blade bolt lock			2	2	2	2	2
...	F 40260	Fan belt (Std. cylinder head)			1	1	1	..	..
...	F 45954	Fan belt (High compression head)			1	1	1	..	..
...	F 40942	Fan belt			..	..	1	1	1

TIMING GEARS AND COVER

...	BM 40146	Camshaft gear			1	1	1	1	1
...	BM 4934	Camshaft gear bolt	3/8"-16X13/16"		3	3	3	3	3
...	BM 40147	Camshaft gear			1	1	1	1	1
...	BM 11799	Camshaft gear key			1	1	1	1	1
...	BM 44637	TIMING GEAR COVER ASSEMBLY			1	1	1	1	1
...	BM 219	Timing gear cover bolt	5/16"-18x3/4"		12	12	12	12	12
...	BZ 70177	Timing gear cover washer	Brass		3	3	3	3	3
...	BZ 122	Timing gear cover nut	5/16"-18x5/16"		3	3	3	3	3
...	F 40150	Timing gear cover gasket			1	1	1	1	1
...	BM 40151	Timing gear cover oil seal			1	1	1	1	1
...	BM 40006	Camshaft thrust plate			1	1	1	1	1
...	BM 555	Camshaft thrust plate rivet			2	2	2	2	2

CARBURETOR AND FUEL PUMP

...	t47145	CARBURETOR ASSEMBLY			1	..	..	..	..
...	t47147	CARBURETOR ASSEMBLY			..	1	1	..	..
...	t47149	CARBURETOR ASSEMBLY			..	..	1	1	1
...	BM 71288	Carburetor to manifold stud			2	2	2	2	2
...	BM 6189	Carburetor to manifold stud nut	3/8"-16x21/64"		2	2	2	2	2
...	BM 71076	Carburetor to manifold washer	Special		2	2	2	2	2
...	F 45192	Carburetor to manifold gasket			1	1	1	1	1
...	tt47150	Carburetor air cleaner			1	..	..	..	..
...	tt45191	Carburetor air cleaner			..	1	..	1	1

CARBURETOR AND FUEL PUMP—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	tt 47151	Carburetor air cleaner	Heavy duty Service only	*	..	1	..	..	..
...	BM 46819	Carburetor air cleaner		1	1	1	..	..	..
...	BM 46852	Carburetor air cleaner		..	..	..	1	1	1
...	BM 46853	Carburetor air cleaner brace		..	..	..	1	1	1
...	tt 44668	FUEL PUMP ASSEMBLY		1	1	1	1	1	1
...	BM 44694	Fuel pump to cylinder gasket		1	1	1	1	1	1
...	BZ 908	Fuel pump to cylinder bolt		2	2	2	2	2	2
...	BM 3554	Fuel pump street ell (For flexible connection)		1	1	1	..	..	..
...	BM 40529	Fuel pump flexible connection		1	1	1	..	..	..
...	BM 45479	Fuel pump flexible connection		..	..	..	1	1	1
...	BM 45475	FUEL PUMP TO CARBURETOR PIPE ASSEMBLY		1	1	1	..	..	..
...	BM 45477	FUEL PUMP TO CARBURETOR PIPE ASSEMBLY		..	..	..	1	1	1
...	BM 11828	Fuel pump to carburetor pipe union nut		2	2	2	2	2	2
...	BM 36393	Fuel pump to carburetor pipe elbow (Pump end)		1	1	1	1	1	1
...	BM 17976	Fuel pump to carburetor pipe union (Pump end)		..	..	..	..	..	..
...	BM 17976	Fuel pump to carburetor pipe union (Carburetor)		1	1	1	1	1	1
...	BM 71298	Carburetor choke control heat box to manifold screw	No. 10-32x3/4"	2	2	2	2	2	2
t Serviced by Carter Carburetor Corporation, St. Louis, Missouri.									
tt Serviced by A. C. Spark Plug Co., Flint, Michigan									

THROTTLE CONTROL

...	BZ 41205	ACCELERATOR PEDAL COMPLETE (Black)		1	..	..	..	..	..
...	BZ 43555	ACCELERATOR PEDAL COMPLETE (Brown)		..	1	1	1	1	1
...	BZ 45979	Pedal toe plate bumper (without clutch vacuum control)		1	1	1	1	1	1
...	BZ 41207	Pedal anti-rattle spring		1	1	1	1	1	1
...	BZ 38209	Pedal anchor bracket		1	1	1	1	1	1
...	BZ 786	Pedal anchor bracket rivet	3/16"x3/8"	3	3	3	3	3	3
...	BZ 71113	Pedal anchor clevis pin		1	1	1	1	1	1
...	BZ 40439	Pedal to shaft operating lever link		1	1	1	1	1	1
...	BZ 8682	Pedal to shaft operating lever link clevis pin		1	1	1	1	1	1
...	BZ 38206	Pedal to shaft operating lever link spring		1	1	1	1	1	1
...	BZ 18444	Pedal to shaft operating lever link spring washer		1	1	1	1	1	1
...	BZ 45164	Pedal to shaft operating lever link sleeve		1	1	1	1	1	1
...	BZ 43040	ACCELERATOR CROSS SHAFT ASSEMBLY		1	1	1	1	1	1
...	BZ 43042	Accelerator cross shaft carburetor pull rod lever		1	1	1	1	1	1
...	BZ 45177	Carburetor pull rod lever return spring		1	1	1	1	1	1
...	BZ 43043	Cross shaft clutch vacuum control lever		1	1	1	1	1	1
...	BO 18447	Accelerator cross shaft bracket screw	No. 10-32x5/8"	4	4	4	4	4	4
...	BO 12799	Accelerator cross shaft bracket screw nut	No. 10-32x1/8"	4	4	4	4	4	4
...	BZ 90	Accelerator cross shaft bracket screw lockwasher		4	4	4	4	4	4
...	BZ 40436	Accelerator cross shaft silencing spring		1	1	1	1	1	1
...	BZ 550	Accelerator cross shaft silencing spring washer		1	1	1	1	1	1
...	BZ 41082	Accelerator cross shaft anti-rattle spring		2	2	2	2	2	2
...	BZ 45169	Manifold bellcrank		1	1	1	1	1	1
...	BZ 41133	Manifold bellcrank return spring		1	1	1	1	1	1
...	BZ 40682	Manifold bellcrank return spring anchor pin		1	1	1	1	1	1
...	BZ 43220	Manifold bellcrank stud		1	1	1	1	1	1
...	BZ 262	Manifold bellcrank stud washer		1	1	1	1	1	1
...	BZ 45170	MANIFOLD BELLCRANK TO CARBURETOR ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 45176	MANIFOLD BELLCRANK TO CARBURETOR ROD ASSEMBLY		..	..	..	1	1	1
...	BO 12799	Manifold bellcrank to carburetor rod nut		2	2	2	2	2	2
...	BZ 90	Manifold bellcrank to carburetor rod lockwasher		2	2	2	2	2	2
...	BZ 45171	ACCELERATOR SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		1	1	1	1	1	1
...	BZ 45172	ACCELERATOR SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		..	..	..	..	..	..
...	BZ 5771	Accelerator cross shaft to manifold bellcrank rod clevis		1	1	1	1	1	1
...	BO 12799	Accelerator cross shaft to manifold bellcrank rod clevis nut	10-32x1/8"	1	1	1	1	1	1

THROTTLE CONTROL—Continued



Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 5825	Accelerator cross shaft to manifold bellcrank rod clevis pin		1	1	1	1	1	1
...	BO 12799	Accelerator cross shaft to manifold belicrank nut (Ball joint end)		1	1	1	1	1	1

THROTTLE CONTROL—R.H.D

...	BZ 61517	Accelerator pedal		1	1	1	1	1	1
...	BZ 7911	Accelerator pedal to shaft taper pin		1	1	1	1	1	1
...	BZ 45610	Accelerator pedal stop		1	1	1	1	1	1
...	BZ 41021	PEDAL SHAFT AND LEVER ASSEMBLY		1	1	1	1	1	1
...	BZ 40989	Pedal shaft carburetor pull-rod lever		1	1	1	1	1	1
...	BO 18447	Pedal shaft bracket screw	No. 10-32x5/8"	2	2	2	2	2	2
...	BO 12799	Pedal shaft bracket screw nut	No. 10-32x1/8"	2	2	2	2	2	2
...	BZ 90	Pedal shaft bracket screw lockwasher		2	2	2	2	2	2
...	BZ 43991	PEDAL SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 43463	PEDAL SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 42052	PEDAL SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		..	..	..	1	1	1
...	BZ 43044	PEDAL SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		..	..	..	1	1	1
...	BZ 5771	Pedal shaft to manifold bellcrank rod clevis		1	1	1	1	1	1
...	BO 12799	Pedal shaft to manifold belicrank rod clevis nut		1	1	1	1	1	1
...	BZ 5825	Pedal shaft to manifold bellcrank rod clevis pin		1	1	1	1	1	1
...	BZ 33980	Pedal shaft to manifold bellcrank rod return spring		1	1	1	1	1	1
...	BZ 63371	Pedal shaft to manifold belicrank rod return spring clip		..	..	..	1	1	1
...	tBZ 43040	ACCELERATOR CROSS SHAFT ASSEMBLY		1	1	1	1	1	1
...	tBZ 43042	Accelerator cross shaft carburetor pull rod lever		1	1	1	1	1	1
...	tBZ 43043	Accelerator cross shaft clutch vacuum control lever		1	1	1	1	1	1
...	tBO 18447	Accelerator cross shaft bracket screw	No. 10-32x5/8"	4	4	4	4	4	4
...	tBO 12799	Accelerator cross shaft bracket screw nut	No. 10-32x1/8"	4	4	4	4	4	4
...	tBZ 90	Accelerator cross shaft bracket screw lockwasher		4	4	4	4	4	4
...	tBZ 550	Accelerator cross shaft silencing spring		1	1	1	1	1	1
...	tBZ 40436	Accelerator cross shaft silencing spring washer		1	1	1	1	1	1
...	tBZ 41082	Accelerator cross shaft anti-rattle spring		2	2	2	2	2	2
...	tBZ 45171	ACCELERATOR SHAFT TO MANIFOLD BELLCRANK ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 45172	ACCELERATOR SH FT TO MANIFOLD BELLCRANK ROD ASSEMBLY		..	..	..	1	1	1
...	tBZ 5771	Accelerator shaft to manifold bellcrank rod clevis		1	1	1	1	1	1
...	tBO 12799	Accelerator shaft to manifold bellcrank rod clevis nut		1	1	1	1	1	1
		tUsed with vacuum clutch control							

CLUTCH

..	BT 45140	CLUTCH ASSEMBLY		1	1	1	..	..	..
..	BT 45141	CLUTCH ASSEMBLY		..	..	..	1	1	1
1	F 45142	DRIVING PLATE COMPLETE		1	1	1	..	..	..
1	F 45143	DRIVING PLATE COMPLETE		..	..	..	1	1	1
3	BT 45152	Pressure plate		1	1	1	..	..	..
3	BT 45153	Pressure plate		..	..	..	1	1	1
4	BT 40038	Throwout finger		3	3	3	3	3	3
5	BT 40039	Throwout finger pin(First type—long)		3	3	3	3	3	3
5	BT 47633	Throwout finger pin (Second type—short)		3	3	3	3	3	3
6	BT 40042	Throwout finger retainer		3	3	3	3	3	3
..	BT 71157	Throwout finger retainer washer	7/16" Shakeproof	3	3	3	3	3	3
..	BO 70867	Throwout finger retainer lockwasher		3	3	3	3	3	3
7	BT 70194	Throwout finger retainer nut		3	3	3	3	3	3
8	BT 45148	Engaging spring		9	9	9	..	..	..
..	BT 45154	Engaging spring—inner		6	6	6	..	..	..
8	BT 45149	Engaging spring		..	..	..	12	12	12
9	BT 40045	Cover		1	1	1	..	..	..

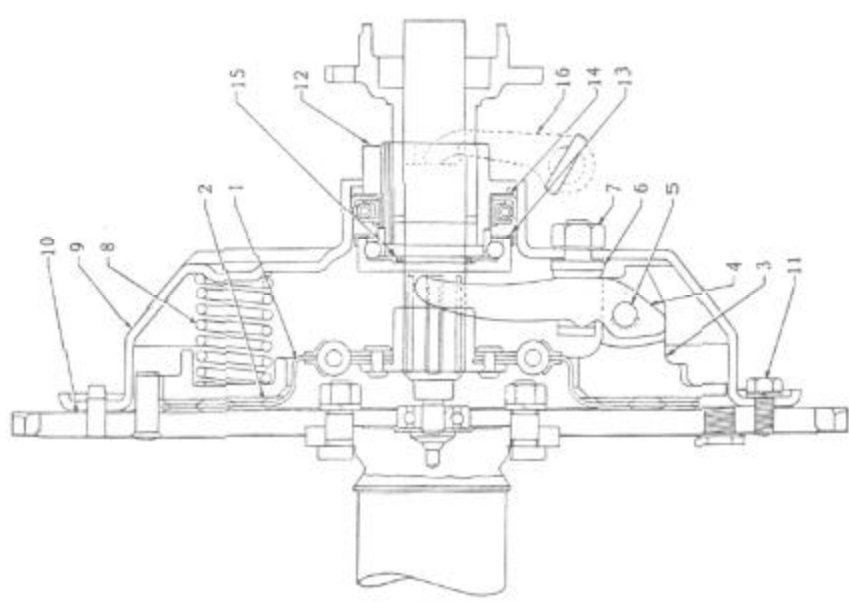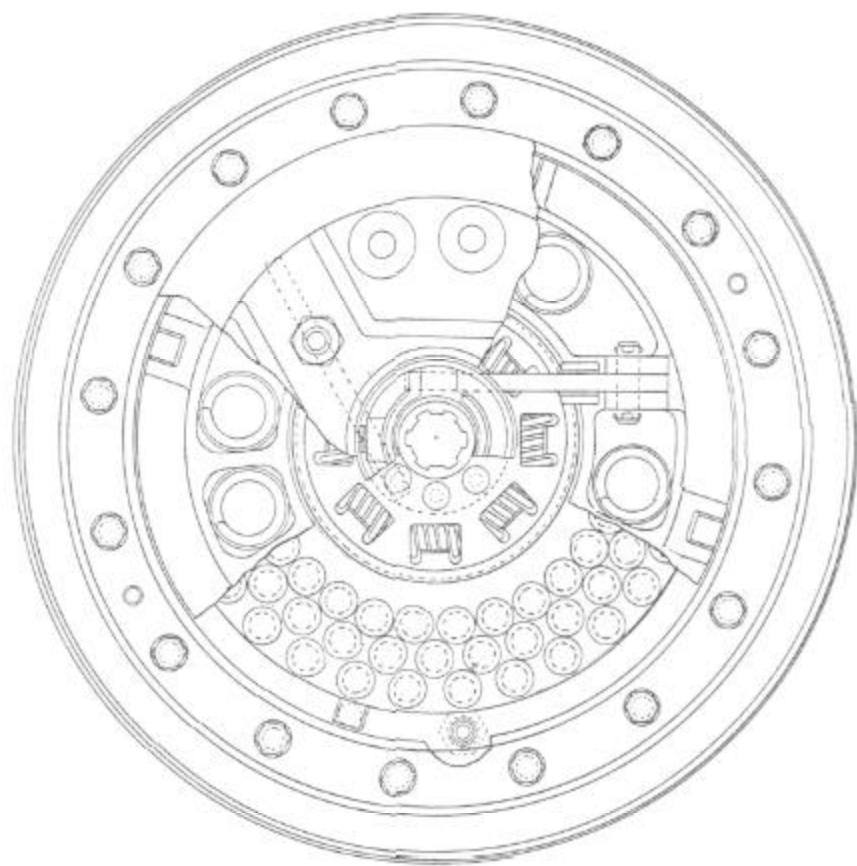

CLUTCH

CLUTCH—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
9	BT 42628	Cover		..	..	..	1	1	1
10	F 40046	Cover gasket		1	1	1	..	..	..
10	F 42632	Cover gasket		..	..	..	1	1	1
11	BX 71410	Cover bolt	5/16"-24x5/8"	16	16	16	..	..	..
11	BO 70096	Cover bolt	5/16"-24x3/4"	..	..	..	16	16	16
12	BT 42630	COLLAR ASSEMBLY		1	1	1	1	1	1
13	BT 41258	Throwout bearing		1	1	1	1	1	1
14	BT 40047	Oil seal		1	1	1	1	1	1
15	BT 42587	Throwout bearing grease retainer		1	1	1	1	1	1
16	BT 40055	Shifter yoke		1	1	1	1	1	1
...	BZ 71174	Shifter yoke taper pin	No. 4x1-1/2"	2	2	2	2	2	2
...	BT 42970	Shifter yoke shaft		1	1	1	1	1	1
...	BT 40308	Shifter yoke shaft bushing		4	4	4	4	4	4
...	BT 43540	SHIFTER YOKE SHAFT COUPLING LEVER ASSEMBLY		1	1	1	1	1	1
...	BT 42975	Shifter yoke shaft coupling lever pin		2	2	2	2	2	2
...	BT 2354	Shifter yoke shaft coupling lever taper pin		1	1	1	1	1	1
...	BZ 33980	Shifter yoke shaft coupling lever return spring		1	1	1	1	1	1
...	BT 43533	Shifter yoke shaft coupling lever pin roller		2	2	2	2	2	2
...	BT 47132	Shifter yoke shaft transmission lock operating lever (Low and reverse)		*	1	1	1	1	1
...	BT 2354	Shifter yoke shaft transmission lock operating lever taper pin		1	1	1	1	1	1
...	BT 71497	Shifter yoke shaft transmission lock operating lever screw		1	1	1	1	1	1
...	B M 272	Shifter yoke shaft transmission operating lever screw nut		1	1	1	1	1	1

CLUTCH—R.H.D.

...	BT 42970	Shifter yoke shaft		1	1	1	1	1	1
...	BT 47196	SHIFTER YOKE SHAFT COUPLING LEVER ASSEMBLY		*	1	1	1	1	1
...	BT 40308	Shifter yoke shaft bushing		4	4	4	4	4	4
...	BT 2354	Shifter yoke shaft coupling lever taper pin		2	2	2	2	2	2

CLUTCH CONTROL

...	BZ 45041	CROSS SHAFT AND BRACKET ASSEMBLY		1	1	1	1	1	1
...	BM 219	Cross shaft bracketbolt	5/16"-18x3/4"	2	2	2	2	2	2
...	BZ 122	Cross shaft bracket nut	5/16"-18x5/16"	2	2	2	2	2	2
...	BZ 42938	Cross shaft felt		1	1	1	1	1	1
...	BZ 45053	Cross shaft felt retainer		1	1	1	1	1	1
...	BZ 45054	Cross shaft felt retainer spring		1	1	1	1	1	1
...	BZ 45235	CONTROL LINK ASSEMBLY		1	1	1	1	1	1
...	BZ 71290	Control link clevis		1	1	1	1	1	1
...	BT 71030	Control link clevis nut		1	1	1	1	1	1
...	BZ 8683	Control link clevis pin		1	1	1	1	1	1
...	BZ 71256	Control link clevis pin (clutch pedal)		1	1	1	1	1	1
...	BZ 40317	Control return spring		1	1	1	1	1	1
...	BZ 30868	Control return spring clip		1	1	1	1	1	1



CLUTCH CONTROL—R.H.D.

...	BZ 45042	CROSS SHAFT AND BRACKET ASSEMBLY		1	1	1	1	1	1
...	BZ 42942	CONTROL LINK ASSEMBLY		1	1	1	1	1	1
...	BO 12481	Control link clevis nut	5/16"-24x17/64"	1	1	1	1	1	1

CLUTCH VACUUM CONTROL

(Optional Equipment)

...	BZ 46683	VACUUM CONTROL CYLINDER, VALVE AND PENDULUM ASSEMBLY		1	1	1	..	..	..
...	BZ 46685	VACUUM CONTROL CYLINDER ASSEMBLY (Less valve)		1	1	1	..	..	..
...	BZ 45184	VACUUM CONTROL CYLINDER, VALVE AND PENDULUM ASSEMBLY		..	..	..	1	1	1

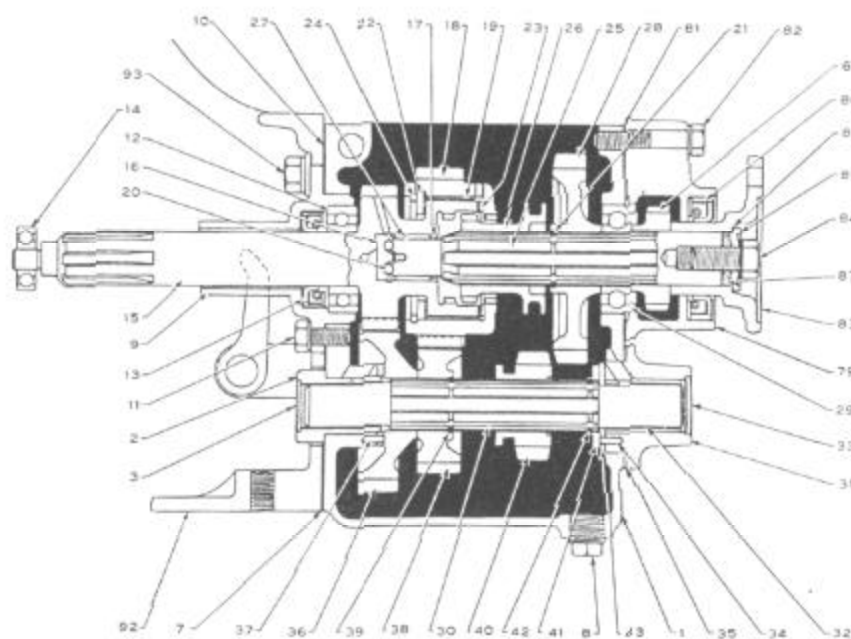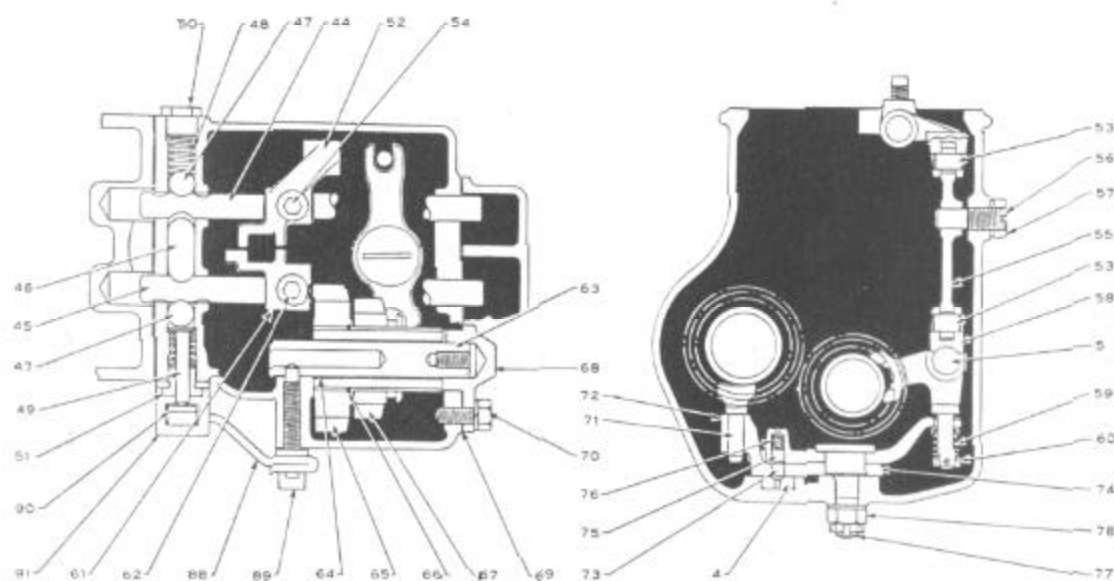

TRANSMISSION

CLUTCH VACUUM CONTROL—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 45975	VACUUM CONTROL CYLINDER ASSEMBLY (Less valve)		..	..	..	1	1	1
...	BZ 46941	VACUUM CONTROL CYLINDER PISTON ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 43675	VACUUM ACUUM CONTROL CYLINDER PISTON ROD ASSEMBLY		..	..	..	1	1	1
...	BZ 46687	Vacuum control cable play link		1	1	1	1	1	1
...	BX 3433	Vacuum control cylinder stud nut	1/4"-20x7/16"	1	1	1	1	1	1
...	BZ 43023	Vacuum control cylinder mounting bracket		1	1	1	1	1	1
...	BZ 5402	Vacuum control cylinder mounting bracket stud nut	3/8"-16x3/16"	2	2	2	..	..	..
...	BT 12167	Vacuum control cylinder mounting bracket stud nut	7/16"-14x1/4"	..	..	..	2	2	2
...	BO 12481	Vacuum control cylinder cable play link nut	5/16"-24x17/64"	2	2	2	2	2	2
...	BX 18251	Vacuum control cylinder cable play link clevis pin		1	1	1	1	1	1
...	BZ 41133	Vacuum control cylinder cable play link spring		1	1	1	1	1	1
...	BZ 30868	Vacuum control cylinder cable play link spring clip		1	1	1	1	1	1
...	BZ 44052	Vacuum control cylinder piston rod guard (Rubber)		1	1	1	1	1	1
...	BZ 43903	Vacuum control valve to cylinder gasket		1	1	1	1	1	1
...	BZ 43026	VACUUM CONTROL BELLCRANK ASSEMBLY		1	1	1	1	1	1
...	BZ 43029	Vacuum control bellcrank to coupling lever rod		1	1	1	1	1	1
...	BZ 43473	VACUUM CONTROL BELLCRANK BRACKET ASSEMBLY		1	1	1	..	..	..
...	BZ 43031	VACUUM CONTROL BRACKET BELLCRANK ASSEMBLY		..	..	..	1	1	1
...	BZ 43034	Vacuum control lever rod (To accelerator shaft)		1	1	1	1	1	1
...	BZ 43035	Vacuum control valve belicrank		1	1	1	1	1	1
...	BZ 38208	Vacuum control valve belicrank bracket		1	1	1	1	1	1
...	BO 18459	Vacuum control valve belicrank bracket screw	No. 10-32x1/2"	2	2	2	2	2	2
...	BZ 6998	Vacuum control valve belicrank clevis pin		1	1	1	1	1	1
...	BZ 43475	VACUUM CONTROL VALVE ROD ASSEMBLY		1	1	1	..	..	..
...	BZ 43036	VACUUM CONTROL VALVE ROD ASSEMBLY		..	..	..	1	1	1
...	BZ 5771	Vacuum control valve rod clevis	No. 10-32x1/8"	1	1	1	1	1	1
...	BO 12799	Vacuum control valve rod clevis nut		1	1	1	1	1	1
...	BZ 5825	Vacuum control valve rod clevis pin		1	1	1	1	1	1
...	BZ 45175	Vacuum control valve rod ball joint		1	1	1	1	1	1
...	BO 12799	Vacuum control valve rod ball joint nut	No. 10-32x1/8"	1	1	1	1	1	1
...	BZ 41133	Vacuum control valve rod pull-back spring		1	1	1	1	1	1
...	BZ 41134	Vacuum control valve rod pull-back spring clip		1	1	1	1	1	1
...	BZ 43477	VACUUM CONTROL VACUUM PIPE ASSEMBLY		1	1	1	..	..	..
...	BZ 43038	VACUUM CONTROL VACUUM PIPE ASSEMBLY		..	..	..	1	1	1
...	BZ 71167	Vacuum control vacuum pipe union nut		1	1	1	1	1	1
...	BZ 43099	Vacuum control vacuum pipe elbow (Intake manifold)		1	1	1	..	..	..
...	BZ 71091	Vacuum control vacuum pipe union (Intake manifold)		..	..	..	1	1	1
...	BZ 112988	VACUUM CONTROL WIRE ASSEMBLY		1	1	1	..	..	..
...	BZ 112989	VACUUM CONTROL WIRE ASSEMBLY		..	..	..	..	..	..
...	BZ 70121	Vacuum control wire lockwasher		1	1	1	1	1	1
...	BZ 70122	Vacuum control wire nut		1	1	1	1	1	1
...	C 48345	VACUUM CONTROL (SERVICE KIT)		1	1	1	..	..	..
...	C 48347	VACUUM CONTROL (SERVICE KIT)		..	..	..	1	1	1

CLUTCH VACUUM CONTROL—R.H.D.

...	C 48346	VACUUM CONTROL (SERVICE KIT)		1	1	1	..	..	..
...	C 48348	VACUUM CONTROL (SERVICE KIT)		..	..	..	1	1	1

TRANSMISSION—Continued
(Without Hill-Hold)

...	C 47986t	TRANSMISSION ASSEMBLY		1	1	1	1	1	1
...	BT 40662	Speedometer gear	4-1/9 to 1	1	1	1	1	1	1
...	BT 40663	Speedometer pinion		1	1	1	1	1	1

TRANSMISSION—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson			
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8	
...	C	47987	tTRANSMISSION ASSEMBLY	*	1	1	1	1	1	1
...	BT	43114	Speedometer gear	4-5/9 to 1	1	1	1	1	1	1
...	BT	43116	Speedometer pinion		1	1	1	1	1	1
			NOTE-47986 and 47987 does not include Bell Housing or Low and Reverse Interlock Strap; but does include Interlock Plunger and Bracket.							
1	BT	47290	CASE ASSEMBLY(?)	*	1	1	1	1	1	1
...	BT	47255	Case stud (For electric hand power unit)	*	2	2	2	2	2	2
...	BT	47207	Case stop pin (For electric hand belicrank)	*	2	2	2	2	2	2
...	BT	47203	Cross shift belicrank stud (For electric hand)	*	1	1	1	1	1	1
2	BT	40101	Countershaft bushing—front		1	1	1	1	1	1
3	BM	14112	Countershaft bushing expansion plug		1	1	1	1	1	1
4	BT	47642	Reverse gear shifter lever locator seat	*	1	1	1	1	1	1
5	BT	45598	Low and reverse shifter fork shaft		1	1	1	1	1	1
...	BT	71294	Low and reverse shifter fork shaft set scr		1	1	1	1	1	1
6	BT	40662	Speedometer gear (For 44146 transmission)	4-1/9 to 1	1	1	1	1	1	1
...	BT	40663	Speedometer pinion (For 44146 transmission)		1	1	1	1	1	1
6	BT	43114	Speedometer gear (For 44152 transmission)	4-5/9 to 1	1	1	1	1	1	1
...	BT	43116	Speedometer pinion (For 44152 transmission)		1	1	1	1	1	1
7	BT	40079	Case gasket		1	1	1	1	1	1
8	BZ	2346	Filler and drain plug		2	2	2	2	2	2
9	BT	42114	Main drive gear bearing retainer		1	1	1	1	1	1
10	BT	40082	Main drive gear bearing retainer shim—thin	As required						
10	BT	40083	Main drive gear bearing retainer shim—thick	As required						
11	BZ	71258	Main drive gear bearing retainer screw		3	3	3	3	3	3
12	F	401	Main drive bearing		1	1	1	1	1	1
13	BT	40084	Main drive gear bearing oil seal		1	1	1	1	1	1
14	F	71161	Main drive gear pilot bearing		1	1	1	1	1	1
15	BT	47291	MAIN DRIVE GEAR ASSEMBLY	*	1	1	1	1	1	1
16	BT	44165	Mainshaft thrust ball seat		1	1	1	1	1	1
17	BT	44170	Mainshaft needle roller retainer ring		1	1	1	1	1	1
18	BT	47294	MAINSHAFT INTERMEDIATE GEAR ASSEMBLY	*	1	1	1	1	1	1
19	BT	45018	Bushing		1	1	1	1	1	1
20	BT	17919	Mainshaft thrust ball		7	7	7	7	7	7
22	BT	42920	Mainshaft intermediate gear thrust washer—front		2	2	2	2	2	2
23	BT	40093	Mainshaft intermediate gear thrust washer—rear		1	1	1	1	1	1
24	BT	44166	Mainshaft intermediate gear thruster retainer		1	1	1	1	1	1
...	BT	47296	MAINSHAFT ASSEMBLY		1	1	1	1	1	1
25	BT	47297	Mainshaft	*	1	1	1	1	1	1
...	BT	45626	Mainshaft plug	*	1	1	1	1	1	1
26	BT	47298	Mainshaft second and high shift sleeve		1	1	1	1	1	1
27	BT	44169	Mainshaft needle roller	*	26	26	26	26	26	26
28	BT	47299	Mainshaft low and reverse gear		1	1	1	1	1	1
...	BT	47300	Mainshaft low and reverse gear retainer	*	2	2	2	2	2	2
21	F	42108	Mainshaft bearing	*	1	1	1	1	1	1
29	BT	40061	Mainshaft bearing snap ring		1	1	1	1	1	1
30	BT	47301	Countershaft		1	1	1	1	1	1
31	BT	44172	COUNTERSHAFT CAP ASSEMBLY		1	1	1	1	1	1
32	BT	40102	Countershaft bushing—rear	*	1	1	1	1	1	1
33	BT	71165	Expansion plug		1	1	1	1	1	1
35	BT	40105	Countershaft cap shim—thin	As required						
35	BT	40106	Countershaft cap shim—thick	As required						
...	BZ	71258	Countershaft cap screw		2	2	2	2	2	2
35	BT	40107	Countershaft cap gasket		2	2	2	2	2	2
36	BT	42110	Countershaft drive gear		1	1	1	1	1	1
37	BT	42900	COUNTERSHAFT GEAR THRUST WASHER ASSEMBLY		1	1	1	1	1	1
38	BT	47302	Countershaft intermediate gear		1	1	1	1	1	1
39	BT	47305	Countershaft intermediate gear ret in	*	1	1	1	1	1	1
40	BT	47304	Countershaft low and reverse gear	*	1	1	1	1	1	1
41	BT	40112	Countershaft thrust washer	*	1	1	1	1	1	1
42	BT	47305	Countershaft thrust washer retainer		1	1	1	1	1	1
43	BT	44175	Countershaft thrust washer spacer	*	1	1	1	1	1	1
			tNot used with Hill Hold.							

TRANSMISION—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
44	BT 40120	tLow and reverse shift rail		1	1	1	1	1	1
45	BT 40121	Second and high shift rail		1	1	1	1	1	1
46	BT 40122	Gear shift rail interlock		1	1	1	1	1	1
47	BT 58	tLock ball		2	2	2	2	2	2
49	BT 47641	Lock ball spring		*	2	2	2	2	2
51	BT 64006	Lock ball spring cap		2	2	2	2	2	2
...	BT 41182	Lock plunger		2	2	2	2	2	2
52	BT 47310	LOW AND REVERSE SHIFTER ASSEMBLY)		*	1	1	1	1	1
53	BT 71163	Shifter pin		1	1	1	1	1	1
54	BT 40993	Low and reverse shifter lock screw		1	1	1	1	1	1
55	BT 40126	Low and reverse intermediate lever		1	1	1	1	1	1
56	BT 40127	Low and reverse intermediate lever stud		1	1	1	1	1	1
57	BT 12167	Low and reverse intermediate lever nut	7/16"-14x 1/4"	1	1	1	1	1	1
58	BT 44176	LOW AND REVERSE SHIFTER FORK ASSEMBLY		1	1	1	1	1	1
53	BT 71163	Pin		1	1	1	1	1	1
59	BT 44178	Low and reverse shifter fork spring		1	1	1	1	1	1
60	BT 44179	Low and reverse shifter forkspring seat		2	2	2	2	2	2
61	BT 47312	Second and high shifter fork		*	1	1	1	1	1
62	BT 40993	Second and high shifter fork lock screw		1	1	1	1	1	1
63	BT 44182	Reverse gear shaft (Stationary)		1	1	1	1	1	1
...	BT 47306	REVERSE GEAR (STATIONARY) AND SHAFT (ROTATING) ASSEMBLY		*	1	1	1	1	1
64	BT 46444	Reverse gear shaft (Rotating) bushing		2	2	2	2	2	2
66	BT 44187	Reverse gear (Stationar) retainer		2	2	2	2	2	2
67	BT 47308	Reverse gear (Sliding)		*	1	1	1	1	1
68	BT 44189	Reverse gear shaft cap		1	1	1	1	1	1
69	BT 44190	Reverse gear shaft cap gasket		1	1	1	1	1	1
70	BZ 71258	Reverse gear shaft cap screw	5/16"-18x13/16"	2	2	2	2	2	2
71	BT 44193	Reverse gear shifter		1	1	1	1	1	1
72	BT 44195	Reverse gear shifter lever		1	1	1	1	1	1
73	BT 44196	Reverse gear shifter lever locator pin		1	1	1	1	1	1
4	BT 47642	Reverse gear shifter lever locator seat		*	1	1	1	1	1
74	BT 44199	Reverse gear shifter pickup lever		1	1	1	1	1	1
75	BT 44196	Reverse gear shifter lever pickup plunger		1	1	1	1	1	1
76	BT 47624	Reverse gear shifter lever pickup plunger spring		*	1	1	1	1	1
77	BT 44203	Reverse gear shifter lever fulcrum		1	1	1	1	1	1
78	BT 3488	Reverse gear shifter lever fulcrum nut	7/16"-20x29/64"	1	1	1	1	1	1
79	BT 44204	tSpeedometer gear housing		1	1	1	1	1	1
80	BT 40133	tSpeedometer gear housing oil seat		1	1	1	1	1	1
81	BT 44206	Speedometer gear housing gasket		1	1	1	1	1	1
82	BZ 70862	tSpeedometer gear housing screw—long	5/16"-18x17/8"	1	1	1	1	1	1
...	BZ 71258	tSpeedometer gear housings Screw—short	5/16"-18x17/8"	2	2	2	2	2	2
...	BT 38067	Speedometer pinion sleeve		1	1	1	1	1	1
83	BT 42833	tCompanion flange		1	1	1	1	1	1
84	BO 18236	tCompanion flange screw	7/16"-20x7/8"	1	1	1	1	1	1
85	BT 40136	tCompanion flange screw washer		1	1	1	1	1	1
86	BT 40532	tCompanion flange screw washer seal		1	1	1	1	1	1
87	BT 41042	tCompanion flange screw gasket		1	1	1	1	1	1
88	BT 41152	Shift rail lock strap lever (Second and high)		1	1	1	1	1	1
89	BT 44207	Shift rail lock strap lever pivot		1	1	1	1	1	1
...	BM 271	Shift rail lock strap lever contact screw	1/4"-20x1-1/4"	1	1	1	1	1	1
...	BM 272	Shift rail lock strap lever contact nut	1/4"-20x1-7/32"	1	1	1	1	1	1
...	BT 47206	Shift rail lock strap (Low and reverse)		*	1	1	1	1	1
90	BT 41154	Shift rail lock strap (Second and high)		1	1	1	1	1	1
91	BT 41155	Shift rail lock strap guide		2	2	2	2	2	2
...	BT 41156	Shift rail lock strap clevis pin (Second and high)		1	1	1	1	1	1
...	BT 34160	Shift rail lock strap spring (Second and high)		1	1	1	1	1	1
...	BT 34161	Shift rail lock strap spring retainer		2	2	2	2	2	2
...	BT 38275	Shift rail lock strap return spring (Low and reverse)		1	1	1	1	1	1
...	BZ 33539	Shift rail lock strap return spring clip		1	1	1	1	1	1

tNot used with Hill Hold.

TRANSMISION—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
92	BT 47332	CLUTCH HOUSING ASSEMBLY		*	1	1	1	1	1
...	BT 40308	Shifter yoke shaft bushing			4	4	4	4	4
93	BZ 71081	Clutch housing to transmission case bolt	3/8"-16x1"		6	6	6	6	6
...	BT 71171	Clutch housing to cylinder plate bolt (Pilot bolt)	3/8"-24x1-11/16"		1	1	1	1	1
...	BT 18430	Clutch housing to cylinder plate bolt	3/8"-24x2-1/2"		1	1	1	1	1
...	BX 12415	Clutch housing to cylinder plate nut	3/8"-24x21/64"		2	2	2	2	2
...	BT 71160	Clutch housing to cylinder bolt—short	7/16"-14x1-3/4"		1	1	1	1	1
...	BZ 71159	Clutch housing to cylinder bolt -long	3/4"-16x2-5/8"		1	1	1	1	1
...	BZ 45019	Transmission bumper—side			2	2	2	2	2
...	BZ 45020	Transmission bumper—side—retainer			2	2	2	2	2
...	BZ 45021	Transmission bumper—side—bracket			1	1	1	1	1
...	BT 45022	Transmission bumper—side—bolt	3/8"-24x1-8"		2	1	1	1	1
...	BT 45022	Transmission bumper—side—bolt (With electric hand)			1	..	..	..	..
...	BZ 62	Transmission bumper—side—bolt nut	3/8"-24x21/64"		4	2	2	2	2
...	BZ 62	Transmission bumper—side—bolt nut (With electric hand)			2	..	..	..	..
...	BZ 47256	TRANSMISSION BUMPER—SIDE—BRACKET ASSEMBLY		*	..	1	1	1	1
...	BZ 47256	TRANSMISSION BUMPER—SIDE—BRACKET ASSEMBLY (With electric hand)		*	1	..	..	..	..
...	BO 70096	Transmission bumper—side—bracket to frame bolt	5/16"-24x3/4"		2	4	4	4	4
...	BO 70096	Transmission bumper—side—bracket to frame bolt (With electric hand)			4	..	..	..	..

tNot used with Hill Hold.

TRANSMISION

(With Hill-Hold)

...	C 47841	TRANSMISSION ASSEMBLY	}	4-1/9 to 1	*	1	1	1	1	1
...	BT 40662	Speedometer gear		4-1/9 to 1		1	1	1	1	1
...	BT 40663	Speedometer pinion				1	1	1	1	1
...	C 47843	TRANSMISSION ASSEMBLY	}	4-5/9 to 1	*	1	1	1	1	1
...	BT 43114	Speedometer gear		4-5/9 to 1		1	1	1	1	1
...	BT 43116	Speedometer pinion				1	1	1	1	1
...	BT 45994	LOW AND REVERSE SHIFT RAIL ASSEMBLY				1	1	1	1	1
...	BT 45995	Low and reverse shift rail				1	1	1	1	1
...	BT 45996	Low and reverse shift rail pin				1	1	1	1	1
...	BT 58	Shift rail lock ball				1	1	1	1	1
...	BT 47649	Low and reverse shift rail lock plunger (Low and reverse)			*	1	1	1	1	1
...	BT 45723	HILL HOLD ASSEMBLY				1	1	1	1	1
...	BT 46224	CASE ASSEMBLY				1	1	1	1	1
...	BT 46226	Dowel				2	2	2	2	2
...	BT 46227	Case inspection hole cover				1	1	1	1	1
...	BT 8155	Case inspection hole cover screw				2	2	2	2	2
...	BT 46223	Hill hold to transmission case screw		Special		1	1	1	1	1
...	BZ 12275	Hill hold to transmission case screw		5/6"-18x1		2	2	2	2	2
...	BT 46228	RELEASE LOCK ASSEMBLY				1	1	1	1	1
...	BT 46230	Pivot pin				1	1	1	1	1
...	BT 46231	Pivot pin retainer				1	1	1	1	1
...	BT 46232	Release lock spring				1	1	1	1	1
...	BT 46233	Release lock spring anchor pin				1	1	1	1	1
...	BT 46234	RELEASE PLATE ASSEMBLY				1	1	1	1	1
...	BT 46235	Release plate				1	1	1	1	1
...	BT 46237	Release plate spring				1	1	1	1	1
...	BT 46233	Release plate spring anchor pin				1	1	1	1	1
...	BT 46238	Release plate guide screw		Special		2	2	2	2	2
...	BT 46239	Release plate guide screw lock nut				2	2	2	2	2
...	BT 46308	RELEASE LATCH—COMPLETE				1	1	1	1	1
...	BT 46242	Release latch shim				1	1	1	1	1

TRANSMISSION—Continued
(With Hill-Hold)

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BT 46238	Release latch pivot screw	Special	1	1	1	1	1	1
...	BT 46239	Release latch pivot screw lock nut		1	1	1	1	1	1
...	BT 46243	Release latch spring		1	1	1	1	1	1
...	BT 46244	Pawl		1	1	1	1	1	1
...	BT 46245	Pawl pivot		1	1	1	1	1	1
...	BT 46246	Pawl spring		1	1	1	1	1	1
...	BT 46309	CAP COMPLETE		1	1	1	1	1	1
...	BT 46248	Cap		1	1	1	1	1	1
...	BT 46250	Cap cover plate		1	1	1	1	1	1
...	BT 46251	Cap oil seal		1	1	1	1	1	1
...	BT 46252	Main spring		1	1	1	1	1	1
...	BT 46433	MAIN SPRING ANCHOR ASSEMBLY		1	1	1	1	1	1
...	BT 46434	Main spring anchor pin		1	1	1	1	1	1
...	BT 46255	Energizing spring		1	1	1	1	1	1
...	BT 46256	Rotating member		1	1	1	1	1	1
...	BT 46257	Companion flange		1	1	1	1	1	1
...	BT 46258	Companion flange lock ring		1	1	1	1	1	1
...	BT 46259	Main spring anchor bolt	3/8"-24x2"	2	2	2	2	2	2
...	BT 46254	Main spring anchor adjusting bolt	Special	1	1	1	1	1	1
...	BT 12387	Main spring anchor adjusting bolt lock nut		1	1	1	1	1	1
...	BT 46249	Cap gasket		1	1	1	1	1	1
...	BZ 12275	Cap bolt	5/16"-18xl"	3	3	3	3	3	3
...	BT 71437	Cap bolt (Through dowels)		2	2	2	2	2	2
...	HA 46431	HILL HOLD COMPLETE (SERVICE KIT) In- cludes propeller shaft		1	1	1	1	1	..
...	HA 46432	HILL HOLD COMPLETE (SERVICE KIT) In- cludes propeller shaft		..	..	..	..	..	1
...	HA 47942	HILL HOLD COMPLETE (SERVICE KIT) Less propeller shaft		*	1	1	1	1	1

(Other Parts same as Preceding Group)

TRANSMISSION CONTROL—CONVENTIONAL

...	C 40221	TRANSMISSION CONTROL ASSEMBLY		1	1	1	1	1	1
...	BT 40222	COVER ASSEMBLY		1	1	1	1	1	1
...	BT 40224	Fulcrum pin		1	1	1	1	1	1
...	BZ 908	Cover Screw	5/16"-18x7/8"	4	4	4	4	4	4
...	BT 40226	Cover gasket		1	1	1	1	1	1
...	C 42976	CONTROL LEVER ASSEMBLY		1	1	1	1	1	1
...	BT 43553	Control lever knob		1	1	1	1	1	1
...	BT 40233	Control lever fulcrum oil seal		1	1	1	1	1	1
...	BT 40234	Control lever fulcrum washer		1	1	1	1	1	1
...	BT 40235	Control lever fulcrum spring		1	1	1	1	1	1

ELECTRIC HAND TRANSMISSION CONTROL


...	BT 47328	TRANSMISSION COVER ASSEMBLY		1	1	1	1	1	1
...	BZ 12275	Transmission cover screw	5/16"-18xl"	4	4	4	4	4	4
...	BT 35442	Transmission cover fulcrum screw		1	1	1	1	1	1
...	BT 35443	Transmission cover fulcrum screw lock		1	1	1	1	1	1
...	BT 40226	Transmission cover gasket		1	1	1	1	1	1
...	BT 47315	CONTROL LEVER—UPPER—ASSEMBLY		1	1	1	1	1	1
...	BT 43553	Control lever-upper-knob		1	1	1	1	1	1
...	BT 47198	CONTROL LEVER—LOWER—ASSEMBLY		1	1	1	1	1	1
...	BT 47200	Control lever fulcrum oil seal		1	1	1	1	1	1
...	BT 47191	Control lever fulcrum spring		1	1	1	1	1	1
...	BT 47245	CONTROL LEVER—LOWER—CAP ASSEMBLY		1	1	1	1	1	1

TRANSMISSION CONTROL—Continued

(Standard for Custom 8—Optional other models)

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson			
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8	
...	BT 47329	Control lever—lower--cap cork		*	1	1	1	1	1	1
GE	BT 47205	CONTROL SHAFT ASSEMBLY		*	1	1	1	1	1	1
...	BT 47181	Control shaft lever—inner		*	1	1	1	1	1	1
...	BT 47202	Control shaft lever—inner—lock screw		*	1	1	1	1	1	1
...	BT 47189	Control shaft seal Cork		*	1	1	1	1	1	1
...	BT 47190	Control shaft seal retainer		*	1	1	1	1	1	1
F..	BT 47183	CROSS-SHIFT BELLCRANK ASSEMBLY		*	1	1	1	1	1	1
...	BT 47185	Cross-shift bellcrank bushing		*	1	1	1	1	1	1
...	BT 47186	Cross-shift bellcrank bushing seal Cork		*	1	1	1	1	1	1
...	BT 47187	Cross-shift bellcrank bushing seal retainer		*	1	1	1	1	1	1
MK	BT 47253	Cross-shift bellcrank stop screw		*	2	2	2	2	2	2
...	BO 71398	Cross-shift bellcrank stop screw nut	1/4"-28x7/32"		2	2	2	2	2	2
...	BT 47207	Cross-shift bellcrank stop screw stop pin (In trans- mission case)		*	2	2	2	2	2	2
...	BT 47203	Cross-shift bellcrank stud (Presses in transmission case)		*	1	1	1	1	1	1
...	C 47322	POWER UNIT ASSEMBLY		*	1	1	1	1	1	1
...	BZ 124	Power unit to bracket stud nut	3/8"-24x13/32"		1	1	1	1	1	1
...	BT 47192	Power unit to bracket stud rubber washer		*	1	1	1	1	1	1
...	BT 71521	Power unit to bracket stud plain washer			1	1	1	1	1	1
...	BT 47154	Power unit mounting bracket		*	1	1	1	1	1	1
...	BM 110	Power unit mounting bracket stud nut	3/8"-16x3/8"		2	2	2	2	2	2
...	BT 47255	Power unit mounting bracket stud (In transmis- sion case)		*						
N..	BT 71506	Power unit shift rod clevis pin		*	1	1	1	1	1	1
...	BT 47254	Power unit shift rod clevis pin spring washer		*	1	1	1	1	1	1
...	BZ 774	Power unit cross-shift rod clevis			1	1	1	1	1	1
...	BM 794	Power unit cross-shift rod clevis nut	1/4"-28x7/32"		1	1	1	1	1	1
...	BT 71522	Power unit cross-shift rod clevis pin		*	1	1	1	1	1	1
...	C 48136	SELECTOR, WIRES AND JACKET TUBE ASSEMBLY		*	1					
S..	C 47739	SELECTOR, WIRES AND JACKET TUBE ASSEMBL		*		1	1	1	1	
S..	C 48137	SELECTOR, WIRES AND JACKET TUBE ASSEMBLY		*						1
...	BT 47324	Selector wires loom	7/16" I. D. 4-1/2" long	*	1	1	1	1	1	1
...	BT 47326	Selector wires connection clip (Split)		*	2	2	2	2	2	2
...	BO 9159	Selector wires connection clip clamp bolt	1/4"-20x5/8"		1	1	1	1	1	1
...	BZ 70874	Selector wires connection clip clamp bolt nut	1/4"-20x1/4"		1	1	1	1	1	1
...	BT 71395	Selector wires connection clip clamp bolt lockwasher			1	1	1	1	1	1
B..	BT 47327	SWITCHES AND WIRES ASSEMBLY (Lower harness VALVE		*	1	1	1	1	1	1
D..	BT 48242	HOUSING JUNCTION BLOCK ASSEMBLY		*	1	1	1	1	1	1
J..	BT 48251	VALVE HOUSING COVER PLATE ASSEMBLY		*	1	1	1	1	1	1
...	BT 48238	Valve housing gasket—lower		*	1	1	1	1	1	1
...	BT 48239	Valve housing gasket—upper		*	1	1	1	1	1	1
...	BZ 40711	Switch wires clip (Cylinder water jacket screw)			1	1	1	1	1	1
...	BT 47204	Main contact switch to transmission cover gasket		*	1	1	1	1	1	1
...	BO 18318	Main control switch to transmission cover screw	1/4"-20x3/4"		4	4	4	4	4	4
...	BO 105	Main control switch to transmission cover screw lockwasher			4	4	4	4	4	4
...	BT 47249	Main contact switch shift lever		*	1	1	1	1	1	1
...	BT 47309	Main contact switch shift lever silencing spring		*	1	1	1	1	1	1
...	BT 47313	INTERLOCK SWITCH ASSEMBLY (First type) See note		*	1	1	1	1	1	1
...	BT 47944	INTERLOCK SWITCH ASSEMBLY (Second type) I)		*	1	1	1	1	1	1
...	BO 18447	Interlock switch to clutch housing bolt	No. 10-32x5/8"		2	2	2	2	2	2
...	BO 71073	Interlock switch to clutch housing bolt nut	No. 10-32x1/8"		2	2	2	2	2	2
...	BT 12111	Interlock switch to clutch housing bolt lockwasher			2	2	2	2	2	2
H..	BT 47314	Interlock switch rod (Threaded length 1-1/8")	First type Second type	*	1	1	1	1	1	1
...	BO 71073	Interlock switch rod lock nut			2	2	2	2	2	2
...	BT 47314	Interlock switch rod (Threaded length 1-7/8")			1	1	1	1	1	1
...	BT 47945	Interlock switch rod tapped sleeve			1	1	1	1	1	1
...	BT 47946	Interlock switch rod special nut		*	1	1	1	1	1	1

NOTE—In replacing 47313 Switch Assembly, use 47944, 47945 and 47946; also 47314 rod with 1 7/8 " thread length.

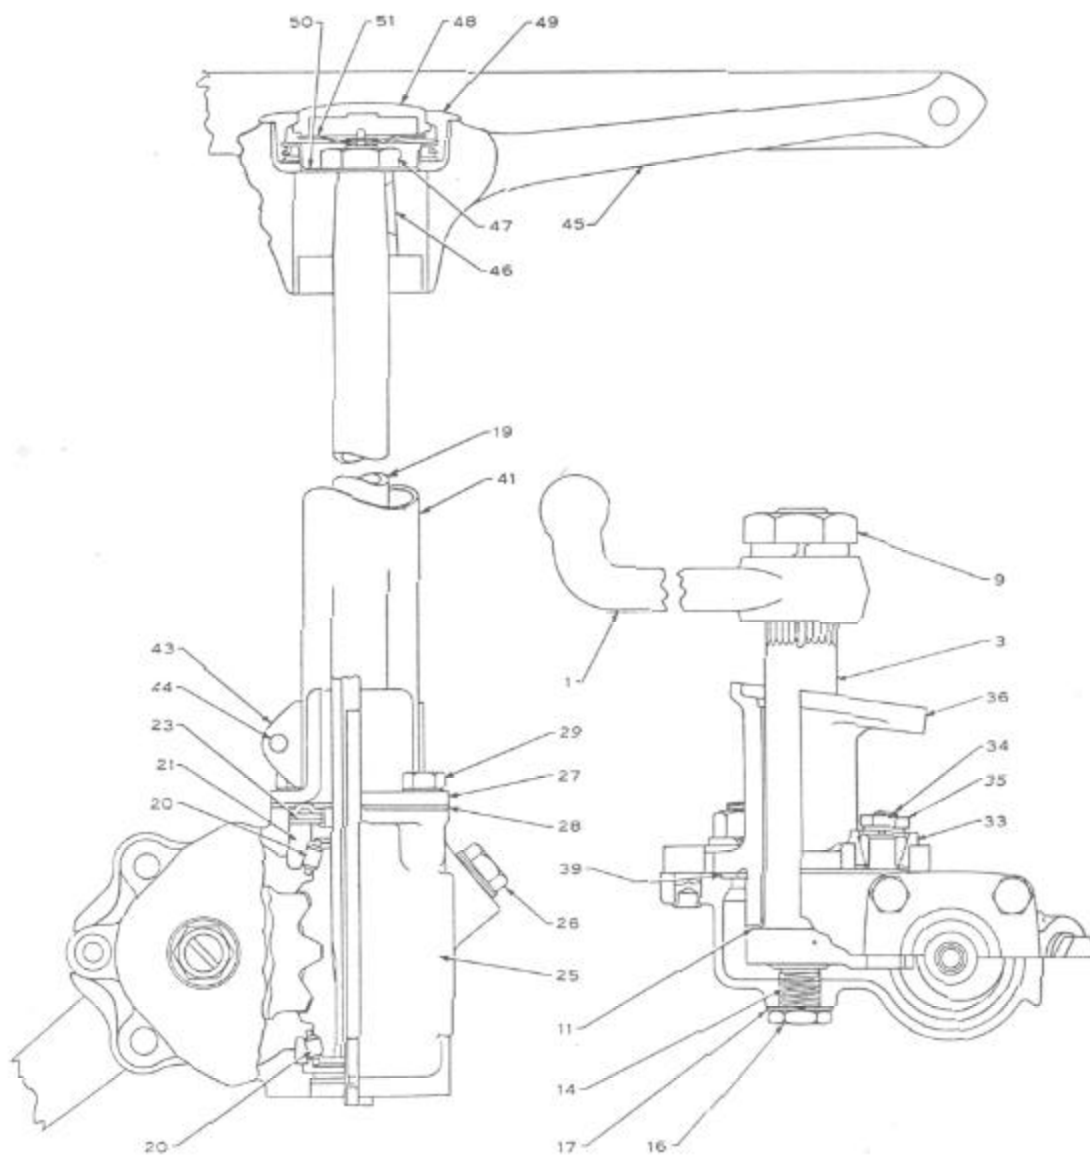

STEERING GEAR—ALL MODELS EXCEPT HUDSON CUSTOM EIGHT

ELECTRIC HAND TRANSMISSION CONTROL—Continued

(Standard for Custom 8—Optional other models)

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson			
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8	
...	BT 47250	Off-On switch (Circuit breaker)		*	1	1	1	1	1	1
...	BZ 71384	Circuit breaker to cylinder support plate bolt	5/ 16"-18x5/8"		1	1	1	1	1	1
P..	BZ 47252	Circuit breaker operating clip	Used	*	1	1	1	1	1	1
Q..	BT 47331	Circuit breaker operating clip insert	with	*	1	1	1	1	1	1
...	BM 9182	Circuit breaker operating clip bolt	vacuum		1	1	1	1	1	1
...	BM 272	Circuit breaker operating clip bolt nut	clutch		1	1	1	1	1	1
...	BO 105	Circuit breaker operating clip bolt lockwasher	control		1	1	1	1	1	1
...	BT 47251	Circuit breaker operating rod	Without	*	1	1	1	1	1	1
...	BT 47201	Circuit breaker operating rod end	vacuum	*	1	1	1	1	1	1
...	BT 611	Circuit breaker operating rod nut	control		1	1	1	1	1	1
...	BT 47383	POWER UNIT VACUUM PIPE ASSEMBLY—SHORT		*	1	1	1	1	1	1
...	BT 47385	POWER UNIT VACUUM PIPE ASSEMBLY—LONG		*	1	1	1	..	..	..
...	BT 47387	POWER UNIT VACUUM PIPE ASSEMBLY—LONG		*	..	..	..	1	1	1
...	BT 47389	Power unit vacuum hose		*	1	1	1	1	1	1
...	BZ 71170	Power unit vacuum hose clamp			2	2	2	2	2	2
...	BT 47898			*	1	1	1	1	1	1

ELECTRIC HAND TRANSMISSION CONTROL—R.H.D.**SELECTOR, WIRES AND JACKET TUBE ASSEMBLY**



...	C 48138	Switch wires clip (Clutch housing, right side)		..	..	..	..	..	..	1
...	C 40919	Switch wires clip (Clutch housing, left side)		1	1	1	1	1	1	1
...	C 47897			1	1	1	1	1	1	1

PROPELLER SHAFT AND UNIVERSAL JOINT**PROPELLER SHAFT ASSEMBLY**

...	C 44642	PROPELLER SHAFT ASSEMBLY (Used with "Hill		1	1	1	1	1	..	
...	C 45463	Hold")								
...	C 44643	PROPELLER SHAFT ASSEMBLY (Used with "Hill		1	1	1	1	1	..	
...	C 45464	Hold")		..	..	..	..	..	1	
...	BZ 43508	FRONT UNIVERSAL JOINT ASSEMBLY		..	..	..	..	..	1	
...	BZ 45612	FRONT UNIVERSAL JOINT ASSEMBLY)		1	1	1	1	1	..	
...	BZ 43510	Propeller shaft sleeve yoke		..	..	..	..	..	1	
...	BZ 43510	Sleeve yoke expansion plug		1	1	1	1	1	1	
...	BZ 43511	Sleeve yoke dust cap		1	1	1	1	1	1	
...	BZ 51271	Sleeve yoke dust washer		1	1	1	1	1	1	
...	BZ 43512	Sleeve yoke dust washer		1	1	1	1	1	..	
...	BZ 45613	Sleeve yoke dust washer retainer		..	..	..	..	..	1	
...	BZ 51275	Sleeve yoke dust washer retainer		1	1	1	1	1	..	
...	BZ 45614	SHAFT AND REAR JOINT ASSEMBLY		..	..	..	..	..	1	
...	C 45615	SHAFT AND REAR JOINT ASSEMBLY (Used with "Hill Hold")		1	1	1	1	1	..	
...	C 45617	SHAFT AND REAR JOINT ASSEMBLY		1	1	1	1	1	..	
...	C 45616	SHAFT AND REAR JOINT ASSEMBLY (Used with "Hill Hold")		..	..	..	..	..	1	
...	C 45618	Propeller shaft flange yoke		..	..	..	..	..	1	
...	BZ 43514	Journal		2	2	2	2	2	2	
...	BZ 43516	Journal gasket		2	2	2	2	2	2	
...	BZ 43517	Journal gasket retainer		8	8	8	8	8	8	
...	BZ 43518	JOURNAL BEARING ASSEMBLY		8	8	8	8	8	8	
...	BZ 43809	Journal bearing race snap ring		8	8	8	8	8	8	
...	BZ 43521	Propeller shaft bolt		8	8	8	8	8	8	
...	BZ 71257	Propeller shaft bolt nut	3/8"-24x1-1/16"	8	8	8	8	8	8	
...	BZ 62	Propeller shaft bolt nut lock	3/8"-24x21/64"	8	8	8	8	8	8	
...	BZ 42837	Propeller shaft filler plug		8	8	8	8	8	8	
...	BZ 9773			1	1	1	1	1	1	

STEERING GEAR

...	C 47224	STEERING GEAR COMPLETE		*	1	..	..	..	..	..
...	C 48154	STEERING GEAR COMPLETE (With electric hand)		*	1	..	..	..	..	..
...	C 48157	STEERING GEAR COMPLETE		*	..	1	..	..	..	..
...	C 48160	STEERING GEAR COMPLETE (With electric hand)		*	..	1	..	..	..	..
...	C 47225	STEERING GEAR COMPLETE		*	..	..	1	1	1	..
...	C 48163	STEERING GEAR COMPLETE (With electric hand)		*	..	..	1	1	1	..
...	C 47226			*	..	..	..	..	..	1

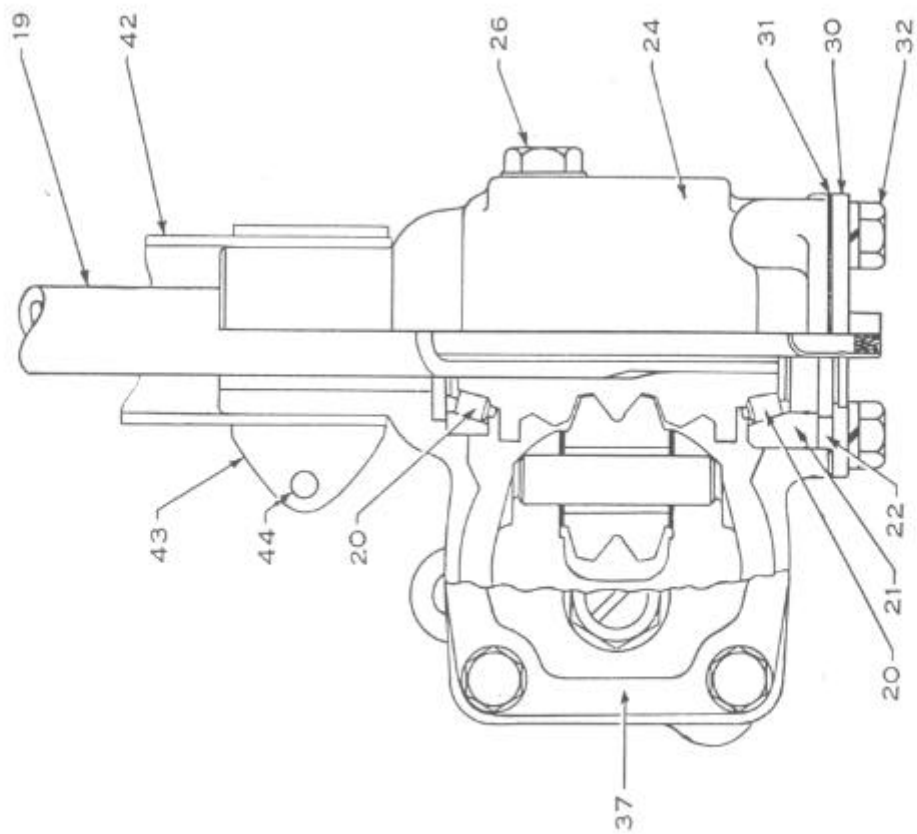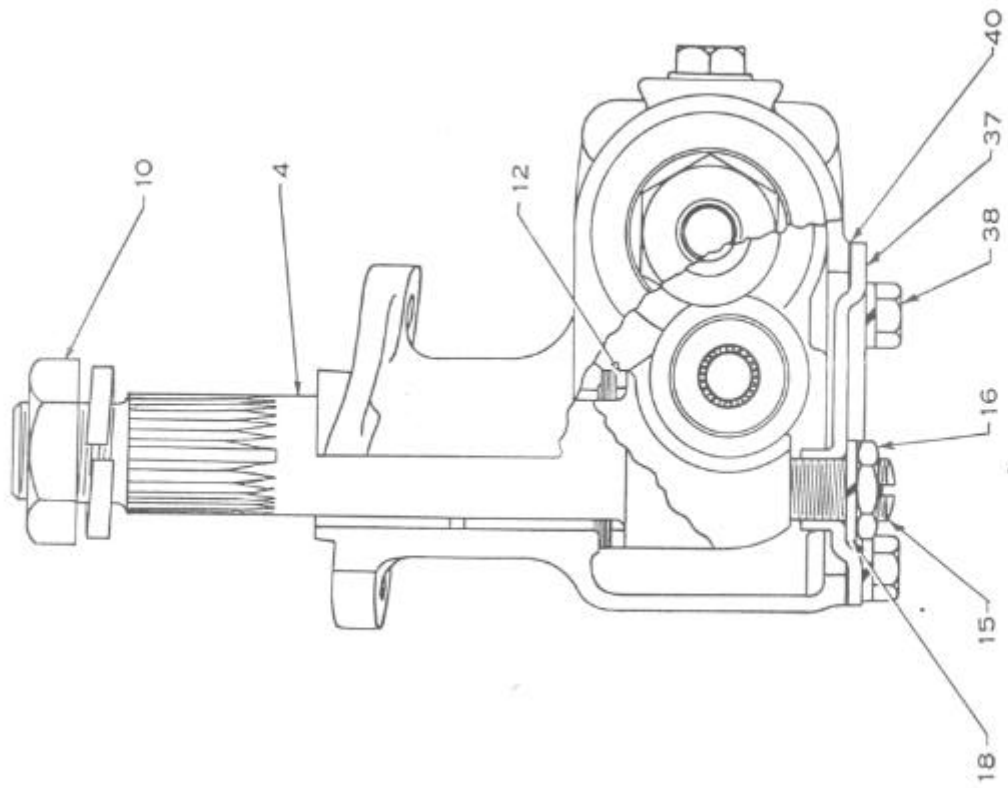

STEERING GEAR— HUDSON CUSTOM EIGHT

STEERING GEAR—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson			Custom 8
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8		
...	C 47628	STEERING GEAR COMPLETE (Brougham only)		*	..	..	..	..	..	1
...	C 46065	STEERING GEAR ASSEMBLY			1	1	1	1	1	..
...	C 44520	STEERING GEAR ASSEMBLY			..	..	..	..	..	1
1	BZ 47232	Ball arm		*	1	1	1	1	1	..
...	BZ 47234	Ball arm		*	..	..	..	..	..	1
3	BZ 42333	Shaft			1	1	1	1	1	..
4	BZ 46894	SHAFT AND ROLLER TOOTH ASSEMBLY			..	..	..	..	..	1
9	BZ 71222	Shaft nut	3/4"-16x7/16"		1	1	1	1	1	..
10	BZ 22641	Shaft nut			..	..	..	..	..	1
...	BZ 70385	Shaft nut lockwasher			1	1	1	1	1	..
...	BZ 33659	Shaft nut lockwasher			..	..	..	..	..	1
11	BZ 40763	Shaft thrust washer			1	1	1	1	1	..
12	BZ 46041	Shaft thrust washer			..	..	..	..	..	1
...	BZ 46042	Shaft shim—thin	.010"		..	..	..	..	..	4
...	BZ 46043	Shaft shim—thick	.030"		..	..	..	..	..	3
...	BZ 45242	Shaft oil seal			1	1	1	1	1	..
...	BZ 45245	Shaft oil seal			..	..	..	..	..	1
...	BZ 45243	Shaft oil seal retainer			1	1	1	1	1	1
...	BZ 45244	Shaft oil seal retainer spring			1	1	1	1	1	1
14	BZ 40764	Shaft adjusting screw			1	1	1	1	1	..
15	BZ 46044	Shaft adjusting screw			..	..	..	..	..	1
16	BZ 70278	Shaft adjusting screw nut			1	1	1	1	1	1
17	BZ 71263	Shaft adjusting screw lockwasher			1	1	1	1	1	..
18	BZ 70195	Shaft adjusting screw lockwasher			..	..	..	..	..	1
...	BZ 46040	Shaft bushing			..	..	..	..	..	2
...	C 42335	MAIN COLUMN TUBE AND WORM ASSEMBLY			1	1	1	1	1	..
...	C 46060	MAIN COLUMN TUBE AND WORM ASSEMBLY			..	..	..	..	..	1
19	C 40767	Main column tube			1	1	1	1	1	1
20	BZ 40776	WORM BEARING ASSEMBLY			2	2	2	2	2	2
21	BZ 40772	Worm bearing adjusting ring			1	1	1	1	1	..
22	BZ 46900	Worm bearing adjusting ring			..	..	..	..	..	1
23	BZ 40773	WORM BEARING ADJUSTING RING THRUST WASHER ASSEMBLY—UPPER			1	1	1	1	1	..
...	BZ 40778	GREASE RETAINER TUBE ASSEMBLY			1	1	1	1	1	1
...	BZ 40780	Grease retainer tube plug	Cork		1	1	1	1	1	1
25	BZ 43531	HOUSING ASSEMBLY			1	1	1	1	1	..
24	BZ 46034	HOUSING ASSEMBLY			..	..	..	..	..	1
26	BZ 38587	Grease plug			1	1	1	1	1	1
27	BZ 40748	Housing cap—upper			1	1	1	1	1	..
28	BZ 40749	Housing cap—upper—shim—thin			1	1	1	1	1	..
28	BZ 46051	Housing cap—upper—shim—thick			4	4	4	4	4	..
29	BZ 395	Housing cap—upper—bolt	5/16"-18x5/18"		4	4	4	4	4	..
30	BZ 46049	Housing (worm) cover			..	..	..	..	..	1
31	BZ 46050	Housing (Worm) cover shim—thin			..	..	..	..	..	1
31	BZ 46051	Housing (Worm) cover shim—thick			..	..	..	..	..	5
32	BZ 395	Housing (Worm) cover bolt			..	..	..	..	..	4
33	BZ 63042	Eccentric adjusting sleeve			1	1	1	1	1	..
...	BZ 41085	Eccentric adjusting sleeve lock ring			1	1	1	1	1	..
...	BZ 65708	Eccentric rivet			1	1	1	1	1	..
34	BZ 40751	Adjusting stud			1	1	1	1	1	..
35	BZ 41086	Adjusting stud nut			1	1	1	1	1	..
36	BZ 45467	HOUSING COVER ASSEMBLY			1	1	1	1	1	..
37	BZ 46052	Housing (Shaft) cover			..	..	..	..	..	1
...	BZ 63060	Housing cover stud			3	3	3	3	3	..
...	BZ 62	Housing cover stud nut	3/8"-24x21/64"		3	3	3	3	3	..
38	BZ 395	Housing cover (Shaft) bolt	5/16"-18x5/8".		..	..	..	..	..	4
39	BZ 40757	Housing cover gasket			1	1	1	1	1	..
40	BZ 46053	Housing cover (Shaft) gasket			..	..	..	..	..	1
41	C 40781	JACKET TUBE ASSEMBLY (Without electric hand)			1	1	1	1	1	..
		JACKET TUBE ASSEMBLY (With electric hand)..	See Electric	*	1	1	1	1	1	1
		JACKET TUBE ASSEMBLY (With electric hand)	hand group	*	..	..	..	..	..	..
...	BZ 40783	Bushing			1	1	1	1	1	1
...	BZ 32106	Jacket tube hole cover			1	1	1	1	1	1
43	BZ 30933	Jacket tube clamp			1	1	1	1	1	1

STEERING GEAR—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
	BZ 71526	Jacket tube clamp bolt	5/16"-24x2"	1	1	1	1	1	1
	BZ 12481	Jacket tube clamp bolt nut	5/16"-24x17/64"	1	1	1	1	1	1
	C 47222	Steering wheel		*	1	1	..	..	..
	C 47223	Steering wheel (Except Brougham)		*	..	..	1	1	1
	C 47625	Steering wheel (Brougham only)		*	..	..	..	..	1
	BZ 70541	Steering wheel key		1	1	1	1	1	1
	BX 18093	Steering wheel nut	5/8"-18x3/8"	1	1	1	1	1	1
	BZ 40784	Horn button	Black	1	1	1	1	1	1
	BZ 47626	Horn button (Brougham only)	Ivory	*	..	..	..	..	1
	BZ 40785	Horn button control cover		1	1	1	1	1	1
	BZ 47627	Horn button control cover (Brougham only)	Ivory	*	..	..	..	..	1
	BZ 40786	Horn button contact cup		1	1	1	1	1	1
	BZ 40787	Horn button contact spring disc		1	1	1	1	1	1
	BZ 40788	HORN TO BUTTON WIRE ASSEMBLY		1	1	1	1	1	..
	BZ 40789	CONNECTOR TO BUTTON WIRE ASSEMBLY		..	..	..	..	..	1
	BZ 40790	Horn to button wire terminal—upper		1	1	1	1	1	1
	BZ 40791	Horn to button wire terminal insulating washer		1	1	1	1	1	1
	BZ 40792	Horn to button wire terminal insulating washer seat		1	1	1	1	1	1
	BZ 71118	Connector to button wire terminal (Connector end)		..	..	..	..	..	..
	BZ 44263	Steering gear to frame bolt	Special	3	3	3	3	3	3
	BZ 62	Steering gear to frame bolt nut	3/8"-24x21/64"	3	3	3	3	3	3

STEERING GEAR—R.H.D.

	C 47227	STEERING GEAR COMPLETE		*	1	..	..	..	..
	C 48155	STEERING GEAR COMPLETE (With electric hand)		*	1	..	..	..	..
	C 48158	STEERING GEAR COMPLETE		*	..	1	..	..	..
	C 48161	STEERING GEAR COMPLETE (With electric hand)		*	..	1	..	..	..
	C 47228	STEERING GEAR COMPLETE		*	..	..	1	1	1
	C 48164	STEERING GEAR COMPLETE (With electric hand)		*	..	..	1	1	1
	C 47229	STEERING GEAR COMPLETE (Except Brougham)		*	..	..	..	..	1
	C 47629	STEERING GEAR COMPLETE (Brougham only)		*	..	..	..	..	1
	C 46066	STEERING GEAR ASSEMBLY'		1	1	1	1	1	..
	C 44521	STEERING GEAR ASSEMBLY		..	..	..	..	..	1
	BZ 42881	Ball arm		1	1	1	1	1	1
	BZ 40761	Shaft		1	1	..	..	..	..
	BZ 46895	SHAFT AND ROLLER TOOTH ASSEMBLY		..	..	..	..	..	1
	BZ 22641	Shaft nut		1	1	1	1	1	..
	BZ 33659	Shaft nut lock washer		1	1	1	1	1	..
	BZ 65719	Shaft thrust washer		1	1	1	1	1	..
	BZ 45246	Shaft oil seal		1	1	1	1	1	..
	BZ 45247	Shaft oil seal retainer		1	1	1	1	1	..
	BZ 45248	Shaft oil seal retainer spring		1	1	1	1	1	..
	BZ 29784	Shaft adjusting screw		1	1	1	1	1	..
	BZ 70195	Shaft adjusting screw lock washer		1	1	1	1	1	..
	C 40766	MAIN COLUMN TUBE AND WORM ASSEMBLY		1	1	1	1	1	..
	C 46061	MAIN COLUMN TUBE AD WORM ASSEMBLY		..	..	..	..	..	1
	BZ 46069	HOUSING ASSEMBLY		1	1	1	1	1	..
	BZ 46035	HOUSING ASSEMBLY HOUSING ASSEMBLY		..	..	..	..	..	1
	BZ 63043	Eccentric adjusting sleeve lock ring		1	1	1	1	1	..
	BZ 39117	Adjusting stud		1	1	1	1	1	..
	BZ 62	Adjusting stud nut 3/8"-24x21/64"		1	1	1	1	1	..
	BZ 45468	HOUSING COVER ASSEMBLY		1	1	1	1	1	..
		JACKET TUBE ASSEMBLY (With electric hand) see electric hand group		*	..	..	..	..	..
	BZ 40789	HORN BUTTON TO CONNECTOR WIRE ASSEMBLY		1	..	..	..	..	..
	BZ 71118	Horn button to connector wire terminal		1	..	..	..	..	..

DRAG LINK

...	C 44980	DRAG LINK ASSEMBLY (Used without fender well)		1	1	..	..	..	..
...	C 47020	DRAG LINK ASSEMBLY (Used with fender well)		*	1	1	..	..	..
...	C 44982	DRAG LINK ASSEMBLY		..	..	1	..	..	..
...	C 47022	DRAG LINK ASSEMBLY		*	..	..	1	1	..
...	C 47024	DRAG LINK ASSEMBLY		*	..	..	..	..	1

DRAG LINK—Continued

Illus. No.	Part No	Description	Specifications	Terraplane		Hudson		Custom
				Spec. 6	De Luxe 6	Spec. 8	De Luxe 8	
...	C 44986	DRAG LINK AND PLUGS ASSEMBLY (Used without fender well)		1	1	..	..	..
...	C 47026	DRAG LINK AND PLUGS ASSEMBLY (Used with fender well)		*	1	1	..	..
...	C 44988	DRAG LINK AND PLUGS ASSEMBLY		..	..	1	..	..
...	C 47028	DRAG LINK AND PLUGS ASSEMBLY		*	..	..	1	..
...	C 47030	DRAG LINK AND PLUGS ASSEMBLY		*	..	..	..	1
...	BZ 40909	Plug—front end		1	1	1	1	1
...	BZ 60533	Plug—rear end		1	1	1	1	1
...	BZ 40688	Spring—front end		1	1	1	1	1
...	BZ 42899	Spring—rear end		1	1	1	1	..
...	BZ 35396	Spring—rear end		..	..	..	..	1
...	BZ 40910	Ball seat—front end		2	2	2	2	2
...	BZ 60532	Ball seat—rear end		2	2	2	2	1
...	BZ 35660	Ball seat—rear end		..	..	..	..	1
...	BZ 35629	Socket		..	..	..	..	1
...	BZ 35713	Socket clamp		..	..	..	..	1
...	BX 406	Socket clamp bolt	3/8"-24x1-3/4"	..	..	..	..	1
...	BZ 62	Socket clamp bolt nut	3/8"-24x21/64"	..	..	..	..	1
...	BZ 42897	Dust cover—inner		1	1	1	1	..
...	BZ 35691	Dust cover—inner		..	..	..	..	1
...	BZ 42898	Dust cover—outer		1	1	1	1	..
...	BZ 35692	Dust cover—outer		..	..	..	..	1
...	BZ 70310	Dust cover bolt	3/16"-24x7/8"	1	1	1	1	1
...	BZ 3987	Dust cover bolt nut	3/16"-24x1/8"	1	1	1	1	1
...	BZ 40414	BOOT ASSEMBLY—FRONT		1	1	1	1	1
...	BZ 40416	Boot lace		1	1	1	1	1

DRAG LINK—R.H.D.

...	C 44983	DRAG LINK-R.H.D.		..	..	1	..	..
...	C 47023	DRAG LINK ASSEMBLY		*	..	..	1	..
...	C 47025	DRAG LINK ASSEMBLY		*	..	..	..	1
...	C 44989	DRAG LINK ASSEMBLY		..	..	1	..	..
...	C 47029	DRAG LINK AND PLUGS ASSEMBLY		*	..	..	..	..
...	C 47031	DRAG LINK AND PLUGS ASSEMBLY		*	..	..	..	1
...	BZ 45630	Socket		..	..	..	..	1
...	BZ 42889	Dust cover—inner		1	1	1	1	..
...	BZ 42890	Dust cover—outer		1	1	1	1	..

GASOLINE TANK—STRAPS AND PIPES

...	C 47079	GASOLINE TANK ASSEMBLY (Coach)	Standard Models	*	1	..	..	..	..
...	C 47080	GASOLINE TANK ASSEMBLY (Sedan)		*	1	..	..	..	..
...	C 47084	GASOLINE TANK ASSEMBLY (Coach)		*	..	1	1	1	..
...	C 47085	GASOLINE TANK ASSEMBLY (Sedan)		*	..	1	1	1	..
...	C 47085	GASOLINE TANK ASSEMBLY	Trunk Models	*	..	..	..	..	..
...	C 48173	GASOLINE TANK ASSEMBLY (Coach and Sedan)		*	1	..	..	..	..
...	C 48174	GASOLINE TANK ASSEMBLY (Coach and Sedan)		*	..	1	1	1	..
...	C 48174	GASOLINE TANK ASSEMBLY		*	..	..	..	..	1
...	C 47081	GASOLINE TANK ASSEMBLY (Coupes)	Trunk Models	*	1	..	..	..	..
...	C 47086	GASOLINE TANK ASSEMBLY (Coupes and Convertible)		*	..	1	1	1	..
...	BZ 48176	FILLER NECK EXTENSION ASSEMBLY		*	1	1	1	1	1
...	BZ 48179	Filler neck extension sleeve gasket		*	1	1	1	1	1
...	BZ 70850	Filler neck extension sleeve bolt	Trunk Models		1	1	1	1	1
...	BZ 48180	Filler neck extension sleeve bolt gasket			1	1	1	1	1
...	BZ 44959	Filler neck to body cushion		*	1	1	1	1	1
...	BO 45344	Filler neck to body grommet			1	1	1	1	1
...	BZ 26877	Drain plug boss			1	1	1	1	1
...	BZ 71100	Drain plug			1	1	1	1	1
...	F 44941	TANK CAP ASSEMBLY			1	1	1	1	1
...	BZ 37667	Tank cap gasket			1	1	1	1	1
...	BZ 46499	LOCKING CAP COMPLETE			1	1	1	1	1
...	BZ 47091	TANK GAUGE ASSEMBLY		*	1	1	1	1	1
...	BZ 71490	Gauge fastening screw	No. 10-240/8"		5	5	5	5	5

GASOLINE TANK—STRAPS AND PIPES—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Custom 8
...	BZ 71073	Gauge terminal nut		1	1	1	1	1	1
...	BZ 70563	Gauge terminal lockwasher	Shakeproof No. 10	1	1	1	1	1	1
...	BZ 47099	Gauge gasket		*	1	1	1	1	1
...	BZ 47088	Gas outlet unit (Suction pipe)		*	1	1	..	..	..
...	BZ 47089	Gas outlet unit (Suction pipe)		*	..	..	1	1	1
...	BZ 47090	Gas outlet gasket		*	1	1	1	1	1
...	BZ 71489	Gas outlet unit screw	No. 10-24x5/16"	2	2	2	2	2	2
...	BZ 71442	Gas outlet unit screw gasket	McKim	2	2	2	2	2	2
...	BZ 44965	Tank to strap silencer		2	2	2	..	..	..
...	BZ 44966	Tank to strap silencer		..	..	..	2	2	2
...	BZ 44967	Tank strap		2	2	2	..	..	..
...	BZ 44968	Tank strap		..	..	..	2	2	2
...	BZ 71412	Tank strap bolt—front	5/16"-18x1-1/2"	2	2	2	2	2	2
...	BM 219	Tank strap—rear—bolt	5/16"-18x3/4"	2	2	2	2	2	2
...	BZ 122	Tank strap bolt nut	5/16"-18x5/16"	6	6	6	6	6	6
...	BZ 44969	Tank to cross member pad—rear.		2	2	2	2	2	2
...	BZ 40275	Tank to cross member pad—front		2	2	2	2	2	2
...	BZ 40526	TANK TO FUEL PUMP PIPE ASSEMBLY		1	1	1	..	..	..
...	BZ 43124	TANK TO FUEL PUMP PIPE ASSEMBLY		..	..	..	1	1	..
...	BZ 45193	TANK TO FUEL PUMP PIPE ASSEMBLY		..	..	..	..	..	1
...	BM 11842	Union nut		2	2	2	..	..	..
...	BM 11828	Union nut		..	..	..	2	2	2
...	BO 70505	Tank to fuel pump pipe grommet		5	5	5	5	5	5
...	BZ 41030	Tank to fuel pump pipe clip		1	1	1	..	..	..
...	BZ 40029	Tank to fuel pump pipe clip		3	3	3	..	..	..
...	BZ 18197	Tank to fuel pump pipe clip		..	..	..	1	1	1
...	BZ 43127	Tank to fuel pump pipe clip		..	..	..	3	3	3

MUFFLER AND EXHAUST PIPES

...	A 45240	MUFFLER ASSEMBLY		1	1	..	..	..	..
...	A 47102	MUFFLER ASSEMBLY		..	..	1	..	..	..
...	A 45241	MUFFLER ASSEMBLY		..	..	..	1	1	1
...	BZ 40403	Muffler bracket—front		1	1	1	..	..	..
...	BZ 42290	Muffler bracket—front		..	..	..	1	1	1
...	BZ 40404	Muffler bracket—rear		1	1	..	..	..	..
...	BZ 42291	Muffler bracket—rear		..	..	1	1	1	1
...	BZ 2490	Muffler bracket clamp bolt	5/16"-18x1-1/8"	2	2	2	2	2	2
...	BZ 122	Muffler bracket clamp nut	5/16"-18x5/16"	2	2	2	2	2	2
...	BM 219	Muffler bracket bolt	5/16"-18x13/4"	2	2	3	3	3	3
...	BZ 122	Muffler bracket bolt nut	5/16"-18x11/8"	2	2	3	3	3	3
...	BZ 38031	Muffler bracket bolt grommet		2	2	3	3	3	3
...	BZ 38032	Muffler bracket bolt grommet cup washer		2	2	3	3	3	3
...	C 44658	TAIL PIPE ASSEMBLY	Standard Models	1	1	..	..	..	..
...	C 44659	TAIL PIPE ASSEMBLY		..	..	1	1	1	..
...	C 44660	TAIL PIPE ASSEMBLY		..	..	..	..	..	1
...	C 47954	TAIL PIPE ASSEMBLY	Trunk Models	1	1	..	..	..	..
...	C 47955	TAIL PIPE ASSEMBLY		..	..	1	1	1	..
...	C 47956	TAIL PIPE ASSEMBLY		..	..	..	..	..	1
...	BZ 44652	Tail pipe bracket—front		1	1	1	1	1	1
...	BZ 44653	Tail pipe bracket—rear		1	1	1	1	1	1
...	BM 1374	Tail pipe bracket—rear—clamp bolt.		1	1	1	1	1	1
...	BZ 122	Tail pipe bracket—rear—clamp nut	5/16"-18x1-3/4"	1	1	1	1	1	1
...	BM 219	Tail pipe bracket bolt	5/16"-18x5/16"	3	3	3	3	3	1
...	BZ 122	Tail pipe bracket nut	5/16"-18x3/4"	3	3	3	3	3	3
...	BZ 38031	Tail pipe bracket bolt grommet	5/16"-18x5/16"	3	3	3	3	3	3
...	BZ 38032	Tail pipe bracket bolt grommet cup washer		3	3	3	3	3	3
...	C 47103	EXHAUST PIPE ASSEMBLY		1	1	..	..	..	..
...	C 47138	EXHAUST PIPE ASSEMBLY		..	..	1	..	..	..
...	C 47620	EXHAUST PIPE ASSEMBLY		..	..	..	1	1	1
...	BZ 41223	Exhaust pipe flange		1	1	1	..	..	..
...	BZ 42245	Exhaust pipe flange		..	..	..	1	1	1
...	BZ 40412	Exhaust pipe flange gasket		1	1	1	..	..	..

MUFFLER AND EXHAUST PIPE—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 42246	Exhaust pipe flange gasket		..	..	..	1	1	1
...	BT 18430	Exhaust pipe flange clamp bolt	3/8"-24x21/8"	1	1	1	1	1	1
...	BZ 62	Exhaust pipe flange clamp nut	3/8"-24x21/64"	1	1	1	1	1	1
...	BZ 2404	Exhaust pipe flange bolt	3/8"-16x1-5/8"	2	2	2	2	2	2
...	BO 71058	Exhaust pipe flange nut	3/8"-16x1-3/8"	2	2	2	2	2	2
...	BZ 40413	Exhaust pipe flange nut lock		2	2	2	2	2	2
...	BZ 44666	Exhaust pipe cover—upper--front		..	..	..	1	1	1
...	BZ 44667	Exhaust pipe cover—upper—rear		..	..	..	1	1	1
...	BZ 47622	Exhaust pipe cover—lower—front		*	..	..	1	1	1
...	BZ 47623	Exhaust pipe cover—lower—rear		*	..	..	1	1	1
...	BZ 2397	Exhaust pipe cover strap		..	..	..	4	4	4
...	BZ 46767	TAIL PIPE EXTENSION COMPLETE (Service)		1	1	..	..	..	..
...	BZ 46766	TAIL PIPE EXTENSION COMPLETE (Service)		..	..	1	1	1	1

RADIATOR

...	A 47067	RADIATOR ASSEMBLY		*	1	..	..	..	..
...	A 47068	RADIATOR ASSEMBLY		*	..	1	..	..	..
...	A 47069	RADIATOR ASSEMBLY		*	..	..	1	..	..
...	A 47070	RADIATOR ASSEMBLY		*	..	..	..	1	1

CORE

...	C 47106	CORE ASSEMBLY		*	1	..	..	..	..
...	C 45568	CORE ASSEMBLY		..	1	..	..	..	..
...	C 45569	CORE ASSEMBLY		..	..	1	..	..	..
...	C 45570	CORE ASSEMBLY		..	..	..	1	1	1
...	C 46676	Mounting strap		1	..	..	..	..	..
...	C 45579	Mounting strap		..	1	..	..	..	..
...	C 45580	Mounting strap		..	..	1	..	..	..
...	C 45579	Mounting strap		..	..	..	1	1	1
...	BZ 45967	RADIATOR INLET ASSEMBLY		..	1	..	1	1	1
...	BZ 45968	RADIATOR INLET ASSEMBLY		..	..	1	..	..	..
...	BZ 46679	Radiator inlet		1	..	..	..	..	..
...	BZ 45574	Radiator inlet gasket		..	1	1	1	1	1
...	BZ 12481	Radiator inlet stud nut		..	3	3	3	3	3
...	BO 70435	Radiator to frame bolt	3/8"-16x33/4"	2	2	2	2	2	2
...	BZ 70627	Radiator to frame nut	3/8"-16x1/2"	2	2	2	2	2	2
...	BZ 30345	Radiator mounting shim	Rubber	2	2	2	2	2	2
...	BZ 87156	Radiator mounting shim	Steel	As required					
...	BZ 45571	Radiator thermostat.		..	1	1	1	1	1
...	BZ 46414	Radiator thermostat (Special—service) Used with hot water heater		..	1	1	1	1	1
...	BZ 46860	Thermostat—hose type (Service only) Used with hot water heater		1	..	..	..	..	..
...	F 45575	Inlet by-pass hose		..	1	1	1	1	1
...	F 71255	Inlet by-pass hose clamp		..	2	2	2	2	2
...	BZ 47119	Filler cap		*	1	..	..	..	..
...	BZ 45576	Filler cap		..	1	1	1	1	1
...	BZ 45577	Filler cap gasket		..	1	1	1	1	1
...	BM 18118	Drain cock		1	1	1	1	1	1
...	F 45558	Inlet hose		1	..	..	..	..	..
...	F 45556	Inlet hose (With standard head)		..	1	..	..	..	..
...	F 45558	Inlet hose (With hi compression head)		..	1	..	..	..	..
...	F 45558	Inlet hose		..	..	..	1	1	1
...	F 45557	Inlet hose—front		..	..	1	..	..	..
...	F 47948	Inlet Hose—rear		*	..	..	1	..	..
...	F 70327	Inlet hose clamp		2	2	4	2	2	2
...	BZ 45559	Inlet hose connecting pipe		..	..	1	..	..	..
...	F 45560	Outlet hose		2	2	1	2	2	2
...	F 45561	Outlet hose (radiator end)		..	..	1	..	..	..
...	F 70327	Outlet hose clamp		4	4	4	4	4	4
...	BZ 45562	Outlet hose reinforcing spring		..	..	1	..	..	..
...	BZ 45563	Outlet hose connecting pipe		1	1	1	..	..	..
...	BZ 45564	Outlet hose connecting pipe		..	..	..	1	1	1
...	BZ 47735	Outlet by-pass connection plug (For hot water heater installation)		*	..	..	1	1	1

CORE—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 45599	RADIATOR WATER LEVEL GAUGE ASSEMBLY		1	1	1	1	1	1
...	BZ 45527	Radiator water level gauge gasket		1	1	1	1	1	1
...	BZ 71456	Radiator water level gauge screw	No. 10-24x7/16"	5	5	5	5	5	5
...	BO 71073	Radiator water level gauge terminal nut	No. 10-32x1/8"	1	1	1	1	1	1
...	BZ 70563	Radiator water level gauge terminal nut lockwasher	No. 10 Shakeproof	1	1	1	1	1	1

SHELL AND GRILLE

...	A 112011	RADIATOR SHELL ASSEMBLY	*	1	1	1	1	1	1
...	C 112894	Radiator shell finish moulding—R. H.	*	1	1	1	1	1	1
...	C 112495	Radiator shell finish moulding—L. H.	*	1	1	1	1	1	1
...	C 112896	Radiator shell finish moulding—R. H.	*	1					
...	C 112497	Radiator shell finish moulding—L. H.		1	..	..	..	..	..
...	BZ 71894	Radiator shell finish moulding attaching bolt		16	16	16	16	16	16
...	BZ 71265	Radiator shell finish moulding bolt lockwasher		16	16	16	16	16	16
...	BZ 70795	Radiator shell finish moulding bolt nut		16	16	16	16	16	16
...	BM 70282	Radiator shell to core bolt		2	2	2	2	2	2
...	BZ 262	Radiator shell to core bolt plain washer		2	2	2	2	2	2
...	BZ 70676	Radiator shell to core bolt nut		2	2	2	2	2	2
...	BZ 112923	RADIATOR ORNAMENT ASSEMBLY	*	1	1	..	..	..	..
...	BZ 112926	RADIATOR ORNAMENT ASSEMBLY	*	..	..	1	..	..	..
...	BZ 112928	RADIATOR ORNAMENT ASSEMBLY	*	..	..	..	1	1	1
...	BZ 112916	Radiator name plate	*	1	1	..	..	..	..
...	BZ 112919	Radiator name plate	*	..	..	1	..	..	..
...	BZ 112921	Radiator name plate	*	..	..	..	1	1	1
...	BZ 94738	Radiator ornament clip		3	3	3	3	3	3
...	BO 9159	Radiator ornament attaching bolt		3	3	3	3	3	3
...	BZ 112724	Radiator ornament crest		1	1	..	..	..	..
...	BZ 112725	Radiator ornament crest		..	..	1	1	1	1
...	BO 71374	Radiator ornament crest attaching bolt		1	1	1	1	1	1
...	BO 71373	Radiator ornament crest attaching bolt lockscrew		1	1	1	1	1	1
...	BZ 108465	Radiator ornament crest bolt wrench		1	1	1	1	1	1
...	A 112054	RADIATOR GRILL ASSEMBLY	*	1	1	..	..	..	..
...	A 112565	RADIATOR GRILL ASSEMBLY	*	..	..	1	..	..	..
...	A 112058	RADIATOR GRILL ASSEMBLY	*	..	..	..	1	1	1
...	A 112887	Radiator grill shield	*	..	..	..	1	1	1
...	BZ 112889	RADIATOR GRILL ORNAMENT ASSEMBLY	*	1	1	..	..	..	..
...	BZ 112890	RADIATOR GRILL ORNAMENT ASSEMBLY	*	..	..	1	..	..	..
...	BZ 112891	RADIATOR GRILL ORNAMENT ASSEMBLY	*	..	..	..	1	1	1
...	BZ 112879	Radiator grill ornament bolt		5	5	5	5	5	5
...	BO 71073	Radiator grill ornament bolt nut		5	5	5	5	5	5
...	BO 70855	Radiator grill ornament attaching bolt		1	1	1	1	1	1
...	BZ 107714	RADIATOR STAY ROD ASSEMBLY		2	2	..	..	..	..
...	BZ 107716	RADIATOR STAY ROD ASSEMBLY		..	..	2	2	2	2
...	BM 794	Radiator stay rod nut		4	4	4	4	4	4
...	BM 70242	Radiator stay rod to shell bolt		2	2	2	2	2	2
...	BZ 70676	Radiator stay rod to shell bolt nut		2	2	2	2	2	2
...	BZ 100516	Radiator stay rod clamp		1	1	1	1	1	1
...	BZ 70981	Radiator stay rod clamp nut		2	2	2	2	2	2
...	BZ 100517	Radiator stay rod clamp plate		1	1	1	1	1	1
...	BZ 112726	STARTING CRANK HOLE COVER ASSEMBLY		1	1	1	..	..	..
...	BZ 112727	STARTING CRANK HOLE COVER ASSEMBLY	*	..	..	..	1	1	1
...	A 112526	Radiator underguard	*	1	1	1	1	1	1
...	BZ 112527	Radiator underguard support bracket	*	1	1	1	1	1	1
...	BO 18853	Radiator underguard to fender bolt		2	2	2	2	2	2
...	BZ 70676	Radiator underguard to fender bolt nut		2	2	2	2	2	2
...	BO 18453	Radiator underguard to support bracket bolt		1	1	1	1	1	1
...	A 111720	RADIATOR LOWER TANK SHIELD ASSEMBLY.		1	..	..	..	..	..
...	A 108369	RADIATOR LOWER TANK SHIELD ASSEMBLY		..	1	1	..	..	..
...	A 107392	Radiator lower tank shield		..	..	..	1	1	1
...	BZ 107606	Radiator lower tank shield bumper		1	1	1	1	1	1
...	BZ 18389	Radiator lower tank shield bumper rivet		1	1	1	1	1	1

SHELL AND GRILLE—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 18453	Radiator lower tank shield to fender bolt		12	12	12	12	12	12
...	BZ 108857	Radiator lower tank shield to fender bolt clip nut		2	2	2	..	..	..
...	BZ 70676	Radiator lower tank shield to fender bolt nut		10	10	10	10	10	10
BONNET									
...	A 112026	BONNET COMPLETE		*	1	1	..	..	..
...	A 112001	BONNET COMPLETE		*	..	..	1	1	1
...	A 112047	TOP AND SIDE PANELS COMPLETE—R. H.		*	1	1	..	..	..
...	A 112048	TOP AND SIDE PANELS COMPLETE—L. H.		*	1	1	..	..	..
...	A 112006	TOP AND SIDE PANELS COMPLETE—R. H.		*	..	..	1	1	1
...	A 112007	TOP AND SIDE PANELS COMPLETE—L. H.		*	..	..	1	1	1
...	A 112296	Bonnet top panel—R. H		*	1	1	..	..	..
...	A 112297	Bonnet top panel—L. H		*	1	1	..	..	..
...	A 112294	Bonnet top panel—R. H		*	..	..	1	1	1
...	A 112295	Bonnet top panel—L. H		*	..	..	1	1	1
...	A 112027	Bonnet side panel—R. H		*	1	1	..	..	..
...	A 112028	Bonnet side panel—L. H		*	1	1	..	..	..
...	A 112002	Bonnet side panel—R. H		*	..	..	1	1	1
...	A 112003	Bonnet side panel—L. H		*	..	..	1	1	1
...	BZ 112278	Bonnet side panel moulding		*	6	6	..	..	..
...	BZ 112279	Bonnet side panel moulding		*	..	..	6	6	6
...	BZ 112275	Bonnet side panel moulding clip			36	36	..	..	..
...	A 112392	Bonnet louvre panel—R. H.		*	..	..	1	1	1
...	A 112393	Bonnet louvre panel—L. H		*	..	..	1	1	1
...	BZ 112275	Bonnet louvre panel clip		*	..	..	30	30	30
...	BZ 70901	Bonnet louvre panel screw			..	..	6	6	6
...	BO 70677	Bonnet louvre panel screw nut	No. 10-32x1/2"		..	..	6	6	6
...	BZ 114234	Bonnet side hinge rod (First type—.228" dia.)		*	2	2	..	..	..
...	BZ 107510	Bonnet side hinge rod (Second type—.250" dia.)			2	2	..	..	..
...	BZ 114235	Bonnet side hinge rod (First type—.228" dia.)		*	..	..	2	2	2
...	BZ 107524	Bonnet side hinge rod (Second type—.250" dia.)			..	..	2	2	2
...	A 107513	Bonnet hinge—female			1	1	..	..	..
...	A 107527	Bonnet hinge—female			..	..	1	1	1
...	BZ 94321	Hinge clip—upper—front			1	1	1	1	1
...	BZ 94322	Hinge clip—lower—front			1	1	1	1	1
...	BZ 112350	Hinge clip—upper—rear		*	1	1	1	1	1
...	BZ 112351	Hinge clip—lower—rear		*	1	1	1	1	1
...	BZ 94323	Hinge clip tapping plate			1	1	1	1	1
...	BZ 101077	Hinge clip tapping plate gasket			1	1	1	1	1
...	BZ 71334	Hinge clip screw	No. 12-28x5/8"		2	2	2	2	2
...	BZ 70793	Hinge clip screw	No. 12-28x3/4"		2	2	2	2	2
...	BZ 70795	Hinge clip screw nut	No. 12-28x3/16"		2	2	2	2	2
...	BO 95429	Bonnet handle (Chrome)			2	2	2	2	2
...	BZ 70336	Bonnet handle to panel rivet			4	4	4	4	4
...	BZ 90012	Bonnet bumper			2	2	2	2	2
...	BZ 89433	Bonnet bumper retainer			2	2	2	2	2
...	BZ 6238	Bonnet bumper to retainer rivet			2	2	2	2	2
...	BO 70097	Bonnet bumper to fender bolt	1/4"-20x7/8"		2	2	2	2	2
...	BZ 70676	Bonnet bumper to fender bolt put	1/4"-20x1/4"		2	2	2	2	2
...	BZ 95300	Bonnet front corner cover			2	2	2	2	2
...	BZ 108048	Bonnet rear corner cover			2	2	2	2	2
...	BZ 107762	BONNET LOCK ASSEMBLY—FRONT—R. H.			1	1	1	1	..
...	BZ 107763	BONNET LOCK ASSEMBLY—REAR—L. H.			1	1	1	1	..
...	BZ 107766	BONNET LOCK ASSEMBLY—REAR			2	2	2	2	..
...	BZ 107767	BONNET LOCK ASSEMBLY—FRONT—R. H			..	..	..	..	1
...	BZ 107768	BONNET LOCK ASSEMBLY—FRONT—L. H			..	..	..	..	1
...	BZ 107769	BONNET LOCK ASSEMBLY—REAR 05)			..	..	..	..	1
...	BM 70242	Bonnet lock—front—to radiator shell bolt	1/4"-20x3/4"		4	4	4	4	4
...	BZ 70676	Bonnet lock—front—to radiator shell bolt nut.	1/4"-20x1/4"		4	4	4	4	4
...	BZ 70796	Bonnet lock—rear—to fender bolt	No. 12-28x3/4"		4	4	4	4	4
...	BZ 70795	Bonnet lock—rear—to fender bolt nut	No. 12-28x3/16"		4	4	4	4	4
...	BZ 109040	Bonnet lock catch			4	4	4	4	4

BONNET—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 70336	Bonnet lock catch to panel rivet		8	8	8	8	8	8
...	BZ 95916	Cowl to bonnet shim		2	2	2	2	2	2
...	BO 70733	Cowl to bonnet shim drive screw		20	20	20	20	20	20
...	BZ 108705	Radiator to bonnet shim		14	14	14	14	14	14
...	BZ 18353	Radiator to bonnet shin rivet							

FENDERS—FRONT

...	A 112218	FRONT FENDER ASSEMBLY—R. H. (Without well)		*	1	1	..	..	..	..
...	A 112219	FRONT FENDER ASSEMBLY—L. H. (Without well)		*	1	1	..	..	..	..
...	A 112200	FRONT FENDER ASSEMBLY—R. H. (With well)		*	1	1	..	..	..	..
...	A 112201	FRONT FENDER ASSEMBLY—L. H. (With well)		*	1	1	..	..	..	..
...	A 112214	FRONT FENDER ASSEMBLY—R. H. (Without well)		*	..	..	1	1	1	1
...	A 112215	FRONT FENDER ASSEMBLY—L. H. (Without well)		*	..	..	1	1	1	1
...	A 112204	FRONT FENDER ASSEMBLY—R. H. (With well)		*	..	..	1	1	1	1
...	A 112205	FRONT FENDER ASSEMBLY—L. H. (With well)		*	..	..	1	1	1	1
...	BZ 107706	Fender side dust shield hole cover—R. H.			1	1	1	1	1	1
...	BO 18459	Fender side dust shield hole cover bolt	No. 10-32x1/2"		8	8	8	8	8	8
...	C 112164	FRONT FENDER WELL ASSEMBLY—R. H.		*	1	1	..	..	..	..
...	C 112165	FRONT FENDER WELL ASSEMBLY—L. H.		*	1	1	..	..	..	..
...	C: 108476	FRONT FENDER WELL ASSEMBLY—R. H.			..	..	1	1	1	1
...	C 108477	FRONT FENDER WELL ASSEMBLY—L. H.			..	..	1	1	1	1
...	BZ 108600	Front fender well support—R. H.			..	..	1	1	1	1
...	BZ 108601	Front fender well support—L. H.			..	..	1	1	1	1
...	BO 71330	Fender well support clamp bolt			..	..	2	2	2	2
...	BO 71329	Front fender screw ferrule Rubber			1	1	1	1	1	1
...	BO 70296	Fender well support to fender rivet			..	..	4	4	4	4
...	BO 70295	Fender well support to well rivet	1/4"x9/16"		..	..	4	4	4	4
...	BX 1061	Fender well support to frame bolt	3/8"-28x11/8"		..	..	3	3	3	3
...	BX 12415	Fender well support to frame bolt nut			..	..	3	3	3	3
...	C 112152	FENDER SUPPORT AND REINFORCEMENT ASSEMBLY—R. H.		*	1	1	1	1	1	1
...	C 112153	FENDER SUPPORT AND REINFORCEMENT ASSEMBLY—L. H.		*	1	1	1	1	1	1
...	BZ 3988	Fender support to frame rivet			8	8	8	8	8	8
...	BZ 112154	Headlamp to fender support bracket—R. H.		*	1	1	1	1	1	1
...	BZ 112155	Headlamp to fender support bracket—L. H.		*	1	1	1	1	1	1
...	BZ 112156	Headlamp to fender support reinforcement—R. H.		*	1	1	1	1	1	1
...	BZ 112157	Headlamp to fender support reinforcement—L. H.		*	1	1	1	1	1	1
...	BZ 70872	Fender clamping bolt	1/4"-20x3/4"		1	1	1	1	1	1
...	BZ 70676	Fender clamping bolt nut	1/4"-20x1/4"		1	1	1	1	1	1
...	BZ 70872	Fender to cowl panel bolt	1/4"-20x3/4"		4	4	4	4	4	4
...	BZ 70883	Fender to running board bolt	5/16"-18x7/8"		8	8	8	8	8	8
...	BO 70674	Fender to running board bolt nut	5/16"-18x5/16"		8	8	8	8	8	8
...	BZ 345	Fender to running board bolt plain washer			16	16	16	16	16	16
...	BZ 70970	Fender to headlamp support bracket rivet	1/4"x5/8"		4	4	4	4	4	4
...	BZ 70883	Fender to headlamp support bracket bolt	5/16"-18x7/8"		4	4	4	4	4	4
...	BO 70674	Fender to headlamp support bracket bolt nuts	5/16"-18x5/16"		4	4	4	4	4	4
...	BO 18465	Fender side dust shield to frame bolt-top	1/4 "-20x7/8"		8	8	6	7	7	7
...	BZ 70676	Fender side dust shield frame bolt nut	1/4"-20x1/4"		8	8	6	7	7	7
...	BZ 71427	Fender side dust shield to frame self-tapping screw			..	..	2	1	1.	1
...	BZ 109090	Front fender stone guard			2	2	2	2	2	2
...	BZ 109103	Stone guard support—upper			2	2	..	..	..	..
...	BZ 109102	Stone guard support—upper			..	..	2	2	2	2
...	BZ 71405	Stone guard support—upper—bolt	1/4"x20x11/2"		4	4	4	4	4	4
...	BZ 70676	Stone guard support—upper—bolt nut	1/4"x20x1/4"		4	4	4	4	4	4
...	BZ 109100	Stone guard support—lower—R. H.			1	1	1	1	1	1
...	BZ 109101	Stone guard support—lower—L. H.			1	1	1	1	1	1
...	BO 70097	Stone guard support—lower—bolt	1/4"-20x7/8"		4	4	4	4	4	4
...	BZ 70676	Stone guard support—lower—bolt nut	1/4"-20x1/4"		4	4	4	4	4	4
...	BZ 108702	Fender to radiator shell welt—R. H.			1	1	1	1	1	1
...	BZ 108703	Fender to radiator shell welt—L. H.			1	1	1	1	1	1
...	BO 18353	Fender to radiator shell welt rivet			22	22	22	22	22	22

FENDERS—REAR

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	A 112030	REAR FENDER ASSEMBLY—R. H. (Without lamp holes) (Coach, Sedan and 2-Passenger Coupe)		*	1	..	..	..	..
...	A 112032	REAR FENDER ASSEMBLY—R. H. (With lamp holes) (Coach, Sedan and 2-Passenger Coupe)		*	1	..	..	..	..
...	A 112080	REAR FENDER ASSEMBLY—R. H. (With lamp holes) (Coach, Sedan and 2-Passenger Coupe)(.)			..	..	1	1	..
...	A 112090	REAR FENDER ASSEMBLY—R. H. (With lamp holes) (Coach, Sedan, 2-Passenger Coupe and Brougham)		*	..	..	..	..	1
...	A 112075	REAR FENDER ASSEMBLY—R. H. (With step hole) Passenger Coupe)		*	1	..	..	..	..
...	A 112076	REAR FENDER ASSEMBLY—R. H. (With step and lamp holes) (4-Passenger Coupe and Convertible)			..	1	..	..	..
...	A 112083	REAR FENDER ASSEMBLY—R. H. (With step and lamp holes) (4-Passenger Coupe and Convertible)		*	..	..	1	1	..
...	A 112092	REAR FENDER ASSEMBLY—R. H. (With step and lamp holes) (4-Passenger Coupe and Convertible)		*	..	..	..	..	1
...	A 114296	REAR FENDER ASSEMBLY—R. H. Trunk Models)		*	1	1	1	1	1
...	A 112033	REAR FENDER ASSEMBLY—L. H.		*	1	1	..	..	..
...	A 112081	REAR FENDER ASSEMBLY		*	..	..	1	1	..
...	A 112091	REAR FENDER ASSEMBLY—L. H.		*	..	..	..	..	1
...	A 114297	REAR FENDER ASSEMBLY—L. H. (Trunk Models)		*	1	1	1	1	1
...	BM 8203	Fender attaching bolt (Coach, Sedan and Brougham)	3/8"-16x 5/8"		2	2	2	2	2
...	BZ 70848	Fender attaching bolt	3/8"-16x3/16"		16	16	16	16	16
...	BZ 70883	Fender running board bolt	5/16"-18x7/8"		8	8	8	8	8
...	BO 70674	Fender running bolt nut	5/16"-18x5/16"		8	8	8	8	8
...	BO 111009	Rear fender welt			1	1	1	1	1
...	BO 108038	FENDER APRON SUPPORT ASSEMBLY			2	2	2	2	2
...	BO 70850	Fender apron support attaching bolt	3/8"-16x1"		2	2	2	2	2
...	BO 18447	Fender apron support to apron bolt	No. 10-32x5/8"		4	4	4	4	4
...	BO 70677	Fender apron support to apron bolt nut	No. 10-32x1/8"		4	4	4	4	4
...	BZ 109090	Rear fender stone guard			2	2	2	2	2
...	BZ 109103	Stone guard support-upper			2	2	2	2	2
...	BZ 7145	Stone guard support-upper—bolt	1/4"-20x1-1/2"		4	4	4	4	4
...	BZ 70676	Stone guard support—upper-bolt nut	1/4"-20x1/4"		4	4	4	4	4
...	BZ 109104	Stone guard support-lower—R. H.			1	1	1	1	1
...	BZ 109105	Stone guard support—lower-L. H.			1	1	1	1	1
...	BO 70097	Stone guard support—lower—to fender bolt	1/4"-20x7/8"		2	2	2	2	2
...	BZ 70676	Stone guard support—lower—to fender bolt nut	1/4"-20x1/4"		2	2	2	2	2
...	A 109903	REAR FENDER PLATE ASSEMBLY— R. H. (Enamel)			1	1	1	1	1
...	A 109905	REAR FENDER FINISH PLATE ASSEMBLY— R. H. (Lacquer)			1	1	1	1	1
...	A 111456	REAR FENDER FINISH PLATE ASSEMBLY— R. H. (Prime)			1	1	1	1	1
...	A 109908	REAR FENDER FINIS LATE ASSEMBLY— L. H. (Enamel).			1	1	1	1	1
...	A 109906	REAR FENDER FINISH PLATE ASSEMBLY— L. H. (Lacquer)			1	1	1	1	1
...	A 11147	REAR FENDER FINISH PLATE ASSEMBLY— L. H. (Prime)			1	1	1	1	1
...	A 111820	FINISH PLATE ASSEMBLY—R. H. (Less ornament) (Enamel)			1	1	1	1	1
...	A 111821	FINISH PLATE ASSEMBLY—L. H. (Less ornament) (Enamel).			1	1	1	1	1
...	A 109907	FINISH PLATE ASSEMBLY—R. H. (Less ornament) (Prime)			1	1	1	1	1
...	A 109908	FINISH PLATE ASSEMBLY—L. H. (Less ornament) (Prime)			1	1	1	1	1
...	BO 111290	Finish plate ornament			2	2	2	2	2
...	BZ 17944	Finish plate ornament nut			8	8	8	8	8
...	BO 114716	Finish plate rubber welt		*	2	2	2	2	2
...	BO 114427	Rear fender finish moulding-short		*	..	..	..	..	2
...	BO 114428	Rear fender finish moulding-medium		*	..	..	..	..	2
...	BO 114429	Rear fender.finish moulding—long		*	..	..	..	..	2
...	C 1144	Running board finish moulding		*	..	..	..	..	2
...	C 114628	Running board finish moulding		*	..	..	..	..	2
...	BZ 11444	Moulding retaining clip		*	..	..	..	..	48

FENDERS—REAR—R.H.D.

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	A 112032	REAR FENDER ASSEMBLY—R. H. (Coach, Sedan and 2-Passenger Coupe)		*	1	1	..	..	..
...	A 112076	REAR FENDER ASSEMBLY—R. H. (4-Passenger Coupe and Convertible)		*	1	1	..	..	..
...	A 112080	REAR FENDER ASSEMBLY—R. H. (Coach, Sedan and 2-Passenger Coupe)		*	..	..	1	1	..
...	A 112083	REAR FENDER ASSEMBLY—R. H. (4-Passenger Coupe and Convertible)			..	..	1	..	..
...	A 112092	REAR FENDER ASSEMBLY—R. H. (4-Passenger Coupe and Convertible)		*	..	..	..	1	1
...	A 112090	REAR FENDER ASSEMBLY—R. H. (Coach, Sedan, 2-Pass. Coupe and Brougham)		*	..	..	..	..	1
...	A 112031	REAR FENDER ASSEMBLY—L. H. (Without lamp holes) (Coach, Sedan and Coupes)			1	..	..	..	..
...	A 112033	REAR FENDER ASSEMBLY—L. H. (With lamp holes)		*	..	1	..	..	..
...	A 112081	REAR FENDER ASSEMBLY—L. H. (With lamp holes)		*	..	..	1	1	..
...	A 112091	REAR FENDER ASSEMBLY—L. H. (With lamp holes)		*	..	..	..	1	1

SPLASH GUARDS—ENGINE, AND REAR

...	A 41183	FLYWHEEL GUARD ASSEMBLY			1	1	1	..	..	..
...	A 42635	FLYWHEEL GUARD ASSEMBLY			..	..	..	1	1	1
...	BO 41121	Guard gasket			2	2	2	2	2	2
...	BO 42638	Guard to cylinder plate webbing—long			..	..	..	1	1	1
...	BO 42639	Guard to cylinder plate webbing—short			..	..	..	2	2	2
...	BO 9159	Guard to clutch housing screw	1/4"-20x5/8"		2	2	2	2	2	2
...	A 45103	Engine guard—front			1	1	..	..	..	..
...	A 45939	ENGINE GUARD ASSEMBLY—FRONT			..	..	1	..	..	..
...	A 48216	ENGINE GUARD ASSEMBLY—FRONT		*	..	..	..	1	1	1
...	A 47617	Engine guard—right—front		*	1	1	..	..	..	..
...	A 47619	Engine guard—right—front		*	..	..	1	..	..	..
...	A 47618	Engine guard—right—rear		*	1	1	1	..	..	..
...	A 45112	ENGINE GUARD ASSEMBLY—RIGHT			..	..	..	1	1	1
...	A 45114	Engine guard—left			1	1	..	..	..	..
...	A 45115	Engine guard—leftj.			..	..	1	..	..	..
...	A 45116	Engine guard—left			..	..	..	1	1	1
...	BZ 71295	Engine guard—self tapping screw	5/16"x5/8"		16	16	18	18	18	18
...	BZ 71427	Engine guard—self tapping screw			..	..	2	..	..	..
...	BO 18447	Engine guard screw	No. 10-32x5/8"		2	2	6	3	3	3
...	BO 12799	Engine guard screw nut	No. 10-32x1/8"		2	2	2	3	3	3
...	A 107013	REAR SPLASH GUARD ASSEMBLY (Except Coupes and Convertibles with rear tire mount) (Not used on Trunk Models)			1	1	1	1	1	1
...	A 107619	REAR SPLASH GUARD ASSEMBLY (Coupes and Convertibles with rear tire mount only)			1	1	1	1	1	..
...	A 114469	REAR SPLASH GUARD ASSEMBLY (Trunk Models)		*	1	1	1	1	1	7
...	BO 70399	Rear splash guard clinch nut	1/4"-20		7	7	7	7	7	7
...	BZ 70872	Rear splash guard to fender bolt	1/4"-20x3/4"		8	8	8	8	8	8
...	BZ 70676	Rear splash guard to fender bolt nut	1/4"-20x1/4"		8	8	8	8	8	8
...	BZ 107847	Rear splash guard bumper grommet (Except Trunk Models)			2	2	2	2	2	2
...	BO 71224	Rear splash guard tail lamp cable grommet (Trunk Models)			2	2	2	2	2	2

RUNNING BOARD

...	C 112472	RUNNING BOARD ASSEMBLY—R. H		*	1	1	1	1	1	..
...	C 112473	RUNNING BOARD ASSEMBLY—L. H		*	1	1	1	1	1	..
...	C 112476	RUNNING BOARD ASSEMBLY—R. H		*	..	..	..	..	..	1
...	C 112477	RUNNING BOARD ASSEMBLY		*	..	..	..	..	..	1
...	C 112474	PANEL ASSEMBLY—R. H.		*	1	1	1	1	1	..
...	C 112475	PANEL ASSEMBLY—L. H.		*	1	1	1	1	1	..
...	C 112478	PANEL ASSEMBLY—R. H.		*	..	..	..	..	..	1

RUNNING BOARDS—Continued


Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	C 112479	PANEL ASSEMBLY—L.		*	..	..	..	..	1
...	C 107546	MAT ASSEMBLY—R. H.		1	1	1	1	1	..
...	C 107547	MAT ASSEMBLY—L. H.		1	1	1	1	1	..
...	C 107548	MAT ASSEMBLY—R. H.		..	..	..	..	..	1
...	C 107549	MAT ASSEMBLY—L. H.		..	..	..	..	..	..
...	BZ 107487	Running board mat retaining wedge		28	28	28	28	28	28
...	BO 70939	Running board attaching bolt	5/16"-18x1/4"	4	4	4	4	4	4
...	BO 70674	Running board attaching nut	5/16"-18x5/16"	4	4	4	4	4	4
...	BO 70872	Running board to underbody extension bolt	1/4"-20x3/4"	14	14	14	14	14	14
...	BO 70676	Running board to underbody extension nut	1/4"-20x1/4"	14	14	14	14	14	14
...	BO 70872	Running board to cowl panel bolt	1/4"-20x3/4"	2	2	2	2	2	2


TOOLS

...	BZ 45123	TOOL BOX-COMplete		1	1	..	..	..	..
...	BZ 45124	TOOL BOX—COMplete		..	..	1	..	..	..
...	BZ 45125	TOOL BOX—COMplete		..	..	..	1	1	..
...	BZ 45086	TOOL BOX—COMplete		..	..	..	..	..	1
...	BZ 40692	Spark plug wrench		1	1	1	1	1	1
...	BZ 22597	Monkey wrench		1	1	1	1	1	1
...	BZ 28333	End wrench		1	1	1	1	1	1
...	BZ 40852	Hammer	12 oz	1	1	1	1	1	1
...	BZ 40853	Pliers	6"	1	1	1	1	1	1
...	BZ 40854	Screw driver	9"	1	1	1	1	1	1
...	BZ 40693	Jack		1	1	1	1	1	1
...	BZ 46172	Jack handle adapter		1	1	1	1	1	1
...	BZ 46168	Starting crank		1	1	1	1	1	1
...	BZ 46169	Starting crank extension-301/2" long		1	1	..	..	..	..
...	BZ 46170	Starting crank extension-35-3/16" long		..	..	1	..	..	..
...	BZ 46171	Starting crank extension-26-11/16" long		..	..	..	1	1	1
...	BZ 108465	Radiator ornament bolt wrench		1	1	1	1	1	1


FLOOR MATS AND PADS

...	BO 112533	FRONT FLOOR MAT AND PAD ASSEMBLY (Coach) (Without Electric Hand)	*	1	..	..	..	..	..
...	BO 114484	FRONT FLOOR MAT AND PAD ASSEMBLY (Coach) (With Electric Hand)	*	1	..	..	..	..	..
...	BO 112531	FRONT FLOOR MAT AND PAD ASSEMBLY (Sedan and Coupes) (Without Electric Hand)	*	1	..	..	..	..	..
...	BO 114480	FRONT FLOOR MAT AND PAD ASSEMBLY (Sedan and Coupes) (With Electric Hand)	*	1	1	1	1	1	1
...	BO 112535	FRONT FLOOR MAT AND PAD ASSEMBLY (Brown)	*	..	..	..	..	..	1
...	BO 114474	FRONT FLOOR MAT AND PAD ASSEMBLY (Brougham) (Gravy)	*	..	..	..	..	..	..
...	BO 112543	Steering gear hole cover		1	1	1	1	1	1
...	BO 112544	Steering gear hole cover (Brown)		..	..	..	..	..	1
...	BO 112543	Steering gear hole cover (Brougham) (Gray)		..	..	..	..	..	..
...	BO 107876	FRONT FLOOR SIDE MAT AND PAD ASSEMBLY—R. H. (Coupes and Convertible Coupes)		..	1	1	1	1	..
...	BO 107877	FRONT FLOOR SIDE MAT AND PAD ASSEMBLY—L. H. (Coupes and Convertible Coupes)		..	4	4	4	4	..
...	BZ 71354	Front floor side mat to underbody screw	No. 8x3/4"	..	4	4	4	4	..
...	BO 12316	Front floor side mat to underbody screw finish washer		..	4	4	4	4	..
...	BO 7762	Front floor mat to underbody screw plain washer		..	..	..	..	..	..
...	BO 107723	Hand brake lever hole seal		1	..	..	..	..	..
...	BZ 70938	Hand brake lever hole seal screw		2	1	1	1	1	1
...	BO 114128	Dash lining pad—center	*	1	2	2	2	2	2
...	BO 114129	Dash lining pad—sides	*	2	6	6	6	6	6
...	BO 18359	Dash lining pad clinch button		6	1	1	1	1	1
...	BO 114126	DASH SILENCER AND TRIMBOARD ASSEMBLY (Brown)	*	..	..	..	..	..	1
...	BO 114095	DASH SILENCER AND TRIMBOARD ASSEMBLY (Brougham) (Gray)	*	..	..	..	..	..	1
...	BO 108879	RUMBLE SEAT FLOOR MAT (4-Pass. Coupe and Conver- tible Coupe)		1	1	1	1	1	..

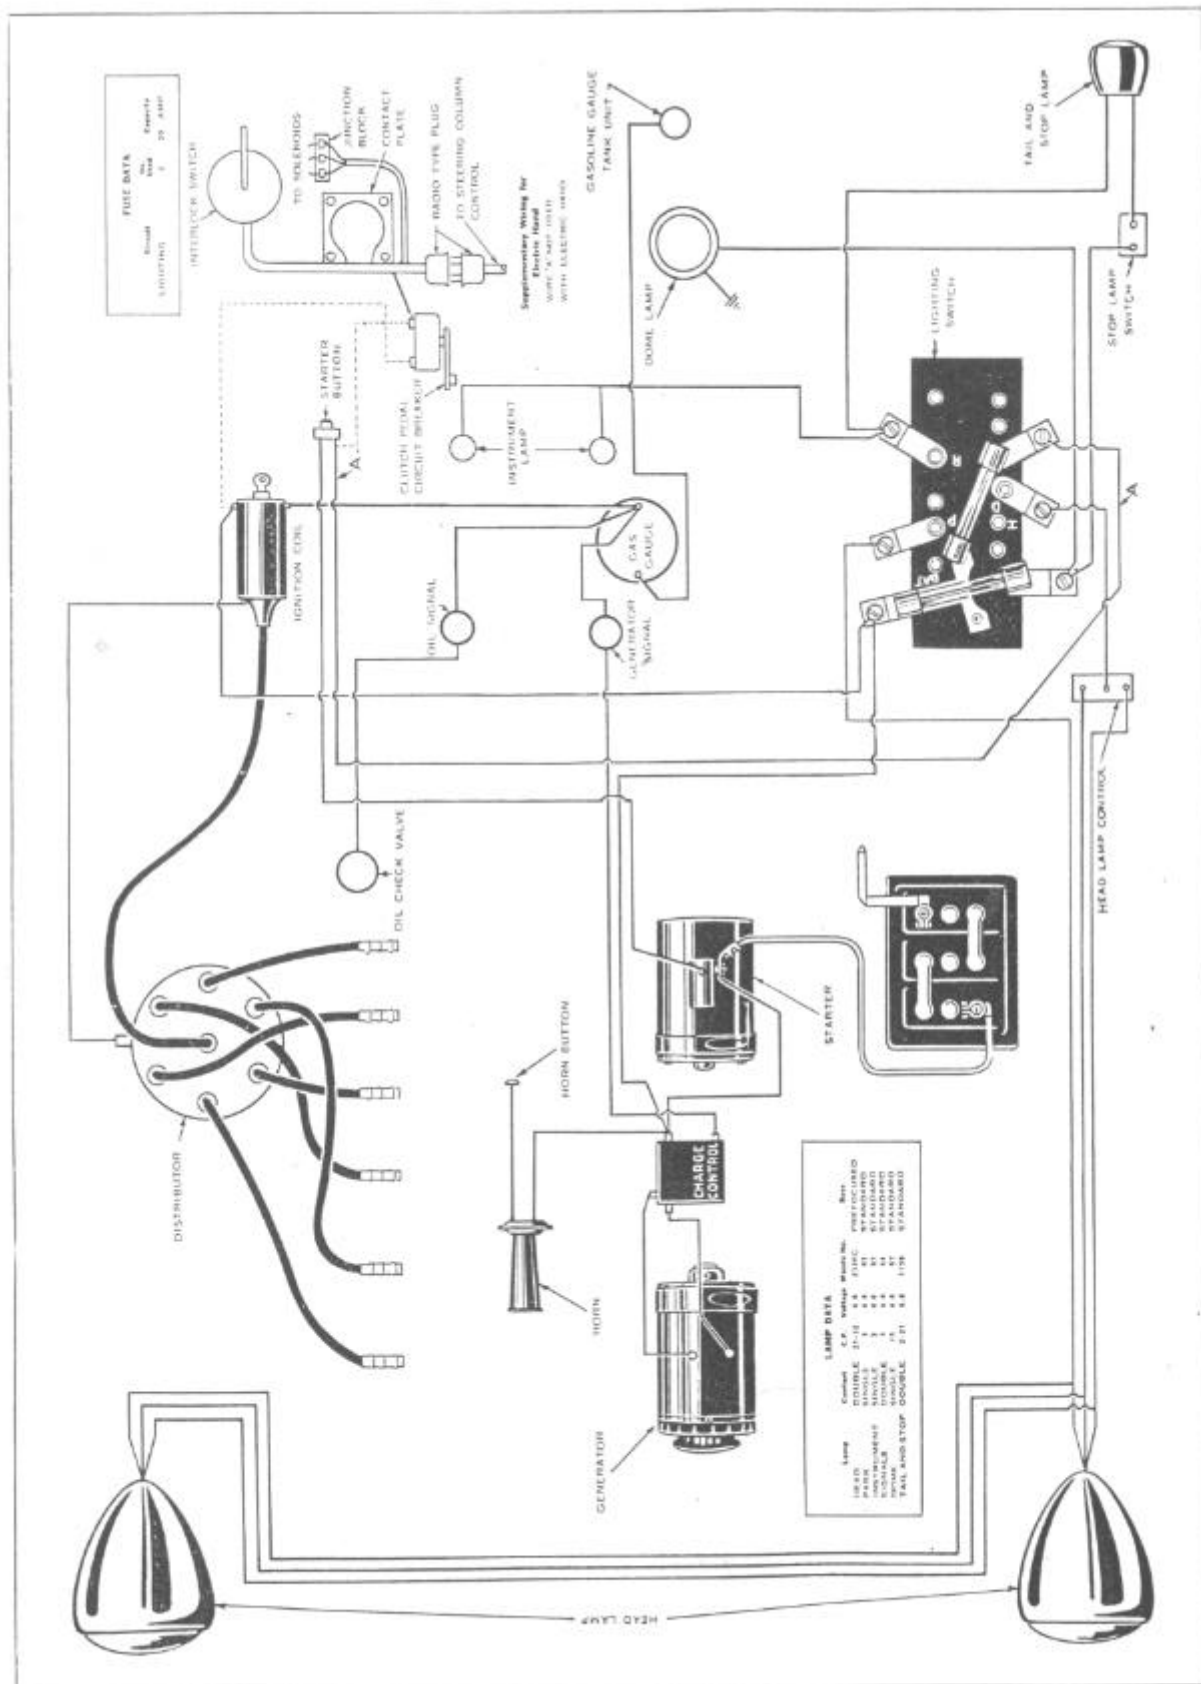

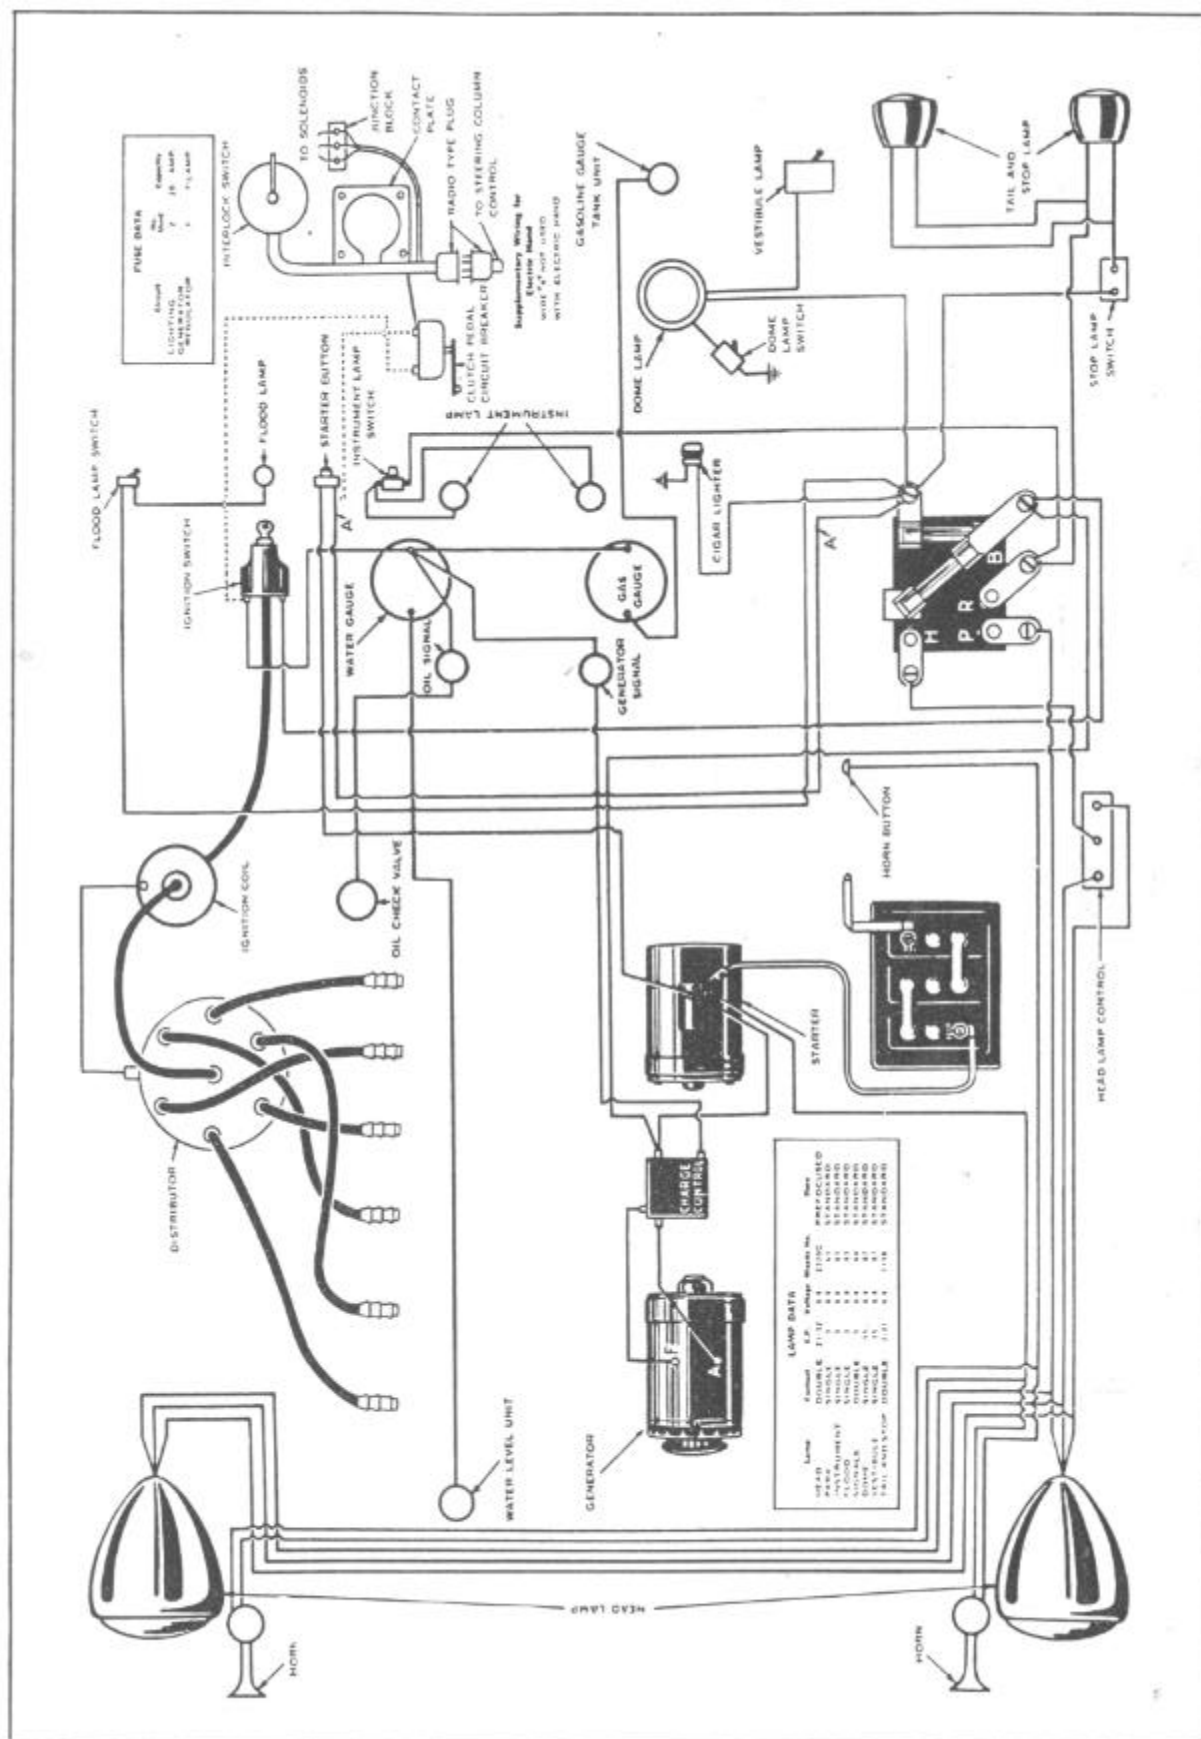

WIRING DIAGRAM—TERRAPLANE DE LUXE AND HUDSON SIX

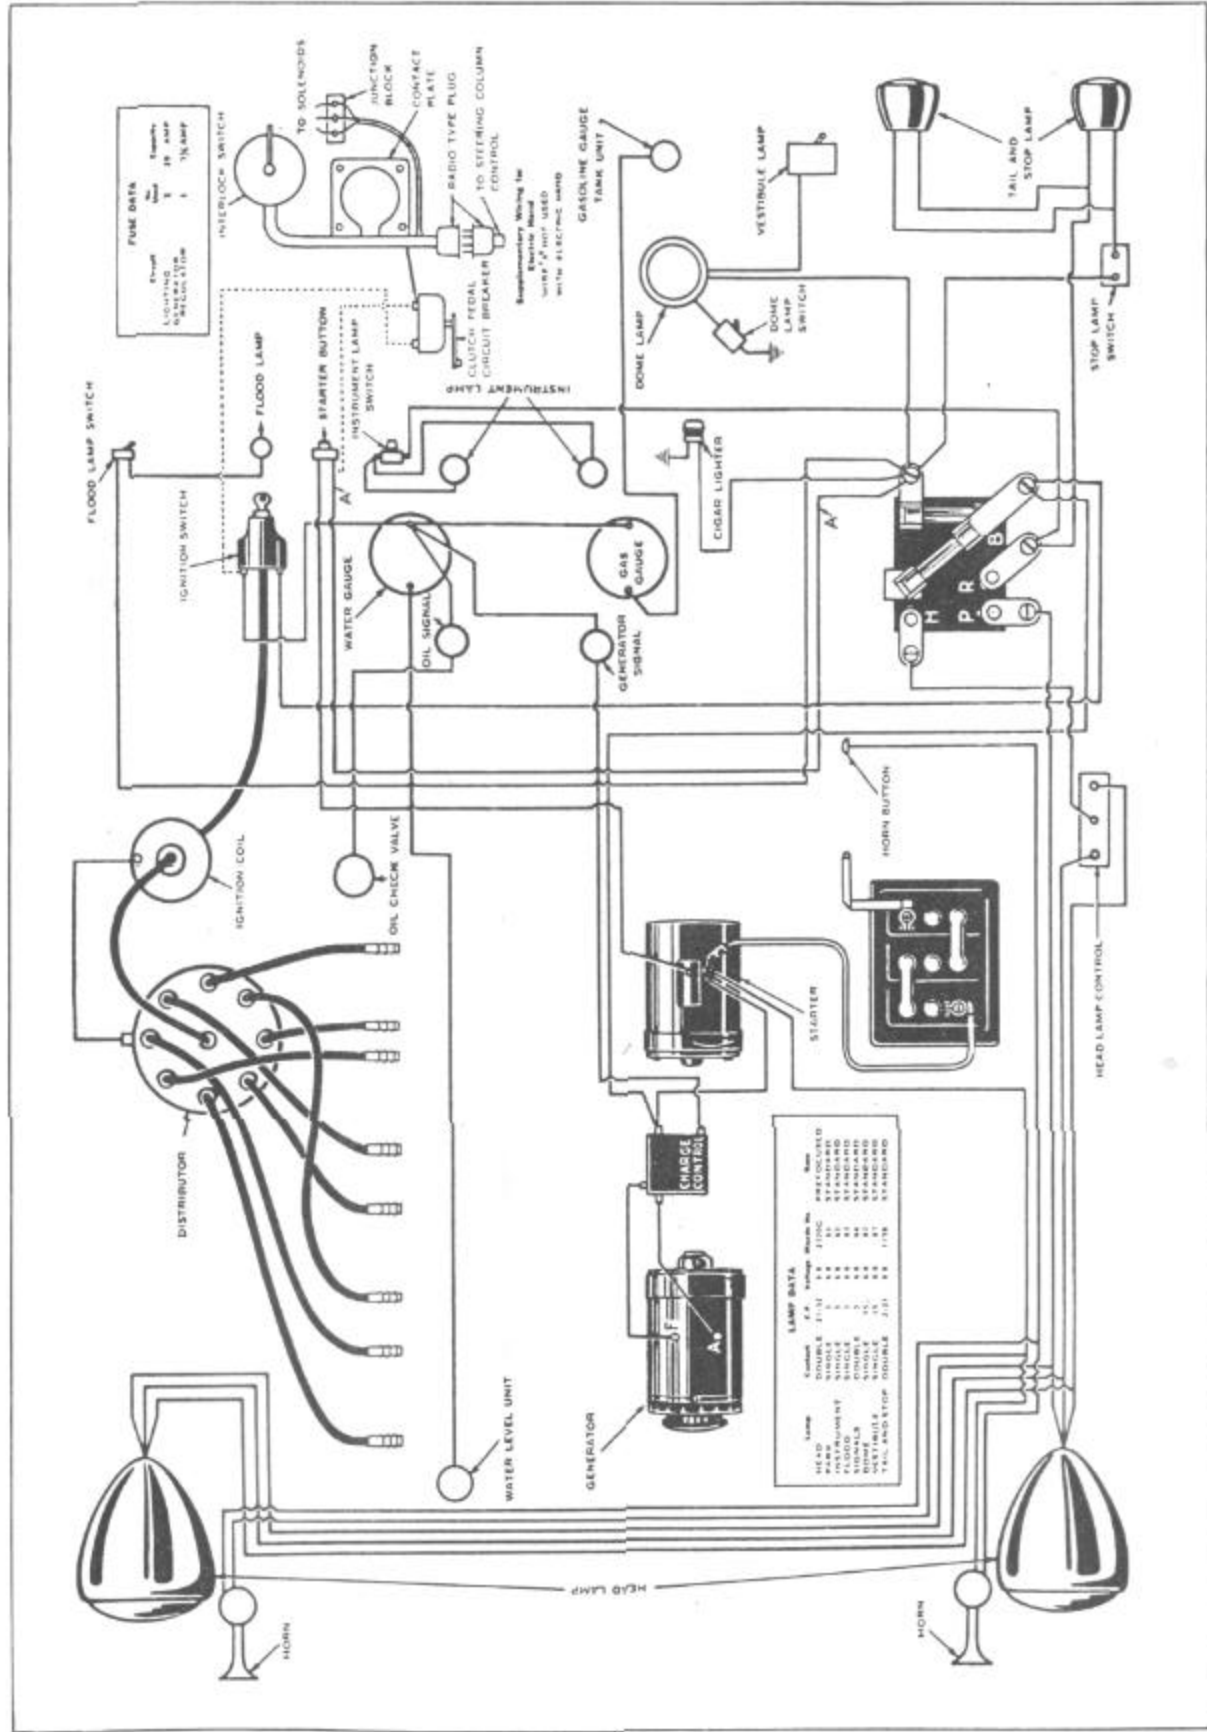

WIRING DIAGRAM—HUDSON SPECIAL EIGHT

FLOOR MATS AND PADS—R.H.D.

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 112536	FRONT FLOOR MAT AND PAD ASSEMBLY		*	..	1	1	1	1
...	BO 114127	DASH SILENCER AND TRIMBOARD ASSEMBLY		*	..	1	1	1	1
...	BO 114481	FRONT FLOOR MAT AND PAD ASSEMBLY (Sedan and Coupes)		*	1	..	..	..	..
...	BO 114485	FRONT FLOOR MAT AND PAD ASSEMBLY (Coach)		*	1	..	..	..	..

WIRING

...	BM 42671	IGNITION CABLE TUBE ASSEMBLY (Does not include wires).		1	1	1	..	..	..
...	BM 42665	IGNITION CABLE TUBE ASSEMBLY (Does not include wires)		1	..	..	1	1	1
...	F 45810	BATTERY TO STARTER SWITCH CABLE ASSEMBLY		1	1	1	1	1	1
...	BZ 45728	Battery to starter cable terminal (Battery—Negative)		1	1	1	1	1	1
...	BZ 12843	Battery to starter cable terminal bolt	5/16-18x1-1/4"	1	1	1	1	1	1
...	BZ 12844	Battery to starter cable terminal bolt nut		1	1	1	1	1	1
...	BO 71441	Battery to starter cable terminal (Starter)		1	1	1	1	1	1
...	BZ 41101	Battery to starter cable terminal sleeve (Starter)		1	1	1	1	1	1
...	F 45729	Battery to ground connection (Positive)		1	1	1	1	1	1
...	BZ 12843	Battery to ground connection clamp bolt (Battery)		1	1	1	1	1	1
...	BZ 45938	Battery to ground connection acid seal (Felt)		1	1	1	1	1	1
...	BZ 12844	Battery to ground connection clamp bolt nut (Battery)	5/16"-18x1/4"	1	1	1	1	1	1
...	BM 219	Battery to ground connection bolt (Ground)	5/16"-18x1/4"	1	1	1	1	1	1
...	BZ 122	Battery to ground connection bolt nut (Ground)	5/16-18"x5/16"	1	1	1	1	1	1
...	BZ 40674	Clutch housing to ground connection		1	1	1	1	1	1
...	BZ 70096	Clutch housing to ground connection bolt	5/16"-24x3/4"	1	1	1	1	1	1
...	BO 12481	Clutch housing to ground connection bolt nut	5/16"-24x17/64"	1	1	1	1	1	1
...	BM 45814	COIL TO DISTRIBUTOR WIRE ASSEMBLY		1	..	..	..	..	..
...	BM 47665	COIL TO DISTRIBUTOR WIRE ASSEMBLY		..	1	1	..	..	..
...	BM 47667	COIL TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BO 70228	Coil to distributor wire terminal (Distributor)		1	1	1	1	1	1
...	BZ 36566	Coil to distributor wire terminal (Coil)		1	1	1	1	1	1
...	BM 45157	Coil to distributor wire terminal insulator (Coil)		1	1	1	1	1	1
...	BM 38917	No. 1 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42647	No. 1 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 38922	No. 2 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42649	No. 2 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 38915	No. 3 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42651	No. 3 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 38914	No. 4 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42653	No. 4 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 40848	No. 5 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42655	No. 5 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 38913	No. 6 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		1	1	1	..	..	..
...	BM 42657	No. 6 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 42657	No. 7 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 38914	No. 8 SPARK PLUG TO DISTRIBUTOR WIRE ASSEMBLY		..	..	..	1	1	1
...	BM 32012	High tension wire insulator		7	7	7	9	9	9
...	BM 71144	Spark plug to distributor wire terminal (Plug)		6	6	6	8	8	8
...	BM 70228	Spark plug to distributor wire terminal (Distributor)		6	6	6	8	8	8
...	BZ 30770	No. 14 armored cable		As required					
...	BZ 30771	No. 16 armored cable (White)		As required					
...	BZ 46619	No. 16 armored cable (Green)		As required					
...	BZ 30773	7 M.M. high tension cable		As required					
...	BZ 30774	No. 12 braid covered cable		As required					
...	BZ 30776	No. 16 braid covered cable		As required					
...	BZ 30777	No. 14 braid covered cable		As required					
...	BZ 35980	Double cable—armored (2 No. 16)		As required					
...	BZ 36100	Double cable—armored (2 No. 14)		As required					
...	BZ 40799	Triple cable—armored (2 No. 14; 1 No. 16)		As required					
...	BZ 40533	No. 0 cable		As required					
...	BO 18165	Wire terminal (Small spade type)	11/64" slot	As required					
...	BO 1816	Wire terminal (Small closed type)	3/16" hole	As required					

WIRING—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 71118	Wire terminal (Small plug type)	3/16" diameter	As required					
...	BO 71119	Wire terminal (Closed type)	13/32" hole	As required					
...	BO 71120	Wire terminal (Closed type)	17/64" hole	As required					
...	BO 71139	Wire terminal (Cigar lighter ground wire)		As required					
...	BO 71120	Wire terminal (Cigar lighter ground wire)		As required					
...	BO 71286	Wire terminal		As required					
...	BO 19044	Wire terminal sleeve (Rubber)	3/16" I.D.x3" long	As required					
...	BO 31548	Wire terminal sleeve		As required					
...	BO 71224	Grommet (Rubber) (Stop lamp switch wires)	3/8" I.D.	1	1	1	1	1	1
...	BO 45591	Loom (Dash to instrument panel wires)	5/8"IDx18" long	1	1	1	1	1	1
...	BO 45775	Loom (Headlamp wires)	5/8"IDx28" long	..	1	..	..	..	..
...	BO 45776	Loom (Headlamp wires)	5/8"IDx34" long	..	..	..	..	..	..
...	BZ 60664	Battery to starter cable clip		1	1	1	1	1	1
...	BM 219	Battery to starter cable clip bolt	5/16"-18x3/4"	1	1	1	1	1	1
...	BZ 122	Battery to starter cable clip bolt nut	5/16"-18x5/16"	1	1	1	1	1	1
...	BO 38909	Clip (Tail, stop and gas gauge wires)		3	3	3	3	3	3
...	BZ 62013	Clip (Tail and stop lamp wires)		2	2	2	2	2	2
...	BO 65907	Clip (Headlamp wires—front fender skirt)		2	2	2	2	2	2
...	BO 45730	Clip (Headlamp wires—front fender skirt bolts)		2	2	2	2	2	2
...	BZ 44093	WIRE CONNECTOR ASSEMBLY (SINGLE)		As required					
...	BZ 44094	WIRE CONNECTOR ASSEMBLY (DOUBLE)		As required					
...	BO 18447	Clip screw	10-32x5/8"	As required					
...	BO 70677	Clip screw nut	10-32x1/8"	As required					
...	BO 71302	Clip drive screw	No 8x1/2"	As required					
...	BO 40711	Clip (Generator wires loom)		As required					

HEADLAMPS

...	BO 112368	HEADLAMP COMPLETE (Corcoran-Brown)	Specify color	*	2	2	2	2	..	..
...	BO 114581	HOUSING ASSEMBLY	Specify color	*	2	2	2	2	..	..
...	BO 114477	Headlamp lens (Stabilite)		*	2	2	2	2	..	..
...	BO 114583	Lens gasket		*	2	2	2	2	..	..
...	BO 114584	Lens locking screw		*	2	2	2	2	..	..
...	BO 114586	REFLECTOR ASSEMBLY		*	2	2	2	2	..	..
...	BO 109266	Reflector spring		6	6	6	6	6	..	..
...	BO 109274	SOCKET AND WIRES ASSEMBLY		2	2	2	2	2	..	..
...	BO 109268	Wire cable clip		2	2	2	2	2	..	..
...	BZ 71118	Wire terminal		6	6	6	6	6	..	..
...	BO 112366	HEADLAMP COMPLETE (Hall) (Black enamel)		*	2	2	2	2	..	..
...	BO 112374	HEADLAMP COMPLETE (Hall) (Chrome)		*	..	..	..	..	2	2
...	BO 114813	HOUSING ASSEMBLY (Black enamel)		*	2	2	2	2	..	..
...	BO 114814	HOUSING ASSEMBLY (Chrome)		*	..	..	..	..	2	2
...	BO 114818	Housing to prop arm cushion		*	2	2	2	2	2	2
...	BO 114476	Headlamp lens (Depress beam)		*	2	2	2	2	2	2
...	BO 114815	Lens gasket		*	2	2	2	2	2	2
...	BO 109282	Lens retainer adjusting plate		*	2	2	2	2	2	2
...	BO 109279	Lens retainer screw		2	2	2	2	2	2	2
...	BO 109280	Lens retainer pivot		2	2	2	2	2	2	2
...	BO 109281	Lens retainer pivot spring		2	2	2	2	2	2	2
...	BO 114692	REFLECTOR ASSEMBLY		*	2	2	2	2	2	2
...	BO 109285	Reflector spring		2	2	2	2	2	2	2
...	BO 114817	SOCKET AND WIRES ASSEMBLY		*	2	2	2	2	2	2
...	BO 71118	Wire terminal		6	6	6	6	6	6	6
...	BO 71361	Headlamp bulb		2	2	2	2	2	2	2
...	BO 6260	Headlamp stud lock washer		2	2	2	2	2	2	2
...	BT 398	Headlamp stud nut	5/8"-18x35/64"	2	2	2	2	2	2	2
...	BO 107624	Headlamp bracket—R. H.	To car Nos 51744, 52514,	1	1	1	1	1	1	1
...	BO 107625	Headlamp bracket—L. H.	53339, 54464, 55220, 56183	1	1	1	1	1	1	1
...	BO 112455	Headlamp bracket—R. H.	After car Nos 51744, 52514	*	1	1	1	1	1	1
...	BO 112456	Headlamp bracket—L. H.	53339, 54464, 55220, 56183	*	1	1	1	1	1	1
...	BO 112554	Headlamp adapter (Used with 107624-5 bracket)		*	2	2	2	2	2	2
...	BO 107623	Headlamp bracket cup washer		2	2	2	2	2	2	2
...	BZ 70848	Headlamp bracket to fender bolt—front		4	4	4	4	4	4	4

HEADLAMPS—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 70873	Headlamp bracket to fender bolt—rear	BZ 70873	2	2	2	2	2	2
...	BO 71224	Headlamp wire fender dust shield grommet	BO 71224	2	2	2	2	2	2
...	BO 108489	Headlamp bracket horn wire hole plug	BO 108489	2	..	..	..	..	..
...	BO 71415	Headlamp bracket horn bolt hole plug	BO 71415	4	..	..	..	..	..

TAIL AND STOP LAMP

...	BO 108226	TAIL AND STOP LAMP ASSEMBLY (With license lens)		..	1	..	..	.	.
...	BO 112381	TAIL AND STOP LAMP ASSEMBLY (Without license legs		..	1	..	..	..	..
...	BO 112379	TAIL AND STOP LAMP ASSEMBLY (With license lens)		*	..	1	1	.	.
...	BO 112380	TAIL AND STOP LAMP ASSEMBLY (Without license lens)		*	..	1	1	..	..
...	BO 108087	TAIL AND STOP LAMP ASSEMBLY—L. H. (With license lens)		..	..	..	..	1	1
...	BO 108088	TAIL AND STOP LAMP ASSEMBLY—R. H. (Without license lens)		..	..	..	..	1	1
...	BO 112379	TAIL AND STOP LAMP ASSEMBLY (With license)	Trunk Models	..	..	1	1	1	1
...	BO 112380	TAIL AND STOP LAMP ASSEMBLY (Without license)		..	..	1	1	1	1
...	BO 112381	TAIL AND STOP/LAMP ASSEMBLY (Without license)		1	1	..	..	..	..
...	BO 101991	License lens		1	1	1	1	..	..
...	BO 109823	License lens (6705)		..	..	..	..	1	1
...	BO 96221	License lens gasket		1	1	1	1	..	..
...	BO 109824	License lens gasket		..	..	..	..	1	1
...	BO 102753	License lens retainer		2	2	2	2	2	2
...	BO 70924	License lens screw	No. 6-32x7/16"	2	2	2	2	2	2
...	BO 101992	Stop lens (Lamp 108226).		1	..	..	..	..	..
...	BO 111249	Stop lens (Lamp 112381)		..	1	..	..	..	..
...	BO 112378	Stop lens (Lamp 112379)		*	..	1	1	..	..
...	BO 99741	Stop lens (Lamp 112380)		..	..	1	1	..	..
...	BO 109813	Stop lens (Lettered).		..	..	..	..	1	1
...	BO 111208	Stop lens (Plain)		..	..	..	..	1	1
...	BO 102887	Stop lens retainer spring		1	1	1	1	..	..
...	BO 109815	Stop lens retainer spring		..	..	..	..	6	6
...	BO 109814	Stop lens bezel		..	..	..	..	2	2
...	BO 71423	Stop lens retaining spring screw		..	..	..	..	6	6
...	BO 109816	BASE PLATE AND SOCKET ASSEMBLY		..	..	..	..	2	2
...	BO 71424	Base plate screw		..	..	..	..	6	6
...	BO 109961	WIRE ASSEMBLY		1	1	1	1	..	..
...	BO 109817	WIRE ASSEMBLY		..	..	..	..	1	1
...	BO 99004	Wire retaining clip		1	1	1	1	..	..
...	BO 71118	Wire terminal		2	2	2	2	..	..
...	BO 109818	Socket spring		..	..	..	..	2	2
...	BO 109819	Socket terminal—retainer	Bakelite	..	..	..	..	2	2
...	BO 109820	Socket insulator		..	..	..	..	2	2
...	BO 109825	Socket terminal spacer		..	..	..	..	1	1
...	BO 71425	Base plate grommet (rubber)		..	..	..	..	2	2
...	BO 102752	Tail lamp housing (With license lens)		1	1	1	1	..	..
...	BO 109811	Tail lamp housing—R. H. (Without license)		..	..	..	..	1	1
...	BO 109822	Tail lamp housing—L. H. (With license)		..	..	..	..	1	1
...	BO 108205	Tail lamp support bracket—L. H. (Black)		1	1	..	..	..	..
...	BO 108207	Tail lamp support bracket—L. H. (Chrome)		1	1	..	..	..	..
...	BO 108230	Tail lamp support bracket—R. H. (Black)		..	1	..	..	..	..
...	BO 108232	Tail lamp support bracket—R. H. (Chrome)		..	1	..	..	..	..
...	BO 112363	Tail lamp support bracket—L. H.		*	..	1	1	..	..
...	BO 112364	Tail lamp support bracket—R. H.		*	..	1	1	..	..
...	BO 114231	Tail lamp support bracket—L. H.		*	1	1	1	1	1
...	BO 114232	Tail lamp support bracket—R. H.	Trunk Models	*	1	1	1	1	1
...	BZ 71381	Tail lamp support bracket to fender bolt		2	4	..	..	..	..
...	BO 9159	Tail lamp to bracket bolt	5/16"-18x5/8" 1/4"-20x5/8"	2	4	4	4	..	..
...	BO 108228	Tail lamp support bracket reinforcement plate		1	2	2	2	2	2
...	BO 112312	Tail and stop lamp pad		*	..	2	2	..	..
...	BO 108488	Tail and stop lamp pad		..	..	..	..	2	2
...	BO 70873	Tail lamp support bracket reinforcement fender bolt	5/16"-18x1-1/16"	..	..	2	2	2	2
...	BO 70674	Tail lamp support bracket reinforcement fender bolt nut		..	..	2	2	2	2
...	BO 100599	Tail lamp support bracket reinforcement fender bolt 2" dia. round.		..	..	2	4	4	4

TAIL AND STOP LAMP—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 71401	Tail lamp support bracket fender bolt	5/16-18)(78"	*	..	..	4	..	6
...	BO 112774	REAR LICENSE PLATE BRACKET ASSEMBLY (Black)		*	1	1	..	..	..
...	BO 112777	REAR LICENSE PLATE BRACKET ASSEMBLY (Chrome)		*	1	1	1	..	..
...	BO 112778	REAR LICENSE PLATE BRACKET ASSEMBLY (Chrome)		*	..	..	..	1	1
...	BO 112777	REAR LICENSE PLATE BRACKET ASSEMBLY		*	1	1	..	1	1
...	BO 114425	Tail lamp support pad	Trunk Models	*	2	2	2	2	2
...	BO 114426	Tail lamp trunk bracket washer		*	4	4	4	4	4
...	BZ 71535	Tail lamp trunk bracket bolt			4	4	4	4	4

TAIL AND STOP LAMP—R.H.D.

...	BO 108086	TAIL AND STOP, LAMP ASSEMBLY—R. H. (With license lens)		..	..	..	..	1	1
...	BO 108089	TAIL AND STOP LAMP ASSEMBLY—L. H. (Without license lens)		..	..	..	..	1	1
...	BO 109821	Tail lamp housing—R. H		..	..	..	..	1	1
...	BO 109812	Tail lamp housing—L. H		..	..	..	..	1	1
...	BO 108204	Tail lamp support bracket—R. H. (Black)		1	1	..	..	..	..
...	BO 108206	Tail lamp support bracket—R. H. (Chrome)		1	1	..	..	..	..
...	BO 108231	Tail lamp support bracket—L. H. (Black)		..	1	..	..	..	..
...	BO 108233	Tail lamp support bracket—L. H. (Chrome)		..	1	..	..	..	..
...	BO 112362	Tail lamp support bracket—R. H		*	1	..	1	1	..
...	BO 112365	Tail lamp support bracket—L. H		*	1	..	1	1	..
...	HA 109989	Twin tail lamps (Service kit) with black brackets		1	..	..	..	..	..
...	BO 114230	Tail lamp support bracket—R. H.)		*	1	1	1	1	1
...	BO 114233	Tail lamp support bracket—L. H. Trunk Models		*		1	1	1	1

DISTRIBUTOR

...	t 45092	DISTRIBUTOR—COMPLETE		1	1	1	..	..	..
...	t 45090	DISTRIBUTOR—COMPLETE		..	..	..	1	1	1
...	BO 100782	Distributor cap hole plug (rubber)		1	1	1	..	..	..
...	t 40596	Drive gear		1	1	1	1	1	1
...	BT 395	Distributor bolt	5/16"-18x5/8"	1	1	1	1	1	1
...	BM 42349	Distributor gasket		1	1	1	1	1	1

t-Serviced direct by Electric Auto-Lite Corp., Toledo, Ohio.

GENERATOR AND CONTROL

...	t 47995	GENERATOR ASSEMBLY		*	1	..	..	..	..
...	t 44115	GENERATOR ASSEMBLY (Radio equipped cars)			1	..	..	..	..
...	t 44115	GENERATOR ASSEMBLY		..	1	1	1	1	1
...	BM 40602	Generator pulley (For 41161 generator)		1	..	..	..	..	..
...	BM 44117	Generator pulley		1	1	1	1	1	1
...	BO 70096	Generator to bracket bolt	5/16"-24x3/4"	2	2	2	2	2	2
...	BM 71177	Generator to bracket bolt—long	5/16"-24x1-1/8"	1	1	1	1	1	1
...	BO 12481	Generator to bracket bolt nut	5/16"-24x17/64"	3	3	3	3	3	3
...	BM 45093	Generator support bracket	3/4"-16x 7/8"	1	1	1	1	1	1
...	BZ 119	Generator support bracket bolt		2	2	2	2	2	2
...	BM 45095	Generator adjusting bracket		1	1	1	1	1	1
...	BM 110	Generator adjusting bracket stud nut		1	1	1	1	1	1
...	t 41148	RELAY ASSEMBLY		1	1	1	1	1	1
...	t 45102	CHARGE CONTROL ASSEMBLY		..	1	1	1	1	1
...	BZ 71417	Relay and charge control to dash screw	No. 8-32x5/16"	2	4	4	4	4	4
...	HA 47975	CHARGE CONTROL—SERVICE KIT		*	1	..	..	..	..

t-Serviced direct by Electric Auto-Lite Corp., Toledo, Ohio.

COIL

...	t 45349	COIL—COMPLETE		1	..	..	..	..	..
...	t 47194	COIL—COMPLETE		*	..	1	1	..	..
...	t 47195	COIL—COMPLETES		*	..	..	1	1	1
...	t 40606	Bracket		1	..	..	..	..	..
...	BZ 109078	LOCK CYLINDER AND KEYS ASSEMBLY		1	..	..	..	..	..
...	BZ 47630	LOCK CYLINDER AND KEYS ASSEMBLY		*	..	1	1	1	1
...	BZ 45986	Coil lock key		2	2	2	2	2	2

COIL—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BZ 70139	Bracket to instrument panel flange screw	1/4"-20x3/4"	2	..	..	..	..	..
...	BZ 70452	Bracket to instrument panel flange screw finish washer		2	..	..	..	..	..
...	BZ 70676	Bracket to instrument panel flange screw nut	1/4"-20x1/4"	2	..	..	..	..	..
...	BZ 70890	Bracket to instrument panel screw	No. 10-32x11/16"	1	..	..	..	..	..
...	BO 12799	Bracket to instrument panel screw nut	No. 10-32x1/8"	1	..	..	..	..	..
...	BO 9159	Bracket to dash bolt	1/4"-20x3/8"	..	2	2	2	2	2
...	t 43323	Coil resistor		1	1	1	..	..	..
...	t 43488	Coil resistor		..	..	..	1	1	1

STARTING MOTOR

...	t 45080	STARTING MOTOR ASSEMBLY		1	1	1	1	1	1
...	t 45101	STARTING MOTOR ASSEMBLY		..	..	..	..	..	..
...	HA 40609	Starting motor mounting stud		2	2	2	2	2	2
...	t 110	Starting motor mounting stud nut	3/8-16x3/8"	4	4	4	4	4	4
...	t 45997	STARTING MOTOR SWITCH ASSEMBLY		1	1	1	1	1	1
...	BZ 71232	Starting motor switch terminal nut	No. 10-32x5/32"	1	1	1	1	1	1
...	BO 12481	Starting motor switch terminal post nut	5/16"-24x17/64"	1	1	1	1	1	1

t-Serviced direct by Electric Auto-Lite Corp., Toledo, Ohio.

BATTERY

...	t 45097	BATTERY ASSEMBLY		1	1	1	..	..	..
...	tt 45099	BATTERY ASSEMBLY		..	..	..	1	1	1
...	HA 46694	Battery charger (Service only) (For permanent attachment to car)		1	1	1	1	1	1

t-Serviced direct by National Battery Co., St. Paul, Minn.

tt-Serviced direct by Electric Storage Battery Co., Philadelphia,

SWITCHES

...	BZ 47632	LIGHTING SWITCH ASSEMBLY,		1	..	C	..	..	..
...	BZ 47466	LIGHTING SWITCH ASSEMBLY		..	1		1	1	1
...	BO 45741	Lighting switch knob		..	1		1	1	1
...	BO 46563	Lighting switch knob retainer		..	1		1	1	1
...	BZ 71266	Lighting switch attaching screw	No.10-32x5/16"	..	2		2	2	2
...	BZ 107700	LIGHTING SWITCH CONTROL KNOB ASSEMBLY		1	..		..	..	..
...	BZ 70122	Lighting switch control knob to panel nut		1	..		..	..	..
...	BZ 70863	Lighting switch terminal screw—short	No.8-32x1/4"	5	4		4	4	4
...	BZ 71417	Lighting switch terminal screw—long		1	1		1	1	1
...	BZ 45978	Headlight dimmer switch		1	1		1	1	1
...	BZ 7819	Headlight dimmer switch attaching screw	1/4"-20x3/8"	2	2		2	2	2
...	BZ 47467	STOP LAMP SWITCH ASSEMBLY		1	1		1	1	1
...	BM 219	Stop lamp switch to frame brace screw	5/16"-18x3/4"	1	1		1	1	1
...	BZ 122	Stop lamp switch to frame brace screw nut		1	1		1	1	1
...	BZ 47469	Stop lamp switch operating clip		1	1		1	1	1
...	BZ 70752	Stop lamp switch operating clip clamp bolt	5/16"-18x11/2"	1	1		1	1	1
...	BO 70674	Stop lamp switch operating clip clamt nut	5/16"-18x5/16"	1	1		1	1	1
...	BZ 108696	SERVICE LIGHT SWITCH ASSEMBLY		..	1		1	1	1
...	BO 70467	Terminal screw	No.6-32x3/16"	..	2		2	2	2
...	BO 4929	Service light switch attaching screw		..	2		2	2	2
...	BO 70465	Service light switch attaching screw lockwasher	No.8Shakeproof	..	2		2	2	2
...	BZ 45619	Instrument light rheostat		..	..		1	1	1
...	BZ 70863	Terminal screw	No.8-32x1/4"	..	..		2	2	2
...	BO 4929	Instrument light rheostat attaching screw		..	..		2	2	2
...	BO 70465	Instrument light rheostat attaching screw lockwasher	No.8Shakeproof	..	..		2	2	2
...	C 41198	STARTIX COMPLETE—SERVICE KIT		1	1		1	1	1

SWITCHES—R.H.D.

...	BZ 45352	Headlight dimmer switch		1	1	1	1	1	1
...	BZ 45082	STOP LAMP SWITCH ASSEMBLY		1	1	1	1	1	1
...	BO 18447	Stop lamp switch to frame brace screw	No. 10-32x3/8"	2	2	2	2	2	2
...	BO 12799	Stop lamp switch to frame brace screw nut	No. 10-32x1/8"	2	2	2	2	2	2

HORN

Illus. No.	Part No	Description	Specifications	Terraplane		Hudson		Cust- om 8
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8
...	45373	HORN ASSEMBLY (Serviced direct by E. A. Laboratories, Long Island City, N. Y.)		1	..	..	..	..
...	BO 12790	Horn terminal nut		2	..	..	..	..
...	BM 42836	Horn bracket		1	..	..	..	..
...	BZ 5402	Horn bracket to cylinder head stud nut	3/8"-16x3/16"	2	..	..	..	..
...	BM 71131	Horn to bracket screw nut	No 12-24x5/32"	2	..	..	..	..
...	t 47758	HORN ASSEMBLY—R. H. (Vibrator type)		*	..	1	1	..
...	t 47759	HORN ASSEMBLY—L. H. (Vibrator type)		*	..	1	1	..
...	t 47480	HORN ASSEMBLY—R. H. (Electric air type)		*	..	..	..	1
...	t 47481	HORN ASSEMBLY—L. H. (Electric air type)		*	..	..	..	1
...	t 47770	Horn relay		*	..	..	..	1
...	BO 18447	Horn relay attaching bolt		..	..	..	..	2
...	BO 12799	Horn relay attaching bolt nut		..	..	..	..	2
...	BO 47764	Horn bracket—R. H.		*	..	1	1	1
...	BO 47765	Horn bracket—L. H.		*	..	1	1	1
...	BO 71443	Horn bracket to power unit stud nut		..	4	4	4	4
...	BO 71402	Horn bracket to headlamp bracket bolt		..	4	4	4	4
...	HA 47938	TWIN HORN COMPLETE—SERVICE KIT (Vibrator type)		1	..	..	..	..
...	HA 47939	TWIN HORN COMPLETE—SERVICE KIT (Electric Air type)		*	1	1	1	..
		t-Serviced direct by United Motors Service.		*				

**WINDSHIELD CLEANER
(VACUUM TYPE)**

...	t 109368	WINDSHIELD CLEANER COMPLETE		1	1	1	1	1	..
...	t 109934	WINDSHIELD CLEANER COMPLETE—DUAL		..	..	..	..	..	1
...	BO 109381	Windshield cleaner tubing	Closed Bodies	1	1	1	1	1	1
...	HA 111327	WINDSHIELD CLEANER SERVICE KIT—SINGLE		1	1	1	1	1	1
...	HA 111329	WINDSHIELD CLEANER SERVICE KIT—DUAL		1	1	1	1	1	1
...	t 109830	WINDSHIELD CLEANER COMPLETE—L. H.		..	1	1	1	1	..
...	t 111313	WINDSHIELD CLEANER COMPLETE—DUAL		..	..	..	..	1	..
...	BO 109840	Windshield cleaner tubing	Convertible	..	1	1	1	1	..
...	BO 111186	Windshield cleaner tube (Tubing to cleaner)	Coupe	..	1	1	1	1	..
...	BM 111187	Windshield cleaner tube (Tubing to manifold)		..	1	1	1	1	..
...	HA 111660	WINDSHIELD CLEANER SERVICE KIT—DUAL		..	1	1	1	1	..

**WINDSHIELD CLEANER—R.H.D.
(VACUUM TYPE)**

...	t 109369	WINDSHIELD CLEANER COMPLETE		1	1	1	1	..	..
...	BO 109382	Windshield cleaner tubing	Closed	1	1	1	1	1	1
...	HA 111328	WINDSHIELD CLEANER SERVICE KIT—SINGLE	Bodies	1	1	1	1	1	1
...	HA 111329	WINDSHIELD CLEANER SERVICE KIT—DUAL		1	1	1	1	1	1
...	t 109831	WINDSHIELD CLEANER COMPLETE—L. H.	Convertible	..	1	1	1	1	..
...	BO 109841	Windshield cleaner tubing	Coupe	..	1	1	1	1	..
...	HA 111660	WINDSHIELD CLEANER SERVICE KIT—DUAL		..	1	1	1	1	..
		tService direct by Trico Products Corporation, Buffalo, New York							

INSTRUMENTS AND MOUNTING

...	BO 114016	INSTRUMENT CLUSTER DIAL ASSEMBLY		1	..	..	..	..	..
...	BO 114018	INSTRUMENT CLUSTER DIAL ASSEMBLY		..	1	..	..	..	..
...	BO 114020	INSTRUMENT CLUSTER DIAL ASSEMBLY		..	..	1	1	1	1
...	BO 109003	Instrument cluster dial retainer		..	1	1	1	1	1
...	BO 109017	Instrument cluster glass		1	1	1	1	1	1
...	BO 109018	Instrument cluster glass gasket		1	1	1	1	1	1
...	BO 109004	Instrument cluster bezel		1	..	..	..	..	..
...	BO 109005	Instrument cluster bezel		..	1	1	1	1	1
...	BO 108868	Instrument cluster mounting clip		4	4	4	4	4	4
...	BZ 70563	Instrument cluster mounting clip lockwasher ..No. 10 Shakeproof		4	4	4	4	4	4
...	BZ 17944	Instrument cluster mounting clip nut		4	4	4	4	4	4
...	BO 112862	Instrument mounting panel		1	..	..	..	..	..
...	BO 112842	Instrument mounting panel		..	1	..	..	..	..

INSTRUMENTS AND MOUNTING—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 112844	Instrument mounting panel (Except Brougham)		*	..	1	1	1	1
...	BO 114433	Instrument mounting panel (Brougham)	Eucalyptis	*	..	..	..	..	1
...	BO 114755	Instrument mounting panel (Brougham)	Instrument mounting panel attaching clip	*	..	..	..	..	1
...	BO 108136	Instrument mounting panel clip nut	No. 12-28x3/16"	4	4	4	4	4	4
...	BZ 70795	Instrument mounting panel clip nut	No. 12-28x3/16"	4	4	4	4	4	4
...	BO 112930	Instrument panel radio opening cover		..	1	1	1	..	..
...	BO 12790	Instrument panel radio opening cover stud nut		..	4	4	4	..	..
...	BO 70465	Instrument panel radio opening cover stud nut lock-washer		..	4	4	4	..	..
...	BO 114030	GASOLINE GAUGE ASSEMBLY		*	1	..	..	..	..
...	BO 109014	Gasoline gauge gasket		1	..	..	..	..	..
...	BO 109010	GASOLINE LEVEL GAUGE ASSEMBLY		..	1	1	1	1	1
...	BO 109011	WATER LEVEL GAUGE ASSEMBLY		..	1	1	1	1	1
...	BO 109013	Gasoline and water level gauge gasket		..	2	2	2	2	2
...	BZ 70863	Gasoline and water level gauge screw	No. 8-32x1/4"	2	4	4	4	4	4
...	BO 71073	Gasoline and water level gauge terminal nut	No. 10-32x1/8"	..	4	4	4	4	4
...	BZ 70563	Gasoline and water level gauge terminal lock-washer	No. 10 Shakeproof	..	4	4	4	4	4
...	t 114006	SPEEDOMETER HEAD ASSEMBLY		*	1	1	..	..	..
...	t 114008	SPEEDOMETER HEAD ASSEMBLY		*	..	1	1	1	1
...	BO 109231	Speedometer head gasket		1	1	1	1	1	1
...	BZ 70863	Speedometer head attaching screw	No. 8-32x1/4"	4	4	4	4	4	4
...	BO 108711	OIL AND AMPERE LIGHT WIRES AND SOCKETS ASSEMBLY		1	1	1	1	1	1
...	BO 31548	Oil and ampere light wires sleeve		3	3	3	3	3	3
...	BO 18166	Oil and ampere light and service light wires terminal		3	3	3	3	3	3
...	BO 108707	INSTRUMENT LAMP WIRES AND SOCKETS ASSEMBLY		1	1	1	1	1	1
...	BO 18165	Instrument lamp wires terminal		1	1	1	1	1	1
...	BO 109023	Instrument lamp socket felt		4	4	4	4	4	4
...	BO 47602	STARTER BUTTON AND WIRES ASSEMBLY		*	1	1	1	1	1
...	BO 45622	Starter button mounting nut		1	1	1	1	1	1
...	BO 45623	Starter button mounting lockwasher		1	1	1	1	1	1
...	BO 31548	Starter button terminal sleeve		1	1	1	1	1	1
...	BO 107664	SERVICE LIGHT BRACKET ASSEMBLY		..	1	1	1	1	1
...	BO 108709	SERVICE LIGHT WIRES AND SOCKET ASSEMBLY		..	1	1	1	1	1
...	BZ 112988	VACUUM CONTROL WIRE ASSEMBLY		*	1	1	..	..	..
...	BZ 112989	VACUUM CONTROL WIRE ASSEMBLY		*	..	..	1	1	1
...	BO 19044	Vacuum control wire insulator		1	1	1	1	1	1
...	BZ 70121	Vacuum control wire lockwasher		1	1	1	1	1	1
...	BZ 70122	Vacuum control wire nut	No. 8-32x5-1/16"	1	1	1	1	1	1
...	BO 108148	LOCKER BOX ASSEMBLY		1	1	1	1	1	1
...	BO 112464	LOCKER BOX DOOR ASSEMBLY		1	..	..	..	..	..
...	BO 112463	LOCKER BOX DOOR ASSEMBLY (Except Brougham)	*	*	..	1	1	1	1
...	BO 114436	LOCKER BOX DOOR ASSEMBLY (Brougham)	Eucalyptis	*	..	..	..	..	1
...	BO 114758	LOCKER BOX DOOR ASSEMBLY (Brougham)	Peroba	*	..	..	..	..	1
...	BO 114760	LOCKER BOX DOOR AND CLOCK ASSEMBLY (Service only)	Peroba	*	..	..	..	..	1
...	BO 112938	LOCKER BOX DOOR AND CLOCK ASSEMBLY (Service only)	Mahogany	*	1	1	1	1	1
...	BO 114438	LOCKER BOX DOOR AND CLOCK ASSEMBLY (Service only)	Eucalyptis	*	..	..	..	..	1
...	BO 112939	Locker box door (For clock) (Service only)	Mahogany	*	1	1	1	1	1
...	BO 114437	Locker box door (For clock) (Service only)	Eucalyptic	*	..	..	..	..	1
...	BO 114759	Locker box door (For clock) (Service only)	Perola	*	..	..	..	..	1
...	BO 111698	Locker box door clock (Service only)		1	1	1	1	1	1
...	BO 108138	Locker box door bumper		2	2	2	2	2	2
...	BO 70044	Locker box door bumper screw	No. 10-32x7/8"	2	2	2	2	2	2
...	BO 108137	Locker box door bumper screw washer		2	2	2	2	2	2
...	BZ 70792	Locker box door bumper screw nut	No. 10-32x1/8"	2	2	2	2	2	2
...	BO 112465	LOCKER BOX DOOR HINGE AND SPRING ASSEMBLY		*	1	1	1	1	1
...	BO 112469	Locker box door hinge spacer		1	1	1	1	1	1
...	BO 70523	Locker box door hinge rivet		*	2	2	2	2	2
...	BZ 71266	Locker box door hinge to door screw	No. 10-32x5/16"	*	3	3	3	3	3

INSTRUMENTS AND MOUNTING—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 70324	Locker box door hinge to instrument panel bolt	1/4"-20x1"	3	3	3	3	3	3
...	BO 70452	Locker box door hinge to instrument panel finish washer	1/4"	3	3	3	3	3	3
...	BZ 70676	Locker box door hinge to instrument panel nut	1/4"-20x1"	3	3	3	3	3	3
...	BO 108162	Locker box door knob		..	1	1	1	1	1
...	BO 111356	LOCKER BOX DOOR KNOB ASSEMBLY		1	..	..	..	..	..
...	BO 100613	Locker box door knob nut		1	1	1	1	1	1
...	BO 108143	LOCKER BOX DOOR LOCK ASSEMBLY		..	1	1	1	1	1
...	BO 108149	Locker box door lock bolt (Lock plunger)		..	1	1	1	1	1
...	BO 108426	Locker box door lock bolt anti-rattle spring		..	1	1	1	1	1
...	BO 109077	LOCKER BOX DOOR LOCK CYLINDER AND KEY AS- SEMBLY		..	1	1	1	1	1
...	BO 109079	Locker box door lock key		..	2	2	2	2	2
...	BO 102061	LOCKER BOX DOOR LOCK KEYS AND RING ASSEM- BLY	No. 10-32x7/8"	..	1	1	1	1	1
...	BO 70044	Locker box to instrument panel screw		2	2	2	2	2	2
...	BO 12316	Locker box to instrument panel screw finish washer		2	2	2	2	2	2
...	BZ 70792	Locker box to instrument panel screw speed nut		2	2	2	2	2	2
...	BO 112990	CARBURETOR CHOKE WIRE ASSEMBLY		1	..	..	..	..	..
...	BZ 70122	Carburetor choke wire panel nut		1	..	..	..	..	..
...	BO 70121	Carburetor choke wire panel nut lockwasher		1	..	..	..	..	..
t-Serviced direct by Stewart-Warner Speedometer Corp., Chicago,									

INSTRUMENTS AND MOUNTING—R.H.D.

...	BO 112843	Instrument mounting panel		*	..	1	..	..	..
...	BO 112845	Instrument mounting panel (Except Brougham)		*	..	..	1	1	1
...	BO 114434	Instrument mounting panel (Brougham) Eucalyptus		*	..	..	..	..	1
...	BO 114756	Instrument mounting panel (Brougham) Peroba		*	..	..	..	..	1
...	BO 112987	OIL AND AMPERE LIGHT WIRES AND SOCKETS ASSEMBLY		*	1	1	1	1	1

RADIO

...	BO 47470	RADIO ASSEMBLY		*	1	1	1	1	1
...	BO 47971	RADIO CHASSIS AND CASE ASSEMBLY		*	1	1	1	1	1
...	BX 3820	Radio attaching bolt			2	2	2	2	2

CONTROL ASSEMBLY**CONTROL**

		CONTROL ASSEMBLY (Less cables)							
...	BO 47972	CONTROL BEZEL AND GLASS ASSEMBLY		*	1	1	1	1	1
...	BO 48066	DIAL SCALE AND POINTER BUSHING ASSEMBLY		*	1	1	1	1	1
...	BO 45738	Volume control knob			1	1	1	1	1
...	BO 48067	Tuning control knob		*	1	1	1	1	1
...	BO 45740	Tuning control knob retainer			1	1	1	1	1
...	BO 45741	VOLUME CONTROL COUPLING AND SHAFT ASSEMBLY			1	1	1	1	1
...	BO 46563	TUNING CONTROL COUPLING AND SHAFT ASSEMBLY			1	1	1	1	1
...	BO 48069	PILOT LAMP CABLE AND SOCKET ASSEMBLY		*	1	1	1	1	1
...	BO 48070	Pilot lamp		*	1	1	1	1	1
...	BO 48068	Control to instrument panel screw		*	1	1	1	1	1
...	BO 48071			*	1	1	1	1	1
...	BZ 71299				3	3	3	3	3

RESISTORS (Chassis Only)

...	BO 48009	Resistor (63-420)	500 ohm, 1/4 watt	*	1	1	1	1	1
...	BO 48010	Resistor (63-421)	700 ohm, 1/4 watt	*	1	1	1	1	1
...	BO 48011	Resistor (63-422)	200 ohm, 1/2 watt	*	1	1	1	1	1
...	BO 48012	Resistor (63-423)	600 ohm, 1/4 watt	*	1	1	1	1	1

RESISTORS—(Chassis Only)—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 48013	Resistor (63-396)	10M, 1/4 watt *	1	1	1	1	1	1
...	BO 48014	Resistor (63-424)	35M, 1 watt *	1	1	1	1	1	1
...	BO 48015	Resistor (63-398)	40M, 1/2 watt *	1	1	1	1	1	1
...	BO 48016	Resistor (63-425)	75M, 1/4 watt *	1	1	1	1	1	1
...	BO 48017	Resistor (63-400)	250M, 1/4 watt *	4	4	4	4	4	4
...	BO 48018	Resistor (63-401)	500M, 1/4 watt *	1	1	1	1	1	1
...	BO 48084	Resistor (63-428)	1200 ohm, 1/4 watt *	1	1	1	1	1	1
...	BO 48019	Resistor (63-402) VOLUME CONTROL AND SWITCH ASSEMBLY	500M	1	1	1	1	1	1

CONDENSERS (Chassis Only)

...	BO 46375	Condenser (22-82)	.001 mfd., 600 V. *	2	2	2	2	2	2
...	BO 46378	Condenser (22-162)	.001 mfd., 600 V. *	1	1	1	1	1	1
...	BO 46370	Condenser (22-170)	.1 mfd., 400 V. *	2	2	2	2	2	2
...	BO 48020	Condenser (22-212)	.05 mfd., 400 V. *	1	1	1	1	1	1
...	BO 46372	Condenser (22-250)	.05 mfd., 200 V. *	2	2	2	2	2	2
...	BO 46774	Condenser (22-251)	.5 mfd., 200 V. *	1	1	1	1	1	1
...	BO 48021	Condenser (22-190)	.1 mfd., 200 V. *	1	1	1	1	1	1
...	BO 48022	Condenser (22-327)	.02 mfd., 200 V. *	1	1	1	1	1	1
...	BO 48025	Condenser (22-348)	.001 mfd., 600 V. *	1	1	1	1	1	1
...	BO 48026	Condenser (22-350)	.25 mfd., 120 V. *	1	1	1	1	1	1
...	BO 48027	Condenser (22-354)	.007 mfd., 750 V. *	1	1	1	1	1	1
...	BO 48028	Condenser (22-355)	.01 mfd., 1000 V. *	1	1	1	1	1	1
...	BO 48029	Condenser (22-357)	.0lx.02 mfd., 750 V. *	1	1	1	1	1	1
...	BO 48024	Condenser (22-347)	4 x 8. mfd., 350 V. *	1	1	1	1	1	1
...	BO 48030	Condenser (22-358)	.002 mfd., 600 V. *	3	3	3	3	3	3
...	BO 48031	Condenser (22-359)	350-750 mfd. Padder *	1	1	1	1	1	1
...	BO 48023	Condenser (22-344)	Three-Gang Variable *	1	1	1	1	1	1

MISCELLANEOUS CHASSIS PARTS

...	BO 48032	Antenna coil assembly	20-96 *	1	1	1	1	1	1
...	BO 48033	Detector coil assembly	20-97 *	1	1	1	1	1	1
...	BO 48034	Oscillator coil assembly	20-98 *	1	1	1	1	1	1
...	BO 48035	Filament A choke	20-103 *	1	1	1	1	1	1
...	BO 48036	First I. F. transformer	95-262 *	1	1	1	1	1	1
...	BO 48037	Second I. F. transformer	95-263 *	1	1	1	1	1	1
...	BO 46773	Vibrator isolation choke	S-2778	1	1	1	1	1	1
...	BO 48038	Tone control knob	46-101 *	1	1	1	1	1	1
...	BO 48049	Tone control knob retainer	80-107 *	1	1	1	1	1	1
...	BO 48050	Tone control switch	85-66 *	1	1	1	1	1	1
...	BO 48039	"A" battery cable (Det. No. 1)	52-53 *	1	1	1	1	1	1
...	BO 48040	"A" battery cable (Det. No. 2)	52-54 *	1	1	1	1	1	1
...	BO 48041	Antenna cable	52-55 *	1	1	1	1	1	1
...	BO 48042	Coupling shaft nut	1/4"-20 knurled *	1	1	1	1	1	1
...	BO 48043	Socket-6-D-6	78-100 *	2	2	2	2	2	2
...	BO 48044	Socket-75	78-101 *	2	2	2	2	2	2
...	BO 48045	Socket-42	78-102 *	1	1	1	1	1	1
...	BO 48046	Socket-6-C-6	78-113 *	1	1	1	1	1	1
...	BO 48047	Socket-6-Z-4 (For vibrator)	78-114 *	1	1	1	1	1	1
...	BO 48048	Socket vibrator	78-115 *	1	1	1	1	1	1
...	BO 48054	Power transformer	95-258 *	1	1	1	1	1	1
...	BO 48055	Filter choke	95-259 *	1	1	1	1	1	1
...	BO 48056	Speaker output transformer	95-260 *	1	1	1	1	1	1
...	BO 48059	Chassis box top cover and bushing assembly	MS-246 *	1	1	1	1	1	1
...	BO 48060	Chassis box bottom cover and bushing assembly...	MS-247 *	1	1	1	1	1	1
...	BO 48061	Chassis box body (Less cover and top)	MS-253 *	1	1	1	1	1	1
...	BO 48057	Wing screw for box cover	10-32x1/4" *	2	2	2	2	2	2
...	BO 48058	Chassis box screw	No. 8x1/4" *	8	8	8	8	8	8
...	BO 48052	Bakelite washer for chassis mounting screw	93-220 *	4	4	4	4	4	4
...	BO 48053	Rubber bushing for chassis mounting screw	94-185 *	4	4	4	4	4	4
...	BO 46952	Motor noise filter	S-3364	1	1	1	1	1	1

SPEAKER

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 47973	SPEAKER AND CASE COMPLETE		*	1	1	1	1	1
...	BO 48062	SPEAKER ASSEMBLY (Less output transformer)		*	1	1	1	1	1
...	BO 48063	CONE AND VOICE COIL ASSEMBLY		*	1	1	1	1	1
...	BO 48064	Field coil		*	1	1	1	1	1
...	BO 48065	SPEAKER BOX AND GRILL CLOTH ASSEMBLY		*	1	1	1	1	1
...	BO 48073	Speaker mounting stud		*	1	1	1	1	1
...	BO 48072	Speaker mounting stud nut		*	1	1	1	1	1
...	BO 48074	Speaker mounting spacer block	Wood	*	1	1	1	1	1

ANTENNA AND LEAD-IN

...	BO 47423	ANTENNA AND LEAD-IN WIRE COMPLETE		1	1	1	1	1	1
...	BO 47473	ANTENNA SPACER AND SUPPORT ASSEMBLY—FRONT		1	1	1	1	1	1
...	BO 47474	ANTENNA SPACER AND SUPPORT ASSEMBLY—REAR		1	1	1	1	1	1
...	BO 47477	Antenna spacer grommet		4	4	4	4	4	4
...	BO 18447	Antenna spacer support bolt	No. 10-32x5/8"	4	4	4	4	4	4
...	BO 71073	Antenna spacer support bolt nut		4	4	4	4	4	4
...	BO 47606	LEAD-IN WIRE AND SHIELDING LOOM ASSEMBLY		1	1	1	1	1	1
...	BO 44239	Lead-in wire shielding loom clip		1	1	1	1	1	1
...	BO 18166	Lead-in wire terminal (Lower end)		1	1	1	1	1	1
...	BO 45993	Lead-in wire terminal (Upper end)		1	1	1	1	1	1
...	BO 18459	Lead-in wire terminal bolt (Lower end)		1	1	1	1	1	1
...	BO 71073	Lead-in wire terminal bolt nut							

MISCELLANEOUS

...	BO 47961	GROUND STRAP ASSEMBLY (Timing gear cover bolt to fender apron bolt)		*	..	1	1	1	1
...	BO 47963	GROUND STRAP ASSEMBLY (Water pump bolt to thermostat housing bolt)		*	..	1	..	1	1
...	BO 47965	GROUND STRAP ASSEMBLY (Water pump bolt to thermostat housing bolt)		*	..	..	..	..	..
...	BZ 62013	Ground strap clip (Inlet hose clamp bolt)			..	..	..	..	..
...	BZ 17944	Ground strap clip nut			..	..	..	..	..
...	BO 47967	Spark plug suppressor		*	6	..	..	..	..
...	BO 12790	Spark plug suppressor attaching nut			6	..	..		
...	BO 47968	Distributor suppressor		*	1	1	1	1	1
...	BO 47974	Capacitor (Gas gauge)		*	1	1	1	1	1
...	BO 47974	Capacitor (Water gauge)		*	..	1	1	1	1
...	BO 45990	Capacitor (Generator)			1	1	1	1	1
...	BO 70855	Capacitor (Generator) mounting bolt			1	1	1	1	1
...	BO 45923	Capacitor (Relay)			1	1	1	1	1
...	HA 47734	RADIO COMPLETE (Service kit)		*	1	1	1	1	1

RADIO—R.H.D.

...	BO 47607	LEAD-IN WIRE AND SHIELDING LOOM ASSEMBLY		*	1	1	1	1	1
-----	----------	--	--	---	---	---	---	---	---

CAR HEATER—SERVICE ONLY**HOT WATER TYPE**

...	C 46816	HOT WATER HEATER COMPLETE		1	1	1	1	1	1
...	C 46817	HOT WATER HEATER COMPLETE (De Luxe)		1	1	1	1	1	1
...	BO 46943	HEATER ASSEMBLY—Less attaching parts		1	1	1	1	1	1
...	BO 46944	HEATER ASSEMBLY—De Luxe—Less attaching parts		1	1	1	1	1	1
...	C 46922	Heater radiator core (Standard)		1	1	1	1	1	1
...	C 46923	Heater radiator core (De Luxe)		1	1	1	1	1	1
...	BO 46924	HEATER MOTOR COMPLETE (Specify black or silver cap)		1	1	1	1	1	1
...	BO 46925	Motor brushes with springs—set		1	1	1	1	1	1
...	BO 46926	Fan		1	1	1	1	1	1
...	BO 46907	Heater switch (illuminated type) brown		1	1	1	1	1	1
...	BO 46908	Heater switch (illuminated type) ivory		1	1	1	1	1	1
...	BO 46938	Switch knob cover (brown)		1	1	1	1	1	1
...	BO 46939	Switch knob cover assembly (ivory)		1	1	1	1	1	1
...	BO 46927	Heater switch bulb		1	1	1	1	1	1

CAR HEATER—SERVICE ONLY—Continued

Illus. No.	Part No	Description	Specifications	Terraplane			Hudson		
				Spec. 6	De Luxe 6	6	Spec. 8	De Luxe 8	Cust- om 8
...	BO 46928	Heat indicator adaptor (with angle "T")		..	..	..	..	..	..
...	BO 46929	Special nipple (3/8" pipe thread, used in adaptor 46928)		..	..	..	..	..	..
...	BO 46930	Heat indicator adaptor (Straight)		..	..	..	..	..	..
...	BO 46931	HOSE CONNECTING ASSEMBLY (Straight nipple with special nuts and washers)		1	1	1	1	1	1
...	BO 46932	Hose connection and shut off valve		1	1	1	1	1	1
...	BO 46933	Heater hose	7" long	1	1	1	1	1	1
...	BO 46934	Hose clamp		4	4	4	4	4	4
...	BO 46935	Heater venting plug		1	1	1	1	1	1
...	BO 46936	Heater door (Lacquer) Standard		2	2	2	2	2	2
...	BO 46937	Heater door (Chrome and Lacquer) De Luxe		2	2	2	2	2	2
...	BO 71559	Heater door screw		4	4	4	4	4	4
...	BO 71560	Heater door screw fiber washer		8	8	8	8	8	8
...	BZ 46414	Thermostat (Radiator type)		..	1	1	1	1	1
...	BZ 46860	Thermostat (Hose type)		1	..	..	..	..	..
...	BZ 47735	Radiator outlet by-pass connection plug	Rubber	..	1	1	1	1	1

INDEX ILLUSTRATIONS

Axle—Front	4
Axleflex	6
Axle—Rear	8
Brake Control	10
Clutch	36
Electric Hand	44
Engine—Cross Section	26
Frame	24
Steering Gear—Except Hudson Custom "8"	46
Steering Gear—Hudson Custom "8"	48
Transmission	38
Wiring Diagram—Terraplane Special	60
Wiring Diagram—Terraplane De Luxe—Hudson "6"	61
Wiring Diagram—Hudson Special "8"	62
Wiring Diagram—Hudson De Luxe and Custom "8"	63

INDEX

	Page		Page
A	5-7	F	
Axle—Front	5	Fan	33
SteeringSpindle	5	Fenders	56
Tie Rod	5-7	Floor Mats and Pads	59
Axleflex	7	Frame	23
Axle End	7	Cross Members	25
Axle—Rear	7	Fuel Pump	33
Differential and Carrier	9	G	
Drive Shaft	7	Gasoline Tank—Straps and Pipes	51
Housing	9	H	
Wheel Bearings		Heater	73
B	68	Horn	69
Battery	55	I	
Bonnet	11	Instruments and Mounting	69
Brakes	21	L	
Bumpers		Lamps	
C	33	Head	65
Carburetor	35	Tail and Stop	66-67
Clutch	67	M	
Coil		Muffler and Exhaust Pipes	52
Controls—	12	P	
Brake Control	37	Propeller Shaft and Universal Joint	47
Clutch Control	37-39	R	
Clutch Vacuum Control	13	Radiator	53
Hand Brake—Floor Type	13-14	Core	53
Hand Brake—Under Dash Type	14	Shell and Grill	54
Pedals	34-35	Radio	71
Throttle	43	Running Boards	58
Transmission—Conventional	43	S	
Transmission—Electric Hand		Shock Absorbers	21
D	50	Splash Guards	58
Drag Link		Engine and Rear	58
E		Springs—Front	18
Engine	25	Springs—Rear	19
Camshaft	30	Stabilizer—Rear Spring	20
Connecting Rod	31	Starting Motor	68
Cylinder	27	Steering Gear	47-50
Distributor Mounting	67	Switches—Lamp and Lighting	68
Exhaust Manifold	28	T	
Flywheel and Crankshaft	29	Tire Cover	17
Generator and Control	67	Tools	59
Intake Manifold	29	Transmission	39-42
Oil Pan	32	Transmission Control	43
Oil Pipes and Fittings	33	Hill Hold	42
Oil Pump and Check Valve	32	W	
Piston	31	Wheels	15
Timing Gears and Cover	33	Wheel Carrier—Rear	15
Valves	31	Wheel Carrier—Side	16
Vibration Dampener	31	Windshield Cleaner	69
Water Pump	33	Wiring	64

