

**PRELIMINARY**

**1936**

**HUDSON**

—

**TERRAPLANE**

•

**PARTS BOOK**

•

**HUDSON MOTOR CAR COMPANY  
DETROIT, MICHIGAN**

## CHASSIS MODELS

Terraplane DeLuxe--Six Cylinder--115" Wheelbase  
Numbered 61101 and Upward

Terraplane Custom--Six Cylinder--115" Wheelbase  
Numbered 62101 and Upward

Hudson DeLuxe--Six Cylinder--120" Wheelbase  
Numbered 63101 and Upward

Hudson DeLuxe--Eight Cylinder--120" Wheelbase  
Numbered 64101 and Upward

Hudson Custom--Eight Cylinder--120" Wheelbase  
Numbered 65101 and Upward

Hudson DeLuxe--Eight Cylinder--127" Wheelbase  
Numbered 66101 and Upward

Hudson Custom--Eight Cylinder--127" Wheelbase  
Numbered 67101 and Upward

- - - - -

Terraplane Engines--Six Cylinder  
Numbered 157000 and Upward

Hudson Engines--Six Cylinder  
Numbered 79000 and Upward

Hudson Engines--Eight Cylinder  
Numbered 1000 and Upward

- - - - -

\* Designates Non-Interchangeable Parts.

## INSTRUCTIONS

## FOR ORDERING PARTS

1. Order parts through the nearest Distributor or Dealer.
2. Always give PART NUMBER and NAME of each part ordered.
3. SPECIFY SERIAL NUMBER, BODY MODEL AND COLOR ON ALL PAINTED AND TRIMMED PARTS.
4. Mail and Parcel Post orders should be accompanied by an amount sufficient to cover POSTAGE.
5. Specify how shipments are to be made.
6. Orders for parts should be written separately from correspondence pertaining to other matters.

## TELEGRAPH CODE

To save expense, to expedite ordering and for your convenience we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts:

WUPAH--Ship to me (us) by express.  
WUPEL--Ship by express to  
WUPIP--Ship to me (us) by freight.  
WUPMU--Ship to me (us) by parcel post.  
WUPOW--Ship to me (us) by parcel post special delivery.  
WUPRY--Ship to me (us) by air mail.  
WUPTA--Ship to me (us) by air express.  
WURCI--When and how did you ship parts called for in  
my (our) telegram of  
WUREK--When and how will you ship parts called for in  
my (our) telegram of  
WUROV--When and how will you ship parts called for in  
my (our) letter of  
WURSY--Please wire shipping date of our order

PART NO.	DESCRIPTION	61	62	63	64	65	66	67	
<b>FRONT AXLE</b>									
C	150260	Front Axle Assembly	*	1	1				
C	150262	Front Axle Assembly	*			1			
C	150264	Front Axle Assembly	*				1	1	
C	150270	Front Axle Center Assembly	*	1	1	1	1	1	
BX	42143	Pivot Pin Thrust Washer & Ball Cup Assembly		2	2	2	2	2	
F	42145	Pivot Pin Bushing		2	2	2	2	2	
<b>STEERING SPINDLE</b>									
BX	150570	Steering Spindle--R.H	*	1	1	1	1	1	
BX	150571	Steering Spindle--L.H	*	1	1	1	1	1	
BM	14112	Expansion Plug-1"		2	2	2	2	2	
F	42144	Pivot Pin		2	2	2	2	2	
F	42145	Pivot Pin Bushing		2	2	2	2	2	
BX	42143	Pivot Pin Thrust Washer and Ball Cup Assembly		2	2	2	2	2	
BX	103	Pivot Pin Thrust Ball		10	10	10	10	10	
BX	43539	Pivot Pin Shim--Thin		As Required					
BX	40017	Pivot Pin Shim--Medium		As Required					
BX	40018	Pivot Pin Shim--Thick		As Required					
BX	71206	Spindle to Backing Plate Bolt		8	8	8	8	8	
BZ	62	Spindle to Backing Plate Bolt Nut		8	8	8	8	8	
BX	71608	Spindle Nut	*	2	2	2	2	2	
BX	150572	Spindle Washer	*	2	2	2	2	2	
BX	71154	Spindle Pivot Pin Key		2	2	2	2	2	
F	43797	Spindle Grease Washer Retainer Assembly		2	2	2	2	2	
BX	40020	Washer Retainer--Inner		2	2	2	2	2	
BX	43798	Washer Retainer--Outer		2	2	2	2	2	
BX	40022	Washer--Felt		2	2	2	2	2	
BX	44514	Steering Arm--R.H		1	1	1	1	1	
BX	47057	Steering Arm--L.H		1	1	1	1	1	
BX	71156	Steering Arm Nut		2	2	2	2	2	
BZ	70906	Steering Arm Washer		2	2	2	2	2	
BX	40172	Wheel Grease Deflector		2	2	2	2	2	
<b>TIE ROD</b>									
C	150757	Tie Rod Assembly	*	1	1	1			
C	150758	Tie Rod Assembly	*				1	1	
C	150768	Tie Rod	*	1	1	1			
C	44519	Tie Rod					1	1	
BX	150769	Tie Rod End Assembly--R.H	*	1	1	1			
BX	150770	Tie Rod End Assembly--L.H	*	1	1	1			
BX	150771	Tie Rod End Assembly--R.H	*				1	1	
BX	150772	Tie Rod End Assembly--L.H	*				1	1	
BX	71156	Tie Rod End Stud Nut		2	2	2	2	2	
BX	150777	Tie Rod End Dirt Seal--Outer	*	2	2	2	2	2	
BX	150778	Tie Rod End Dirt Seal--(Outer Rubber)	*	2	2	2	2	2	
BX	150788	Tie Rod End Dirt Seal Spring	*	2	2	2	2	2	
BX	150784	Tie Rod Clamp	*	2	2	2	2	2	
BX	45460	Tie Rod Clamp							
BX	70200	Tie Rod Clamp Bolt		2	2	2	2	2	
BX	71269	Tie Rod Clamp Bolt							
BO	12481	Tie Rod Clamp Bolt Nut--5/6"-4-7/64"		2	2	2	2	2	
<b>FRONT AXLE - R.H.D.</b>									
C	150261	Front Axle Assembly	*	1	1				
C	150263	Front Axle Assembly	*			1			
C	150265	Front Axle Assembly	*				1	1	
BX	47058	Steering Spindle Arm--R.H		1	1	1	1	1	
BX	44517	Steering Spindle Arm--L.H		1	1	1	1	1	
<b>FRONT AXLE TO FRAME ARM</b>									
C	150554	Front Axle to Frame Arm	*	2	2				
C	150555	Front Axle to Frame Arm	*			2	2	2	
BX	150560	Front Axle to Frame Arm Bolt	*	2	2	2	2	2	
BX	71155	Front Axle to Frame Arm Bolt Nut		2	2	2	2	2	

Part No.	Description	61	62	63	64	65	66	67
<b>FRONT AXLE TO FRAME ARM Cont'd</b>								
BX 150561	Front Axle to Frame Arm Grommet * 4	* 4	4	4	4	4	4	4
BX 150558	Front Axle to Frame Arm to Yoke Bolt Upper * 2	* 2	2	2	2	2	2	2
BM 8149	Front Axle to Frame Arm to Yoke Bolt Washer-- Upper 2	2	2	2	2	2	2	2
BX 150563	Front Axle to Frame Arm to Yoke Bolt Lock * 2	* 2	2	2	2	2	2	2
BX 151583	Front Axle to Frame Arm Angle Spacer * 2	* 2	2	2	2	2	2	2
BX 150564	Front Axle to Frame Arm Angle Spacer							
BX 150559	Front Axle to Frame Arm to Yoke Bolt Lower * 2	* 2	2	2	2	2	2	2
BX 71155	Front Axle to Frame Arm to Yoke Bolt Nut 2	2	2	2	2	2	2	2
BX 150556	Front Axle to Frame Arm Yoke * 2	* 2	2	2	2	2	2	2
BX 150557	Front Axle to Frame Arm Pivot * 2	* 2	2	2	2	2	2	2
BT 398	Front Axle to Frame Arm Pivot. Bolt Nut 2	2	2	2	2	2	2	2

**REAR AXLE**

C 150050	Rear Axle Assembly	4 1/9	*	1	1	1			
		to							
C 150051	Rear Axle Assembly	1	*			1	1	1	1
C 150052	Rear Axle Assembly	4 5/9	*	1	1	1			
		to							
C 150053	Rear Axle Assembly	1	*			1	1	1	1
C 150059	Housing Assembly (Complete Less Brake Shoes)		*	1	1	1			
C 150060	Housing Assembly (Complete Less Brake Shoes)		*			1	1	1	1
BZ 326	Housing to Backing Plate Rivet-5/16" x 3/4"			4	4	4	4	4	4
BM 120	Hole Plug			2	2	2	2	2	2
BM 1491	Drain Plug			1	1	1	1	1	1

**DIFFERENTIAL AND CARRIER**

C 150054	Differential Carrier & Gear Set Assy		*	1	1	1	1	1	1
F 44539	Drive Gear and Pinion (Matched and Wired)	4 1/9		1	1	1	1	1	1
		to							
F 42256	Drive Gear	1		1	1	1	1	1	1
F 44542	Drive Pinion			1	1	1	1	1	1
BX 150055	Differential Carrier and Gear Set Assembly	4 5/9		1	1	1	1	1	1
F 44540	Drive Gear and Pinion (Matched and Wired)	to		1	1	1	1	1	1
		1							
F 44541	Drive Gear			1	1	1	1	1	1
F 44542	Drive Pinion			1	1	1	1	1	1
BX 46657	Drive Gear and Pinion (Matched and Wired)	3 8/9		1	1	1	1	1	1
		to							
BX 43565	Drive Gear	1		1	1	1	1	1	1
BX 46658	Drive Pinion	1		1	1	1	1	1	1
BX 48670	Drive Gear and Pinion--Matched	3 5/9		1	1	1	1	1	1
BX 48671	Drive Gear	to		1	1	1	1	1	1
BX 48672	Drive Pinion	1		1	1	1	1	1	1
BZ 71178	Drive Gear Screw--3/8"-4 x 7/8"			6	6	6	6	6	6
BX 40157	Drive Gear Screw Lock			3	3	3	3	3	3
BM 71261	Drive Pinion Nut--7/8"-18 x 9/16"			1	1	1	1	1	1
BM 71051	Drive Pinion Washer			1	1	1	1	1	1
BX 44580	Differential Carrier and Cap Assembly			1	1	1	1	1	1
BX 71480	Bearing Cap Screw--Plain 7/16"-14 x "			4	4	4	4	4	4
BO 70867	Bearing Cap Screw Lock Washer--7/8" Shakeproof			4	4	4	4	4	4
BX 150072	Differential Case and Stud Assembly		*	1	1	1	1	1	1
BX 71248	Differential Case and Stud			4	4	4	4	4	4
BZ 124	Differential Case Stud Nut			4	4	4	4	4	4
BX 42272	Differential Gear			2	2	2	2	2	2
BX 41225	Differential Gear Thrust Washer			2	2	2	2	2	2
BX 40190	Differential Pinion			2	2	2	2	2	2
BX 41126	Differential Pinion Thrust Washer			2	2	2	2	2	2
EX 40191	Differential Pinion Shaft			1	1	1	1	1	1
BZ 71175	Differential Pinion Shaft Locating Pin			1	1	1	1	1	1
BX 71281	Differential Bearing Assembly			2	2	2	2	2	2
BX 71282	Bearing Cone			2	2	2	2	2	2
BX 71283	Bearing Cup			2	2	2	2	2	2

Part No.	Description	61	62	63	64	65	66	67
<b>DIFFERENTIAL AND CARRIER Cont'd.</b>								
BX 44578	Differential Bearing Adjusting Nut	2	2	2	2	2	2	2
BX 40194	Differential Bearing Adjusting Nut Lock	2	2	2	2	2	2	2
F 44584	Differential Carrier Gasket	1	1	1	1	1	1	1
BZ 44263	Differential Carrier to Housing Bolt	8	8	8	8	8	8	8
BZ 71237	Differential Carrier to Housing Bolt Nut	8	8	8	8	8	8	8
BO 71076	Differential Carrier to Housing Bolt Lock Washer	8	8	8	8	8	8	8
BX 71181	Pinion Bearing Assembly	2	2	2	2	2	2	2
BX 71182	Bearing Cone	2	2	2	2	2	2	2
BX 71192	Bearing Cup	2	2	2	2	2	2	2
BX 40212	Pinion Rear Bearing Shim--Thin	As Required						
BX 41099	Pinion Rear Bearing Shim--Medium	As Required						
BX 40213	Pinion Rear Bearing Shim--Thick	As Required						
BX 40192	Pinion Rear Bearing Shim Retainer	1	1	1	1	1	1	1
BX 44585	Pinion Bearing Spacer	1	1	1	1	1	1	1
BX 44586	Pinion Bearing Spacer Shim--Thin	As Required						
BX 44587	Pinion Bearing Spacer Shim-Medium	As Required						
BX 44588	Pinion Bearing Spacer Shim--Thick	As Required						
BX 48343	Pinion Oil Seal	1	1	1	1	1	1	1
BX 44590	Pinion Housing Oil Baffle	1	1	1	1	1	1	1
BX 150098	Pinion Companion Flange	1	1	1	1	1	1	1
<b>DRIVE SHAFT</b>								
F 150067	Drive Shaft Assembly * 2 2 2	*	2	2	2	2	2	2
BX 35360	Thrust Button 2 2 2		2	2	2	2	2	2
BX 71577	Drive Shaft Nut 2 2 2		2	2	2	2	2	2
BX 71180	Drive Shaft Key 2 2 2		2	2	2	2	2	2
BX 71055	Drive Shaft Nut Washer 2 2 2		2	2	2	2	2	2
BX 40181	Drive Shaft Thrust Spacer 1 1 1		1	1	1	1	1	1
BX 150069	Drive Shaft Oil Seal Assembly * 2 2 2	*	2	2	2	2	2	2
<b>REAR WHEEL BEARINGS</b>								
BX 150064	Wheel Bearing Adjusting Cap Assembly	*	2	2	2	2	2	2
BX 150066	Oil Seal	*	2	2	2	2	2	2
BX 71595	Wheel Bearing Assembly		2	2	2	2	2	2
BX 71596	Bearing Cone		2	2	2	2	2	2
BX 71185	Bearing Cup		2	2	2	2	2	2
BX 44558	Adjusting Cap Shim--Thin		As Required					
BX 44559	Adjusting Cap Shim--Medium		As Required					
BX 44560	Adjusting Cap Shim--Thick		As Required					
BX 44561	Adjusting Cap Bolt		8	8	8	8	8	8
BX 71237	Adjusting Cap Bolt Nut		8	8	8	8	8	8
<b>BRAKES - FRONT AND REAR</b>								
BX 150975	Backing Plate Assembly--R.H.--Front	*	1	1	1			
BX 150976	Backing Plate Assembly--L.H.--Front	*	1	1	1			
BX 150979	Backing Plate Assembly--R.H.--Front	*				1	1	1
BX 150980	Backing Plate Assembly--L.H.--Front	*				1	1	1
BX 150977	Backing Plate Assembly--R.H.--Rear	*	1	1	1			
BX 150978	Backing Plate Assembly--L.H.--Rear	*	1	1	1			
BX 150981	Backing Plate Assembly--R.H.--Rear	*				1	1	1
BX 150982	Backing Plate Assembly--L.H.--Rear	*				1	1	1
BX 150995	Conduit Abutment Cap	*	2	2	2	2	2	2
BX 45408	Conduit Abutment Cap Felt Seal		2	2	2	2	2	2
BT 71410	Conduit Abutment Cap Bolt		4	4	4	4	4	4
BX 150996	Brake Shoes and Lining Assembly ( Wheel)	*	4	4	4			
BX 150997	Brake Shoes and Lining Assembly ( Wheel)	*				4	4	4
F 151010	Brake Shoes Lining--(Package)	*	1	1	1			
F 151011	Brake Shoes Lining--(Package)	*				1	1	1
BX 151026	Brake Shoe to Anchor Pin Spring	*	8	8	8			
BX 151027	Brake Shoe to Anchor Pin Spring	*				8	8	8
BX 45424	Brake Shoe Hold Down Spring		8	8	8	8	8	8
BX 43379	Brake Shoe Hold Down Spring Pin		8	8	8	8	8	8
BX 37999	Brake Shoe Hold Down Spring Cup		8	8	8	8	8	8

Part No.	Description	61	62	63	64	65	66	67
<b>BRAKES - FRONT AND REAR Cont'd.</b>								
BX 38000	Brake Shoe Hold Down Spring Centralizing Cup	8	8	8	8	8	8	8
BX 151012	Brake Anchor Pin and Shoe Guide Assembly	4	4	4	4	4	4	4
BT 398	Brake Anchor Pin Nut	4	4	4	4	4	4	4
BX 37977	Brake Eccentric Assembly	4	4	4	4	4	4	4
BZ 62	Brake Eccentric Nut	4	4	4	4	4	4	4
BX 40739	Brake Adjusting Screw	4	4	4				
BX 45447	Brake Adjusting Screw				4	4	4	4
BX 40740	Brake Adjusting Screw Pivot Nut	4	4	4				
BX 45448	Brake Adjusting Screw Pivot Nut				4	4	4	4
BX 40741	Brake Adjusting Screw Socket	4	4	4				
BX 45449	Brake Adjusting Screw Socket				4	4	4	4
BX 40742	Brake Adjusting Screw Spring	4	4	4				
BX 37985	Brake Adjusting Screw Spring				4	4	4	4
BX 63974	Brake Adjusting Screw Cover	4	4	4	4	4	4	4
BX 151015	Brake Shoe Cable Lever--R.H	*	1	1				
BX 151016	Brake Shoe Cable Lever--L.H	*	1	1				
BX 151017	Brake Shoe Cable Lever--R.H	*			1	1	1	1
BX 151018	Brake Shoe Cable Lever--L.H	*			1	1	1	1
BX 151019	Brake Shoe Cable Lever to Shoe Pin	*	2	2	2			
BX 151020	Brake Shoe Cable Lever to Shoe Pin	*				2	2	2
BX 62	Brake Shoe Cable Lever to Shoe Pin Nut	*				2	2	2
BX 151021	Brake Shoe Cable Lever to Shoe Pin Spring	*	2	2	2			
BX 151022	Brake Shoe Cable Lever Strut	*	2	2	2			
BX 151023	Brake Shoe Cable Lever Strut--R.H	*				1	1	1
BX 151024	Brake Shoe Cable Lever Strut--L.H	*				1	1	1
BX 151021	Brake Shoe Cable Lever Strut to Lever Spring	*	2	2	2	2	2	2
BX 151025	Brake Shoe Cable Lever to Shoe Spring	*	2	2	2	2	2	2
BX 151028	Brake Shoe to Anchor Bracket Spring	*	2	2	2			
BX 151029	Brake Shoe to Anchor Bracket Spring	*				2	2	2
BX 151030	Brake Shoe to Cylinder Link		8	8	8	8	8	8
BX 3820	Brake Cylinder to Backing Plate Nut		8	8	8	8	8	8

**BRAKE CONTROL**

BZ 150510	Brake Control Lever Assembly	*	1	1	1	1	1	1
BZ 33980	Control Lever Return Spring		1	1	1	1	1	1
BZ 43033	Control Lever Bushing		2	2	2	2	2	2
BZ 150514	Control Lever Bracket and Pivot Pin	*	1	1	1	1	1	1
BM 219	Control Lever Bracket Bolt		2	2	2	2	2	2
BZ 122	Control Lever Bracket Bolt Nut		2	2	2	2	2	2
BZ 47348	Control Lever Pivot Pin Felt		1	1	1	1	1	1
BZ 150500	Push Rod--(To Brake Control Lever)	*	1	1	1	1	1	1
BZ 150681	Push Rod Adjustable End	*	1	1	1	1	1	1
BZ 62	Push Rod Adjustable End Lock Nut		2	2	2	2	2	2
BZ 47352	Push Rod Adjusting End Tension Spring		2	2	2	2	2	2
BZ 8683	Push Rod Yoke Clevis Pin (Pedal)		1	1	1	1	1	1
BZ 150498	Pull Rod Assembly--(To Master Cylinder Lever)	*	1	1	1	1	1	1
BZ 150682	Pull Rod Lever--(Floor Type)		1	1	1	1	1	1
BZ 150520	Pull Rod Lever--(Dash Type)	*		1	1	1	1	1
BZ 150522	Pull Rod Lever Return Spring	*	1	1	1	1	1	1
BZ 30868	Pull Rod Lever Return Spring Clip		1	1	1	1	1	1
BZ 5777	Pull Rod Adjustable End		1	1	1	1	1	1
BZ 70301	Pull Rod Adjustable End Clevis Pin		1	1	1	1	1	1
BZ 12481	Pull Rod Adjustable End Nut		1	1	1	1	1	1
BZ 8683	Pull Rod Clevis Pin		1	1	1	1	1	1
BZ 150519	Brake Control Lever Cable Toggle	*	1	1	1	1	1	1
BZ 18251	Brake Control Lever Cable Swivel Pin	*	1	1	1	1	1	1
C 151193	Rear Brake Cable Assembly--R.H	*	1	1	1	1		
C 151194	Rear Brake Cable Assembly--L.H	*	1	1	1	1		
C 151195	Rear Brake Cable Assembly--R.H	*						1
C 151196	Rear Brake Cable Assembly--L.H	*						1
BZ 5777	Rear Brake Cable Clevis		2	2	2	2	2	2
BO 12481	Rear Brake Cable Nut		2	2	2	2	2	2
BZ 8683	Rear Brake Cable Clevis Pin		2	2	2	2	2	2
BZ 47375	Rear Brake Cable Mounting Bracket		2	2	2	2	2	2

Part No.	Description	61	62	63	64	65	66	67
<b>BRAKE CONTROL Cont'd.</b>								
BZ 12275	Rear Brake Cable Mounting Bracket Bolt	2	2	2	2	2	2	2
BZ 122	Rear Brake Cable Mounting Bracket Bolt Nut	2	2	2	2	2	2	2
BZ 150677	Rear Brake Cable Support Bracket--Rear	* 2	2	2	2	2	2	2
BZ 904	Rear Brake Cable Support Bracket Bolt	3	3	3	3	3	3	3
BM 110	Rear Brake Cable Support Bracket Bolt Nut	3	3	3	3	3	3	3
BZ 150761	Master Cylinder Assembly	* 1	1	1	1	1	1	1
BZ 151055	Master Cylinder and Expansion Plug	* 1	1	1	1	1	1	1
BZ 71264	Master Cylinder Expansion Plug	1	1	1	1	1	1	1
BZ 151057	Master Cylinder Filler Cap Assembly	* 1	1	1	1	1	1	1
BZ 151059	Master Cylinder Filler Cap Gasket	* 1	1	1	1	1	1	1
BZ 151064	Master Cylinder Head	* 1	1	1	1	1	1	1
BZ 151065	Master Cylinder Head Gasket	* 1	1	1	1	1	1	1
BZ 151066	Master Cylinder Outlet Fitting	* 1	1	1	1	1	1	1
BZ 151067	Master Cylinder Outlet Fitting Gasket	* 1	1	1	1	1	1	1
BZ 151068	Master Cylinder Outlet Fitting Bolt	* 1	1	1	1	1	1	1
BZ 151069	Master Cylinder Outlet Fitting Bolt Gasket	* 1	1	1	1	1	1	1
BZ 151070	Master Cylinder Piston Complete	* 1	1	1	1	1	1	1
BZ 151073	Master Cylinder Piston Cup--Primary	* 1	1	1	1	1	1	1
BZ 151077	Master Cylinder Piston Stop Plate	* 1	1	1	1	1	1	1
BZ 151078	Master Cylinder Piston Stop Plate Lock Wire	* 1	1	1	1	1	1	1
BZ 151079	Master Cylinder Piston Spring Assembly	* 1	1	1	1	1	1	1
BZ 151082	Master Cylinder Check Valve Assembly	* 1	1	1	1	1	1	1
BZ 151083	Master Cylinder Check Valve Cup	* 1	1	1	1	1	1	1
BZ 151084	Master Cylinder Check Valve Retainer	* 1	1	1	1	1	1	1
BZ 151085	Master Cylinder Check Valve Seat	* 1	1	1	1	1	1	1
BZ 151086	Master Cylinder Push Rod Assembly	* 1	1	1	1	1	1	1
BZ 151089	Master Cylinder Push Rod Guide	* 1	1	1	1	1	1	1
BZ 151090	Master Cylinder Push Rod Guide Strap (Small).	* 1	1	1	1	1	1	1
BZ 151091	Master Cylinder Push Rod Guide Strap (Large)	* 1	1	1	1	1	1	1
BZ 150529	Master Cylinder Mounting Bracket	* 1	1	1	1	1	1	1
BO 71306	Master Cylinder to Mounting Bracket Bolt	3	3	3	3	3	3	3
BM 71081	Master Cylinder Mounting Bracket Bolt	3	3	3	3	3	3	3
BM 110	Master Cylinder to Bracket Bolt Nut	3	3	3	3	3	3	3
BM 122	Master Cylinder Mounting Bracket Bolt Nut	3	3	3	3	3	3	3
BZ 150531	Master Cylinder Operating Lever Assembly	* 1	1	1	1	1	1	1
BZ 150533	Master Cylinder Operating Lever Bushing	* 1	1	1	1	1	1	1
BZ 150534	Master Cylinder Operating Lever Pivot Bolt	* 1	1	1	1	1	1	1
BZ 70548	Master Cylinder Operating Lever Clevis Pin	1	1	1	1	1	1	1
BZ 151031	Wheel Cylinder Assembly--R.H	* 1	1	1	1	1	1	1
BZ 151032	Wheel Cylinder Assembly--L.H	* 1	1	1	1	1	1	1
BZ 151094	Wheel Cylinder Piston	* 8	8	8	8	8	8	8
BZ 151095	Wheel Cylinder Piston Cup	* 8	8	8	8	8	8	8
BZ 151096	Wheel Cylinder Piston Cup Spring	* 4	4	4	4	4	4	4
BZ 151097	Wheel Cylinder End Guard	* 8	8	8	8	8	8	8
BZ 151098	Wheel Cylinder. Bleeder Screw	* 4	4	4	4	4	4	4
BZ 151099	Wheel Cylinder Tube Fitting--(Rear)	* 2	2	2	2	2	2	2
BZ 151100	Wheel Cylinder Tube Fitting Gasket	* 2	2	2	2	2	2	2
BZ 151101	Wheel Cylinder Hose Assembly	* 3	3	3	3	3	3	3
BZ 151100	Wheel Cylinder Hose Gasket	* 3	3	3	3	3	3	3
BZ 5663	Wheel Cylinder Hose Nut	3	3	3	3	3	3	3
BZ 151035	Tube Assembly--(Master Cylinder to L.H. Front Hose)	* 1	1					
BZ 151037	Tube Assembly--(Master Cylinder to L.H. Front Hose)			1	1	1	1	1
BZ 151039	Tube Assembly--(Master Cylinder to R.H. Front Hose)	* 1	1					
BZ 151041	Tube Assembly--(Master Cylinder to R.H. Front Hose)			1				
BZ 151043	Tube Assembly--(Master Cylinder to R.H. Front Hose)				1	1	1	1
BZ 151045	Tube Assembly--(Master Cylinder to Stop Light Tee)	* 1	1					
BZ 151181	Tube Assembly--(Master Cylinder to Stop Light Tee)			1	1	1		



Part No.	Description	61	62	63	64	65	66	67
<b>BRAKE CONTROL Cont'd)</b>								
BZ 151047	Tube Assembly--(Master Cylinder to Stop Light Tee)	*					1	1
BZ 151049	Tube Assembly--(Stop Light Tee to Rear Hose).	#	1	1	1	1	1	1
BZ 151051	Tube Assembly--(Rear Axle Tee to L.H. Rear Wheel)	*	1	1	1	1	1	1
BZ 151053	Tube Assembly--(Rear Axle Tee to R.H. Rear Wheel)		1	1	1	1	1	1
BZ 71622	Tube Nut		22	22	22	22	22	22
BZ 40029	Tube Clip		16	16	16	16	16	16
BZ 151425	Tube Clip--Center		1	1	1	1	1	1
BZ 41030	Tube Clip--Rear		1	1	1	1	1	1
BM 7753	Rear Axle Clip Screw		2	2	2	2	2	2
BZ 151102	Rear Axle Tee	*	1	1	1	1	1	1
BO 18326	Rear Axle Tee Bolt	*	1	1	1	1	1	1
BZ 151103	Stop Light Switch Tee	*	1	1	1	1	1	1
BT 395	Stop Light Switch Tee Bolt		1	1	1	1	1	1
BM 122	Stop Light Switch Tee Bolt but		1	1	1	1	1	1
BZ 151105	Brake Fluid		As Required					

### BRAKE CONTROL - R.H.D

BZ 150511	Brake Control Lever Assembly	*	1	1	1	1	1	1
BZ 150501	Brake Pedal Push Link	*	1	1	1	1	1	1
BZ 71380	Brake Pedal Push Link Clevis Pin		1	1	1	1	1	1
BZ 150502	Brake Pedal Push Link Double End Lever Assy	*	1	1	1	1	1	1
BZ 43033	Brake Pedal Double End Lever Bushing		1	1	1	1	1	1
BZ 70301	Brake Pedal Double End Lever Clevis Pin		1	1	1	1	1	1
BZ 18251	Brake Pedal Double End Lever Clevis Pin		1	1	1	1	1	1
BZ 47999	Brake Pedal Double End Lever Pivot Bolt		1	1	1	1	1	1
BZ 124	Brake Pedal Double End Lever Pivot Bolt Nut .		1	1	1	1	1	1
BZ 150504	Double End Lever Mounting Bracket Assembly	*	1	1	1	1	1	1
BZ 150683	Double End Lever and Mounting Bracket	*	1	1	1	1	1	1
BZ 150521	Brake Control Hand Brake Cable Lever	*	1	1	1	1	1	1
BZ 151501	Brake Control Hand Brake Cable Lever Return Spring		1	1	1	1	1	1
BZ 150509	Double End Lever Pull Rod	*	1	1	1	1	1	1
BZ 70548	Double End Lever Pull Rod Clevis Pin		1	1	1	1	1	1
BZ 46687	Pull Rod Play Link		1	1	1	1	1	1
BO 12481	Pull Rod Nut		2	2	2	2	2	2
BZ 150530	Master Cylinder Mounting Bracket	*	1	1	1	1	1	1
BZ 45177	Brake Pedal Link Return Spring		1	1	1	1	1	1
BZ 33980	Brake Pedal Push Link Return Spring		1	1	1	1	1	1
BZ 30868	Brake Pedal Push Link Return Spring Clip		1	1	1	1	1	1
BM 219	Double End Lever Bracket Bolt		4	4	4	4	4	4
BZ 122	Double End Lever Bracket Bolt Nut		4	4	4	4	4	4

### HAND BRAKE - FLOOR TYPE

BT 47831	Hand Brake Lever Assembly	1
BT 45239	Pawl and Rod Assembly	1
BT 36318	Pawl Spring	1
BT 36319	Pawl Button	1
BT 36320	Pawl Button Pin	1
BT 36321	Pawl Spring Cup	1
BZ 2404	Lever Ratchet to Bracket Bolt	2
BM 110	Lever Ratchet to Bracket Bolt Nut	2
BT 47832	Lever Ratchet to Bracket Spacer	2
BZ 18251	Lever Pawl Clevis Pin	1
BT 44928	Lever Bracket	1
BM 219	Lever Bracket Bolt	1
BZ 122	Lever Bracket Bolt Nut	1
BT 45361	Lever Bracket Bolt Nut Retainer Assembly	2
BO 70096	Lever Bracket Bolt Upper	2
BT 44929	Lever to Bell Crank Rod Assembly	1
BT 40443	Lever to Bell Crank Rod Retainer Spring	1
BZ 18251	Lever to Bell Crank Rod Clevis Pin--Pawl End	1

Part No.	Description	61	62	63	64	65	66	67
<b>HAND BRAKE - FLOOR TYPE Cont'd.</b>								
BZ	8683	Lever to Bell Crank Rod Clevis Pin--Lever End	1					
BT	30868	Lever Bell Crank and Rod Return Spring Clip	1					
BT	44931	Lever Bell Crank	1					
BT	44932	Lever Bell Crank Pivot Bolt	1					
BZ	62	Lever Bell Crank Pivot Bolt Nut	1					
BT	44933	Lever Bell Crank to Bracket Spacer	1					
BT	22699	Lever Bell Crank to Bracket, Spacer Spring	1					
BT	150669	Lever Bell Crank to Control Lever Rod	*	1				
BZ	5777	Control Lever Rod Clevis	1					
BO	12481	Control Lever Rod Nut	1					
<b>HAND BRAKE - DASH TYPE</b>								
BT	150652	Hand Brake Grip	*	1	1	1	1	1
BT	71653	Hand Brake Grip Pin		1	1	1	1	1
BT	150654	Hand Brake Mounting Bracket	*	1	1	1	1	1
BZ	71359	Mounting Bracket to Instrument Panel Bolt		2	2	2	2	2
BO	12481	Mounting Bracket to Instrument Panel Bolt Nut		2	2	2	2	2
BZ	70692	Mounting Bracket to Dash Bolt		2	2	2	2	2
BZ	122	Mounting Bracket to Dash Bolt Nut		2	2	2	2	2
BT	150656	Mounting Bracket Support	*	1	1	1	1	1
BZ	71649	Hand Brake Support to Dash Screw		2	2	2	2	2
BZ	70874	Hand Brake Support to Dash Screw Nut		2	2	2	2	2
BT	150657	Hand Brake Ratchet Rod	*	1	1	1	1	1
BZ	8683	Hand Brake Ratchet Rod Clevis Pin		1	1	1	1	1
BT	150658	Hand Brake Ratchet Rod Lock Spring	*	2	2	2	2	2
BZ	6440	Hand Brake Ratchet Rod Lock Spring Spacer		4	4	4	4	4
BT	150659	Hand Brake Ratchet Rod Housing	*	1	1	1	1	1
BX	3820	Hand Brake Ratchet Rod Housing Bolt (Short)		1	1	1	1	1
BZ	70752	Hand Brake Ratchet Rod Housing Bolt (Long)		2	2	2	2	2
BZ	122	Hand Brake Ratchet Rod Housing Bolt Nut		3	3	3	3	3
BT	150660	Hand Brake Ratchet Stabilizer--Inner	*	1	1	1	1	1
BT	150661	Hand Brake Ratchet Stabilizer--Outer	*	1	1	1	1	1
BT	150662	Hand Brake Ratchet Stabilizer Spring	*	1	1	1	1	1
BT	150665	Hand Brake Cable and Conduit Assembly	*	1	1	1	1	1
BZ	5777	Hand Brake Cable Clevis--(Control Lever End)		1	1	1	1	1
BO	12481	Hand Brake Cable Clevis Lock Nut		1	1	1	1	1
BZ	8683	Hand Brake Cable Clevis Pin		1	1	1	1	1
BT	150666	Hand Brake Cable to Dash Retainer	*	1	1	1	1	1
BT	150667	Hand Brake Support Bracket	*	1	1	1	1	1
BM	219	Hand Brake Support Bracket Bolt		2	2	2	2	2
BZ	122	Hand Brake Support Bracket Bolt Nut		2	2	2	2	2
BZ	71554	Hand Brake Cable Conduit Support		1	1	1	1	1
HA	151437	Hand Brake Kit--(Service)		1				
<b>PEDALS</b>								
BZ	40301	Brake Pedal Assembly		1	1	1	1	1
BZ	40676	Clutch Pedal Assembly		1	1	1	1	1
BZ	150699	Pedal Pad Cover	*	2	2	2	2	2
BZ	42982	Clutch Pedal Lever Assembly		1	1	1	1	1
BZ	40308	Clutch Pedal Lever Bushing		2	2	2	2	2
BZ	150407	Brake Pedal Lever Assembly	*	1	1	1	1	1
BZ	40308	Brake Pedal Lever Bushing		2	2	2	2	2
BZ	33980	Brake Pedal Lever Return Spring		1	1	1	1	1
BZ	30868	Brake Pedal Lever Return Spring Clip		1	1	1	1	1
BZ	12310	Pedal Lever Bolt		2	2	2	2	2
BZ	62	Pedal Lever Bolt Nut		2	2	2	2	2
BZ	40309	Pedal Lever Shaft		1	1	1	1	1
BZ	71174	Pedal Lever Shaft Taper Pin		1	1	1	1	1
BZ	42990	Pedal Bracket		1	1	1	1	1
BM	219	Pedal Bracket Screw		3	3	3	3	3
BZ	44978	Pedal Toe Plate Bumper		2	2	2	2	2
BZ	44998	Pedal Toe Plate Bumper Spring		1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>PEDALS - R.H.D.</b>								
BZ 40319	Clutch Pedal Assembly 1	1	1	1	1	1	1	1
BZ 42983	Clutch Pedal Lever Assembly 1	1	1	1	1	1	1	1
BZ 40323	Brake Pedal Lever 1	1	1	1	1	1	1	1
BZ 2354	Brake Pedal Lever Pin 2	2	2	2	2	2	2	2
BZ 45158	Pedal Lever Return Spring 1	1	1	1	1	1	1	1
BZ 30868	Brake Pedal Lever Return Spring Clip 2	2	2	2	2	2	2	2
BZ 150409	Pedal Lever Shaft Assembly 1	1	1	1	1	1	1	1
BZ 150413	Pedal Bracket Assembly 1	1	1	1	1	1	1	1
BZ 40308	Pedal Bracket Bushing 3	3	3	3	3	3	3	3

### WHEELS

C 150431	Wheel Assembly--Steel Artillery	*	5	5	5	5	5	5
BZ 42964	Hub Bolt		20	20	20	20	20	20
BZ 150433	Hub Cap--Outer--Standard	*	4	4				
BZ 150434	Hub Cap--Outer--Standard	*			4			
BZ 150435	Hub Cap--Outer--Standard	*				4	4	
BZ 150754	Hub Cap--Outer--Standard	*					4	4
BZ 150752	Hub Cap--Outer--Special	*	4	4				
BZ 150753	Hub Cap--Outer--Special	*			4			
BZ 150754	Hub Cap--Outer--Special	*				4		4
BZ 150713	Hub Cap Clip		5	5	5	5	5	5
BZ 9152	Hub Cap Clip Rivet		5	5	5	5	5	5
C 150437	Hub Assembly--(With Brake Drum and Bearing Cups)	*	2	2	2			
C 150438	Hub Assembly--(With Brake Drum and Bearing Cups)	*				1	1	1
BZ 37878	Brake Drum Rivet		20	20	20	20	20	20
BZ 150451	Brake Drum Inspection Hole Cover	*	4	4	4	4	4	4
BZ 40558	Hub Cap (Inner)--Front Wheels		2	2	2	2	2	2
BZ 71213	Front Wheel Bearing Assembly--Inner		2	2	2	2	2	2
BZ 71214	Cone		2	2	2	2	2	2
BZ 71215	Cup		2	2	2	2	2	2
BZ 71210	Front Wheel Bearing Assembly--Outer		2	2	2	2	2	2
BZ 71211	Cone		2	2	2	2	2	2
BZ 71212	Cup		2	2	2	2	2	2
BZ 150442	Hub Assembly--Rear	*	2	2	2			
BZ 150443	Hub Assembly--Rear	*				2	2	2
BZ 150449	Brake Drum--(Rear) Dust Shield	*	2	2	2			
BZ 150450	Brake Drum--(Rear) Dust Shield	*				2	2	2
BZ 70126	Brake Drum--(Rear) Dust Shield Screw		6	6	6	6	6	6
BO 46428	Tire Tube Valve Stem Extension (For Tire Carrier)		1	1	1	1	1	1

### SPARE WHEEL CARRIER - REAR

BROUGHAM--SEDAN

BO 116278	Spare Tire Clamp Anchor Bracket	*	1	1	1	1	1	1
BO 70480	Spare Tire Clamp Anchor Bracket Bolt		1	1	1	1	1	1
BO 70295	Spare Tire Clamp Anchor Bracket Rivet		4	4	4	4	4	4
BO 116274	Spare Tire Clamp	*	1	1	1	1	1	1
BM 113	Spare Tire Clamp Bolt		1	1	1	1	1	1
BO 117218	Spare Tire Wedge Block	*	2	2	2	2	2	2
BO 117434	Spare Tire Wedge Strap--R.H	*	1	1	1	1	1	1
BO 117435	Spare Tire Wedge Strap--L.H	*	1	1	1	1	1	1

### SPARE WHEEL CARRIER - REAR

COUPES

C 117321	Spare Wheel Carrier Assembly	*	1	1	1	1	1	1
BZ 100467	Spare Wheel Carrier Pilot Stud		2	2	2	2	2	2
BZ 100466	Spare Wheel Carrier Lock Stud		1	1	1	1	1	1
BZ 96858	Spare Wheel Carrier Lock Stud Nut		1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>SPARE WHEEL CARRIER - REAR Cont'd</b>								
COUPES								
BZ	117335	Spare Wheel Carrier Lock Cage Assembly	*	1	1	1	1	1
BZ	107956	Spare Wheel Carrier Brace Ferrule		2	2	2	2	2
BX	1061	Spare Wheel Carrier Attaching Bolt		4	4	4	4	4
BX	12415	Spare Wheel Carrier Attaching Bolt Nut		4	4	4	4	4
BZ	117073	Spare Wheel Carrier Frame Bracket	*	1	1	1	1	1
BZ	70883	Spare Wheel Carrier Frame Bracket Bolt		4	4	4	4	4
BO	70674	Spare Wheel Carrier Frame Bracket Bolt Nut		4	4	4	4	4
BZ	117072	Spare Wheel Carrier Support	*	1	1	1	1	1
BX	1061	Spare Wheel Carrier Support to Frame Bolt		2	2	2	2	2
BX	12415	Spare Wheel Carrier Support to Frame Bolt Nut		2	2	2	2	2
BZ	109323	Spare Wheel Tire Lock Assembly		1	1	1	1	1
BZ	118149	Spare Wheel Tire Lock Cylinder and Keys	*	1	1	1	1	1
<b>SPARE WHEEL CARRIER - SIDE MOUNT</b>								
C	117814	Side Wheel Carrier Complete--R.H	*	1	1			
C	117815	Side Wheel Carrier Complete--L.H	*	1	1			
C	117816	Side Wheel Carrier Complete--R.H	*			1	1	1
C	117817	Side Wheel Carrier Complete--L.H	*			1	1	1
C	117806	Side Wheel Carrier--R.H	*	1	1	1	1	1
C	117807	Side Wheel Carrier--L.H	*	1	1	1	1	1
BO	117094	Side Wheel to Cowl Bracket Assembly--R.H.	*	1	1	1	1	1
BO	117095	Side Wheel to Cowl Bracket Assembly--L.H.	*	1	1	1	1	1
BO	12264	Side Wheel to Cowl Bracket to Pillar Rivet		2	2	2	2	2
BO	9159	Side Wheel to Cowl Bracket to bowl Bolt		3	3	3	3	3
BZ	70676	Side Wheel to Cowl Bracket to Cowl Bolt Nut .		3	3	3	3	3
BZ	117754	Side Wheel Clamp Anchor Bracket--R.H	*	1	1			
BZ	117755	Side Wheel Clamp Anchor Bracket--L.H	*	1	1			
BZ	117756	Side Wheel Clamp Anchor Bracket--R.H	*			1	1	1
BZ	117757	Side Wheel Clamp Anchor Bracket--L.H	*			1	1	1
BZ	10214	Side Wheel Clamp Anchor Bracket Bolt		1	1	1	1	1
BO	108640	Dash Bracket to Carrier Screw Brace		1	1			
BO	108642	Dash Bracket to Carrier Screw Brace--R.H.				1	1	1
BO	108643	Dash Bracket to Carrier Screw Brace--L.H.				1	1	1
BZ	117808	Side Wheel Carrier Screw	*	1	1	1	1	1
BT	71174	Side Wheel Carrier Screw Taper Pin		1	1	1	1	1
BO	108856	Side Wheel Carrier Screw End		1	1	1	1	1
BO	102486	Side Wheel Carrier Screw End Seat		1	1	1	1	1
'BO	102488	Dash Bracket to Carrier Screw Clamp Ferrule		1	1	1	1	1
BZ	71216	Dash Bracket to Carrier Screw Brace Nut		2	2	2	2	2
BO	102485	Side Wheel to Carrier Clamp Bolt		1	1	1	1	1
BO	117810	Side Wheel Lock Cage Assembly	*	1	1	1	1	1
BZ	109323	Side Wheel Tire Lock Assembly		1	1	1	1	1
BZ	118419	Side Wheel Tire Lock Cylinder and Keys Assy	*	1	1	1	1	1
BZ	117811	Front Fender Support Tapping Plate		1	1			
BZ	117812	Front Fender Support Tapping Plate				1	1	1
BO	70091	Front Fender Support Tapping Plate Screw		2	2	2	2	2
<b>TIRE COVER - REAR MOUNT - COUPES</b>								
C	118221	Tire Cover Side Plate--(Specify Color)		1	1	1	1	1
C	111476	Tire Cover Ring Assembly		1	1	1	1	1
C	111475	Tire Cover Ring						
C	111469	Tire Cover Ring Moulding		1	1	1	1	1
BO	71328	Tire Cover Ring Moulding Rivet		4	4	4	4	4
BZ	118230	Tire Cover Hub Cap Spring Clip		4	4	4	4	4
BZ	71585	Tire Cover Hub Cap Spring Clip Rivet		4	4	4	4	4
BZ	150433	Tire Cover Hub Cap--Outer		1	1			
BZ	150434	Tire Cover Hub Cap--Outer				1		
BZ	150435	Tire Cover Hub Cap--Outer					1	1

Part No.	Description	61	62	63	64	65	66	67
<b>TIRE COVER - SIDE MOUNT</b>								
C 118233	Tire Cover Ring Assembly	1	1					
C 118238	Tire Cover Ring Assembly							
C 118243	Tire Cover Ring Assembly			1				
C 118235	Tire Cover Ring Moulding	1	1		1	1	1	
C 118240	Tire Cover Ring Moulding			1				
BO 70934	Tire Cover Ring Moulding Rivet	4	4		1	1	1	
BO 71238	Tire Cover Ring Moulding Rivet			4				
BZ 114271	Tire Cover Ring Moulding Spacer	1	1		4	4	4	
C 118228	Tire Cover Side Plate Assembly--R.H. (Specify Color)	1	1	1	1	1	1	
C 118229	Tire Cover Side Plate Assembly--L.H. (Specify Color)	*	1	1	1	1	1	1
BZ 102635	Tire Cover Side Plate Bumper	2	2	2	2	2	2	
BO 70935	Tire Cover Side Plate Bumper Rivet	2	2	2	2	2	2	
BZ 118230	Tire Cover Side Plate Spring Clip	*	5	5	5	5	5	5
BZ 71585	Tire Cover Side Plate Spring Clip Rivet	5	5	5	5	5	5	
BZ 150433	Tire Cover Hub Cap--Outer	*	1	1				
BZ 150434	Tire Cover Hub Cap--Outer			1				
BZ 150435	Tire Cover Hub Cap--Outer				1	1	1	
<b>SPRINGS - FRONT</b>								
F 150477	Front Spring Assembly	*	2	2	2			
F 150478	Front Spring Assembly	*				2	2	2
C	Front Spring Leaf No. 1		2	2	2			
C	Front Spring Leaf No. 2		2	2	2			
C	Front Spring Leaf No. 3		2	2	2			
C	Front Spring Leaf No. 4		2	2	2			
C	Front Spring Leaf No. 5		2	2	2			
C	Front Spring Leaf No. 6		2	2	2			
C	Front Spring Leaf No. 7		2	2	2			
C	Front Spring Leaf No. 8		2	2	2			
C	Front Spring Leaf No. 1					2	2	2
C	Front Spring Leaf No. 2					2	2	2
C	Front Spring Leaf No. 3					2	2	2
C	Front Spring Leaf No. 4					2	2	2
C	Front Spring Leaf No. 5					2	2	2
C	Front Spring Leaf No. 6					2	2	2
C	Front Spring Leaf No. 7					2	2	2
C	Front Spring Leaf No. 8					2	2	2
C	Front Spring Leaf No. 9					2	2	2
	Center Bolt Assembly		2	2	2			
	Center Bolt Assembly					2	2	2
	Rebound Clip No. 1 and 4							
	Rebound Clip No. 2 and 3							
BZ 150468	Center Bolt Cover	*	2	2	2	2	2	2
BZ 150697	Front Spring Seat and Cap Assembly--R.H.	*	1	1	1	1	1	1
BZ 150698	Front Spring Seat and Cap Assembly--L.H.	*	1	1	1	1	1	1
BZ 150473	Front Spring Seat and Cap Seal	*	2	2	2	2	2	2
BZ 150330	Front Spring Bumper	*	2	2	2	2	2	2
BZ 42822	Front Spring U-Bolt Shackle--Front		2	2	2	2	2	2
BZ 150474	Front Spring U-Bolt Shackle--Rear	*	2	2	2	2	2	2
BZ 45291	Shackle Threaded Bushing Assembly		8	8	8	6	6	6
BZ 151288	Shackle Threaded Bushing Assembly	*	8	8	8	8	8	8
BZ 150472	Shackle Threaded Bushing Assembly--Rear Upper	*				2	2	2
BZ 150471	Spring Clip	*	4	4	4	4	4	4
BZ 3433	Spring Clip Nut	*	16	16	16	16	16	16
BZ 151211	Spring Cover Assembly	*				4	4	4
BZ 151214	Spring Cover Complete (Service Kit)	*	1	1	1			

**SPRINGS - REAR**

F 150479	Rear Spring Assembly (Sedan)	*	2	2	2	2	2	2
F 150481	Rear Spring Assembly (Brougham--Coupes)	*	2	2	2	2	2	2
	Rear Spring Leaf No. 1		2	2	2	2	2	2
	Rear Spring Leaf No. 2		2	2	2	2	2	2
	Rear Spring Leaf No. 3		2	2	2	2	2	2

Part No.	Description	61	62	63	64	65	66	67
<b>SPRINGS - REAR Cont'd.</b>								
	Rear Spring Leaf No. 4	2	2	2	2	2	2	2
	Rear Spring Leaf No. 5	2	2	2	2	2	2	2
	Rear Spring Leaf No. 6	2	2	2	2	2	2	2
	Rear Spring Leaf No. 7	2	2	2	2	2	2	2
	Rear Spring Leaf No. 8	2	2	2	2	2	2	2
	Rear Spring Leaf No. 9	2	2	2	2	2	2	2
	Rear Spring Leaf No. 1	2	2	2	2	2		
	Rear Spring Leaf No. 2	2	2	2	2	2		
	Rear Spring Leaf No. 3	2	2	2	2	2		
	Rear Spring Leaf No. 4	2	2	2	2	2		
	Rear Spring Leaf No. 5	2	2	2	2	2		
	Rear Spring Leaf No. 6	2	2	2	2	2		
	Rear Spring Leaf No. 7	2	2	2	2	2		
	Rear Spring Leaf No. 8	2	2	2	2	2		
	Rear Spring Leaf No. 9	2	2	2	2	2		
	Rear Spring Center Bolt Assembly	2	2	2	2	2	2	2
	Rear Spring Clip No. 1	1	1	1	1	1	1	1
	Rear Spring Clip No. 2	1	1	1	1	1	1	1
	Rear Spring Clip No. 3	1	1	1	1	1	1	1
	Rear Spring Clip No. 4	1	1	1	1	1	1	1
	Rear Spring Clip Bolt--For No. 4 Clip	1	1	1	1	1	1	1
	Rear Spring Clip Bolt Nut for No. 4 Clip	1	1	1	1	1	1	1
BZ	45304 U-Bolt Shackle	2	2	2	2	2	2	2
BZ	42824 Shackle Threaded Bushing Assembly	4	4	4	4	4	4	4
BZ	45295 Front Bracket Threaded Bushing Assembly	2	2	2	2	2	2	2
BZ	45296 Spring Clip	4	4	4	4	4	4	4
BZ	3433 Spring Clip Nut	16	16	16	16	16	16	16
BZ	150469 Spring Clip Plate--R.H	*	1	1	1	1	1	1
BZ	150470 Spring Clip Plate--L.H	*	1	1	1	1	1	1
BZ	45302 Spring Seat Cushion	4	4	4	4	4	4	4
BZ	45303 Spring Seat Cushion Retainer	4	4	4	4	4	4	4
BZ	151212 Rear Spring Cover Assembly--Front	*	2	2	2	2	2	2
BZ	151213 Rear Spring Cover Assembly--Rear	*	2	2	2	2	2	2
<b>HEAVY DUTY STABILIZER</b>								
BZ	150701 Stabilizer	*	1	1	1	1	1	1
BZ	150702 Stabilizer Washer (Rubber)	*	2	2	2	2	2	2
BZ	150703 Stabilizer Mounting Bracket	*	2	2	2	2	2	2
BO	18236 Stabilizer Mounting Bracket Bolt	4	4	4	4	4	4	4
BM	232 Stabilizer Mounting Bracket Bolt Nut	4	4	4	4	4	4	4
BZ	150704 Stabilizer Connector Assembly	*	2	2	2	2	2	2
BZ	150707 Stabilizer Connector Adjusting End Plug	*	2	2	2	2	2	2
BZ	150708 Stabilizer Connector Grommet	*	4	4	4	4	4	4
BZ	47459 Stabilizer Arm to Spring Plate Connection							
	Rubber Cushion	4	4	4	4	4	4	4
BZ	47460 Stabilizer Arm to Spring Plate Connection							
	Cushion Retainer	4	4	4	4	4	4	4
BZ	47461 Connector Sleeve	2	2	2	2	2	2	2
BM	232 Stabilizer Arm to Spring Plate Connection Nut	4	4	4	4	4	4	4
BZ	47462 Stabilizer Spring Plate--R.H	1	1	1	1	1	1	1
BZ	47463 Stabilizer Spring Plate--L.H	1	1	1	1	1	1	1
HA	150700 Heavy Duty Stabilizer Comp. (Service Kit)	*	1	1	1	1	1	1
BZ	71613 Rear Spring Clip Lockwasher	4	4	4	4	4	4	4
<b>SHOCK ABSORBERS</b>								
BZ	150421 Shock Absorber Assembly--Front	*	2	2				
BZ	150423 Shock Absorber Assembly--Rear	*	2	2				
BZ	48768 Piston	4	4					
BZ	611 Piston Nut	4	4					
BZ	48103 Piston Rod Bushing	4	4					
BZ	151270 Relief Valve--Front--Standard	2	2					
BZ	48823 Relief Valve--Rear--Standard	2	2					
BZ	48769 Metering Washer	4	4					
BZ	48770 Intake Valve	4	4					

Part No.	Description	61	62	63	64	65	66	67
<b>SHOCK ABSORBERS Cont'd.</b>								
BZ	48771	Intake Valve Star Spring	4	4				
BZ	45501	Filler Plug	4	4				
BZ	45502	Filler Plug Gasket	4	4				
BZ	150422	Shock Absorber Assembly--Front	*		2	2	2	2
BZ	150424	Shock Absorber Assembly--Rear--First Type-- Long	*		2	2	2	2
BZ	151426	Shock Absorber Assembly--Second Type--Short .			2	2	2	2
BZ	46028	Valve Plate--Front--Standard			2	2	2	2
BZ	46025	Valve Plate--Rear--Standard			2	2	2	2
BZ	46017	Piston--Front			2	2	2	2
BZ	150487	Piston--Rear			2	2	2	2
BZ	611	Piston Rod Nut			4	4	4	4
BZ	48093	Piston Rod Guide			4	4	4	4
BZ	46716	Piston Rod Seal			4	4	4	4
BZ	46455	Piston Rod Seal Gasket			4	4	4	4
BZ	48094	Piston Rod Retainer Gasket			4	4	4	4
BZ	46029	Piston Valve Disc			4	4	4	4
BZ	46030	Piston Valve Spring			4	4	4	4
BZ	46031	Piston Valve Spring Guide			4	4	4	4
BZ	48086	Head Unlocking Pin			4	4	4	4
BZ	48089	Filler Screw			4	4	4	4
BZ	48090	Filler Screw Gasket			4	4	4	4
BZ	47278	Front and Rear Shock Absorber Head Grommet	8	8	8	8	8	8
BZ	47278	Rear Shock Absorber Base Grommet	4	4	4	4	4	4
BZ	47279	Front Shock Absorber Base Cushion	4	4	4	4	4	4
BZ	46718	Front Shock Absorber Base Cushion Retainer	2	2	2	2	2	2
BZ	47605	Front Shock Absorber Base Cushion Cup Washer	2	2	2	2	2	2
BZ	46720	Front Shock Absorber Base Cushion Nut	2	2	2	2	2	2
BZ	150425	Front Shock Absorber Bracket--R.H.--Upper	*	1	1	1	1	1
BZ	150426	Front Shock Absorber Bracket--L.H.--Upper	*	1	1	1	1	1
BZ	613	Front Shock Absorber Bracket Washer (Inner and Outer)	4	4	4	4	4	4
BX	545	Front Shock Absorber Bracket Rivet	6	6	6	6	6	6
BZ	71532	Front Shock Absorber Bracket Cotter--Special.	4	4	4	4	4	4
BZ	71511	Rear Shock Absorber Bracket--Upper--Stud Washer (Inner)	2	2	2	2	2	2
BZ	613	Rear Shock Absorber Bracket--Upper--Stud Washer (Outer)	2	2	2	2	2	2
BZ	71532	Rear Shock Absorber Bracket--Upper--Cotter-- Special	2	2	2	2	2	2
<b>BUMPER - FRONT</b>								
C	116788	Outside Bar	*	1	1			
C	116789	Outside Bar	*			1	1	1
BZ	114047	Outside Bar Bolt--Short	*	3	3	3	3	3
BZ	117289	Outside Bar Bolt--Long	*	1	1	1	1	1
BZ	116796	Outside Bar Center Bolt	*	1	1	1	1	1
BZ	414	Outside Bar Bolt Nut		5	5	5	5	5
BZ	116790	Front Bumper to Frame Bar--R.H	*	1	1	1	1	1
BZ	116791	Front Bumper to Frame Bar--L.H	*	1	1	1	1	1
BZ	2337	Front Bumper to Frame Bolt--Short		4	4	4	4	4
BZ	71590	Front Bumper to Frame Bolt Nut		4	4	4	4	4
BZ	117758	Front Bumper Guard Assembly	*	2	2			
BZ	117759	Front Bumper Guard Assembly	*			2	2	2
BZ	70194	Front Bumper Guard Nut		2	2	2	2	2
BZ	116803	Front License Plate Bracket Assembly	*	1	1	1	1	1
BZ	71252	Front License Plate Bracket Bolt		1	1	1	1	1
BX	12415	Front License Plate Bracket Bolt Nut		1	1	1	1	1
BO	100341	Front License Plate Clamp		1	1	1	1	1
BO	70185	Front License Plate Clamp Bolt		1	1	1	1	1
BZ	70676	Front License Plate Clamp Bolt Nut		1	1	1	1	1
BZ	116898	Front Bumper Grommet--R.H	*	1	1	1	1	1
BZ	116899	Front Bumper Grommet--L.H	*	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>BUMPER - REAR</b>								
C 117322	Outside Bar--Brougham--Sedan	*	1	1				
C 116799	Outside Bar--Coupes	*	1	1				
C 117323	Outside Bar--Brougham and Sedan	*			1	1	1	1
C 116802	Outside Bar--Coupes	*			1	1	1	1
BZ 114047	Outside Bar Bolt		4	4	4	4	4	4
BZ 116796	Outside Bar Center Bolt	*	1	1	1	1	1	1
BZ 414	Outside Bar Bolt Nut		5	5	5	5	5	5
C 116792	Rear Bumper to Frame Bar--R.H.--Brougham and Sedan	*	1	1	1	1	1	1
C 116793	Rear Bumper to Frame Bar--L.H.--Brougham and Sedan	*	1	1	1	1	1	1
C 116800	Rear Bumper to Frame Bar--R.H.--Coupes	*	1	1	1	1	1	1
C 116801	Rear Bumper to Frame Bar--L.H.--Coupes	*	1	1	1	1	1	1
BZ 1385	Rear Bumper to Frame Bar Bolt		4	4	4	4	4	4
BZ 71591	Rear Bumper to Frame Bar Bolt Nut		4	4	4	4	4	4
BZ 117758	Rear Bumper Guard Assembly	*	2	2				
BZ 117759	Rear Bumper Guard Assembly	*			2	2	2	2
BZ 70194	Rear Bumper Guard Nut		2	2	2	2	2	2
BZ 116896	Rear Bumper Grommet--R.H	*	1	1	1	1	1	1
BZ 116897	Rear Bumper Grommet--L.H	*	1	1	1	1	1	1
<b>FRAME</b>								
EXCEPT CONVERTIBLE								
C 150304	Frame Assembly	*	1	1				
C 150305	Frame Assembly	*			1			
C 150306	Frame Assembly	*						
C 150307	Frame Assembly	*				1	1	
C 150309	Frame Side Member Assembly--R.H	*	1	1				1
C 150310	Frame Side Member Assembly--L.H	*	1	1				1
C 150311	Frame Side Member Assembly--R.H	*			1	1	1	
C 150312	Frame Side Member Assembly--L.H	*			1	1	1	
C 150313	Frame Side Member Assembly--R.H	*						1
C 150314	Frame Side Member Assembly--L.H	*						1
BZ 150344	Front Spring Front Bracket	*	2	2				
BZ 150345	Front Spring Front Bracket	*			2	2	2	2
BZ 150346	Front Spring Rear Bracket	*	2	2				
BZ 150347	Front Spring Rear Bracket	*			2	2	2	2
BZ 150348	Rear Spring Front Bracket--R.H	*	1	1	1	1	1	1
BZ 150349	Rear Spring Front Bracket--L.H	*	1	1	1	1	1	1
BZ 150350	Rear Spring Rear Bracket--R.H	*	1	1	1	1	1	1
BZ 150351	Rear Spring Rear Bracket--L.H	*	1	1	1	1	1	1
BZ 150352	Rear Spring Rear Bracket Reinforcement--R.H.	*	1	1	1	1	1	1
BZ 150353	Rear Spring Rear Bracket Reinforcement--L.H.	*	1	1	1	1	1	1
BZ 150340	Rear Shock Absorber Bracket--R.H	*	1	1	1	1	1	1
BZ 150341	Rear Shock Absorber Bracket--L.H	*	1	1	1	1	1	1
BX 85	Rear Shock Absorber Bracket Rivet		6	6	6	6	6	6
BZ 150338	Stabilizer Front Bracket--R.H	*	1	1	1	1	1	1
BZ 150339	Stabilizer Front Bracket- L.H	*	1	1	1	1	1	1
BZ 151229	Stabilizer Bracket Reinforcement	*	2	2	2	2	2	2
BZ 80	Stabilizer Front Bracket Rivet		8	8	8	8	8	8
BZ 150608	Brake Tube Bracket--Front	*	2	2	2	2	2	2
BZ 150609	Brake Tube Bracket--Rear	*	1	1	1	1	1	1
BX 3197	Brake Tube Bracket Rivet	*	2	2	2	2	2	2
BZ 40505	Body Bolt Bracket No. 1		2	2	2	2	2	2
BZ 151415	Body Bolt Bracket No. 2	*	2	2	2	2	2	2
BZ 150354	Body Bolt Bracket No. 3	*	2	2	2	2	2	2
BZ 150356	Body Bolt Bracket No. 4--R.H	*	1	1	1	1	1	
BZ 150357	Body Bolt Bracket No. 4--L.H	*	1	1	1	1	1	
BZ 150355	Body Bolt Bracket No. 4	*						2
BZ 151446	Body Bolt Bracket No. 5--R.H. (Convertible Coupe Only)	*	1	1	1	1	1	



Part No.	Description	61	62	63	64	65	66	67
<b>FRAME Cont'd.</b>								
BZ 151447	Body Bolt Bracket No. 5--L.H.	*	1	1	1	1	1	
BZ 545	Body Bolt Bracket Rivet	*	2	2	2	2	2	
BZ 3197	Body Bolt Bracket Rivet	*	8	8	8	8	8	
BZ 150358	Running Board Bracket	*	2	2				
BZ 151242	Running Board Bracket	*			2	2	2	2
BZ 151243	Frame to Dust Shield Bracket--R.H.	*			1	1	1	1
BZ 151244	Frame to Dust Shield Bracket--L.H.	*			1	1	1	1
BZ 151246	Frame to Dust Shield Bracket--R.H.	*	1	1				
BZ 151247	Frame to Dust Shield Bracket--L.H.	*	1	1				
BM 219	Running Board Bracket Bolt (Right Front)		2	2	2	2	2	2
BZ 122	Running Board Bracket Bolt Nut		2	2	2	2	2	2
BZ 150359	Rear Axle Bumper	*	2	2	2	2	2	2
BT 395	Rear and Front Axle Bumper Bolt		8	8	8	8	8	8
BZ 122	Rear and Front Axle Bumper Bolt Nut		8	8	8	8	8	8
BX 545	Frame Rivet--5/16" x 1"		As Required					
BZ 80	Frame Rivet--3/8" x 1-1/8"		As Required					
BZ 326	Frame Rivet--5/16" x 3/4"		As Required					
BX 3197	Frame Rivet--5/16" x 5/8"		As Required					
BZ 85	Frame Rivet--3/8" x 1"		As Required					
BZ 44890	Battery Tray Assembly		1	1	1	1	1	1
BZ 44891	Battery Tray Assembly							
BZ 40514	Battery Seat		2	2	2	2	2	2
BM 71016	Battery Clamp Bolt		2	2	2	2	2	2
BZ 50514	Battery Clamp Bolt Bracket		2	2	2	2	2	2
BZ 150761	Battery Clamp Bolt Insulator	*	2	2	2	2	2	2
BZ 40504	Battery Clamp Bolt Clip Nut		2	2	2	2	2	2
BM 219	Battery Tray to Frame Bolt		5	5	5	5	5	5
BZ 122	Battery Tray to Frame Bolt Nut		5	5	5	5	5	5

**FRAME CROSS MEMBERS**

C 44839	Front Cross Member--Front		1	1				
C 44840	Front Cross Member--Front				1	1	1	1
C 150325	Front Cross Member--Rear	*	1	1				
C 150326	Front Cross Member--Rear	*			1			
C 150327	Front Cross Member--Rear	*				1	1	1
C 44846	Front Cross Member--Rear Radiator Support				1			
BZ 44847	Front Cross Member Engine Support--Front							
	Cross Member Assembly--R.H.				1			
BZ 44848	Front Cross Member Engine Support Assembly--							
	L.H.				1			
BZ 44904	Front Cross Member Engine Support--R.H.		1	1				
BZ 44905	Front Cross Member Engine Support--L.H.		1	1				
BZ 44906	Front Cross Member Engine Support--R.H.					1	1	1
BZ 44907	Front Cross Member Engine Support--L.H.					1	1	1
BZ 40479	Engine Support Grommet Cup		2	2	2	2	2	2
C 41108	Engine Support Cross Member Assembly		1	1	1	1	1	1
C 150333	Brace--R.H.	*	1	1	1	1	1	1
C 150334	Brace--L.H.	*	1	1	1	1		
C 150335	Brace--R.H.	*						
C 150336	Brace--L.H.	*					1	1
BZ 150337	Brace Plate--Lower	*	1	1	1	1	1	1
BZ 44857	Brace Plate--Upper	*	1	1	1	1	1	1
C 150342	Rear Cross Member Assembly	*	1	1	1	1	1	1

**ENGINE AND MOUNTINGS**

C 150941	Engine Assembly--Standard	*	1					
C 150943	Engine Assembly--Standard	*		1				
C 150945	Engine Assembly--Standard	*			1			
C 150949	Engine Assembly--Standard	*				1	1	1
C 150942	Engine Assembly--High Compression Head	*	1					
C 150944	Engine Assembly--High Compression Head	*		1				
C 150946	Engine Assembly--High Compression Head	*			1			
C 150950	Engine Assembly--High Compression Head	*				1	1	1
BM 71251	Engine Front Mounting Bolt--Long	*	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>ENGINE AND MOUNTINGS Cont'd.</b>								
BM 71207	Engine Front Mounting Bolt--Short	1	1	1	1	1	1	1
BT 3488	Engine Front Mounting Bolt Nut	2	2	2	2	2	2	2
BM 40638	Engine Front Mounting Bolt Sleeve	2	2	2	2	2	2	2
BM 71219	Engine Front Mounting Bolt Washer	4	4	4	4	4	4	4
BM 47121	Engine Front Mounting Grommet--Upper	2	2	2	2	2	2	2
BM 47123	Engine Front Mounting Grommet--Upper							
BM 47122	Engine Front Mounting Grommet--Lower	2	2	2	2	2	2	2
BM 47124	Engine Front Mounting Grommet--Lower							
BM 42545	Engine Rear Mounting	1	1	1	1	1	1	1
BM 42532	Engine Rear Mounting							
BM 40642	Engine Rear Mounting to Clutch Housing Bolt	1	1	1	1	1	1	1
BZ 908	Engine Rear Mounting to Frame Bolt	2	2	2	2	2	2	2
BZ 122	Engine Rear Mounting to Frame Bolt Nut	2	2	2	2	2	2	2

**CYLINDER**

C 150004	Cylinder and Pistons Assembly	*	1	1	1			
C 150005	Cylinder and Pistons Assembly	*				1	1	1
BM 14112	Cylinder Expansion Plug		6	6	6	2	2	2
BO 71049	Cylinder Expansion Plug--(Camshaft)		1	1	1	1	1	1
BM 70568	Cylinder Intake Inspection Expansion Plug					2	2	2
BM 227	Cylinder Stud (For Generator Adjusting Bracket)		1	1	1	1	1	1
BM 150415	Cylinder Water Jacket Cover Assembly	*	1	1	1			
BM 150418	Cylinder Water Jacket Cover Assembly	*				1	1	1
BM 37196	Cylinder Water Jacket Cover Gasket		1	1	1			
BM 33144	Cylinder Water Jacket Cover Gasket					1	1	1
BM 395	Cylinder Water Jacket Cover Bolt		16	16	16	24	24	24
BM 70177	Cylinder Water Jacket Cover Washer		18	18	18	26	26	26
BZ 908	Cylinder Water Jacket Cover Bolt--(Vacuum Clutch)					3	3	3
BM 231	Cylinder Water Jacket Drain Plug		1	1	1	1	1	1
BM 42787	Cylinder Support Plate Assembly--Front		1	1	1	1	1	1
F 40339	Cylinder Support Plate Gasket		1	1	1	1	1	1
BM 1157	Cylinder Support Plate Bolt--Front		8	8	8	8	8	8
BM 61446	Cylinder Support Plate Bolt Lock--Front		2	2	2	2	2	2
BM 47110	Cylinder Support Plate--Rear		1	1	1	1	1	1
BM 40342	Cylinder Support Plate Rear Gasket		1	1	1	1	1	1
BM 40343	Cylinder Support Plate--Rear--to Cylinder Dowel		1	1	1	1	1	1
BM 9168	Cylinder Support Plate--Rear--to Cylinder Bolt		4	4	4	4	4	4
BM 71197	Cylinder Support Plate--Rear--to Cylinder Washer		1	1	1	1	1	1
BM 1157	Cylinder Support Plate--Rear--Bolt		1	1	1	1	1	1
BM 46901	Oil Level Gauge Assembly		1	1	1			
BM 46903	Oil Level Gauge Assembly					1	1	1

**CYLINDER HEAD - STANDARD**

C 150366	Cylinder Head Assembly	*	1	1				
C 150367	Cylinder Head Assembly	*			1			
C 150368	Cylinder Head Assembly	*				1	1	1
F 150378	Cylinder Head Gasket	*	1	1	1			
F 150086	Cylinder Head Gasket	*				1	1	1
BM 9751	Cylinder Head Expansion Plug		4	4	4	4	4	4
BM 150390	Cylinder Head Water Outlet	*	1	1	1	1	1	1
BM 150391	Cylinder Head Water Outlet	*						
BM 150379	Cylinder Head Water Outlet Gasket	*	1	1	1	1	1	1
BT 1308	Cylinder Head Water Outlet Bolt		2	2	2	2	2	2
BM 150380	Cylinder Head Stud	*	15	15	15	15	15	15
BM 150382	Cylinder Head Stud	*	2	2	2	2	2	2
BM 150384	Cylinder Head Stud	*	4	4	4	4	4	4
BM 150386	Cylinder Head Stud	*						
BM 150388	Cylinder Head Stud	*						
BM 71578	Cylinder Head Stud Nut		21	21	21	21	21	21

Part No.	Description	61	62	63	64	65	66	67
<b>CYLINDER HEAD - STANDARD Cont'd.</b>								
BM 9665	Cylinder Head Stud Nut				30	30	30	30
BM 71137	Cylinder Head Stud Washer	21	21	21				
BM 71138	Cylinder Head Stud Washer				30	30	30	30
BM 71100	Cylinder Head Pipe Plug (For Heater)	1	1	1	1	1	1	1
BZ 5710	Cylinder Head Pipe Plug (Temperature Indicator)	1						
BM 150406	Cylinder Head Thermostat	*	1	1	1	1	1	1
<b>CYLINDER HEAD - HIGH COMPRESSION</b>								
C 150374	Cylinder Head Assembly--High Compression	*	1	1	1			
C 150375	Cylinder Head Assembly--High Compression	*				1	1	1
<b>EXHAUST MANIFOLD</b>								
C 46466	Exhaust Manifold Assembly	1						
C 46420	Exhaust Manifold Assembly		1	1				
C 150394	Exhaust Manifold Assembly				1	1	1	1
BM 40707	Exhaust Manifold Stud	*	1	1	1			
BM 4131	Exhaust Manifold Stud	1	1	1	3	3	3	3
BM 227	Exhaust Manifold Stud	4	4	4	7	7	7	7
BM 71058	Exhaust Manifold Stud Nut	6	6	6	10	10	10	10
F 48582	Exhaust Manifold Gasket--End	2	2	2				
F 48583	Exhaust Manifold Gasket--Center	1	1	1				
F 48584	Exhaust Manifold Gasket--End				2	2	2	2
F 48585	Exhaust Manifold Gasket--Intermediate				2	2	2	2
F 48586	Exhaust Manifold Gasket--Center				1	1	1	1
BM 45536	Exhaust Damper and Shaft Assembly		1	1	1	1	1	1
BM 38089	Exhaust Damper and Shaft Bushing		2	2	2	2	2	2
BM 37946	Exhaust Damper Spring--Front		1	1	1	1	1	1
BM 45751	Exhaust Damper Spring--Rear		1	1				
BM 45531	Exhaust Damper Spring--Rear				1	1	1	1
BM 37947	Exhaust Damper Spring--Front--Retainer		1	1	1	1	1	1
BM 45731	Exhaust Damper Spring--Rear--Retainer		1	1	1	1	1	1
BM 37949	Exhaust Damper Spring--Front--Stud		1	1				
BM 45533	Exhaust Damper Spring--Front--Stud				1	1	1	1
BM 45533	Exhaust Manifold Damper Spring--Rear Stud		1	1				
BM 37949	Exhaust Damper Spring--Rear--Stud				1	1	1	1
BM 45528	Exhaust Damper Thermostat		1	1	1	1	1	1
BM 45535	Exhaust Damper Cover		1	1	1	1	1	1
F 38090	Exhaust Damper Cover Gasket		1	1	1	1	1	1
BM 38088	Exhaust Damper Cover Damper Stop		2	2	2	2	2	2
BM 13073	Exhaust Damper Cover Stud		2	2	2	2	2	2
BM 71529	Exhaust Damper Cover Stud Nut		2	2	2	2	2	2
BM 40351	Exhaust Damper	1						
BM 40352	Exhaust Damper Gasket	1						
BM 40353	Exhaust Damper Retainer	1						
BM 71218	Exhaust Damper Retainer Stud	2						
BM 70177	Exhaust Damper Retainer Stud Washer	2						
BM 71108	Exhaust Damper Retainer Stud Nut	2						
<b>INTAKE MANIFOLD</b>								
C 150405	Intake Manifold Assembly	*	1	1	1			
C 48612	Intake Manifold Assembly				1	1	1	1
BM 71233	Carburetor Stud--Plain	1	1	1	1	1	1	1
BM 150404	Carburetor Stud--Drilled	*	1	1	1	1	1	1
BM 6189	Carburetor Stud Nut	2	2	2	2	2	2	2
BM 70568	Expansion Plug	1	1	1				
BM 71100	Intake Manifold Pipe Plug (Without Vacuum Control)	1	1	1	1	1	1	1
BM 71092	Vacuum Control Pipe Elbow--(With Vacuum Control)	1	1	1				
BM 71091	Vacuum Control Pipe Union--(With Vacuum Control)				1	1	1	1
BM 71092	Vacuum Control Pipe Elbow--(With Electric Hand)				1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>INTAKE MANIFOLD Cont'd.</b>								
BM 71100	Intake Manifold Pipe Plug--(Without Electric Hand)	1 8	1 8	1 8	1	1	1	1
BM 13073	Intake Manifold to Cylinder Stud				8	8	8	8
BM 4131	Intake Manifold to Cylinder Stud	8	8	8				
BM 122	Intake Manifold Stud Nut				8	8	8	8
BM 110	Intake Manifold Stud Nut	1	1	1				
BM 48590	Intake to Exhaust Manifold Gasket				1	1	1	1
BM 48591	Intake to Exhaust Manifold Gasket	2	2	2				
BM 71044	Intake to Exhaust Manifold Bolt				4	4	4	4
BM 71243	Intake to Exhaust Manifold Bolt	1	1	1				
F 48589	Intake Manifold to Cylinder Gasket--Small				2	2	2	2
F 48587	Intake Manifold to Cylinder Gasket--Small				2	2	2	2
F 48588	Intake Manifold to Cylinder Gasket--Large							
BM 48613	Intake Manifold Stud (For throttle return spring)	1 1	1 1	1 1	1 1	1 1	1 1	1 1
BM 40633	Intake Manifold Windshield Cleaner Tube	1	1	1	1	1	1	1
BM 11841	Intake Manifold Windshield Cleaner Tube Nipple	1	1	1	1	1	1	1
BM 11842	Intake Manifold Windshield Cleaner Tube Nut							

**FLYWHEEL AND CRANKSHAFT**

C 44670	Crankshaft	1	1	1				
C 44685	Crankshaft				1	1	1	1
BM 44671	Crankshaft Starting Jaw	1	1	1	1	1	1	1
BM 37015	Crankshaft Starting Jaw Washer	1	1	1	1	1	1	1
BM 40314	Bearing Cap Assembly No. 1	1	1	1				
BM 42005	Bearing Cap Assembly No. 1				1	1	1	1
BM 40315	Bearing Cap No. 1 1	1	1	1				
BM 42006	Bearing Cap No. 1				1	1	1	1
BM 37234	Bearing--Upper No. 1	1	1	1				
BM 37334	Bearing--Upper No. 1				1	1	1	1
BM 37235	Bearing--Lower No. 1	1	1	1				
BM 37335	Bearing--Lower No. 1				1	1	1	1
BM 37236	Bearing Cap Shim--thin--No. 1	6	6	6				
BM 37336	Bearing Cap Shim--thin--No. 1				6	6	6	6
BM 37237	Bearing Cap Shim--thick--No. 1	6	6	6				
BM 37337	Bearing Cap Shim--thick--No. 1				6	6	6	6
BM 44672	Bearing Cap Assembly--No. 2	1	1	1				
BM 37338	Bearing Cap Assembly--No. 2				1	1	1	1
BM 35077	Bearing Cap--No. 2	1	1	1				
BM 33109	Bearing Cap--No. 2				1	1	1	1
BM 44673	Bearing--Upper--No. 2	1	1	1				
BM 37339	Bearing--Upper--No. 2				1	1	1	1
BM 44674	Bearing--Lower--No. 2	1	1	1				
BM 37340	Bearing--Lower--No. 2				1	1	1	1
BM 37241	Bearing Cap Shim--thin--No. 2 and 4	6	6	6				
BM 37341	Bearing Cap Shim--thin--No. 2 and 4				12	12	12	12
BM 37242	Bearing Cap Shim--thick--No. 2 and 4	6	6	6				
BM 37342	Bearing Cap Shim--thick--No. 2 and 4				12	12	12	12
BM 37026	Bearing Cap Assembly--No. 3	1	1	1				
BM 37343	Bearing Cap Assembly--No. 3				1	1	1	1
BM 37016	Bearing Cap--No. 3	1	1	1				
BM 33114	Bearing Cap--No. 3				1	1	1	1
BM 37017	Bearing--Upper--No. 3	1	1	1				
BM 37344	Bearing--Upper--No. 3				1	1	1	1
BM 37018	Bearing--Lower--No. 3	1	1	1				
BM 37345	Bearing--Lower--No. 3				1	1	1	1
BM 38762	Bearing Cap Shim--thin--No. 3	6	6	6				
BM 37346	Bearing Cap Shim--thin--No. 3				6	6	6	6
BM 38763	Bearing Cap Shim--thick--No. 3	6	6	6				
BM 37347	Bearing Cap Shim--thick--No. 3				6	6	6	6
BM 37348	Bearing Cap Assembly--No. 4				1	1	1	1
BM 33119	Bearing Cap--No. 4				1	1	1	1
BM 37349	Bearing--Upper--No. 4				1	1	1	1

Part No.	Description	61	62	63	64	65	66	67		
<b>FLYWHEEL AND CRANKSHAFT Cont'd.</b>										
BM	37350	Bearing--Upper--No. 4 (See No.2 Bearing For Shims)				1	1	1	1	
BM	37353	Bearing Cap Assembly--No. 5				1	1	1	1	
BM	37352	Bearing Cap--No. 5				1	1	1	1	
BM	37354	Bearing--Upper--No. 5				1	1	1	1	
BM	37355	Bearing--Lower--No. 5				1	1	1	1	
BM	38764	Bearing Cap Shim--Thin--No. 5				6	6	6	6	
BM	38765	Bearing Cap Shim--Thick--No. 5				6	6	6	6	
BM	2335	Bearing Screws	6	6	6	10	10	10	10	
BM	13569	Bearing Cap (No. 1) Packing	As Required							
BM	37027	Bearing Cap Stud--No. 2 Bearing	2	2	2					
BM	60041	Bearing Cap Stud (Short)	4	4	4	8	8	8	8	
BM	60042	Bearing Cap Stud (Long)	2	2	2	2	2	2	2	
BM	33801	Bearing Cap Stud Nut	8	8	8	10	10	10	10	
BM	44675	Crankshaft Oil Throw Assembly	*	1	1	1	1	1	1	
BM	44677	Crankshaft Oil Throw--Lower	1	1	1	1	1	1	1	
BM	37327	Crankshaft Oil Throw Gasket—Upper	1	1	1	1	1	1	1	
BM	37328	Crankshaft Oil Throw Gasket--Lower	1	1	1	1	1	1	1	
BM	38948	Crankshaft Oil Throw Reinforcement--Lower	2	2	2	2	2	2	2	
BM	70484	Crankshaft Oil Throw Bolt	5	5	5	5	5	5	5	
BO	9159	Crankshaft Oil Throw Bolt--Lower	2	2	2	2	2	2	2	
C	150100	Flywheel Assembly--Includes Ring	1	1	1					
C	44679	Flywheel Assembly--Includes Ring				1	1	1	1	
F	44729	Flywheel Ring	1	1	1	1	1	1	1	
BM	40280	Flywheel Bolt	6	6	6	6	6	6	6	
BM	71237	Flywheel Bolt Nut	6	6	6	6	6	6	6	
BM	40281	Flywheel Drain Plug	2	2	2	2	2	2	2	
BM	12117	Flywheel Drain Plug Gasket	2	2	2	2	2	2	2	
BM	40282	Flywheel Dowel Pin	2	2	2	2	2	2	2	
BM	44684	Flywheel Driving Pin	3	3	3	3	3	3	3	
<b>CAMSHAFT</b>										
C	43803	Camshaft	1	1	1					
C	43804	Camshaft				1	1	1	1	
BM	45480	Camshaft Bearing No. 1	1	1	1					
BM	45481	Camshaft Bearing No. 1				1	1	1	1	
BM	45482	Camshaft Bearing No. 2	1	1	1					
BM	45483	Camshaft Bearing No. 2				1	1	1	1	
BM	45484	Camshaft Bearing No. 3	1	1	1					
BM	45485	Camshaft Bearing No. 3				1	1	1	1	
BM	45486	Camshaft Bearing No. 4				1	1	1	1	
BM	45487	Camshaft Bearing No. 5				1	1	1	1	
BM	61074	Camshaft Bearing Anchor Plug	3	3	3	3	3	3	3	
BM	61978	Camshaft Bearing Anchor Plug Seal	3	3	3	3	3	3	3	
BM	43435	Camshaft Bearing Thrust Button	1	1	1	1	1	1	1	
BM	61614	Camshaft Bearing Thrust Button Spring	1	1	1	1	1	1	1	
BM	40046	Camshaft Bearing Thrust Plate (On Timing Gear Cover)	1	1	1	1	1	1	1	
BM	555	Camshaft Bearing Thrust Plate Rivet	2	2	2	2	2	2	2	
BM	60701	Camshaft Bearing Thrust Plate Washer	1	1	1	1	1	1	1	
<b>CONNECTING ROD</b>										
F	44704	Connecting Rod Complete--R.H	3	3	3	3	3	3	3	
F	44705	Connecting Rod Complete--L.H	3	3	3	3	3	3	3	
BM	44710	Connecting Rod Shim—Thin	36	36	36	36	36	36	36	
BM	44711	Connecting Rod Shim--Medium	36	36	36	36	36	36	36	
BM	44712	Connecting Rod Shim--Thick	24	24	24	24	24	24	24	
BM	44713	Connecting Rod Bolt	12	12	12	16	16	16	16	
BM	44714	Connecting Rod Bolt Nut	12	12	12	16	16	16	16	
<b>PISTON</b>										
F	47097	Piston	6	6	6	6	6	6	6	
BM	43460	Ring Pin	12	12	12	12	12	12	12	
F	37029	Piston Pin--(Furnished in .002"-.005"-.010"-- Oversize	6	6	6	8	8	8	8	

Part No.	Description	61	62	63	64	65	66	67
<b>PISTON Cont'd.</b>								
F	33332	Piston Pin Bushing	6	6	6	8	8	8
BM	60063	Piston Pin Lock Ring	12	12	12	16	16	16
F	43452	Piston Ring--Compression	12	12	12	16	16	16
F	43453	Piston Ring--Compression ( .010" Oversize)	12	12	12	16	16	16
F	43456	Piston Ring--Oil	12	12	12	16	16	16
F	43457	Piston Ring--Oil (.010" Oversize)	12	12	12	16	16	16
<b>VIBRATION DAMPENER</b>								
BM	44610	Vibration Dampener Assembly	1	1	1	1	1	1
BM	44611	Fan Belt Pulley	1	1	1	1	1	1
BM	44786	Hub	1	1	1	1	1	1
BM	37024	Facing	2	2	2	2	2	2
BM	37025	Cover Plate	1	1	1	1	1	1
BZ	908	Cover Plate Screw	6	6	6	6	6	6
BM	40286	Dampener Spacer	1	1	1	1	1	1
BM	71199	Dampener Key	1	1	1	1	1	1
<b>VALVES</b>								
BM	47064	Valve Tappet	12	12	12	16	16	16
BM	45444	Valve Tappet Guide	12	12	12	16	16	16
BM	61512	Valve Tappet Adjusting Screw	12	12	12	16	16	16
BM	45359	Valve Tappet Adjusting Screw Nut	12	12	12	16	16	16
BM	60681	Valve Tappet Clamp	6	6	6	8	8	8
BM	908	Valve Tappet Clamp Bolt	6	6	6	8	8	8
F	150087	Inlet Valve	*	6	6			
F	150089	Inlet Valve	*			8	8	8
F	150091	Inlet Valve Guide	*	6	6	8	8	8
BM	150092	Exhaust Valve Guide	*	6	6	8	8	8
F	150088	Exhaust Valve	*	6	6			
BM	150090	Exhaust Valve	*			8	8	8
F	45586	Valve Spring		12	12	16	16	16
BM	150093	Valve Spring Seat	*	12	12	16	16	16
BM	150626	Valve Spring Seat Retainer	*	12	12	16	16	16
BM	45587	Valve Spring Dampener		12	12	16	16	16
BM	44618	Valve Chamber Cover Assembly	2	2	2			
BM	44620	Valve Chamber Cover				2	2	2
BM	44629	Valve Chamber Cover Plate				2	2	2
F	44621	Valve Chamber Cover Gasket	2	2	2			
F	44622	Valve Chamber Cover Gasket				2	2	2
BM	44623	Valve Chamber Cover Screw	2	2	2			
BM	70204	Valve Chamber Cover Screw				2	2	2
BM	44624	Valve Chamber Cover Screw--Long	2	2	2			
BM	40429	Valve Chamber Cover Screw Gasket	4	4	4			
BM	44625	Breather Tube	2	2	2	2	2	2
BM	33154	Breather Tube Support	2	2	2	2	2	2
BM	44626	Breather Tube Support Gasket	2	2	2	2	2	2
BM	44627	Breather Tube Clip	2	2	2	2	2	2
BM	2704	Breather Tube Clip Screw	2	2	2	2	2	2
<b>OIL PAN</b>								
C	44730	Oil Pan Assembly	1	1	1			
C	46768	Oil Pan Assembly				1	1	1
BM	38023	Oil Return Pipe Assembly	1	1	1			
BM	36406	Oil Return Pipe Assembly				1	1	1
BM	44746	Suction Pipe	1	1	1			
BM	44747	Suction Pipe				1	1	1
BM	44749	Suction Pipe Flange	1	1	1			
BM	44750	Suction Pipe Flange				1	1	1
BM	44751	Suction Pipe Soldering Plate	1	1	1	1	1	1
F	44734	Oil Pan Gasket	2	2	2			
F	44735	Oil Pan Gasket				2	2	2
BM	219	Oil Pan Bolt	23	23	23	29	29	29
BZ	12275	Oil Pan Bolt (At Suction Pipe)	2	2	2	2	2	2
BZ	70177	Oil Pan Bolt Washer	2	2	2	2	2	2

Part No.	Description	61	62	63	64	65	66	67
<b>OIL PAN Cont'd.</b>								
BM 44754	Oil Pan Tray Assembly	1	1	1				
BM 44756	Oil Pan Tray Assembly				1	1	1	1
BM 46791	Oil Pan Tray Overflow Screw	1	1	1	1	1	1	1
<b>OIL PUMP AND CHECK VALVE</b>								
BM 44686	Oil Pump Complete	1	1	1	1	1	1	1
BM 44687	Body	1	1	1	1	1	1	1
BM 44688	Body Plug	2	2	2	2	2	2	2
BM 44689	Body Plug Gasket	2	2	2	2	2	2	2
BM 44690	Plunger	1	1	1	1	1	1	1
BM 44692	Shaft	1	1	1	1	1	1	1
BM 44693	Shaft Bushing	1	1	1	1	1	1	1
BM 43723	Gear	1	1	1	1	1	1	1
BM 71195	Gear Pin	1	1	1	1	1	1	1
BM 40293	Shaft Bushing Retaining Screw	1	1	1	1	1	1	1
BM 33179	Oil Pump Body Gasket	1	1	1	1	1	1	1
BM 71067	Oil Pump Body Bolt	2	2	2	2	2	2	2
BM 45200	Oil Check Valve Assembly	1	1	1	1	1	1	1
BM 40296	Body	1	1	1	1	1	1	1
BM 19960	Body Plug	1	1	1	1	1	1	1
BM 6791	Body Plug Gasket	1	1	1	1	1	1	1
BT 37270	Ball	1	1	1	1	1	1	1
BM 45201	Plunger	1	1	1	1	1	1	1
BM 37787	Plunger Spring	1	1	1	1	1	1	1
BM 45203	Plunger Pin	1	1	1	1	1	1	1
BM 45202	Plunger Pin Retainer	1	1	1	1	1	1	1
BM 37776	Pressure Indicator Contact Pin Assembly	1	1	1	1	1	1	1
BM 37777	Pressure Indicator Contact Pin Gasket	2	2	2	2	2	2	2
BM 71115	Pressure Pin Terminal Nut	2	2	2	2	2	2	2
BM 37791	Pressure Pin Contact Pin Nut	1	1	1	1	1	1	1
BM 44912	Oil Pump to Check Valve Pipe Assembly	1	1	1				
BM 44914	Oil Pump to Check Valve Pipe Assembly				1	1	1	1
BM 36393	Oil Pump to Check Valve Pipe Union (Pipe End)	1	1	1	1	1	1	1
BM 11829	Oil Pump to Check Valve Pipe Union Elbow-- (Valve End)	1	1	1	1	1	1	1
BM 44916	Oil Pump to Cylinder Pipe Assembly	1	1	1	1	1	1	1
BM 44918	Oil Pump to Cylinder Pipe Assembly							
BM 17976	Oil Pump to Cylinder Pipe Union (Pump End)	1	1	1	1	1	1	1
BM 11829	Oil Pump to Cylinder Pipe Union Elbow-- (Cylinder End)	1	1	1	1	1	1	1
BM 44920	Oil Pump Suction Pipe Assembly	1	1	1	1	1	1	1
BM 44922	Oil Pump Suction Pipe Assembly							
BM 71092	Oil Pump Suction Pipe Union Elbow	2	2	2	2	2	2	2
<b>WATER PUMP AND FAN</b>								
BM 150213	Water Pump Assembly	*	1					
BM 150214	Water Pump Assembly	*		1	1	1	1	1
BM 150215	Water Pump Body	*	1					
BM 150217	Water Pump Body	*		1	1	1	1	1
BZ 2346	Water Pump Body Plug		1	1	1	1	1	1
BM 150219	Water Pump Body Gasket	*	1	1	1	1	1	1
BM 150220	Impeller Housing Assembly	*	1	1	1	1	1	1
BM 150222	Impeller Housing Gasket	*	1	1	1	1	1	1
BM 227	Impeller Housing Stud		3	3	3	3	3	3
BM 110	Impeller Housing Stud Nut		3	3	3	3	3	3
BM 9824	Impeller Housing to Cylinder Bolt		2	2	2	2	2	2
BM 150224	Impeller	*	1	1	1	1	1	1
BM 150225	Impeller Cup	*	1	1	1	1	1	1
BM 151528	Shaft and Pulley Hub Assembly	*	1	1	1	1	1	1
BM 150228	Shaft Bushing	*	2	2	2	2	2	2
BM 150230	Shaft Oil Seal	*	1	1	1	1	1	1
BM 150231	Shaft Oil Seal Tension Spring	*	1	1	1	1	1	1
BM 150232	Shaft Oil Seal Thrust Washer	*	1	1	1	1	1	1
BM 150233	Shaft Seal Compensating Spring	*	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>WATER PUMP AND FAN Cont'd</b>								
BM 150234	Shaft Seal Compensating Spring Washer	* 1	1	1	1	1	1	1
BM 150235	Shaft Seal Retaining Spring	* 1	1	1	1	1	1	1
BM 150236	Pulley Assembly	* 1	1	1	1	1	1	1
BM 150241	Pulley Extension	*		1				
BM 908	Pulley Extension Bolt	*		4				
F 150242	Fan Belt	* 1	1	1	1	1	1	1
F 150243	Outlet Hose	1	1	1	1	1	1	1
BM 71614	Outlet Hose Clamp (Water Jacket Cover End)	1	1	1	1	1	1	1
F 70327	Outlet Hose Clamp (Water Pump End)	1	1	1	1	1	1	1
F 150244	By-Pass Hose	* 1	1	1	1	1	1	1
F 71255	By-Pass Hose Clamp	2	2	2	2	2	2	2
<b>TIMING GEARS AND COVER</b>								
BM 150565	Camshaft Gear	* 1	1	1	1	1	1	1
BM 4934	Camshaft Gear Bolt	3	3	3	3	3	3	3
BM 150566	Crankshaft Gear Bolt	* 1	1	1	1	1	1	1
BM 11799	Crankshaft Gear Key	1	1	1	1	1	1	1
BM 151580	Timing Gear Cover Assembly	1	1	1	1	1	1	1
BM 219	Timing Gear Cover Bolt	12	12	12	12	12	12	12
BZ 122	Timing Gear Cover Bolt Nut	3	3	3	3	3	3	3
F 40150	Timing Gear Cover Gasket	1	1	1	1	1	1	1
BM 40151	Timing Gear Cover Oil Seal	1	1	1	1	1	1	1
BM 40006	Camshaft Thrust Plate	1	1	1	1	1	1	1
BM 555	Camshaft Thrust Plate Rivet	2	2	2	2	2	2	2
<b>CARBURETOR AND FUEL PUMP</b>								
* 150400	Carburetor Assembly	* 1						
* 150402	Carburetor Assembly		1	1				
* 150403	Carburetor Assembly				1	1	1	1
BM 71233	Carburetor to Manifold Stud--Plain	1	1	1	1	1	1	1
BM 150404	Carburetor to Manifold Stud--Drilled	* 1	1	1	1	1	1	1
BM 6189	Carburetor to Manifold Stud--Nut	2	2	2	2	2	2	2
BM 71076	Carburetor to Manifold Stud--Washer-- (Special)	2	2	2	2	2	2	2
F 40710	Carburetor to Manifold Gasket	1	1	1	1	1	1	1
** 45191	Carburetor Air Cleaner--Without Electric Hand	1	1	1	1	1	1	1
** 48615	Carburetor Air Cleaner--With Electric Hand	1	1	1	1	1	1	1
BM 48652	Carburetor Air Cleaner--Heavy Duty	1	1	1	1	1	1	1
BM 48653	Carburetor Air Cleaner--Heavy Duty							
BM 48659	Carburetor Air Cleaner Cover Assembly	1	1	1	1	1	1	1
BM 151414	Carburetor Air Cleaner Brace	*						
BM 48869	Carburetor Air Cleaner Baffle	1	1	1	1	1	1	1
BM 48820	Carburetor Air Cleaner Intake Pipe Hole Plug (Without Electric Hand)	1	1	1	1	1	1	1
** 44668	Fuel Pump Assembly	1	1	1	1	1	1	1
BM 44694	Fuel Pump to Cylinder Gasket	1	1	1	1	1	1	1
BZ 908	Fuel Pump to Cylinder Bolt	2	2	2	2	2	2	2
BM 40529	Fuel Pump Flexible Connection	1	1	1	1	1	1	1
BM 45479	Fuel Pump Flexible Connection							
BM 45475	Fuel Pump to Carburetor Pipe Assembly	1	1	1	1	1	1	1
BM 45477	Fuel Pump to Carburetor Pipe Assembly							
BM 11828	Fuel Pump to Carburetor Pipe Union Nut	2	2	2	2	2	2	2
BM 36393	Fuel Pump to Carburetor Pipe Union Elbow (Pump End)	1	1	1	1	1	1	1
BM 17976	Fuel Pump to Carburetor Pipe Union (Pump End)							
BM 17976	Fuel Pump to Carburetor Pipe Union (Carburetor)	1	1	1	1	1	1	1
BM 71298	Fuel Choke Control Heat Box to Manifold Screw		2	2	2	2	2	2

\* Serviced by Carter Carburetor Corporation, St. Louis, Missouri.

\*\* Serviced by A. C. Spark Plug Company, Flint, Michigan.



Part No.	Description	61	62	63	64	65	66	67
<b>THROTTLE CONTROL</b>								
BZ	150710	Accelerator Pedal Complete	*	1	1	1	1	1
BZ	45979	Pedal Toe Plate Bumper (Without Clutch Vacuum Control)		1	1	1	1	1
BZ	41207	Pedal Anti-Rattle Spring		1	1	1	1	1
BZ	38209	Pedal Anchor Bracket		1	1	1	1	1
BZ	786	Pedal Anchor Bracket Rivet		3	3	3	3	3
BO	71113	Pedal Anchor Clevis Pin		1	1	1	1	1
BZ	40439	Pedal to Shaft Operating Lever Link		1	1	1	1	1
BT	71522	Pedal to Shaft Operating Lever Link Clevis Pin		1	1	1	1	1
BZ	38206	Pedal to Shaft Operating Lever Link Spring		1	1	1	1	1
BZ	18444	Pedal to Shaft Operating Lever Link Spring Washer		1	1	1	1	1
BZ	45164	Pedal to Shaft Operating Lever Link Sleeve		1	1	1	1	1
BZ	150038	Accelerator Cross Shaft Assembly	*	1	1	1	1	1
BZ	43042	Accelerator Cross Shaft Carburetor Pull Rod Lever		1	1	1	1	1
BZ	45177	Carburetor Pull Rod Lever Return Spring		1	1	1	1	1
BZ	43043	Cross Shaft Clutch Vacuum Control Lever		1	1	1	1	1
BO	18447	Accelerator Cross Shaft Bracket Screw		4	4	4	4	4
BO	71073	Accelerator Cross Shaft Bracket Screw Nut		4	4	4	4	4
BZ	12111	Accelerator Cross Shaft Bracket Screw Lock-washer		4	4	4	4	4
BZ	40436	Accelerator Cross Shaft Silencing Spring		1	1	1	1	1
BZ	550	Accelerator Cross Shaft Silencing Spring Washer		1	1	1	1	1
BZ	150755	Accelerator Cross Shaft Anti-Rattle Spring	*	2	2	2	2	2
BZ	45169	Manifold Bell Crank		1	1	1	1	1
BM	41133	Manifold Bell Crank Return Spring		1	1	1	1	1
BZ	43220	Manifold Bell Crank Stud		1	1	1	1	1
BO	262	Manifold Bell Crank Stud Washer		1	1	1	1	1
BZ	150606	Manifold Bell Crank to Carburetor Rod Assy		1	1	1	1	1
BZ	150607	Manifold Bell Crank to Carburetor Rod Assy						
BZ	71073	Manifold Bell Crank to Carburetor Rod Nut		2	2	2	2	2
BZ	12111	Manifold Bell Crank to Carburetor Rod Washer		2	2	2	2	2
BZ	150046	Accelerator Shaft to Manifold Bell Crank Rod Assembly	*	1	1	1	1	1
BZ	150048	Accelerator Shaft to Manifold Bell Crank Rod Assembly						
BZ	5771	Accelerator Cross Shaft to Manifold Bell Crank Rod Clevis		1	1	1	1	1
BO	71073	Accelerator Cross Shaft to Manifold Bell Crank Rod Clevis Nut		1	1	1	1	1
BZ	5825	Accelerator Cross Shaft to Manifold Bell Crank Rod Clevis Pin		1	1	1	1	1
BO	71073	Accelerator to Cross Shaft to Bell Crank Nut		1	1	1	1	1
<b>THROTTLE CONTROL - R.H.D.</b>								
BZ	1517	Accelerator Pedal		1	1	1	1	1
BZ	7911	Accelerator Pedal to Shaft Taper Pin		1	1	1	1	1
BZ	45610	Accelerator Pedal Stop		1	1	1	1	1
BZ	41021	Pedal Shaft and Lever Assembly		1	1	1	1	1
BZ	40989	Pedal Shaft Carburetor Pull Rod Lever		1	1	1	1	1
BO	18447	Pedal Shaft Bracket Screw		2	2	2	2	2
BO	71073	Pedal Shaft Bracket Screw Nut		2	2	2	2	2
BZ	12111	Pedal Shaft Bracket Screw Lockwasher		2	2	2	2	2
BZ	43991	Pedal Shaft to Manifold Bell Crank Rod--Assy.		1	1	1		
*BZ	43463	Pedal Shaft to Manifold Bell Crank Rod--Assy.		1	1	1		
BZ	42052	Pedal Shaft to Manifold Bell Crank Rod--Assy.				1	1	1
*BZ	43044	Pedal Shaft to Manifold Bell Crank Rod--Assy.				1	1	1
BZ	5771	Pedal Shaft to Manifold Bell Crank Rod--Clevis		1	1	1	1	1
BO	71073	Pedal Shaft to Manifold Bell Crank Rod--Clevis Nut		1	1	1	1	1

NOTE: Parts Marked \* Used With Vacuum Clutch Control

Part No.	Description	61	62	63	64	65	66	67
<b>THROTTLE CONTROL - R.H.D.</b>								
BZ	5825 Pedal Shaft to Manifold Bell Crank Rod-- Clevis Pin	1	1	1	1	1	1	1
BZ	33980 Pedal Shaft to Manifold Bell Crank Rod-- Return Spring	1	1	1	1	1	1	1
BZ	63371 Pedal Shaft to Manifold Bell Crank Rod-- Return Spring Clip	1	1	1	1	1	1	1
* BZ	150038 Accelerator Cross Shaft Assembly	*	1	1	1	1	1	1
*BZ	43042 Accelerator Cross Shaft Carburetor Pull Rod Lever	1	1	1	1	1	1	1
*BZ	43043 Accelerator Cross Shaft Clutch Vacuum Con- trol Lever	1	1	1	1	1	1	1
*BO	18447 Accelerator Cross Shaft Bracket Screw	4	4	4	4	4	4	4
*BO	71073 Accelerator Cross Shaft Bracket Screw Nut	4	4	4	4	4	4	4
*BZ	12111 Accelerator Cross Shaft Bracket Screw Lock- washer	4	4	4	4	4	4	4
*BZ	40436 Accelerator Cross Shaft Silencing Spring	1	1	1	1	1	1	1
*BZ	550 Accelerator Cross Shaft Silencing Spring Washer	1	1	1	1	1	1	1
*BZ	41082 Accelerator Cross Shaft Anti-Rattle Spring	2	2	2	2	2	2	2
*BZ	150046 Accelerator Shaft to Manifold Bell Crank Rod Assembly	*	1	1				
*BZ	150048 Accelerator Shaft to Manifold Bell Crank Rod Assembly	*			1	1	1	1
*BZ	5771 Accelerator Shaft to Manifold Bell Crank Rod Clevis	1	1	1	1	1	1	1
*BO	71073 Accelerator Shaft to Manifold Bell Crank Rod Nut	1	1	1	1	1	1	1
<b>CLUTCH</b>								
BT	45140 Clutch Assembly	1	1	1				
BT	45141 Clutch Assembly				1	1	1	1
F	45142 Clutch Driving Plate Assembly	1	1	1				
F	45143 Clutch Driving Plate Assembly				1	1	1	1
BT	45152 Clutch Pressure Plate	1	1	1				
BT	45153 Clutch Pressure Plate				1	1	1	1
BT	40038 Clutch Throw Out Finger	3	3	3	3	3	3	3
BT	47633 Clutch Throw Out Finger Pin	3	3	3	3	3	3	3
BT	40042 Clutch Throw Out Finger Retainer	3	3	3	3	3	3	3
BT	71157 Clutch Throw Out Finger Retainer Washer	3	3	3	3	3	3	3
BO	70867 Clutch Throw Out Finger Retainer Lockwasher	3	3	3	3	3	3	3
BT	70194 Clutch Throw Out Finger Retainer Nut	3	3	3	3	3	3	3
BT	45148 Clutch Engaging Spring	9	9	9				
BT	45154 Clutch Engaging Spring--Inner	6	6	6				
BT	45149 Clutch Engaging Spring				12	12	12	12
BT	40045 Clutch Cover	1	1	1				
BT	42628 Clutch Cover				1	1	1	1
F	40046 Clutch Cover Gasket	1	1	1				
F	42632 Clutch Cover Gasket				1	1	1	1
BT	71410 Clutch Cover Bolt	16	16	16				
BO	70096 Clutch Cover Bolt				16	16	16	16
BT	42630 Clutch Collar Assembly	1	1	1	1	1	1	1
BT	41258 Clutch Throw Out Bearing	1	1	1	1	1	1	1
BT	40047 Clutch Oil Seal	1	1	1	1	1	1	1
BT	42587 Clutch Throw Out Bearing Grease Retainer	1	1	1	1	1	1	1
BT	40055 Clutch Shifter Yoke	1	1	1	1	1	1	1
BZ	71174 Clutch Shifter Yoke Taper Pin	2	2	2	2	2	2	2
BT	42970 Clutch Shifter Yoke Shaft	1	1	1	1	1	1	1
BT	40308 Clutch Shifter Yoke Shaft Bushing	4	4	4	4	4	4	4
BT	43964 Clutch Shifter Yoke Shaft Bushing--(Rubber).	1	1	1	1	1	1	1
BT	48687 Clutch Shifter Yoke Coupling Lever Assembly	1	1	1	1	1	1	1
BT	42975 Clutch Shifter Yoke Coupling Lever Pin	2	2	2	2	2	2	2
BT	2354 Clutch Shifter Yoke Coupling Lever Taper Pin	1	1	1	1	1	1	1

NOTE: Parts Marked \* Used With Vacuum Clutch Control

Part No.	Description	61	62	63	64	65	66	67
<b>CLUTCH Cont'd.</b>								
BZ	33980	Clutch Shifter Yolk Coupling Lever Return Spring	1	1	1	1	1	1
BT	43533	Clutch Shifter Yoke Coupling Lever Pin Roller	2	2	2	2	2	2
BT	48691	Clutch Shifter Yoke Shaft Transmission Lock Operating Lever--(Low and Reverse)	1	1	1	1	1	1
BT	2354	Clutch Shifter Shaft Transmission Lock Operating Lever Taper Pin	1	1	1	1	1	1
<b>CLUTCH - R.H.D.</b>								
BT	42970	Clutch Shifter Yoke Shaft	1	1	1	1	1	1
BT	48688	Clutch Shifter Yoke Shaft Coupling Lever Assy	1	1	1	1	1	1
BT	40308	Clutch Shifter Yoke Shaft Bushing	4	4	4	4	4	4
BT	2354	Clutch Shifter Yoke Shaft Coupling Lever Taper Pin	2	2	2	2	2	2
<b>CLUTCH CONTROL</b>								
BZ	150494	Cross Shaft and Bracket Assembly	*	1	1	1	1	1
BM	219	Cross Shaft Bracket Bolt	2	2	2	2	2	2
BZ	122	Cross Shaft and Bracket Nut	2	2	2	2	2	2
BZ	42938	Cross Shaft Felt	1	1	1	1	1	1
BZ	45053	Cross Shaft Felt Retainer	1	1	1	1	1	1
BZ	45054	Cross Shaft Felt Retainer Spring	1	1	1	1	1	1
BZ	45235	Control Link Assembly	1	1	1	1	1	1
BZ	71290	Control Link Clevis	1	1	1	1	1	1
BT	71030	Control Link Clevis Nut	1	1	1	1	1	1
BZ	8683	Control Link Clevis Pin	1	1	1	1	1	1
BZ	71256	Control Link Clevis Pin (Clutch Pedal)	1	1	1	1	1	1
BZ	40317	Control Return Spring	1	1	1	1	1	1
BZ	30868	Control Return Spring Clip	1	1	1	1	1	1
<b>CLUTCH CONTROL - R.H.D.</b>								
BZ	45042	Cross Shaft and Bracket Assembly	1	1	1	1	1	1
BZ	42942	Control Link Assembly	1	1	1	1	1	1
BO	12481	Control Link Clevis Nut	1	1	1	1	1	1
<b>CLUTCH VACUUM CONTROL</b>								
BZ	150583	Vacuum Control Cylinder Valve and Pendulum Assembly	*	1	1	1	1	1
BZ	150584	Vacuum Control Cylinder--Less Valve	*	1	1	1	1	1
BZ	44024	Vacuum Control Housing Coverplate	1	1	1	1	1	1
BZ	150590	Vacuum Control Piston Rod Clevis	*	1	1	1	1	1
BX	2344	Vacuum Control Piston Rod Lock Nut	1	1	1	1	1	1
BT	71506	Vacuum Control Piston Rod Clevis Pin	1	1	1	1	1	1
BZ	151422	Vacuum Control Cylinder Mounting Bracket Assy	*	1	1	1		
BZ	150587	Vacuum Control Mounting Bracket Assembly	*			1	1	1
BM	6189	Vacuum Control Mounting Bracket Stud Nut	2	2	2			
BM	71065	Vacuum Control Mounting Bracket Stud Nut				2	2	2
BZ	150364	Vacuum Control Cylinder Swivel Pin Tension Washer	*	1	1	1	1	1
BZ	3118	Vacuum Control Cylinder Swivel Pin	1	1	1	1	1	1
BZ	151521	Vacuum Control Cylinder Piston Rod Guard (Rubber)	1	1	1	1	1	1
BZ	150591	Vacuum Control Bell Crank Assembly	*	1	1	1	1	1
BZ	150594	Vacuum Control Bell Crank to Coupling Lever Rod	*	1	1	1	1	1
BZ	150595	Vacuum Control Bell Crank to Coupling Lever Rod Plug Link	*	1	1	1	1	1
BO	12481	Vacuum Control Bell Crank to Coupling Lever Rod Nut	1	1	1	1	1	1
BZ	43473	Vacuum Control Bell Crank Bracket Assembly	1	1	1			
BZ	43031	Vacuum Control Bell Crank Bracket Assembly				1	1	1
BZ	150299	Vacuum Control Lever Rod (to Accelerator Shaft)	*	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>CLUTCH VACUUM CONTROL Cont'd.</b>								
BZ 43035	Vacuum Control Valve Bell Crank	1	1	1	1	1	1	1
BZ 38028	Vacuum Control Valve Bell Crank Bracket	1	1	1	1	1	1	1
BO 18459	Vacuum Control Valve Bell Crank Bracket Screw	2	2	2	2	2	2	2
BZ 6998	Vacuum Control Valve Bell Crank Clevis Pin	1	1	1	1	1	1	1
BZ 150596	Vacuum Control Valve Rod Assembly	* 1	1	1	1	1	1	1
BZ 5771	Vacuum Control Valve Rod Clevis	1	1	1	1	1	1	1
BO 71073	Vacuum Control Valve Rod Nut	1	1	1	1	1	1	1
BZ 5825	Vacuum Control Valve Rod Clevis Pin	1	1	1	1	1	1	1
BZ 45175	Vacuum Control Valve Rod Ball Joint	1	1	1	1	1	1	1
BO 71073	Vacuum Control Valve Rod Ball Joint Nut	1	1	1	1	1	1	1
BZ 41133	Vacuum Control Valve Rod Pull Back Spring	1	1	1	1	1	1	1
BZ 41134	Vacuum Control Valve Rod Pull Back Spring Clip	1	1	1	1	1	1	1
BZ 150598	Vacuum Control Vacuum Pipe Assembly	* 1	1	1				
BZ 150600	Vacuum Control Vacuum Pipe Assembly	*			1	1	1	1
BZ 71167	Vacuum Control Vacuum Pipe Union Nut	1	1	1	1	1	1	1
BM 71092	Vacuum Control Vacuum Pipe Elbow (Intake Mani- fold)	1	1	1				
BZ 71091	Vacuum Control Vacuum Pipe Union (Intake Mani- fold)	1	1	1		1	1	1
BO 117395	Vacuum Control Wire Assembly	* 1	1	1	1	1	1	1
BO 70121	Vacuum Control Wire Lock Washer	1	1	1	1	1	1	1
BO 70122	Vacuum Control Wire Nut	1	1	1	1	1	1	1
BZ 43895	Vacuum Control Wire Conduit Clamp (Valve End)	1	1	1	1	1	1	1
BO 5652	Vacuum Control Wire Conduit Clamp Screw	1	1	1	1	1	1	1
BZ 17944	Vacuum Control Wire Conduit Clamp Screw Nut ..	1	1	1	1	1	1	1
BZ 43919	Vacuum Control Wire Anchor Screw	1	1	1	1	1	1	1
BO 12790	Vacuum Control Wire Anchor Screw Lock Nut	1	1	1	1	1	1	1
HA 150602	Vacuum Control Complete (Service Kit)	* 1	1	1				
HA 150604	Vacuum Control Complete (Service Kit)	*			1	1	1	1

**CLUTCH VACUUM CONTROL - R.H.D.**

BZ 150603	Vacuum Control (Service Kit)	* 1	1	1				
BZ 150605	Vacuum Control (Service Kit)	*			1	1	1	1

**TRANSMISSION**

C 151000	Transmission Assembly	* 1	1	1	1	1	1	1
BT 40662	Speedometer Gear	1	1	1	1	1	1	1
BT 40663	Speedometer Pinion	* 1	1	1	1	1	1	1
C 151001	Transmission Assembly	* 1	1	1	1	1	1	1
BT 43114	Speedometer Gear	* 1	1	1	1	1	1	1
BT 43116	Speedometer Pinion							

Note Parts 5000 and 500 Do Not Include Bell Housing Or Low and Reverse Interlock Strap--Do Include Interlock Plunger and Bracket.

BT 150138	Transmission Case Assembly	* 1	1	1	1	1	1	1
BT 47255	Case Stud (For Electric Hand Power Unit)	2	2	2	2	2	2	2
BT 47203	Cross Shift Bell Crank Stud (For Electric Hand)	1	1	1	1	1	1	1
BT 150148	Countershaft Bushing--Front	* 1	1	1	1	1	1	1
14112	Countershaft Bushing Expansion Plug	1	1	1	1	1	1	1
47642	Reverse Gear Shift Lever Locator Seat	1	1	1	1	1	1	1
45598	Low and Reverse Shifter Fork Shaft	1	1	1	1	1	1	1
71294	Low and Reverse Shifter Fork Shaft Set Screw	1	1	1	1	1	1	1
40079	Transmission Case Gasket	1	1	1	1	1	1	1
2346	Filler and Drain Plug	2	2	2	2	2	2	2
42114	Main Drive Gear Bearing Retainer	1	1	1	1	1	1	1
40082	Main Drive Gear Bearing Retainer Shim--Thin	As Required						
40083	Main Drive Gear Bearing Retainer Shim--Thick	As Required						
71528	Main Drive Gear Bearing Retainer Screw	3	3	3	3	3	3	3
401	Main Drive Gear Bearing	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>TRANSMISSION Cont'd.</b>								
BT 40084	Main Drive Gear Bearing Oil Seal	1	1	1	1	1	1	1
F 71161	Main Drive Gear Pilot Bearing	1	1	1	1	1	1	1
BT 47291	Main Drive Gear Assembly	1	1	1	1	1	1	1
BT 44165	Main Shaft Thrust Ball Seat	1	1	1	1	1	1	1
BT 44170	Main Shaft Needle Roller Retaining Ring	1	1	1	1	1	1	1
BT 48800	Main Shaft Intermediate Gear Assembly	1	1	1	1	1	1	1
BT 45018	Main Shaft Intermediate Gear Bushing	1	1	1	1	1	1	1
BT 17919	Main Shaft Thrust Ball	7	7	7	7	7	7	7
BT 48802	Main Shaft Intermediate Gear Thrust Washer-- Front	2	2	2	2	2	2	2
BT 40093	Main Shaft Intermediate Gear Thrust Washer-- Rear	1	1	1	1	1	1	1
BT 48803	Main Shaft Intermediate Gear Thrust Washer Retainer	1	1	1	1	1	1	1
BT 150142	Main Shaft Assembly	* 1	1	1	1	1	1	1
BT 45626	Main Shaft Plug	1	1	1	1	1	1	1
BT 150209	Main Shaft Second and High Shift Sleeve	* 1	1	1	1	1	1	1
BT 44169	Main Shaft Needle Roller	26	26	26	26	26	26	26
BT 150144	Main Shaft Low and Reverse Gear	* 1	1	1	1	1	1	1
BT 47300	Main Shaft Low and Reverse Gear Retainer	2	2	2	2	2	2	2
F 42108	Main Shaft Bearing	1	1	1	1	1	1	1
BT 40061	Main Shaft Bearing Snap Ring	1	1	1	1	1	1	1
BT 150146	Countershaft	* 1	1	1	1	1	1	1
BT 150161	Countershaft Cap Assembly	* 1	1	1	1	1	1	1
BT 150149	Countershaft Bushing--Rear	* 1	1	1	1	1	1	1
BT 71165	Countershaft Cap Expansion Plug	1	1	1	1	1	1	1
BT 40105	Countershaft Cap Shim--Thin	As Required						
BT 40106	Countershaft Cap Shim--Thick	As Required						
BZ 71258	Countershaft Cap Screw	2	2	2	2	2	2	2
BT 40107	Countershaft Cap Gasket	1	1	1	1	1	1	1
BT 150163	Countershaft Drive Gear	* 1	1	1	1	1	1	1
BT 150164	Countershaft Drive Gear Thrust Washer Assy	* 1	1	1	1	1	1	1
BT 47302	Countershaft Intermediate Gear	1	1	1	1	1	1	1
BT 47305	Countershaft Intermediate Gear Retainer	1	1	1	1	1	1	1
BT 150166	Countershaft Low and Reverse Gear	* 1	1	1	1	1	1	1
BT 40112	Countershaft Thrust Washer	1	1	1	1	1	1	1
BT 47305	Countershaft Thrust Washer Retainer	1	1	1	1	1	1	1
BT 44175	Countershaft Thrust Washer Spacer	1	1	1	1	1	1	1
BT 10965	Countershaft Thrust Washer Spacer Pin	2	2	2	2	2	2	2
BT 150096	Low and Reverse Shift Rail	* 1	1	1	1	1	1	1
BT 150097	Second and High Shift Rail	* 1	1	1	1	1	1	1
BT 48675	Shift Rail Lock Rod	2	2	2	2	2	2	2
BZ 5825	Shift Rail Lock Rod Clevis Pin	2	2	2	2	2	2	2
BT 48676	Shift Rail Lock Rod Sleeve	2	2	2	2	2	2	2
BT 41151	Shift Rail Lock Rod Spring	2	2	2	2	2	2	2
BO 71389	Shift Rail Lock Rod Spring Washer	2	2	2	2	2	2	2
BM 794	Shift Rail Lock Rod Nut	4	4	4	4	4	4	4
BO 262	Shift Rail Lock Rod Washer	4	4	4	4	4	4	4
BT 48677	Shift Rail Lock Rod Link	2	2	2	2	2	2	2
BT 48678	Shift Rail Lock Rod Link Guide	2	2	2	2	2	2	2
BT 48679	Shift Rail Lock Rod Link Shim	As Required						
BT 48680	Shift Rail Lock Rod Link Shim	As Required						
BT 40122	Shift Rail Interlock	1	1	1	1	1	1	1
BT 58	Lock Ball	2	2	2	2	2	2	2
BT 47641	Lock Ball Spring	2	2	2	2	2	2	2
BT 48673	Lock Ball Spring Cap	2	2	2	2	2	2	2
BT 48674	Lock Plunger	2	2	2	2	2	2	2
BT 47310	Low and Reverse Shifter Assembly	1	1	1	1	1	1	1
BT 71163	Low and Reverse Shifter Pin	1	1	1	1	1	1	1
BT 40993	Low and Reverse Shifter Lock Screw	1	1	1	1	1	1	1
BT 40126	Low and Reverse Shifter Intermediate Lever	1	1	1	1	1	1	1
BT 40127	Low and Reverse Shifter Intermediate Lever Stud	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>TRANSMISSION Cont'd.</b>								
BT 12167	Low and Reverse Shifter Intermediate Lever Stud Nut	1	1	1	1	1	1	1
BT 150204	Low and Reverse Shifter Fork Assembly	*	1	1	1	1	1	1
BT 44178	Low and Reverse Shifter Fork Spring	1	1	1	1	1	1	1
BT 44179	Low and Reverse Shifter Fork Spring Seat	2	2	2	2	2	2	2
BT 47312	Second and High Shifter Fork	1	1	1	1	1	1	1
BT 40993	Second and High Shifter Fork Lock Screw	1	1	1	1	1	1	1
BT 151184	Reverse Gear Shaft--Stationary	*	1	1	1	1	1	1
BT 150298	Reverse Gear (Stationary) and Shaft (Rotation) Assembly	*	1	1	1	1	1	1
BT 46444	Reverse Gear Shaft (Rotating) Bushing	2	2	2	2	2	2	2
BT 44187	Reversing Gear (Stationary) Retainer	2	2	2	2	2	2	2
BT 150197	Reverse Gear (Sliding)	*	1	1	1	1	1	1
BT 150198	Reverse Gear Shaft Cap	*	1	1	1	1	1	1
BT 44190	Reverse Gear Shaft Cap Gasket	1	1	1	1	1	1	1
BZ 71528	Reverse Gear Shaft Cap Screw	2	2	2	2	2	2	2
BT 150199	Reverse Gear Shifter	*	1	1	1	1	1	1
BT 44195	Reverse Gear Shifter Lever	1	1	1	1	1	1	1
BT 44196	Reverse Gear Shifter Lever Locator Pin	1	1	1	1	1	1	1
BT 47642	Reverse Gear Shifter Lever Locator Seat	1	1	1	1	1	1	1
BT 151400	Reverse Gear Shifter Pickup Lever	*	1	1	1	1	1	1
BT 44196	Reverse Gear Shifter Pickup Lever Plunger	1	1	1	1	1	1	1
BT 47624	Reverse Gear Shifter Pickup Lever Plunger Spring	1	1	1	1	1	1	1
BT 150202	Reverse Gear Shifter Lever Fulcrum	*	1	1	1	1	1	1
BT 3488	Reverse Gear Shifter Lever Fulcrum Nut	1	1	1	1	1	1	1
BT 44204	Speedometer Gear Housing	1	1	1	1	1	1	1
BT 40133	Speedometer Gear Housing Oil Seal	1	1	1	1	1	1	1
BT 44206	Speedometer Gear Housing Gasket	1	1	1	1	1	1	1
BZ 70862	Speedometer Gear Housing Screw--Long	1	1	1	1	1	1	1
BT 71258	Speedometer Gear Housing Screw--Short	2	2	2	2	2	2	2
BT 38067	Speedometer Pinion Sleeve	1	1	1	1	1	1	1
BT 150208	Companion Flange	*	1	1	1	1	1	1
BO 18236	Companion Flange Screw	1	1	1	1	1	1	1
BT 40136	Companion Flange Screw Washer	1	1	1	1	1	1	1
BT 40532	Companion Flange Screw Washer Seal	1	1	1	1	1	1	1
BT 41042	Companion Flange Screw Gasket	1	1	1	1	1	1	1
BT 47332	Clutch Housing Assembly	1	1	1	1	1	1	1
BT 40308	Shifter Yoke Shaft Bushing	4	4	4	4	4	4	4
BZ 71081	Clutch Housing to Transmission Case Bolt	6	6	6	6	6	6	6
BT 71171	Clutch Housing to Cylinder Plate Bolt (Pilot)	1	1	1	1	1	1	1
BT 18430	Clutch Housing to Cylinder Plate Bolt	1	1	1	1	1	1	1
BX 12415	Clutch Housing to Cylinder Plate Bolt Nut	2	2	2	2	2	2	2
BT 71160	Clutch Housing to Cylinder Bolt--Short	1	1	1	1	1	1	1
BT 71159	Clutch Housing to Cylinder Bolt--Long	1	1	1	1	1	1	1
BZ 45019	Transmission Bumper--(Side)	2	2	2	2	2	2	2
BZ 45020	Transmission Bumper--(Side) Retainer	2	2	2	2	2	2	2
BZ 45021	Transmission Bumper--(Side) Bracket	1	1	1	1	1	1	1
BZ 45022	Transmission Bumper--(Side) Bolt	2	1	1	1	1	1	1
BZ 45022	Transmission Bumper--(Side) Bolt--(With Electric Hand)	1						
BZ 62	Transmission Bumper--(Side) Bolt Nut	4	2	2	2	2	2	2
BZ 62	Transmission Bumper--(Side) Bolt Nut (With Electric Hand)	2						
BZ 47256	Transmission Bumper--(Side) Bracket Assembly.	1	1	1	1	1	1	1
BO 70096	Transmission Bumper--(Side) Bracket to Frame Bolt	2	4	4	4	4	4	4
BO 70096	Transmission Bumper--(Side) Bracket to Frame Bolt (With Electric Hand)	4						
<b>TRANSMISSION CONTROL - CONVENTIONAL</b>								
C 150567	Transmission Control Assembly	*	1	1	1	1	1	1
BT 40222	Cover Assembly	1	1	1	1	1	1	1
BT 40224	Fulcrum Pin	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>TRANSMISSION CONTROL - CONVENTIONAL Cont'd.</b>								
BZ 908	Cover Screw	4	4	4	4	4	4	4
BT 40226	Cover Gasket	1	1	1	1	1	1	1
C 150568	Control Lever Assembly	*	1	1	1	1	1	1
BT 43553	Control Lever Knob	1	1	1	1	1	1	1
BT 40233	Control Lever Fulcrum Oil Seal	1	1	1	1	1	1	1
BT 40234	Control Lever Fulcrum Washer	1	1	1	1	1	1	1
BT 40235	Control Lever Fulcrum Spring	1	1	1	1	1	1	1
<b>ELECTRIC HAND TRANSMISSION CONTROL</b>								
BT 150251	Transmission Cover Assembly	*	1	1	1	1	1	1
BT 12438	Transmission Cover Expansion Plug	1	1	1	1	1	1	1
BZ 12275	Transmission Cover Screw	4	4	4	4	4	4	4
BT 35442	Transmission Cover Fulcrum Screw	1	1	1	1	1	1	1
BT 35443	Transmission Cover Fulcrum Screw Lock	1	1	1	1	1	1	1
BT 40226	Transmission Cover Gasket	1	1	1	1	1	1	1
BT 47315	Control Lever--Upper--Assembly	1	1	1	1	1	1	1
BT 43553	Control Lever--Upper--Knob	1	1	1	1	1	1	1
BT 47198	Control Lever--Lower--Assembly	1	1	1	1	1	1	1
BT 47200	Control Lever Fulcrum Oil Seal	1	1	1	1	1	1	1
BT 47191	Control Lever Fulcrum Spring	1	1	1	1	1	1	1
BT 40234	Control Lever Fulcrum Washer	1	1	1	1	1	1	1
BT 150767	Control Lever Lower Cap Assembly	*	1	1	1	1	1	1
BT 150252	Control Shaft Assembly	*	1	1	1	1	1	1
BT 47181	Control Shaft Lever--Inner	1	1	1	1	1	1	1
BT 47202	Control Shaft Lever--Inner--Lock Screw	1	1	1	1	1	1	1
BT 47189	Control Shaft Seal	1	1	1	1	1	1	1
BT 47190	Control Shaft Seal Retainer	1	1	1	1	1	1	1
BT 47183	Cross Shift Bell Crank Assembly	1	1	1	1	1	1	1
BT 47185	Cross Shift Bell Crank Bushing	1	1	1	1	1	1	1
BT 47186	Cross Shift Bell Crank Bushing Seal	1	1	1	1	1	1	1
BT 47187	Cross Shift Bell Crank Bushing Seal Retainer	1	1	1	1	1	1	1
BT 47203	Cross Shift Bell Crank Stud (In Transmission Case)	1	1	1	1	1	1	1
C 150255	Selector Wires and Jacket Tube Assembly	*	1					
C 150256	Selector Wires and Jacket Tube Assembly	*		1	1	1	1	1
BT 151179	Selector Switch to Jacket Tube Bolt	*	1	1	1	1	1	1
BT 151180	Selector Switch to Jacket Tube Bolt Spacer .	*	1	1	1	1	1	1
BZ 122	Selector Switch to Jacket Tube Bolt Nut	1	1	1	1	1	1	1
BT 47324	Selector Wire Loom	1	1	1	1	1	1	1
BT 47326	Selector Wire Connection Clip (Split)	2	2	2	2	2	2	2
BO 9159	Selector Wire Connection Clip Clamp Bolt	1	1	1	1	1	1	1
BZ 70874	Selector Wire Connection Clip Clamp Bolt Nut	1	1	1	1	1	1	1
BT 151200	Switches and Wires Assembly--Lower (Less Circuit Breaker)	1	1	1	1	1	1	1
BO 40711	Switch Wires Clip	1	1	1	1	1	1	1
BT 47204	Main Contact Switch to Transmission Cover Gasket	1	1	1	1	1	1	1
BO 18318	Main Contact Switch to Transmission Cover Screw	4	4	4	4	4	4	4
BT 48701	Interlock Switch Assembly	1	1	1	1	1	1	1
BO 18447	Interlock Switch to Clutch Housing Bolt	2	2	2	2	2	2	2
BO 71073	Interlock Switch to Clutch Housing Bolt Nut	2	2	2	2	2	2	2
BT 47314	Interlock Switch Rod	1	1	1	1	1	1	1
BT 48702	Interlock Switch Rod Tapped Sleeve	1	1	1	1	1	1	1
BT 47946	Interlock Switch Rod Special Nut	1	1	1	1	1	1	1
BT 151487	Selector Switch Housing	*	1	1	1	1	1	1
BT 151488	Selector Switch Cap	*	1	1	1	1	1	1
BT 151489	Selector Switch Cap Washer	*	1	1	1	1	1	1
BT 151490	Selector Switch Shaft and Lever Assembly	*	1	1	1	1	1	1
BT 48493	Selector Switch Shaft Assembly	1	1	1	1	1	1	1
BT 151491	Selector Switch Segment ("H" Plate)	*	1	1	1	1	1	1
BT 151492	Selector Switch Lever Assembly	*	1	1	1	1	1	1
BT 151494	Selector Switch Lever Spring	*	1	1	1	1	1	1
BT 48510	Selector Switch Lever Spring Stop Washer	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>ELECTRIC HAND TRANSMISSION CONTROL Cont'd.</b>								
BT 48447	Selector Switch Lever Spring Stop Washer Retainer Spring	1	1	1	1	1	1	1
BT 48721	Selector Switch Base and Wires Assembly	1	1	1	1	1	1	1
BT 48518	Selector Switch Base Lock Ring	1	1	1	1	1	1	1
BT 48519	Selector Switch Rotor Assembly	1	1	1	1	1	1	1
BT 151496	Selector Switch Rotor Retaining Spring	1	1	1	1	1	1	1
BT 48524	Selector Cut Out Switch	1	1	1	1	1	1	1
BT 151498	Selector Cut Out Switch Cover Plate	* 1	1	1	1	1	1	1
BT 151499	Selector Cut Out Switch Cover Plate Screw	* 2	2	2	2	2	2	2
BT 48527	Selector Cut Out Switch Lead Wire	1	1	1	1	1	1	1
BT 151497	Selector Cut Out Switch Screw	* 3	3	3	3	3	3	3
BT 48078	Selector Wires Connector Assembly--Female	1	1	1	1	1	1	1
BT 48077	Selector Wires Connector Assembly--Male	1	1	1	1	1	1	1
BT 48079	Selector Wires Connector Terminal Plate--Male	1	1	1	1	1	1	1
BT 48080	Selector Wires Connector Terminal Plate--Female	1	1	1	1	1	1	1
BT 48081	Selector Wires Connector Cap	2	2	2	2	2	2	2
BT 48744	Main Contact Plate and Block Assembly	1	1	1	1	1	1	1
BT 48529	Main Contact Plate and Guide Assembly	1	1	1	1	1	1	1
BT 48745	Main Contact Shift Block Assembly	1	1	1	1	1	1	1
BT 48537	Main Contact Plate Cover Assembly	1	1	1	1	1	1	1
BT 151500	Selector Wires Assembly--Lower	* 1	1	1	1	1	1	1
BT 48475	Selector Wires Terminal	8	8	8	8	8	8	8
BT 150257	Circuit Breaker Switch	* 1	1	1	1	1	1	1
BZ 71384	Circuit Breaker Switch to Cylinder Support Bolt	1	1	1	1	1	1	1
BT 150716	Circuit Breaker Operating Clip	* 1	1	1	1	1	1	1
BT 47331	Circuit Breaker Operating Clip Insert	1	1	1	1	1	1	1
BM 9182	Circuit Breaker Operating Clip Bolt	1	1	1	1	1	1	1
BM 272	Circuit Breaker Operating Clip Nut	1	1	1	1	1	1	1
BT 150718	Circuit Breaker Operating Rod	1	1	1	1	1	1	1
BZ 5771	Circuit Breaker Operating Rod Clevis	1	1	1	1	1	1	1
BO 71073	Circuit Breaker Operating Rod Nut	1	1	1	1	1	1	1
BT 150719	Circuit Breaker Operating Rod Sleeve	1	1	1	1	1	1	1
BT 48606	Power Unit Vacuum Pipe Assembly--Short	1	1	1	1	1	1	1
BT 47385	Power Unit Vacuum Pipe Assembly--Long	1	1	1	1	1	1	1
BT 47387	Power Unit Vacuum Pipe Assembly--Long	1	1	1	1	1	1	1
BT 48773	Power Unit Vacuum Hose	1	1	1	1	1	1	1
BT 48774	Power Unit Vacuum Hose Reinforcement Spring	1	1	1	1	1	1	1
BZ 71170	Power Unit Vacuum Hose Clamp	2	2	2	2	2	2	2
BT 151241	Transmission Electric Hand Kit-Service	* 1	1	1	1	1	1	1
HA 47898	Transmission Electric Hand Testing Kit-Service	1	1	1	1	1	1	1
<b>POWER UNIT</b>								
C 48700	Power Unit Assembly	1	1	1	1	1	1	1
BT 3488	Power Unit to Bracket Stud Nut	1	1	1	1	1	1	1
BT 150258	Power Unit to Bracket Rubber Spacer	* 1	1	1	1	1	1	1
BT 150259	Power Unit to Bracket Rubber Washer	* 1	1	1	1	1	1	1
BT 71521	Power Unit to Bracket Plain Washer	1	1	1	1	1	1	1
BT 150254	Power Unit Mounting Bracket	* 1	1	1	1	1	1	1
BM 110	Power Unit Mounting Bracket Stud Nut	2	2	2	2	2	2	2
BT 47255	Power Unit Mounting Bracket Stud (Transmission Case)	2	2	2	2	2	2	2
BT 71506	Power Unit Shift Rod Clevis Pin	1	1	1	1	1	1	1
BZ 5774	Power Unit Shift Rod Clevis	1	1	1	1	1	1	1
BM 794	Power Unit Shift Rod Clevis Nut	1	1	1	1	1	1	1
BT 71522	Power Unit Shift Rod Clevis Pin	1	1	1	1	1	1	1
BT 48401	Power Unit Cylinder Assembly	1	1	1	1	1	1	1
BT 48406	Power Unit Cylinder Mounting Bracket Assembly	1	1	1	1	1	1	1
BT 151486	Power Unit Cylinder End Plate and Felt Assy	* 1	1	1	1	1	1	1
BT 48409	Power Unit Cylinder End Plate Assembly	1	1	1	1	1	1	1
BT 48411	Power Unit Cylinder End Plate Piston Seal	1	1	1	1	1	1	1
BT 48412	Power Unit Cylinder End Plate and Piston Seal Lock	1	1	1	1	1	1	1



Part No.	Description	61	62	63	64	65	66	67
<b>POWER UNIT Cont'd.</b>								
BT 48415	Power Unit Cylinder Plate Gasket	1	1	1	1	1	1	1
BT 48416	Power Unit Cylinder Piston Assembly	1	1	1	1	1	1	1
BT 48417	Power Unit Cylinder Piston Plate	2	2	2	2	2	2	2
BT 48418	Power Unit Cylinder Piston (Center) Plate	1	1	1	1	1	1	1
BT 48419	Power Unit Cylinder Piston Packing	2	2	2	2	2	2	2
BT 48420	Power Unit Cylinder Piston Packing Ring	2	2	2	2	2	2	2
BT 48421	Power Unit Cylinder Piston Felt Assembly	2	2	2	2	2	2	2
BT 48423	Power Unit Cylinder Piston Felt Retainer	2	2	2	2	2	2	2
BT 48425	Power Unit Cylinder Piston Rod	1	1	1	1	1	1	1
BT 48426	Power Unit Cylinder Piston Rod Nut	1	1	1	1	1	1	1
BT 48427	Power Unit Cylinder Piston Rod End	1	1	1	1	1	1	1
BT 71030	Power Unit Cylinder Piston Rod End Locknut	1	1	1	1	1	1	1
BT 48256	Power Unit Cylinder Piston Rod Guard	1	1	1	1	1	1	1
BT 48428	Power Unit Cylinder End Plate Stay Bolt	3	3	3	3	3	3	3
BT 71443	Power Unit Cylinder End Plate Stay Bolt Nut	3	3	3	3	3	3	3
BT 48429	Power Unit Cylinder Flared Tube Elbow	2	2	2	2	2	2	2
BT 48431	Power Unit Diaphragm Cylinder Assembly	1	1	1	1	1	1	1
BT 48432	Power Unit Diaphragm Assembly	1	1	1	1	1	1	1
BT 48434	Power Unit Diaphragm Plate	1	1	1	1	1	1	1
BT 48433	Power Unit Diaphragm	1	1	1	1	1	1	1
BT 48435	Power Unit Diaphragm Flanged Plate	1	1	1	1	1	1	1
BT 48436	Power Unit Diaphragm Washer	1	1	1	1	1	1	1
PT 48437	Power Unit Diaphragm Rod	1	1	1	1	1	1	1
BM 794	Power Unit Diaphragm Rod Nut	1	1	1	1	1	1	1
BT 48706	Power Unit Diaphragm Rod Guard	1	1	1	1	1	1	1
BT 48255	Power Unit Diaphragm Housing Assembly (Rod End)	1	1	1	1	1	1	1
BT 48440	Power Unit Diaphragm Housing Assembly (Pipe End)	1	1	1	1	1	1	1
BT 1634	Power Unit Diaphragm Housing Bolt	6	6	6	6	6	6	6
BO 71152	Power Unit Diaphragm Housing Bolt Nut	6	6	6	6	6	6	6
BT 48444	Power Unit Diaphragm Retaining Spring	1	1	1	1	1	1	1
BT 48445	Power Unit Diaphragm Mounting Plug	1	1	1	1	1	1	1
BT 48446	Power Unit Diaphragm Mounting Plug Gasket	1	1	1	1	1	1	1
BT 48335	Power Unit Vacuum Connecting Elbow	1	1	1	1	1	1	1

**SELECTOR VALVE**

BT 48708	Selector Valve Assembly	1	1	1	1	1	1	1
BT 48450	Selector Valve to Bracket Gasket	1	1	1	1	1	1	1
BT 71599	Selector Valve to Bracket Bolt	4	4	4	4	4	4	4
BO 71073	Selector Valve to Bracket Bolt Nut	4	4	4	4	4	4	4
BT 48709	Selector Valve Body Assembly	1	1	1	1	1	1	1
BT 48456	Selector Valve Body Expansion Plug	1	1	1	1	1	1	1
BT 48711	Selector Valve Plunger Complete	3	3	3	3	3	3	3
PT 48876	Selector Valve Plunger Assembly	3	3	3	3	3	3	3
BT 48877	Selector Valve Plunger Disc	3	3	3	3	3	3	3
BT 48715	Selector Valve Plunger Spring	3	3	3	3	3	3	3
BT 48719	Selector Valve Cover Plate Assembly	1	1	1	1	1	1	1
BT 48239	Selector Valve Cover Plate Gasket	1	1	1	1	1	1	1
BM 14017	Selector Valve Cover Plate Screw	4	4	4	4	4	4	4
BT 48725	Selector Valve to Cylinder Tube Assembly	1	1	1	1	1	1	1
BT 48466	Selector Valve to Cylinder Tube Elbow	2	2	2	2	2	2	2
BT 48877	Selector Valve to Cylinder Tube Connection (Rubber)	2	2	2	2	2	2	2
BT 48729	Selector Valve Solenoid Assembly	3	3	3	3	3	3	3
BT 48736	Selector Valve Solenoid Cover	1	1	1	1	1	1	1
BT 48737	Selector Valve Solenoid Cover Bolt	1	1	1	1	1	1	1
BT 48738	Selector Valve Solenoid Gasket	1	1	1	1	1	1	1
BT 48740	Selector Valve Solenoid Retainer	1	1	1	1	1	1	1
BT 48741	Selector Valve Solenoid Retainer Gasket	1	1	1	1	1	1	1
BM 14017	Selector Valve Solenoid Retainer Screw	3	3	3	3	3	3	3
BT 48541	Selector Valve Check Valve	1	1	1	1	1	1	1
BT 48542	Selector Valve Check Valve Nut	1	1	1	1	1	1	1
BT 48727	Selector Valve to Cylinder Tube Complete	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>ELECTRIC HAND TRANSMISSION CONTROL - R.H.D.</b>								
C 150256	Selector Wires and Jacket Tube Assembly	1	1	1	1	1	1	1
BT 40919	Selector Wires Clip (Clutch Housing--R.H. Side)	1	1	1	1	1	1	1
BT 47897	Selector Wires Clip (Clutch Housing--L.H. Side)	1	1	1	1	1	1	1
<b>PROPELLER SHAFT AND UNIVERSAL JOINTS</b>								
C 150170	Propeller Shaft Assembly	* 1	1	1				
C 150172	Propeller Shaft Assembly	*			1	1		
C 150174	Propeller Shaft Assembly	*					1	1
BZ 150182	Front Universal Joint Assembly	* 1	1	1	1	1		
BZ 150183	Front Universal Joint Assembly	*					1	1
BZ 150186	Propeller Shaft Sleeve Yoke	* 1	1	1	1	1		
BZ 150187	Propeller Shaft Sleeve Yoke	*					1	1
BZ 43511	Sleeve Yoke Expansion Plug	1	1	1	1	1	1	1
BZ 51271	Sleeve Yoke Dust Cap	1	1	1	1	1		
BZ 43512	Sleeve Yoke Dust Washer	1	1	1	1	1		
BZ 46490	Sleeve Yoke Dust Cap						1	1
BZ 46491	Sleeve Yoke Dust Washer						1	1
BZ 51275	Sleeve Yoke Dust Washer Retainer	1	1	1	1	1		
BZ 46492	Sleeve Yoke Dust Washer Retainer						1	1
C 150188	Shaft and Rear Joint Assembly	* 1	1	1				
C 150190	Shaft and Rear Joint Assembly	*			1	1		
C 150192	Shaft and Rear Joint Assembly	*					1	1
BZ 150194	Journal Assembly	* 2	2	2	2	2	2	2
BZ 43517	Journal Gasket	8	8	8	8	8	8	8
BZ 43518	Journal Gasket Retainer	8	8	8	8	8	8	8
BZ 43809	Journal Bearing Assembly	8	8	8	8	8	8	8
BZ 43521	Journal Bearing Race Snap Ring	8	8	8	8	8	8	8
BZ 150723	Propeller Shaft U-Bolt	* 4	4	4	4	4	4	4
BZ 611	Propeller Shaft U-Bolt Nut	8	8	8	8	8	8	8
BZ 150724	Propeller Shaft U-Bolt Lock	* 4	4	4	4	4	4	4
BZ 9773	Propeller Shaft Filler Plug	1	1	1	1	1	1	1
BX 150098	Rear Axle Companion Flange	* 1	1	1	1	1	1	1
BT 150208	Transmission Companion Flange	* 1	1	1	1	1	1	1
<b>STEERING GEAR</b>								
C 150730	Steering Gear Assembly	* 1	1	1	1	1	1	1
BZ 150727	Ball Arm	* 1	1					
BZ 151544	Ball Arm	*		1	1	1	1	1
BZ 45242	Shaft Oil Seal	1	1	1	1	1	1	1
BZ 45244	Shaft Oil Seal Spring	1	1	1	1	1	1	1
BZ 45243	Shaft Oil Seal Retainer	1	1	1	1	1	1	1
C 40781	Jacket Tube Assembly--(Without Electric Hand)	1	1	1	1	1	1	1
C 150737	Jacket Tube Assembly--(With Electric Hand)	* 1	1	1	1	1	1	1
BZ 40783	Jacket Tube Bushing	1	1	1	1	1	1	1
HZ 71526	Jacket Tube Clamp Bolt	1	1	1	1	1	1	1
BZ 2481	Jacket Tube Clamp Bolt Nut	1	1	1	1	1	1	1
C 48594	Steering Wheel (Black)	1	1					
C 150725	Steering Wheel (Boxwood Brown)--Special	* 1	1					
C 48595	Steering Wheel (Black)			1	1		1	
C 150726	Steering Wheel (Birch Gray)--Special			1	1		1	
C 150726	Steering Wheel (Birch Gray)--Standard					1		1
BZ 70541	Steering Wheel Key	1	1	1	1	1	1	1
BX 18093	Steering Wheel Nut	1	1	1	1	1	1	1
BZ 40784	Horn Button--Black	1	1					
BZ 150696	Horn Button--Ivory	*		1	1	1	1	1
BZ 47627	Horn Button Cover--Ivory	1	1	1	1	1	1	1
BZ 40786	Horn Button Contact Cup	1	1	1	1	1	1	1
BZ 40787	Horn Button Contact Spring Disc	1	1	1	1	1	1	1
BZ 40789	Horn To Button Wire Assembly	1	1	1	1	1	1	1
BZ 40790	Horn To Button Wire Terminal (Upper)	1	1	1	1	1	1	1
BZ 40791	Horn To Button Wire Terminal Insulating Washer	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>STEERING GEAR Cont'd.</b>								
BZ	40792	Horn To Button Wire Terminal Insulating Washer Seat	1	1	1	1	1	1
BZ	71178	Horn Button To Connector Wire Terminal (Connector)	1	1	1	1	1	1
BZ	44263	Steering Gear to Frame Bolt	3	3	3	3	3	3
BZ	62	Steering Gear to Frame Bolt Nut	3	3	3	3	3	3
<b>STEERING GEAR ASSEMBLY - R.H.D.</b>								
C	150731	Steering Gear Assembly	* 1	1	1	1	1	1
BZ	150728	Ball Arm	* 1	1				
BZ	151545	Ball Arm	*		1	1	1	1
BZ	45426	Shaft Oil Seal	1	1	1	1	1	1
BZ	45427	Shaft Oil Seal Retainer	1	1	1	1	1	1
BX	45428	Shaft Oil Seal Retainer Spring	1	1	1	1	1	1
<b>DRAG LINK</b>								
C	150102	Drag Link Assembly	* 1	1				
C	150104	Drag Link Assembly	*		1	1	1	1
C	150106	Drag Link and Plugs Assembly	* 1	1				
C	150108	Drag Link and Plugs Assembly	*		1	1	1	1
BZ	40909	Drag Link Plug--Front	1	1	1	1	1	1
BZ	60533	Drag Link Plug--Rear	1	1	1	1	1	1
BZ	40688	Drag Link Spring--Front	1	1	1	1	1	1
BZ	42899	Drag Link Spring--Rear			1	1	1	1
BZ	151547	Drag Link Spring--Rear	* 1	1				
BZ	151548	Drag Link Spring Spacer--Rear	* 1	1				
BZ	40910	Drag Link Ball Seat--Front	1	1	1	1	1	1
BZ	60532	Drag Link Ball Seat--Rear	1	1	1	1	1	1
BZ	42897	Drag Link Dust Cover--Inner	1	1	1	1	1	1
BZ	42898	Drag Link Dust Cover--Outer	1	1	1	1	1	1
BZ	70310	Drag Link Dust Cover Bolt	1	1	1	1	1	1
BZ	3987	Drag Link Dust Cover Bolt Nut	1	1	1	1	1	1
BZ	40414	Drag Link Boot Assembly--Front	1	1	1	1	1	1
BZ	40416	Drag Link Boot Lace	1	1	1	1	1	1
<b>DRAG LINK</b>								
C	150103	Drag Link Assembly	1	1	1	1	1	1
C	150105	Drag Link Assembly						
C	150107	Drag Link and Plugs Assembly	1	1				
C	150109	Drag Link and Plugs Assembly			1	1	1	1
BZ	42889	Drag Link Dust Cover--Inner	1	1	1	1	1	1
BZ	42890	Drag Link Dust Cover--Outer	1	1	1	1	1	1
<b>GAS TANK - STRAPS AND PIPES</b>								
C	150118	Gasoline Tank Assembly--Brougham and Sedan	* 1	1	1	1	1	1
C	150119	Gasoline Tank Assembly--Coupes	* 1	1	1	1	1	
BZ	150124	Gasoline Tank Filler Neck Assembly--(Brougham and Sedan)	* 1	1	1	1	1	1
BZ	150125	Gasoline Tank Filler Neck Assembly--(Coupes)	* 1	1	1	1	1	
BZ	44959	Filler Neck to Body Cushion	1	1	1	1	1	1
BO	45344	Filler Neck to Body Grommet	1	1	1	1	1	1
BZ	26877	Drain Plug Boss	1	1	1	1	1	1
BM	71100	Drain Plug	1	1	1	1	1	1
F	150128	Tank Cap Assembly	* 1	1	1	1	1	1
BZ	37667	Tank Cap Gasket	1	1	1	1	1	1
BZ	46499	Locking Cap Complete--(Service)	1	1	1	1	1	1
BZ	150130	Tank Gauge Assembly	* 1	1	1	1	1	1
BZ	71490	Tank Gauge Fastening Screw	6	6	6	6	6	6
BO	71424	Tank Gauge Terminal Screw	1	1	1	1	1	1
BZ	150129	Tank To Seat Tray Pad	* 1	1	1	1	1	1
BZ	150131	Tank Gauge Gasket	* 1	1	1	1	1	1
BZ	150134	Tank Outlet Unit (Suction Pipe)	* 1	1	1	1	1	1
BZ	47090	Tank Outlet Unit Gasket	1	1	1	1	1	1
BZ	71489	Tank Outlet Unit Screw	2	2	2	2	2	2

Part No.	Description	61	62	63	64	65	66	67
<b>GAS TANK - STRAPS AND PIPES Cont'd.</b>								
BZ 150136	Tank To Strap Silencer	* 2	2	2	2	2	2	2
BZ 71442	Tank Outlet Unit Screw Gasket	2	2	2	2	2	2	2
BZ 150137	Tank Strap	* 2	2	2	2	2	2	2
BZ 71644	Tank Strap Bolt--Rear	2	2	2	2	2	2	2
BO 12481	Tank Strap Bolt Nut--Rear	2	2	2	2	2	2	2
BM 219	Tank Strap Bolt--Front	2	2	2	2	2	2	2
BZ 122	Tank Strap Bolt Nut--Front	2	2	2	2	2	2	2
BZ 150675	Tank To Fuel Pump Pipe Assembly	* 1	1	1				
BZ 43124	Tank To Fuel Pump Pipe Assembly				1	1		
BZ 45193	Tank To Fuel Pump Pipe Assembly						1	1
BM 11842	Union Nut	1	1	1				
BM 11828	Union Nut				2	2	2	2
BO 70505	Tank To Fuel Pipe Grommet	4	4	4	4	4	4	4
BZ 41030	Tank To Fuel Pipe Clip	1	1	1				
BZ 40029	Tank To Fuel Pipe Clip	2	2	2				
BO 18197	Tank To Fuel Pipe Clip				1	1	1	1
BZ 43127	Tank To Fuel Pipe Clip				2	2	2	2

**MUFFLER AND EXHAUST PIPE**

A 45420	Muffler Assembly	1	1					
F 47102	Muffler Assembly			1				
A 45421	Muffler Assembly				1	1	1	1
BZ 40403	Muffler-Bracket--Front	1	1	1				
BZ 42290	Muffler Bracket--Front				1	1	1	1
BZ 40404	Muffler Bracket--Rear	1	1					
BZ 42291	Muffler Bracket--Rear			1	1	1	1	1
BZ 2490	Muffler Bracket Clamp Bolt	2	2	2	2	2	2	2
BZ 122	Muffler Bracket Clamp Bolt Nut	2	2	2	2	2	2	2
BM 219	Muffler Bracket Bolt	2	2	3	3	3	3	3
BZ 122	Muffler Bracket Bolt Nut	2	2	3	3	3	3	3
BZ 38031	Muffler Bracket Bolt Grommet	2	2	3	3	3	3	3
BZ 38032	Muffler Bracket Bolt Grommet Cup Washer	2	2	3	3	3	3	3
C 150155	Tail Pipe Assembly	* 1	1					
C 150157	Tail Pipe Assembly	* 1		1	1	1		
C 150159	Tail Pipe Assembly	* 1					1	1
BZ 150153	Tail Pipe Bracket--Front	* 1	1	1	1	1	1	1
BZ 150154	Tail Pipe Bracket--Rear	* 1	1	1	1	1	1	1
BM 219	Tail Pipe Bracket Bolt	3	3	3	3	3	3	3
BZ 122	Tail Pipe Bracket Bolt Nut	3	3	3	3	3	3	3
BZ 38031	Tail Pipe Bracket Bolt Grommet	3	3	3	3	3	3	3
BZ 38032	Tail Pipe Bracket Bolt Grommet Cup Washer	3	3	3	3	3	3	3
C 47103	Exhaust Pipe Assembly	1	1					
C 47138	Exhaust Pipe Assembly			1				
C 47620	Exhaust Pipe Assembly				1	1	1	1
C 151628	Exhaust Pipe Assembly	1	1					
C 151630	Exhaust Pipe Assembly			1				
C 151632	Exhaust Pipe Assembly				1	1		
BZ 41223	Exhaust Pipe Flange	1	1					
BZ 42245	Exhaust Pipe Flange			1	1	1	1	1
BZ 40412	Exhaust Pipe Flange Gasket	1	1					
BZ 42246	Exhaust Flange Gasket			1	1	1	1	1
BT 18430	Exhaust Pipe Flange Clamp Bolt	1	1	1	1	1	1	1
BZ 62	Exhaust Pipe Flange Clamp Bolt Nut	1	1	1	1	1	1	1
BZ 2404	Exhaust Pipe Flange Bolt	2	2	2	2	2	2	2
BO 71058	Exhaust Pipe Flange Bolt Nut	2	2	2	2	2	2	2
BZ 40413	Exhaust Pipe Flange Bolt Lock	2	2	2	2	2	2	2
BZ 44666	Exhaust Pipe Cover--Upper--Front				1	1	1	1
BZ 44667	Exhaust Pipe Cover--Upper--Rear				1	1	1	1
BZ 47622	Exhaust Pipe Cover--Lower--Front				1	1	1	1
BZ 47623	Exhaust Pipe Cover--Lower--Rear				1	1	1	1
BZ 2397	Exhaust Pipe Cover Strap				4	4	4	4
BZ 48647	Tail Pipe Extension--Service	1	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>RADIATOR</b>								
A	150535 Radiator Assembly	1	1					
A	150536 Radiator Assembly			1				
A	150537 Radiator Assembly				1	1	1	1
<b>CORE</b>								
C	150541 Core Assembly	*	1	1				
C	150542 Core Assembly	*		1				
C	150543 Core Assembly	*			1	1	1	1
BO	70435 Radiator To Frame Bolt		2	2	2	2	2	2
BZ	70627 Radiator To Frame Bolt Nut		2	2	2	2	2	2
BZ	150544 Radiator Mounting Shim--Rubber	*	2	2	2	2	2	2
BZ	30345 Radiator Mounting Shim--Rubber		2	2	2	2	2	2
BZ	150655 Radiator Mounting Shim--Steel	*	As Required					
BZ	150545 Filler Cap	*	1	1	1	1	1	1
BM	18118 Drain Cock		1	1	1	1	1	1
F	150547 Inlet Hose	*	1	1		1	1	1
F	150243 Inlet Hose--Front and Rear	*			2			
BZ	150548 Inlet Hose Connecting Pipe	*			1			
F	71614 Inlet Hose Clamp		2	2	4	2	2	2
F	150550 Outlet Hose	*	1	1		1	1	1
F	150551 Outlet Hose	*			2			
BZ	150552 Outlet Hose Connecting Pipe	*			1			
F	71615 Outlet Hose Clamp		2	2	4	2	2	2
<b>SHELL AND GRILLE</b>								
A	116716 Radiator Shell Assembly	*	1	1				
A	116717 Radiator Shell Assembly	*			1	1	1	1
C	116890 Radiator Shell Finish Moulding--R.H	*	1	1				
C	116891 Radiator Shell Finish Moulding--L.H	*	1	1				
C	116892 Radiator Shell Finish Moulding--R.H	*			1	1	1	1
C	116893 Radiator Shell Finish Moulding--L.H	*			1	1	1	1
BZ	116894 Moulding Attaching Bolt	*	20	20	18	18	18	18
BO	70795 Moulding Attaching Bolt Nut	*	20	20	18	18	18	18
BM	70242 Radiator Shell To Core Bolt		8	8	8	8	8	8
BZ	262 Radiator Shell To Core Bolt Plain Washer		8	8	8	8	8	8
BZ	70676 Radiator Shell To Core Bolt Nut		8	8	8	8	8	8
BZ	116823 Radiator Ornament	*	1	1				
BZ	117202 Radiator Ornament Bolt	*	3	3				
BZ	71073 Radiator Ornament Bolt Nut		3	3				
BO	18459 Radiator Ornament Screw		5	5				
BZ	116961 Radiator Ornament Mounting Cap	*	2	2				
AZ	116962 Radiator Ornament Mounting Cap	*			1	1	1	1
BZ	116910 Radiator Ornament Mounting	*	1	1				
BZ	116912 Radiator Ornament Mounting	*			1	1	1	1
BZ	116908 Radiator Ornament Crest	*	1	1	1	1	1	1
BO	71611 Radiator Ornament Crest Screw		2	2	2	2	2	2
BO	71612 Radiator Ornament Crest Mounting Bolt		1	1	1	1	1	1
BO	71373 Radiator Ornament Crest Attaching Lock Screw		1	1	1	1	1	1
BZ	112919 Radiator Name Plate				1	1	1	1
BZ	112921 Radiator Name Plate				1	1	1	1
A	116344 Radiator Grill Assembly	*	1	1	1	1	1	1
A	116345 Radiator Grill Assembly	*			14	14	14	14
BZ	71654 Radiator Grill Screw				6	6	6	6
BZ	70484 Radiator Grill Screw--Large				1	1	1	1
BZ	117091 Radiator Grill Clamp Plate							
C	116886 Radiator Grill Side Moulding--R.H	*	1	1				
C	116887 Radiator Grill Side Moulding--L.H	*	1	1				
BZ	71494 Radiator Grill Side Moulding Bolt	*	18	18				
BO	70795 Radiator Grill Side Moulding Bolt Nut		18	18				
C	116888 Radiator Grill Moulding--Upper	*	1	1				
C	116889 Radiator Grill Moulding--Lower	*	1	1				
BZ	70901 Radiator Grill Moulding Bolt		7	7				
BZ	70677 Radiator Grill Moulding Bolt Nut		7	7				
BZ	116807 Radiator Stay Rod Assembly	*	2	2				

Part No.	Description	61	62	63	64	65	66	67
<b>SHELL AND GRILLE Cont'd.</b>								
BZ 116808	Radiator Stay Rod Assembly	*		2	2	2	2	2
BM 794	Radiator Stay Rod Nut	4	4	4	4	4	4	4
BM 70242	Radiator Stay Rod to Shell Bolt	2	2	2	2	2	2	2
BZ 70676	Radiator Stay Rod to Shell Bolt Nut	2	2	2	2	2	2	2
BZ 100516	Radiator Stay Rod Clamp	1	1	1	1	1	1	1
BZ 70981	Radiator Stay Rod Clamp Nut	2	2	2	2	2	2	2
BZ 100517	Radiator Stay Rod Clamp Plate	1	1	1	1	1	1	1
BZ 116502	Starting Crank Hole Cover Assembly	*	1	1				
BZ 116504	Starting Crank Hole Cover Assembly	*		1	1	1	1	1
A 116313	Radiator Lower Tank Shield Assembly	*	1	1	1	1	1	1
A 116312	Radiator Lower Tank Shield Assembly	*						
BO 18453	Radiator Lower Tank Shield To Fender Bolt-- Short		6	6	6	6	6	6
BZ 70048	Radiator Lower Tank Shield To Fender Bolt-- Long		4	4	4	4	4	4
BZ 70676	Radiator Lower Tank Shield To Fender Bolt Nut		10	10	10	8	8	8
<b>BONNET</b>								
A 116279	Bonnet Complete	*	1	1				
A 116997	Bonnet Complete	*			1			
A 116288	Bonnet Complete	*			1	1	1	1
A 117076	Top and Side Panels Complete--R.H	*	1	1				
A 117077	Top and Side Panels Complete--L.H	*	1	1				
A 117078	Top and Side Panels Complete--R.H	*			1			
A 117079	Top and Side Panels Complete--L.H	*			1			
A 117080	Top and Side Panels Complete--R.H	*				1	1	1
A 117081	Top and Side Panels Complete--L.H	*				1	1	1
A 116280	Bonnet Top Panel--R.H	*	1	1				
A 116281	Bonnet Top Panel--L.H	*	1	1				
A 116284	Bonnet Top Panel--R.H	*			1	1	1	1
A 116285	Bonnet Top Panel--L.H	*			1	1	1	1
A 117928	Bonnet Side Panel and Reinforcement Assembly --R.H	*	1	1				
A 117929	Bonnet Side Panel and Reinforcement Assembly --R.H.	*	1	1				
A 117930	Bonnet Side Panel and Reinforcement Assembly --R.H	*			1	1	1	1
A 117931	Bonnet Side Panel and Reinforcement Assembly --L.H.	*			1	1	1	1
BZ 116697	Bonnet Side Panel Moulding--Top and Bottom	*	4	4				
BZ 116698	Bonnet Side Panel Moulding--Center	*	2	2				
BZ 116682	Bonnet Side Panel Moulding	*			8	8	8	8
BZ 116959	Bonnet Side Panel Moulding Clip--Top		14	14				
BZ 71335	Bonnet Side Panel Moulding Bolt--Bottom		14	14				
BZ 71152	Bonnet Side Panel Moulding Nut--Bottom	*	10	10				
BZ 116960	Bonnet Side Panel Moulding Clip--Center	*			40	40	40	40
BZ 117305	Bonnet Side Panel Moulding Clip		4	4				
BZ 71639	Bonnet Side Panel Moulding Bolt--Center		4	4				
BZ 71073	Bonnet Side Panel Moulding Bolt Nut	*			1	1	1	1
BZ 117134	Bonnet Belt Moulding--R.H				1	1	1	1
BZ 117135	Bonnet Belt Moulding--L.H				14	14	14	14
BZ 114449	Bonnet Belt Moulding Clip				6	6	6	6
BZ 71640	Bonnet Belt Moulding Bolt				6	6	6	6
BZ 71152	Bonnet Belt Moulding Bolt Nut				1	1	1	1
BZ 116826	Bonnet Top Panel Ornament--R.H	*			1	1	1	1
BZ 116827	Bonnet Top Panel Ornament--L.H	*			1			
BZ 116680	Bonnet Side Panel Ornament--R.H	*			1			
BZ 116681	Bonnet Side Panel Ornament--L.H	*				1	1	1
BZ 116678	Bonnet Side Panel Ornament--R.H	*				1	1	1
BZ 116679	Bonnet Side Panel Ornament--L.H	*	2	2	2			
BZ 116302	Bonnet Side Panel Hinge Rod	*				2	2	2
BZ 116303	Bonnet Side Panel Hinge Rod	*	1	1	1			
A 116306	Bonnet Hinge--Female	*				1	1	1
A 116307	Bonnet Hinge--Female	*						

Part No.	Description	61	62	63	64	65	66	67
<b>BONNET</b>								
BZ 116458	Bonnet Hinge Clip--Rear	*	1	1	1	1	1	1
BO 71602	Bonnet Hinge Clip Screw		2	2	2	2	2	2
BZ 116427	Bonnet Hinge Anchor Plate--Front	*	1	1	1	1	1	1
BO 71334	Bonnet Hinge Anchor Plate Screw		2	2	2	2	2	2
BO 70795	Bonnet Hinge Anchor Plate Screw Nut		2	2	2	2	2	2
BZ 116449	Bonnet Hinge Clamp Bolt	*	2	2	2	2	2	2
BO 71443	Bonnet Hinge Clamp Bolt Nut		2	2	2	2	2	2
BZ 116815	Bonnet Handle	*	2	2	2	2	2	2
BZ 71463	Bonnet Handle Nut		2	2	2	2	2	2
BZ 95300	Bonnet Corner Cover--Front		4	4	4	4	4	4
BZ 116528	Bonnet Corner Cover--Rear	*						
BZ 116810	Bonnet Latch Assembly--R.H	*	1	1				
BZ 116811	Bonnet Latch Assembly--L.H	*	1	1				
BZ 117424	Bonnet Latch Assembly--R.H	*			1			
BZ 117425	Bonnet Latch Assembly--L.H	*			1			
BZ 116812	Bonnet Latch Assembly--R.H	*				1	1	1
BZ 116813	Bonnet Latch Assembly--L.H	*				1	1	1
BZ 116814	Bonnet Latch Rod Bracket	*	4	4	4	4	4	4
BZ 71610	Bonnet Latch and Latch Bracket Rivet		16	16	16	16	16	16
BZ 117426	Bonnet Latch Bracket--R.H.--Front	*	1	1	1	1	1	1
BZ 117427	Bonnet Latch Bracket--L.H.--Front	*	1	1	1	1	1	1
BZ 116454	Bonnet Latch Bracket--R.H.--Front	*						
BZ 116455	Bonnet Latch Bracket--L.H.--Front	*						
BZ 116456	Bonnet Latch Bracket--R.H.--Rear	*	1	1	1	1	1	1
BZ 116457	Bonnet Latch Bracket--L.H.--Rear	*	1	1	1	1	1	1
BZ 71334	Bonnet Latch Bracket Screw--Front		4	4	4	4	4	4
BZ 18465	Bonnet Latch Bracket Screw		4	4	4	4	4	4
BZ 70676	Bonnet Latch Bracket Screw Nut		4	4	4	4	4	4
BZ 117388	Bonnet to Cowl Shim	*	2	2	2	2	2	2
BO 70733	Bonnet to Cowl Shim Drive Screw		24	24	24	24	24	24
BZ 117389	Bonnet to Radiator Shim	*	4	4	4	4	4	4
BZ 18353	Bonnet to Radiator Shim Rivet		18	18	18	18	18	18

**FENDERS - FRONT**

A 116842	Front Fender Assembly--R.H.--(Without Well).	*	1	1				
A 116843	Front Fender Assembly--L.H.--(Without Well).	*	1	1				
A 116844	Front Fender Assembly--R.H.--(With Well)	*	1	1				
A 116845	Front Fender Assembly--L.H.--(With Well)	*	1	1				
A 116850	Front Fender Assembly--R.H.--(Without Well).	*			1	1	1	1
A 116851	Front Fender Assembly--L.H.--(Without Well).	*			1	1	1	1
A 116852	Front Fender Assembly--R.H.--(With Well)	*			1	1	1	1
A 116853	Front Fender Assembly--L.H.--(With Well)	*			1	1	1	1
BZ 107706	Front Fender Side Dust Shield Hole Cover-- R.H	*	1	1	1	1	1	1
BO 18459	Front Fender Side Dust Shield Hole Cover Bolt		8	8	8	8	8	8
C 117974	Front Fender Well Assembly--R.H	*	1	1	1	1	1	1
C 117975	Front Fender Well Assembly--L.H	*	1	1	1	1	1	1
C 117984	Front Fender Well Assembly--R.H	*						
C 117985	Front Fender Well Assembly--L.H	*						
BZ 117750	Front Fender Well Support--R.H	*	1	1				
BZ 117751	Front Fender Well Support--L.H	*	1	1				
BZ 117752	Front Fender Well Support--R.H	*			1	1	1	1
BZ 117753	Front Fender Well Support--L.H	*			1	1	1	1
BZ 71330	Front Fender Well Support Clamp Bolt		2	2	2	2	2	2
BZ 71329	Front Fender Screw Ferrule		1	1	1	1	1	1
BO 70295	Front Fender Support to Well Rivet		2	2	2	2	2	2
BZ 394	Front Fender Support to Frame Bolt		3	3	3	3	3	3
BZ 116494	Front Fender Support--R.H	*	1	1	1	1	1	1
BZ 116495	Front Fender Support--L.H	*	1	1	1	1	1	1
BZ 545	Front Fender Support to Frame Rivet		8	8	8	8	8	8
BZ 116498	Front Fender to Head Lamp Bracket--R.H.	*	1	1	1	1	1	1
BZ 116499	Front Fender to Head Lamp Bracket--L.H	*	1	1	1	1	1	1
BZ 70850	Front Fender to Head Lamp Bracket Bolt		4	4	4	4	4	4
BZ 70047	Front Fender to Head Lamp Bracket Bolt Nut .		4	4	4	4	4	4

Part No.	Description	61	62	63	64	65	66	67
<b>FENDERS - FRONT Cont'd.</b>								
A	117252	Front Fender Filler Panel Assembly--R.H.	*	1	1			
A	117253	Front Fender Filler Panel Assembly--L.H.	*	1	1			
A	116108	Front Fender Filler Panel--R.H *	*					
A	116109	Front Fender Filler Panel--L.H *	*					
BZ	70872	Front Fender Filler Panel Bolt 1		12	12			
BZ	70676	Front Fender Filler Panel Bolt Nut 1		12	12			
BZ	18453	Front Fender Filler Panel to Dust Shield Screw						
BZ	18453	Front Fender to Filler Panel Screw 8		8	8			
BZ	70676	Front Fender Filler Panel Screw Nut 8		8	8			
BZ	117604	Front Support Brace--R.H	*	1	1			
BZ	117605	Front Support Brace--L.H	*	1	1			
BZ	70652	Front Support Brace Rivet		4	4			
BZ	117606	Front Support Brace Tapping Plate	*	2	2			
BZ	117603	Front Support Brace Spacer	*	2	2			
BZ	70883	Fender to Running Board Bolt		2	2			
BZ	70674	Fender to Running Board Bolt Nut		2	2			
BO	18465	Fender Side Dust Shield to Frame Bolt--Top		6	6			
BZ	70676	Fender Side Dust Shield to Frame Bolt Nut		4	4			
BZ	109090	Front Fender Stone Guard		2	2			
BZ	109013	Front Fender Stone Guard Support--Upper		2	2			
BZ	71405	Front Fender Stone Guard Support Bolt--Upper		4	4			
BZ	70676	Front Fender Stone Guard Support Bolt Nut .		4	4			
BZ	116290	Front Fender Stone Guard Support--R.H.-- Lower	*	1	1			
BZ	116291	Front Fender Stone Guard Support--L.H.-- Lower	*	1	1			
BO	70097	Front Fender Stone Guard Support Bolt--Lower		4	4			
BZ	70676	Front Fender Stone Guard Support Bolt Nut-- Lower		4	4			
BZ	118116	Front Fender to Radiator Welt--R.H	*	1	1			
BZ	118117	Front Fender to Radiator Welt--L.H	*	1	1			
BO	18353	Front Fender to Radiator Welt Rivet 18		18	18			
BO	70733	Front Fender to Radiator Shell Welt Screw .		2	2			
BZ	117710	Front Fender Dust Shield to Dash Brace--R.H.	*	1	1			
BZ	117711	Front Fender Dust Shield to Dash Brace--L.H.	*	1	1			
BZ	117712	Front Fender Dust Shield to Dash Brace--R.H.	*					
BZ	117713	Front Fender Dust Shield to Dash Brace--L.H.						
BO	18465	Front Fender Dust Shield to Dash Brace Bolt		4	4			
BZ	70676	Front Fender Dust Shield to Dash Brace Bolt Nut		4	4			
BZ	116900	Front Fender Ornament	*					
BM	70855	Front Fender Ornament Screw						
BZ	96014	Front Fender Ornament Cup Washe						
<b>FENDERS - REAR</b>								
A	116093	Rear Fender Assembly--R.H.--(Brougham--Sedan -- Coupe)	*	1	1	1	1	1
A	116094	Rear Fender Assembly--L.H.--(Brougham--Sedan --Coupes)	*	1	1	1	1	1
A	117104	Rear Fender Assembly--R.H.--( and Converti- ble Coupe)	*	1	1	1	1	1
BZ	117070	Rear Fender Welt	*	2	2	2	2	2
BO	70848	Rear Fender Attaching Bolts		16	16	16	16	16
BZ	70883	Rear Fender to Running Board Bolt		10	10	10	10	10
BZ	70674	Rear Fender to Running Board Bolt Nut		10	10	10	10	10
BO	108038	Rear Fender Apron Support Assembly		2	2	2	2	2
BZ	70850	Rear Fender Apron Support Bolt		2	2	2	2	2
BZ	71011	Rear Fender Apron Support Bolt Nut		2	2	2	2	2
BO	18447	Rear Fender Apron Support to Apron Bolt		4	4	4	4	4
BO	70677	Rear Fender Apron Support to Apron Bolt Nut		4	4	4	4	4
BZ	109090	Rear Fender Stone Guard		2	2	2	2	2
BZ	116292	Rear Fender Stone Guard Support--Upper	*	2	2	2	2	2
BZ	71405	Rear Fender Stone Guard Support Bolt		4	4	4	4	4



Part No.	Description	61	62	63	64	65	66	67
<b>FENDERS - REAR Cont'd.</b>								
BZ 70676	Rear Fender Stone Guard Support Bolt Nut	4	4	4	4	4	4	4
BZ 116296	Stone Guard Support--Lower--R.H	* 1	1	1	1	1	1	1
BZ 116297	Stone Guard Support--Lower--L.H	* 1	1	1	1	1	1	1
BO 70097	Stone Guard Support--Lower--To Fender Bolt .	2	2	2	2	2	2	2
BZ 70676	Stone Guard Support--Lower--To Fender Bolt Nut	2	2	2	2	2	2	2
A 117450	Finish Plate Assembly--Less Ornament--R.H.-- (Specify Color)	* 1	1	1	1	1	1	1
A 117451	Finish Plate Assembly--Less Ornament--L.H.-- (Specify Color)	* 1	1	1	1	1	1	1
BO 117474	Finish Plate Welt--R.H	* 1	1	1	1	1	1	1
BO 117475	Finish Plate Welt--L.H	* 1	1	1	1	1	1	1
BO 117464	Finish Plate Bumper	* 4	4	4	4	4	4	4
BO 117466	Finish Plate Clamp Lever--R.H	* 1	1	1	1	1	1	1
BO 117467	Finish Plate Lever--L.H	* 1	1	1	1	1	1	1
BZ 71263	Finish Plate Clamp Lever Screw	2	2	2	2	2	2	2
BO 117470	Finish Plate Clamp Rod	* 2	2	2	2	2	2	2
BO 117471	Finish Plate Clamp Rod Spring	* 2	2	2	2	2	2	2
BO 12120	Finish Plate Clamp Rod Nut	2	2	2	2	2	2	2
BO 117290	Finish Plate Ornament	* 2	2					
BO 116902	Finish Plate Ornament			2	2	2	2	2
BM 70855	Finish Plate Ornament Screw	8	8	8	8	8	8	8
BZ 96014	Finish Plate Screw Cup Washer	8	8	8	8	8	8	8
<b>SPLASH GUARDS</b>								
A 41183	Flywheel Guard Assembly	1	1	1				
A 42635	Flywheel Guard Assembly				1	1	1	1
BM 41121	Flywheel Guard Gasket	2	2	2	2	2	2	2
BO 42638	Guard to Cylinder Plate Webbing--Long				2	2	2	2
BO 42639	Guard to Cylinder Plate Webbing--Short				2	2	2	2
BO 9159	Guard to Clutch Housing Screw	2	2	2	2	2	2	2
A 45103	Engine Guard--Front	1	1					
A 45939	Engine Guard Assembly--Front			1				
A 48216	Engine Guard Assembly--Front				1	1	1	1
A 47617	Engine Guard--Right--Front	1	1					
A 47619	Engine Guard--Right--Front			1				
A 150245	Engine Guard--Right--Rear	* 1	1	1				
A 150246	Engine Guard Assembly--Right	* 1			1	1	1	1
A 150248	Engine Guard--Left	* 1	1					
A 150249	Engine Guard--Left	* 1		1				
A 150250	Engine Guard--Left	* 1			1	1	1	1
BZ 71295	Engine Guard Self Tapping Screw	16	16	18	18	18	18	18
BZ 71247	Engine Guard Self Tapping Screw			2				
BO 18447	Engine Guard Screw	3	3	3	3	3	3	3
BO 12799	Engine Guard Screw Nut	3	3	3	3	3	3	3
A 116110	Rear Splash Guard Assembly (Side Mount)	* 1	1	1	1	1	1	1
A 116110	Rear Splash Guard Assembly (Brougham--Sedan --Rear Mount)	* 1	1	1	1	1	1	1
A 117071	Rear Splash Guard Assembly (Coupes--Rear Mount)	* 1	1	1	1	1	1	1
BZ 70872	Rear Splash Guard to Fender Bolt	6	6	6	6	6	6	6
BZ 70676	Rear Splash Guard to Fender Bolt Nut	6	6	6	6	6	6	6
BZ 71603	Rear Splash Guard to Rear Panel Bolt	7	7	7	7	7	7	7
BZ 70676	Rear Splash Guard to Rear Panel Bolt Nut	5	5	5	5	5	5	5
BZ 116896	Rear Splash Bumper Grommet--R.H	* 1	1	1	1	1	1	1
BZ 116897	Rear Splash Bumper Grommet--L.H	* 1	1	1	1	1	1	1
A 116112	Running Board Splash Guard Assembly--R.H.	* 1	1					
A 116113	Running Board Splash Guard Assembly--L.H.	* 1	1					
A 116118	Running Board Splash Guard Assembly--R.H.	* 1		1	1	1	1	1
A 116119	Running Board Splash Guard Assembly--L.H.	* 1		1	1	1	1	1
A 116124	Running Board Splash Guard Assembly--R.H.	* 1						
A 116125	Running Board Splash Guard Assembly--L.H.	* 1						
BZ 70872	Running Board Splash Guard Bolt	14	14	14	14	14	14	14
BZ 70676	Running Board Splash Guard Bolt Nut	14	14	14	14	14	14	14

Part No.	Description	61	62	63	64	65	66	67
<b>RUNNING BOARDS</b>								
C 116033	Running Board Assembly--R.B	*	1	1				
C 116034	Running Board Assembly--L.B	*	1	1				
C 116035	Running Board Assembly--R.B	*			1	1	1	
C 116036	Running Board Assembly--L.B	*			1	1	1	
C 116037	Running Board Assembly--R.B	*						1
C 116038	Running Board Assembly--L.B	*						1
C 116522	Running Board Moulding Assembly--R.B	*	1	1				
C 116523	Running Board Moulding Assembly--L.B	*	1	1				
C 116524	Running Board Moulding Assembly--R.B	*			1	1	1	
C 116525	Running Board Moulding Assembly--L.B	*			1	1	1	
C 116526	Running Board Moulding Assembly--R.B	*						1
C 116527	Running Board Moulding Assembly--L.B	*						1
BZ 118296	Running Board Moulding Reinforcement	*	2	2	2	2	2	
BZ 118299	Running Board Moulding Reinforcement	*						2
BZ 71264	Running Board Attaching Bolt	*	2	2	2	2	2	2
BO 70336	Running Board to Splash Guard Rivet		16	16	16	16	16	16

**TOOLS**

BZ 150610	Tool Box--Complete	*	1	1				
BZ 150611	Tool Box--Complete	*			1	1	1	1
BZ 150612	Tool Box--Complete	*						
BZ 40692	Spark Plug Wrench		1	1	1	1	1	1
BZ 22597	Monkey Wrench		1	1	1	1	1	1
BZ 28333	End Wrench		1	1	1	1	1	1
BZ 40852	Hammer		1	1	1	1	1	1
BZ 40853	Pliers		1	1	1	1	1	1
BZ 40854	Screw Driver		1	1	1	1	1	1
BZ 151431	Jack	*	1	1	1	1	1	1
BZ 151432	Jack Handle	*	1	1	1	1	1	1
BZ 151578	Starting Crank	*	1	1	1	1	1	1
BZ 150622	Starting Crank Extension	*	1	1				
BZ 150623	Starting Crank Extension	*			1			
BZ 150624	Starting Crank Extension	*				1	1	1
BZ 108465	Radiator Ornament Bolt Wrench		1	1	1	1	1	1

**FLOOR MATS AND PADS**

BO 117036	Front Floor Mat and Pad Assembly (Sedan and Coupes--Floor Hand Lever)		1	1				
BO 117436	Front Floor Mat and Pad Assembly (Brougham--Floor Hand Lever)		1	1				
BO 117038	Front Floor Mat and Pad Assembly		1	1	1	1	1	1
BO 117040	Steering Gear Hole Cover		1	1	1	1	1	1
BO 118070	Front Floor Side Mat and Pad Assembly--R.H.--(Coupes)		1	1	1	1	1	
BO 118071	Front Floor Side Mat and Pad Assembly--L.H.-- (Coupes)		1	1	1	1	1	
BZ 71354	Front Floor Side Mat to Floor Screw		4	4	4	4	4	
BO 70350	Front Floor Side Mat to Floor Screw Washer		4	4	4	4	4	
BO 117723	Hand Brake Lever Hole Seal		1					
BZ 70938	Hand Brake Lever Hole Seal Screw		2					
BO 117132	Dash Lining Pad		1	1	1	1	1	1
BO 71628	Dash Lining Pad Clinch Button		8	8	8	8	8	8
BO 117549	Dash Silencer and Trimboard Assembly		1	1	1	1	1	1
BO 117551	Dash Silencer and Trimboard Assembly		1					
BO 117548	Dash Silencer Grommet		1	1	1	1	1	1
BO 100829	Transmission Opening Cover Pad		1	1	1	1	1	1
BO 115788	Front Floor Mat Clip		2	2	2	2	2	2
BO 118140	Rumble Seat Floor Mat--( and Convertible Coupe)		1	1	1	1	1	

**FLOOR MAT AND PAD - R.H.D.**

BO 117039	Front Floor Mat and Pad Assembly	*	1	1	1	1	1	1
BO 117550	Dash Silencer and Trimboard Assembly	*	1	1	1	1	1	1
BO 100828	Transmission Opening Cover Pad	*	1	1	1	1	1	1

Part No.	Description	61	62	63	64	65	66	67
<b>WIRING</b>								
BM 150675	Ignition Cable Tube Assembly (Does Not Include Wires)	*	1	1	1			
BM 150676	Ignition Cable Tube Assembly (Does Not Include Wires)	*				1	1	1
F 150818	Battery to Starter Switch Cable Assembly	*	1	1	1	1	1	1
BZ 45728	Battery to Starter Cable Terminal (Battery Negative)		1	1	1	1	1	1
BZ 12843	Battery to Starter Cable Bolt		1	1	1	1	1	1
BZ 12844	Battery to Starter Cable Bolt Nut		1	1	1	1	1	1
BO 71441	Battery to Starter Cable Terminal--(Starter).		1	1	1	1	1	1
BZ 41101	Battery to Starter Cable Terminal Sleeve		1	1	1	1	1	1
F 45729	Battery to Ground Connection--(Positive)		1	1	1	1	1	1
BZ 12843	Battery to Ground Connection Clamp Bolt--(Battery)		1	1	1	1	1	1
BZ 45938	Battery to Ground Connection Acid Seal--Felt.		1	1	1	1	1	1
BZ 12844	Battery to Ground Connection Clamp Bolt--(Battery)		1	1	1	1	1	1
BM 219	Battery to Ground Connection Bolt--Ground		1	1	1	1	1	1
BZ 122	Battery to Ground Connection Bolt Nut		1	1	1	1	1	1
BZ 40674	Clutch Housing to Ground Connection		1	1	1	1	1	1
BZ 70096	Clutch Housing to Ground Connection Bolt		1	1	1	1	1	1
BO 12481	Clutch Housing to Ground Connection Bolt Nut		1	1	1	1	1	1
BM 150833	Coil to Distributor Wire Assembly	*	1	1	1			
BM 150835	Coil to Distributor Wire Assembly	*				1	1	1
BO 70228	Coil to Distributor Wire Terminal (Distributor)		1	1	1	1	1	1
BZ 36566	Coil to Distributor Wire Terminal (Coil)		1	1	1	1	1	1
BM 45157	Coil to Distributor Wire Terminal Insulator (Coil)		1	1	1	1	1	1
BM 38917	No. 1 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42647	No. 1 Spark Plug to Distributor Wire Assembly					1	1	1
BM 38922	No. 2 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42649	No. 2 Spark Plug to Distributor Wire Assembly					1	1	1
BM 38915	No. 3 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42651	No. 3 Spark Plug to Distributor Wire Assembly					1	1	1
BM 38914	No. 4 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42653	No. 4 Spark Plug to Distributor Wire Assembly					1	1	1
BM 40848	No. 5 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42655	No. 5 Spark Plug to Distributor Wire. Assembly					1	1	1
BM 36913	No. 6 Spark Plug to Distributor Wire Assembly		1	1	1			
BM 42657	No. 6 Spark Plug to Distributor Wire Assembly					1	1	1
BM 42657	No. 7 Spark Plug to Distributor Wire Assembly					1	1	1
BM 36914	No. 8 Spark Plug to Distributor Wire Assembly					1	1	1
BM 32012	High Tension Wire Insulator		7	7	7	7	7	7
BM 71144	Spark Plug to Distributor Wire Terminal (Plug)		6	6	6	6	6	6
BM 70228	Spark Plug to Distributor Wire Terminal (Distributor)		6	6	6	6	6	6
BZ 150806	No. 14 Armored Cable--White	*	As	Required				
BZ 150808	No. 16 Armored Cable--Green	*	As	Required				
BZ 150809	7 MM. High Tension Cable	*	As	Required				
BZ 150810	No. 12 Hraid Covered Cable	*	As	Required				
BZ 150812	No. 16 Hraid Covered Cable	*	As	Required				
BZ 150811	No. 14 Hraid Covered Cable	*	As	Required				
BZ 150814	Double Cable--Armored (2--No. 16)	*	As	Required				
BZ 150813	Double Cable--Armored (2--No. 14)	*	As	Required				
BZ 150815	Triple Cable--Armored (2--No. 14, 1--No. 16).	*	As	Required				
BZ 150805	No. 0 Cable	*	As	Required				
BO 18165	Wire Terminal (Small Spade Type)		As	Required				
BO 18166	Wire Terminal (Small Closed Type)		As	Required				
BO 71118	Wire Terminal (Small Plug Type)		As	Required				
BO 71119	Wire Terminal (Closed Type)		As	Required				
BO 71120	Wire Terminal (Closed Type)		As	Required				
BO 71286	Wire Terminal		As	Required				
BO 19044	Wire Terminal Sleeve (Rubber)		As	Required				

Part No.	Description	61	62	63	64	65	66	67
<b>WIRING Cont'd.</b>								
BO 31548	Wire Terminal Sleeve	As Required						
BO 71224	Rubber Grommet (Stop Lamp Switch Wire)	1	1	1	1	1	1	1
BO 150748	Loom (Dash to Instrument Panel Wire)	*	1	1	1	1	1	1
BO 150749	Loom (Head Lamp Wires)	*						
BO 150750	Loom (Head Lamp Wires)	*						
BO 150751	Loom (Head Lamp Wires)	*	1	1	1	1	1	1
BO 151575	Loom (Starter Switch to Relay Wire)	*	1	1	1	1	1	1
BO 150744	Loom (Ground Wire)	*	1	1	1	1	1	1
BO 150745	Loom (Horn Wire)	*						
BO 150747	Loom (Tail Lamps)	*	1	1	1	1	1	1
BZ 60664	Hattery to Starter Cable Clip	1	1	1	1	1	1	1
BM 219	Hattery to Starter Cable Clip Holt	1	1	1	1	1	1	1
BZ 122	Hattery to Starter Cable Clip Bolt Nut	1	1	1	1	1	1	1
BO 38909	Clip (Tail-Stop and Gas Gauge Wire)	2	2	2	2	2	2	2
BZ 62013	Clip (Tail and Stop Lamp Wire)	8	8	8	8	8	8	8
BO 65907	Clip--Head Lamp Wire--Front Fender Skirt	2	2	2	2	2	2	2
BO 151249	Clip--Head Lamp Wire--Front Fender Skirt-- Bolt	3	3	3	3	3	3	3
BZ 44093	Wire Connector Assembly (Single)	As Required						
BZ 44094	Wire Connector Assembly (Double)	As Required						
BO 18447	Clip Screw	As Required						
BZ 70677	Clip Screw Nut	As Required						

**HEADLAMPS**

BO 112366	Headlamp Complete (Hlack Enamel)	2						
BO 114813	Headlamp Housing Assembly (Hlack)	2						
BO 114476	Headlamp Lens	2						
BO 114815	Headlamp Lens Gasket	2						
BO 114692	Headlamp Reflector Assembly	2						
BO 114817	Headlamp Socket and Wires Assy	2						
BO 71361	Headlamp Hulb	2						
BO 117702	Headlamp Complete (Black Enamel)	* 2	2	2	2	2	2	2
BO 117936	Headlamp Housing Assembly	* 2	2	2	2	2	2	2
BO 71636	Headlamp Hulb	* 2	2	2	2	2	2	2
BO 117704	Headlamp Complete (Lacquer)	* 2	2	2	2	2	2	2
BO 117937	Headlamp Housing Assembly	* 2	2	2	2	2	2	2
BO 117706	Headlamp Lens	* 2	2	2	2	2	2	2
BO 117942	Headlamp Lens Gasket	* 2	2	2	2	2	2	2
BO 117943	Headlamp Lens Locking Screw	* 2	2	2	2	2	2	2
BO 117938	Headlamp Reflector Assembly	* 2	2	2	2	2	2	2
BO 117940	Headlamp Socket and Wires Assembly	* 2	2	2	2	2	2	2
BO 71636	Headlamp Hulb	* 2	2	2	2	2	2	2
BO 6260	Headlamp Stud Lockwasher	2	2	2	2	2	2	2
BT 398	Headlamp Stud Nut	2	2	2	2	2	2	2
BO 116638	Headlamp Bracket--R.H	* 1	1	1	1	1	1	1
BO 116639	Headlamp Bracket--L.H	* 1	1	1	1	1	1	1
BZ 71647	Headlamp Hracket to Fender Bolt	4	4	4	4	4	4	4
BO 71552	Headlamp Wire Fender Grommet	2	2	2	2	2	2	2
BO 108849	Headlamp Hracket Horn Wire Hole Plug	2						
BO 71415	Headlamp Hracket Bolt Hole Plug	4						

**HEADLAMP TIE ROD**

BZ 117607	Headlamp Tie Rod	1	1	1	1	1	1	1
BZ 71463	Headlamp Tie Rod Nut	4	4	4	4	4	4	4

**TAIL AND STOP LAMP**

BO 117194	Tail and Stop Lamp Assembly (With License Lens) Hrougham and Sedan	* 1	1					
BO 117196	Tail and Stop Lamp Assembly (Without License Lens) Hrougham and Sedan	* 1						
BO 117195	Tail and Stop Lamp Assembly (With License Lens) Coupes	* 1	1					
BO 118072	Tail and Stop Lamp Assembly (Without License Lens) Coupes	* 1						

Part No.	Description	61	62	63	64	65	66	67
<b>TAIL AND STOP LAMP Cont'd.</b>								
BO 117197	Tail and Stop Lamp Assembly (With License Lens) Brougham and Sedan	*		1	1	1	1	1
BO 117199	Tail and Stop Lamp Assembly (Without License Lens) Brougham and Sedan			1	1	1	1	1
BO 117198	Tail and Stop Lamp Assembly (With License Lens) Coupes	*		1	1	1		
BO 118073	Tail and Stop Lamp Assembly (Without License Lens) Coupes	*		1	1	1		
BO 101991	License Lens	1	1	1	1	1	1	1
BO 96221	License Lens Gasket	1	1	1	1	1	1	1
BO 102753	License Lens Retainer	2	2	2	2	2	2	2
BO 70924	License Lens Screw	2	2	2	2	2	2	2
BO 117204	Stop Lens	*	2	2				
BO 117205	Stop Lens	*			2	2	2	2
BO 102887	Stop Lens Retainer Spring		2	2	2	2	2	2
BO 116701	Tail Lamp Support Bracket--L.H. (Black) Brougham and Sedan	*	1	1	1	1	1	1
BO 116704	Tail Lamp Support Bracket--R.H. (Black) Brougham and Sedan	*	1	1	1	1	1	1
BO 116938	Tail Lamp Support Bracket--R.H. (Black) Coupes	*	1	1	1	1		
BO 116935	Tail Lamp Support Bracket--L.H. (Black) Coupes	*	1	1	1	1		
BO 116703	Tail Lamp Support Bracket-L.H. (Chrome) Brougham and Sedan	*	1	1	1	1	1	1
BO 116706	Tail Lamp Support Bracket--R.H. (Chrome) Brougham and Sedan	*		1	1	1	1	1
BO 116940	Tail Lamp Support Bracket--R.H. (Chrome) Coupes	*		1	1	1		
BO 116937	Tail Lamp Support Bracket--L.H. (Chrome) Coupes	*	1	1	1	1		
BO 116709	Tail Lamp Support Bracket--L.H. (Black)	*	1	1	1	1	1	1
BO 116712	Tail Lamp Support Bracket--R.H. (Black)	*	1	1	1	1	1	1
BO 116711	Tail Lamp Support Bracket--L.H. (Chrome)	*	1	1	1	1	1	1
BO 116714	Tail Lamp Support Bracket--R.H. (Chrome)	*	1	1	1	1	1	1
BO 116998	Tail Lamp Support Bracket Reinforcement--R.H (Coupes)	*	1	1	1	1		
BO 116999	Tail Lamp Support Bracket Reinforcement--L.H (Coupes)	*	1	1	1	1		
BO 117378	Tail Lamp Support Bracket Reinforcement (Trunk Models)	*	2	2	2	2	2	2
BO 71384	Tail Lamp Support Bracket Reinforcement Holt		4	4	4	4	4	4
BO 116942	Tail Lamp Support Bracket Pad	*	2	2	2	2	2	2
BO 116943	Tail Lamp Support Bracket Cup Washer	*	4	4	4	4	4	4
BO 9159	Tail Lamp to Support Bracket Holt		4	4	4	4	4	4
BO 112774	Rear License Plate Bracket Assembly		1	1	1	1	1	1

**TAIL AND STOP LAMP - R.H.D.**

BO 116700	Tail Lamp Support Bracket--R.H. (Black) Brougham and Sedan	*	1	1	1	1	1	1
BO 116705	Tail Lamp Support Bracket-L.H. (Black) Brougham and Sedan	*	1	1	1	1	1	1
BO 116934	Tail Lamp Support Bracket--R.H. (Black) Coupes	*	1	1	1	1		
BO 116939	Tail Lamp Support Bracket-L.H. (Black) Coupes	*	1	1	1	1		
BO 116702	Tail Lamp Support Bracket--R.H. (Chrome) Brougham and Sedan	*	1	1	1	1	1	1
BO 116707	Tail Lamp Support Bracket--L.H. (Chrome) Brougham and Sedan	*	1	1	1	1	1	1
BO 116936	Tail Lamp Support Bracket--R.H. (Chrome) Coupe	*	1	1	1	1		
BO 116941	Tail Lamp Support Bracket--L.H. (Chrome) Coupe	*	1	1	1	1		

Part No.	Description	61	62	63	64	65	66	67
----------	-------------	----	----	----	----	----	----	----

**TAIL AND STOP LAMP - R.H.D. Cont'd.**

BO 116708	Tail Lamp Support Bracket--R.H. (Black)	*	1	1	1	1	1	1	1
BO 116713	Tail Lamp Support Bracket--L.H. (Black)	*	1	1	1	1	1	1	1
BO 116710	Tail Lamp Support Bracket--R.H. (Chrome)	*	1	1	1	1	1	1	1
BO 116715	Tail Lamp Support Bracket--L.H. (Chrome)	*	1	1	1	1	1	1	1



Trunk  
Models

**DISTRIBUTOR**

* 45092	Distributor--Complete	1	1	1	1	1	1	1
* 45090	Distributor--Complete							
BO 100782	Distributor Cap Hole Plug--Rubber	1	1	1	1	1	1	1
* 40596	Distributor Drive Gear	1	1	1	1	1	1	1
BT 395	Distributor Bolt	1	1	1	1	1	1	1
BM 42349	Distributor Gasket	1	1	1	1	1	1	1

**GENERATOR AND CONTROL**

* 150694	Generator Assembly--Without Radio	*	1					
* 150273	Generator Assembly--With Radio.	*	1					
* 150273	Generator Assembly	*		1	1	1	1	1
BO 70096	Generator to Bracket Bolt	2	2	2	2	2	2	2
BM 71177	Generator to Bracket Bolt--Long	1	1	1	1	1	1	1
BO 12481	Generator to Bracket Bolt Nut	3	3	3	3	3	3	3
BM 45093	Generator Support Bracket	1	1	1	1	1	1	1
BZ 119	Generator Support Bracket Bolt	2	2	2	2	2	2	2
BM 45095	Generator Adjusting Bracket	1	1	1	1	1	1	1
BM 110	Generator Adjusting Bracket Stud Nut	1	1	1	1	1	1	1
* 41148	Relay Assembly (To Car No. 61449--Less Radio)	1						
* 150722	Relay Assembly (After Car No. 61450--Less Radio)	*	1					
* 47979	Charge Regulator Assembly--With Radio	1						
* 47979	Charge Regulator Assembly			1	1	1	1	1
BR 18149	Relay and Charge Regulator to Dash Screw	4	4	4	4	4	4	4

**COIL**

* 150275	Coil--Complete	*	1	1	1		1	1	1
* 150276	Coil--Complete	*				1			
BO 47630	Lock Cylinder and Keys Assembly	1	1	1	1	1	1	1	
BO 45986	Coil Lock Key	2	2	2	2	2	2	2	
BO 150281	Coil Lock Mounting Nut	*	1	1	1	1	1	1	
BO 38959	Coil Lock Mounting Nut Spacer Washer	1	1	1	1	1	1	1	
BO 9159	Bracket to Dash Bolt	2	2	2	2	2	2	2	
* 43323	Coil Resistor	1	1	1					
* 43488	Coil Resistor				1	1	1	1	

**STARTING MOTOR**

* 45101	Starting Motor Assembly	1	1	1	1	1	1	1
BM 40609	Starting Motor Mounting Stud	2	2	2	2	2	2	2
BM 110	Starting Motor Mounting Stud Nut	4	4	4	4	4	4	4
* 45997	Starting Motor Switch Assembly	1	1	1	1	1	1	1
BZ 71232	Starting Motor Switch Terminal Nut	1	1	1	1	1	1	1
BO 12481	Starting Motor Switch Terminal Post NuT	1	1	1	1	1	1	1

**BATTERY**

* 48150	Battery Assembly	1	1	1				
* 150763	Battery Assembly	*			1	1	1	1
HA 46694	Battery Charger--Service	1	1	1	1	1	1	1
BZ 48946	Battery Charger Socket and Wire Assembly	1	1	1	1	1	1	1

**SWITCHES**

BZ 150283	Lighting Switch Assembly	*	1	1	1	1	1	1
-----------	--------------------------	---	---	---	---	---	---	---

\* Serviced Direct by Electric Auto-Lite Corporation, Toledo, Ohio.  
 \* Serviced direct by National Battery Company, St. Paul, Minnesota.

Part No.	Description	61	62	63	64	65	66	67
<b>SWITCHES Cont'd.</b>								
BO 150284	Lighting Switch Mounting Nut	* 1	1	1	1	1	1	1
BO 150672	Lighting Switch Knob	* 1	1	1	1	1	1	1
BO 150673	Lighting Switch Knob Retaining Spring	* 1	1	1	1	1	1	1
BZ 150674	Lighting Switch Knob Screw	* 1	1	1	1	1	1	1
BO 150285	Lighting Switch Knob Assembly	* 1	1	1	1	1	1	1
BO 70863	Lighting Switch Terminal Screw--Short	4	4	4	4	4	4	4
BO 71417	Lighting Switch Terminal Screw--Long	1	1	1	1	1	1	1
BO 150670	Headlight Dimmer Switch	* 1	1	1	1	1	1	1
BZ 7819	Headlight Dimmer Switch Attaching Screw	2	2	2	2	2	2	2
BZ 150282	Stop Lamp Switch Assembly	* 1	1	1	1	1	1	1
BM 71118	Stop Lamp Switch Wire Terminal	2	2	2	2	2	2	2
BO 150709	Service Light Switch Assembly	*						
BO 70467	Service Light Switch Terminal Screw							
BO 151480	Instrument Light Rheostat	* 1	1	1	1	1	1	1
BO 70863	Instrument Light Rheostat Terminal Screw	2	2	2	2	2	2	2
BO 4929	Service Light and Rheostat Attaching Screws	2	2	2	2	2	2	2
C 41198	Startix Complete--Service Kit	1	1	1	1	1	1	1

**SWITCHES - R.H.D.**

BO 150671	Headlight Dimmer Switch	* 1	1	1	1	1	1	1
-----------	-------------------------	-----	---	---	---	---	---	---

**HORN**

* 45373	Horn Assembly	* 1						
BO 12790	Horn Terminal Nut	2						
BO 151197	Horn Bracket Assembly	1						
BM 6189	Horn Bracket to Cylinder Head Stud Nut	2						
BO 71131	Horn to Bracket Screw Nut	* 2						
* 150290	Horn and Bracket Assembly--Vibrator Type--R.H.		1	1	1		1	1
* 150291	Horn and Bracket Assembly--Vibrator Type--L.H.		1	1	1		1	1
* 150294	Horn and Bracket Assembly--Electric Air--R.H.	* 1				1		
* 150295	Horn and Bracket Assembly--Electric Air--L.H.	* 1				1		
* 150798	Horn Relay	* 1				1		
BO 18447	Horn Relay Attaching Bolt	* 2	2	2	2	2	2	2
BO 12799	Horn Relay Attaching Bolt Nut	2	2	2	2	2	2	2
BZ 71402	Horn Bracket to Headlamp Bracket Bolt	4	4	4	4	4	4	4
HA 150786	Twin Horns--Service Kit--Vibrator Type	*						
HA 150787	Twin Horns--Service Kit--Electric Air	*						

**WINDSHIELD CLEANER**

BO 117495	Windshield Cleaner Tubing	* 1	1	1	1	1	1	1
-----------	---------------------------	-----	---	---	---	---	---	---

Note: Windshield Cleaner and Parts Serviced Direct by  
Trio Products Corporation, Buffalo, New York

**INSTRUMENTS AND MOUNTING**

BO 117413	Instrument Cluster Dial	* 1						
BO 117727	Instrument Cluster Dial Assembly	* 1	1					
BO 117418	Instrument Cluster Dial Assembly	* 1		1	1	1	1	1
BO 117403	Instrument Cluster Dial Retainer	* 1	1	1	1	1	1	1
BO 117404	Instrument Cluster Glass	* 1	1	1	1	1	1	1
BO 117407	Instrument Cluster Glass Gasket	* 1	1	1	1	1	1	1
BO 117402	Instrument Cluster Bezel	* 1	1	1	1	1	1	1
BO 117405	Instrument Cluster Mounting Clip	* 4	4	4	4	4	4	4
BZ 17944	Instrument Cluster Mounting Clip Nut	4	4	4	4	4	4	4
BZ 70563	Instrument Cluster Mounting Clip Lockwasher	4	4	4	4	4	4	4
BO 117420	Instrument Cluster Case Assembly	* 1						
BO 117422	Instrument Cluster Case Assembly	* 1	1	1	1	1	1	1
BO 117255	Instrument Panel Radio Opening Cover	* 1	1					
BO 117256	Instrument Panel Radio Opening Cover	* 1		1	1	1	1	1
BO 71073	Instrument Panel Radio Opening Cover Stud Nut	2	2	2	2	2	2	2

\* Serviced Direct by E. A. Laboratories, Long Island City, New York.

Part No.	Description	61	62	63	64	65	66	67
<b>INSTRUMENTS AND MOUNTING Count'd.</b>								
BO 117249	Instrument Panel Radio Opening Cover Stud Washer	* 2	2	2	2	2	2	2
BO 117415	Gasoline Gauge Assembly	* 1	1	1	1	1	1	1
BO 117414	Temperature Indicator	* 1	1	1	1	1	1	1
BO 117409	Gasoline and Temperature Gauge Gasket	4	2	2	2	2	2	2
BZ 70863	Gasoline and Temperature Gauge Screw	4	4	4	4	4	4	4
BO 71073	Gasoline and Temperature Gauge Terminal Nut	* 1	4	4	4	4	4	4
* 116481	Speedometer Head Assembly	* 1	1	1				
* 116491	Speedometer Head Assembly	1			1	1	1	1
BO 109231	Speedometer Head Gasket	4	1	1	1	1	1	1
BO 70863	Speedometer Head Attaching Screw	* 1	4	4	4	4	4	4
BO 117315	Instrument Lamp Wires and Socket Assembly	1	1	1	1	1	1	1
BO 18165	Instrument Lamp Wire Terminal	* 1	1	1	1	1	1	1
BO 117313	Oil and Ampere Light Wires and Socket Assy	3	1	1	1	1	1	1
BO 71286	Oil and Ampere Light Wires Terminal	3	3	3	3	3	3	3
BO 31548	Oil and Ampere Light Wires Sleeve	* 1	3	3	3	3	3	3
BO 150286	Starter Button and Wires Assembly	* 1	1	1	1	1	1	1
BZ 150284	Starter Button Mounting Nut	1	1	1	1	1	1	1
BO 31548	Starter Button Terminal Sleeve	* 1	1	1	1	1	1	1
BO 117316	Service Light Bracket Assembly	* 1	1	1	1	1	1	1
BO 117318	Service Light Wires and Socket Assembly	1	1	1	1	1	1	1
BO 18165	Service Light Wires Terminal	1	1	1	1	1	1	1
BO 117320	Dimmer Indicator Light Wire and Socket Assy	* 1		1	1	1	1	1
BO 71286	Dimmer Indicator Light Wire Terminal			1	1	1	1	1
BO 117395	Vacuum Control Wire Assembly	* 1	1	1	1	1	1	1
BO 19044	Vacuum Control Wire Insulator	1	1	1	1	1	1	1
BZ 70122	Vacuum Control Wire Nut	1	1	1	1	1	1	1
BO 70121	Vacuum Control Wire Lockwasher	1	1	1	1	1	1	1
BO 116476	Locker Box Assembly	* 1	1	1	1	1	1	1
BO 116467	Locker Box Door Assembly--Less Knob Hole	* 1	1					
BO 116470	Locker Box Door Assembly--Less Knob Hole	* 1		1	1	1	1	1
BO 116493	Locker Box Door Complete--With Knob	1						
BO 118698	Locker Box Door Complete--With Lock		1					
BO 116466	Locker Box Door Complete--With Lock			1	1	1	1	1
BO 118636	Locker Box Door Bumper	* 4	4	4	4	4	4	4
BO 70526	Locker Box Door Bumper Screw	2	2	2	2	2	2	2
BO 108137	Locker Box Door Bumper Screw Washer	2	2	2	2	2	2	2
BO 70792	Locker Box Door Bumper Screw Nut	2	2	2	2	2	2	2
BO 116628	Locker Box Door Hinge Assembly--R.H	* 1	1	1	1	1	1	1
BO 116629	Locker Box Door Hinge Assembly--L.H	* 1	1	1	1	1	1	1
BZ 71328	Locker Box Door Hinge Rivet	12	12	12	12	12	12	12
BO 116468	Locker Box Door Hinge Spring--R.H	* 1	1	1	1	1	1	1
BO 116469	Locker Box Door Hinge Spring--L.H	* 1	1	1	1	1	1	1
BZ 71444	Locker Box Door Hinge Spring Rivet	2	2	2	2	2	2	2
BZ 12648	Locker Box Door Hinge to Instrument Panel Bolt	8	8	8	8	8	8	8
BO 12316	Locker Box Door Hinge to Instrument Panel Bolt Washer	8	8	8	8	8	8	8
BO 116511	Locker Box Door Knob Assembly	* 1						
BO 116509	Locker Box Door Knob	* 1	1	1	1	1	1	1
BO 100613	Locker Box Door Knob Nut	1	1	1	1	1	1	1
BO 116477	Locker Box Door Knob Washer	* 1	1	1	1	1	1	1
BO 116473	Locker Box Door Fastening Clip	* 2	2	2	2	2	2	2
BO 70526	Locker Box Door Fastening Clip Screw	2	2	2	2	2	2	2
BO 70792	Locker Box Door Fastening Clip Screw Nut	2	2	2	2	2	2	2
BO 116474	Locker Box Door Lock Assembly	* 1	1	1	1	1	1	1
BO 116475	Locker Box Door Lock Bolt (Lock Plunger)	* 1	1	1	1	1	1	1
BO 108426	Locker Box Door Lock Bolt Anti-Rattle Spring	1	1	1	1	1	1	1
BO 116510	Locker Box Door Lock Keys and Ring Assembly	* 1	1	1	1	1	1	1
BO 109079	Locker Box Door Lock Keys		2	2	2	2	2	2
BO 70526	Locker Box to Instrument Panel Serew	2	2	2	2	2	2	2
BO 12316	Locker Box to Instrument Panel Screw Washer	2	2	2	2	2	2	2

\* Serviced Direct by Stewart Warner Speedometer Corporation, Chicago, Illinois.



Part No.	Description	61	62	63	64	65	66	67
<b>INSTRUMENTS AND MOUNTING Count'd.</b>								
BO 70792	Locker Box to Instrument Panel Screw Nut	2	2	2	2	2	2	2
BO 117393	Carburetor Choke Wire Assembly	*	1					
BZ 70122	Carburetor Choke Wire Panel Nut	1						
BO 70121	Carburetor Choke Wire Panel Nut Washer	1						
<b>INSTRUMENTS AND MOUNTING - R.H.D.</b>								
BO 117394	Vacuum Clutch Control Wire Assembly	*	1	1	1	1	1	1
BO 117392	Carburetor Choke Wire Assembly	*	1	1	1	1	1	1
<b>RADIO - ALL MODELS</b>								
BO 151201	Radio Assembly	*	1	1	1	1	1	1
BO 151205	Radio Chassis and Case Assembly	*						
BX 3820	Radio Attaching Bolt	*						
BO 151413	Radio Mounting Spacer	*						
<b>RADIO CONTROL</b>								
BO 151204	Control Assembly	*						
BO 151377	Bezel--Station Selector Dial	*						
BO 151378	Cover--Control Head--Rear	*						
BO 151379	Crystal--Station Selector Dial	*						
BO 151381	Gear	*						
BO 151382	Gear and Shaft--Tuning Dial Pointer	*						
BO 151380	Dial--Tuning Dial and Bushing	*						
BO 151383	Indicator--Station Selector	*						
BO 71641	Bulb--Pilot Light--Mazda No. 51	*						
BO 151384	Retainer--Station Dial Crystal	*						
BO 151385	Shaft Assembly--Tuning Condenser--Flexible	*						
BO 151386	Shaft Assembly--Volume Control--Flexible	*						
BO 151387	Shaft--Volume Control--Located in Head	*						
BO 151388	Shaft and Gear Tuning Control (Located in Head)	*						
BO 151389	Spring--Volume and Tuning Control	*						
BO 151390	Washer--Tuning Control	*						
BO 151397	Knob--Tuning Control	*						
BO 151398	Knob--Volume Control	*						
<b>RESISTOR CHASSIS</b>								
	Resistor--220 OHMS--1/4 Watt	*						
BO 151348	Resistor--680 OHMS--1/4 Watt	*						
BO 151349	Resistor--680 OHMS--1 Watt	*						
BO 151350	Resistor--3300 OHMS--2 Watt	*						
BO 151351	Resistor--33000 OHMS--1 Watt	*						
BO 151352	Resistor--47000 OHMS-1/10 Watt	*						
BO 151353	Resistor--56000 OHMS--1/4 Watt	*						
BO 151354	Resistor--100000 OHMS--1/4 Watt	*						
BO 151355	Resistor--150000 OHMS--1/4 Watt	*						
BO 151356	Resistor--560000 OHMS--1/4 Watt	*						
BO 151357	Resistor--1 Megohm--1/4 Watt	*						
BO 151358	Resistor--1.8 Megohm--1/4 Watt	*						
BO 151359	Resistor--2.2 Megohm--1/4 Watt	*						
<b>CONDENSERS - CHASSIS</b>								
BO 151315	Condenser--Adjustable	*						
BO 151316	Condenser--80 MFD	*						
BO 151317	Condenser--400 MFD	*						
BO 151318	Condenser--400 MFD	*						
BO 151319	Condenser--900 MFD	*						
BO 151320	Condenser--.007 MFD	*						
BO 151321	Condenser--.01 MFD	*						
BO 151322	Condenser--.015 MFD	*						
BO 151323	Condenser--.02 MFD	*						
BO 151324	Condenser--.035 MFD	*						
BO 151325	Condenser--.05 MFD	*						
BO 151326	Condenser--.1 MFD	*						

Part No.	Description	61	62	63	64	65	66	67
<b>CONDENSERS - CHASSIS Cont'd.</b>								
BO 151327	Condenser--.1 MFD	*						
BO 151328	Condenser--.25 MFD	*						
BO 151329	Condenser--.5 MFD	*						
BO 151330	Condenser--.5 MFD	*						
BO 151331	Condenser--.8 MFD	*						
BO 151332	Condenser--Pack	*						
BO 151337	Condenser--3 Gang Variable	*						
<b>MISCELLANEOUS CHASSIS PARTS</b>								
BO 151312	Band--Tube Shield Rubber	*						
BO 151313	Cable--Antenna Receiver End	*						
BO 151314	Cap--Radiotron Shield Slotted	*						
BO 151333	Clip--Vibrator Grounding Cup	*						
BO 151334	Coil--Antenna	*						
BO 151484	Coil--Choke	*						
BO 151335	Coil--Oscillator	*						
BO 151336	Coil--R.F	*						
BO 151338	Coupling--Tuning Condenser Drive—Short	*						
BO 151339	Coupling--Volume Control Drive--Long	*						
BO 151340	Filter--Antenna	*						
BO 151341	Gear--Variable Condenser Shaft	*						
BO 151343	"A" Lead Assembly	*						
BO 151342	Pinion--Variable Condenser	*						
BO 151344	Plug Complete--Bracket and Speaker	*						
BO 151346	Reactor	*						
BO 151347	Reactor--Filter	*						
BO 157.360	Ring--Oscillator Coil Retaining	*						
BO 151361	Shield--First Intermediate Transformer	*						
BO 151362	Shield--Second Intermediate Transformer	*						
BO 151363	Shield--Oscillator Coil	*						
BO 151364	Shield--Radiotron--Long--Less Cap	*						
BO 151365	Shield--Radiotron--Short--Less Cap	*						
BO 151366	Socket--4 Contact Vibrator	*						
BO 151367	Socket--5 Contact Radiotron	*						
BO 151368	Socket--6 Contact Radiotron	*						
BO 151369	Socket--7 Contact Radiotron	*						
BO 151370	Switch--Tone Control	*						
BO 151371	Stud Assembly--Includes Washers and Bushing .	*						
BO 151372	Transformer--First Intermediate	*						
BO 151373	Transformer--Out Put	*						
BO 151374	Transformer--Second Intermediate	*						
BO 151375	Transformer Vibrator	*						
BO 151376	Volume Control	*						
BO 151391	Vibrator Complete	*						
BO 151333	Clip--Vibrator	*						
<b>SPEAKER</b>								
BO 151206	Speaker Complete	*						
BO 151392	Cable--Speaker	*						
BO 151393	Cone--Speaker	*						
BO 151394	Housing Complete--Less Speaker	*						
BO 151485	Coil--Field	*						
BO 151395	Stud Assembly--Includes Nut and Washers	*						
<b>ANTENNA AND LEAD-IN</b>								
BO 150688	Antenna and Lead in Wire Complete	*						
BO 151208	Lead--In Wire and Shielding Loom Assembly	*						
BO 45993	Lead--In Wire Terminal--Upper End							
<b>MISCELLANEOUS</b>								
BO 48763	Ground Strap Assembly--(From Muffler Bracket to Frame)		1	1	1	1	1	1
BO 151210	Ground Fork	*	3	3	3	3	3	3
BO 71648	Ground Fork Screw		6	6	6	6	6	6

Part No.	Description	61	62	63	64	65	66	67
<b>MISCELLANEOUS Cont'd.</b>								
BO 151435	Ground Fork Spacer	* 3	3	3	3	3	3	3
BO 151436	Ground Fork Tapping Plate	* 3	3	3	3	3	3	3
BO 151399	Distributor Suppressor	* 1	1	1	1	1	1	1
BO 151402	Capacitor--(Gas Gauge)	* 1	1	1	1	1	1	1
BO 151401	Capacitor--(Water Gauge)	* 1	1	1	1	1	1	1
BO 151402	Capacitor--(Generator)	1	1	1	1	1	1	1
BM 70855	Capacitor--(Generator) Mounting Bolt	* 1	1	1	1	1	1	1
BO 151396	Connector Complete--Does Not Include Fuse	* 1	1	1	1	1	1	1
BO 71406	Fuse--15 Ampere	1	1	1	1	1	1	1
BO 151207	"A" Lead Assembly--24" Long	* 1	1	1	1	1	1	1
HA 151202	Radio Complete--Kit	* 1	1	1	1	1	1	1
<b>RADIO - R.H.D.</b>								
BO 150689	Antenna and Lead--In Wire and Shielding Loom.	* 1	1	1	1	1	1	1

**PRELIMINARY**

**1936**

**HUDSON  
TERRAPLANE**

**PARTS BOOK**

**BODY SECTION**

## BODY MODELS

Bro--Brougham and Touring Brougham  
Terraplane, Hudson Six and DeLuxe Eight

Sed--Sedan and Suburban Sedan  
Terraplane, Hudson Six and Custom Eight

2 Cp--Two Passenger Coupe  
Terraplane, Hudson Six and DeLuxe Eight

4 Cp--Four Passenger Coupe  
Terraplane, Hudson Six and DeLuxe Eight

CC--Convertible Coupe  
Terraplane, Hudson Six and DeLuxe Eight

- - - - -

\* Designates Non-Interchangeable Parts.

- - - - -

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>BODY BOLTS AND SHIMS</b>						
BO 117359	Body Bolt	12	12	10	8	8
BX 1061	Body Bolt	* 14	14	14	16	20
BO 70993	Body Bolt	2	2	4	4	4
BO 71643	Body Bolt	* 6	6	6	8	8
BO 100582	Body Bolt Washer	* 6	6	6	6	6
BX 12415	Body Bolt Nut	16	16	16	16	20
BO 117437	Body Bolt Nut Retainer Assembly	8	8	10	12	12
BO 100788	Body Bolt Shim	* 28	28	28	28	28
BO 117445	Rear Seat Tray to Frame Shim	2	2	2	2	2

**FRONT END**

C 116403	Front End Assembly-Terraplane	* 1	1	1	1	
C 116407	Front End Assembly-Terraplane	* 1				1
C 116405	Front End Assembly-Hudson	* 1	1	1	1	
C 116409	Front End Assembly-Hudson	* 1				1
BO 116289	Instrument Panel to Dash Brace Assembly (Radio Support)	* 1	1	1	1	1
BZ 71264	Instrument Panel to Dash Brace Bolt	2	2	2	2	2
BO 116293	Instrument Panel to Dash Brace Bracket Assembly	* 1	1	1	1	1
BO 12264	Instrument Panel to Dash Brace Bracket Rivet	3	3	3	3	3
BO 112099	Locker Box Dash Bracket	1	1	1	1	1
BO 12264	Locker Box Dash Bracket to Dash Rivet	3	3	3	3	3
BZ 70796	Locker Box Dash Bracket Machine Screw	1	1	1	1	1
BO 112197	Locker Box Dash Bracket Bolt Tapping Plate	1	1	1	1	1
BO 107712	Radiator Stay Rod Dash Bracket--RH	1	1	1	1	1
BO 107713	Radiator Stay Rod Dash Bracket--LH	1	1	1	1	1
BZ 18454	Radiator Stay Rod Dash Bracket Rivet	4	4	4	4	4
BO 18447	Radiator Stay Rod Dash Bracket Screw	4	4	4	4	4
BZ 70677	Radiator Stay Rod Dash Bracket Screw Nut	4	4	4	4	4
BZ 116350	Steering Gear Jacket Tube Bracket Assembly	* 1	1	1	1	1
BZ 71359	Steering Gear Jacket Tube Bracket Cap Bolt	2	2	2	2	2
BZ 71650	Steering Gear Jacket Tube Bracket Bolt	* 2	2	2	2	2
BZ 18483	Steering Gear Jacket Tube Bracket Bolt Nut	2	2	2	2	2
BZ 116330	Steering Gear Jacket Tube Bracket Spacer	* 1	1	1	1	1
C 116022	Dash Panel	* 1	1	1	1	1
BO 112935	Dash Hole Cover Plate	1	1	1	1	1
BO 71302	Dash Hole Cover Plate Sheet Metal Screw	2	2	2	2	2
BZ 71404	Front End Panel Hole Plug (Tire Carrier Holes)	As Required				
BO 71552	Dash Panel Grommet	3	3	3	3	3
C 116110	Instrument Panel-Terraplane (Specify Color)	* 1	1	1	1	1
C 116412	Instrument Panel-Hudson (Birch Gray)	* 1	1	1	1	1
BO 116265	Instrument Panel Reinforcement	* 1	1	1	1	1
BZ 70970	Instrument Panel Reinforcement Rivet	2	2	2	2	2
BO 116914	Toe Board Riser Assembly--RH	* 1	1	1	1	1
BO 116015	Toe Board Riser Assembly--LH	* 1	1	1	1	1
BO 18474	Toe Board Riser Rivet	18	18	18	18	18
BO 70028	Toe Board Riser to Floor and Pillar Bracket Rivet	4	4	4	4	4
C 117234	Cowl Side Trim Panel--R } Black	* 1	1	1	1	1
C 117235	Cowl Side Trim Panel--L } Black	* 1	1	1	1	1
C 117236	Cowl Side Trim Panel--R } Brown	* 1	1	1	1	1
C 117237	Cowl Side Trim Panel--L } Brown	* 1	1	1	1	1
BO 71348	Cowl Side Trim Panel Screw	2	2	2	2	2
BO 12316	Cowl Side Trim Panel Screw Finish Washer	2	2	2	2	2
BO 115256	Control Lever Lock Pillar Pocket Assem	1	1	1	1	1
BO 117800	Control Lever Lock Pillar Strap Assembl	* 1	1	1	1	1
BO 71400	Control Lever Lock Pillar Strap Socket	1	1	1	1	1
BO 71399	Control Lever Lock Pillar Strap Plate	1	1	1	1	1
BO 71525	Control Lever Lock Pillar Strap Post	1	1	1	1	1

**FRONT END - R.H.D.**

C 116402	Front End Assembly-Terraplane	* 1	1	1	1	
C 116406	Front End Assembly-Terraplane	* 1				1
C 116404	Front End Assembly-Hudson	* 1	1	1	1	
C 116408	Front End Assembly-Hudson	* 1				1
C 116411	Instrument Panel-Terraplane (Specify Color)	* 1	1	1	1	1
C 116413	Instrument Panel-Hudson (Birch Gray)	* 1	1	1	1	1

Part No.	Description	Bro.	Sed.	2C	4C	CC		
<b>FRONT END - R.H.D. Cont'd.</b>								
C	116016	Toe Board Riser Assembly--RH	*	1	1	1	1	1
C	116017	Toe Board Riser Assembly—LH	*	1	1	1	1	1
BO	71552	Dash Panel Grommet		4	4	4	4	4
<b>COWL VENTILATOR</b>								
BO	116351	Cover Assembly	*	1	1	1	1	1
BO	116686	Cover Ornament	*	1	1	1	1	1
BO	87600	Cover Hinge--RH		1	1	1	1	1
BO	87601	Cover Hinge--LH		1	1	1	1	1
BO	70665	Cover Hinge to Trough Rivet		2	2	2	2	2
BO	9159	Cover Hinge to Bracket Bolt		4	4	4	4	4
BO	116080	Cover Hinge to Bracket	*	2	2	2	2	2
BO	9159	Cover Hinge Bracket to Deflector Bolt		4	4	4	4	4
BO	70874	Cover Hinge Bracket to Deflector Bolt Nut		4	4	4	4	4
BO	87602	Cover to Hinge Bracket Tapping Plate		4	4	4	4	4
BO	116065	Ratchet	*	1	1	1	1	1
BO	85424	Trough Hinge Spacer		2	2	2	2	2
BO	85423	Ratchet Roller		1	1	1	1	1
BO	85425	Spring		1	1	1	1	1
BO	117254	Drain Pipe Rubber Tube	*	1	1	1	1	1
BO	94409	Drain Pipe Rubber Tube Clip		1	1	1	1	1
BO	116090	Cowl Ventilator Weatherstrip	*	1	1	1	1	1
BO	116461	Cowl Ventilator Handle	*	1	1	1	1	1
BO	70304	Cowl Ventilator Handle Screw		2	2	2	2	2
BZ	70677	Cowl Ventilator Handle Screw Nut		2	2	2	2	2
<b>WINDSHIELD</b>								
BO	116416	Windshield Glass (Not Supplied)	*	2	2	2	2	
BO	118418	Windshield Glass (Not Supplied)	*					2
BO	116448	Windshield Glass Weatherstrip	*	2	2	2	2	
BO	118419	Windshield Glass Weatherstrip	*					2
BO	116530	Windshield Finish Moulding—RH—Terraplane	*	1	1	1	1	
BO	116531	Windshield Finish Moulding--LH--Terraplane	*	1	1	1	1	
BO	116596	Windshield Finish Moulding--RH--Terraplane and Hudson	*					1
BO	116597	Windshield Finish Moulding—LH—Terraplane and Hudson	*					1
BO	116532	Windshield Finish Moulding--RH-Hudson	*	1	1	1	1	
BO	116533	Windshield Finish Moulding—LH-Hudson	*	1	1	1	1	
BO	116777	Windshield Finish Moulding--Center (Specify Color)	*	1	1	1	1	
BO	118500	Windshield Finish Moulding--Center (Specify Color)	*					1
BO	116778	Windshield Finish Moulding--Center Cover--Terraplane	*	1	1	1	1	1
BO	117485	Windshield Finish Moulding--Center Cover--Hudson	*	1	1	1	1	1
BO	116684	Windshield Center Bar--Outside	*	1	1	1	1	
BO	118676	Windshield Center Bar--Outside						1
BO	117377	Windshield Center Bar--Shim	*	1	1	1	1	1
BO	71538	Windshield Center Bar Screws—Upper and Center		2	2	2	2	3
BO	71609	Windshield Center Bar Screws--Lower		1	1	1	1	
BO	70891	Windshield Finish Moulding Screws		16	16	16	16	16
<b>PANELS - METAL</b>								
C	116006	Cowl Side Panel--RH	*	1	1	1	1	1
C	116007	Cowl Side Panel--LH	*	1	1	1	1	1
C	116002	Front End Panel	*	1	1	1	1	1
C	116003	Front End Panel--RHD	*	1	1	1	1	1
C	116022	Dash Panel	*	1	1	1	1	1
BO	112935	Dash Panel Cover Plate		1	1	1	1	1
BO	71302	Dash Panel Cover Plate Screw		2	2	2	2	2
C	116073	Rear Panel--Lower	*	1	1			
C	116322	Rear Panel (Rear Tire Mount)	*			1	1	1
C	116323	Rear Panel (Side Tire Mount)	*			1	1	1
C	118151	Rear Panel—Upper	*					1
C	116071	Quarter Panel--RH	*	1				
C	116072	Quarter Panel--LH	*	1				
C	116100	Quarter Panel--RH	*		1			
C	116101	Quarter Panel--LH	*		1			

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>PANELS - METAL Cont'd.</b>						
C	116354	Quarter Panel--RH	*		1	1
C	116355	Quarter Panel--LH	*		1	1
C	118152	Quarter Panel--RH	*			1
C	118153	Quarter Panel--LH	*			1
C	116152	Wheel House Panel--RH	*	1	1	
C	116153	Wheel House Panel--LH	*	1	1	
C	116780	Wheel House Panel--RH	*		1	1
C	116781	Wheel House Panel--LH	*		1	1
C	107565	Deck Door Outside Panel			1	
C	107566	Deck Door Outside Panel				1
C	107567	Deck Door Inside Panel			1	1
C	116081	Rear Compartment lid Outside Panel	*	1	1	
C	116212	Rear Compartment lid Inside Panel	*	1	1	
C	116031	Roof Panel (Except 66-67)	*	1	1	
C	116315	Roof Panel	*		1	1
C	116075	Roof Panel--Front	*		1	
C	116076	Roof Panel--Center	*		1	
C	116077	Roof Panel--Rear	*		1	
C	116162	Front Door Outside Panel--RH	*	1		
C	116163	Front Door Outside Panel--LH	*	1		
C	116170	Front Door Outside Panel--RH	*		1	
C	116171	Front Door Outside Panel--LH	*		1	
C	116166	Front Door Outside Panel--RH	*		1	1
C	116167	Front Door Outside Panel--LH	*		1	1
C	118474	Door Outside Panel--RH	*			1
C	118475	Door Outside Panel--LH	*			1
C	116164	Front Door Outside Panel--RH	*	1	1	
C	116165	Front Door Outside Panel--LH	*	1	1	
C	116172	Front Door Outside Panel--RH	*		1	
C	116173	Front Door Outside Panel--LH	*		1	
C	116168	Door Outside Panel--RH	*		1	1
C	116169	Door Outside Panel--LH	*		1	1
C	118478	Door Outside Panel--RH	*			1
C	118479	Door Outside Panel--LH	*			1
<b>PILLARS</b>						
C	107760	Body Front Lock Pillar Assembly--RH	*	1	1	1
C	107761	Body Front Lock Pillar Assembly--LH	*	1	1	1
C	117760	Body Hinge Pillar Assembly--RH	*	1		
C	117761	Body Hinge Pillar Assembly--LH	*	1		
C	117762	Body Hinge Pillar Assembly--RH	*		1	1
C	117763	Body Hinge Pillar Assembly--LH	*		1	1
C	118314	Body Hinge Pillar Assembly--RH	*			1
C	118315	Body Hinge Pillar Assembly--LH	*			1
C	118824	Body Lock Pillar Assembly--RH	*			1
C	118825	Body Lock Pillar Assembly--LH	*			1
C	117766	Body Center Pillar Assembly--RH	*		1	
C	117767	Body Center Pillar Assembly--LH	*		1	
C	117768	Body Rear Pillar Assembly--RH	*		1	
C	117769	Body Rear Pillar Assembly--LH	*		1	
BO	109878	Hinge Pillar Trim Retainer Assembly--RH				1
BO	109879	Hinge Pillar Trim Retainer Assembly--LH				1
C	117064	Body Lock Pillar Trimstick Assembly--RH	*	1	1	1
C	117065	Body Lock Pillar Trimstick Assembly--LH	*	1	1	1
BO	71352	Body Lock Pillar Trimstick Screw		22	10	10
BO	71404	Body Lock Pillar Hole Plug (Two Used Side Mount)		3	4	4
<b>TRIM RAILS</b>						
C	117006	Windshield Header Trim Rail--RH	*	1	1	1
C	117007	Windshield Header Trim Rail--LH	*	1	1	1
BO	117010	Windshield Header Trim Rail Bracket	*	4	4	4
BO	70978	Windshield Header Trim Rail Bracket Rivet		4	4	4
BO	117288	Windshield Header Trim Rail Bracket--Center	*	1	1	1
BO	70875	Windshield Header Trim Rail Bracket Rivet		1	1	1



Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>TRIM RAILS Cont'd.</b>						
BO	18464	Windshield Header Trim Rail Bolt	3	3	3	3
C	108179	Center Pillar Trimstick--Terraplane		2		
C	108179	Center Pillar Trimstick--Model 63		1		
C	112648	Center Pillar Trimstick--Model 66-67		1		
BO	70861	Center Pillar Trimstick Bolt		8		
C	117060	Body Header Trim Retainer Assembly--RH	*	1		
C	117061	Body Header Trim Retainer Assembly--LH	*	1		
C	117048	Body Header Trim Retainer Assembly--LH	}	1		
C	117049	Body Header Trim Retainer Assembly--LH				
C	117052	Body Header Trim Retainer Assembly--RH	}	1		
C	117053	Body Header Trim Retainer Assembly--LH				
C	117744	Body Header Trim Retainer Assembly--RH	*		1	1
C	117745	Body Header Trim Retainer Assembly--LH	*		1	1
C	117064	Front Body Pillar Trim Retainer Assembly--RH	*	1	1	1
C	117065	Front Body Pillar Trim Retainer Assembly--LH	*	1	1	1
BO	108214	Front Body Pillar Trim Retainer Assembly--RH				1
BO	108215	Front Body Pillar Trim Retainer Assembly--LH				1
C	117056	Hinge Pillar Trim Retainer Assembly--RH	*	1		
C	117057	Hinge Pillar Trim Retainer Assembly--LH	*	1		
C	117796	Hinge Pillar Trim Retainer Assembly--RH	*		1	1
C	117797	Hinge Pillar Trim Retainer Assembly--LH	*		1	1
BO	109878	Hinge Pillar Trim Retainer Assembly--RH				1
BO	109879	Hinge Pillar Trim Retainer Assembly--LH				1
C	117066	Rear Hinge Pillar Trim Retainer Assembly--RH	*	1		
C	117067	Rear Hinge Pillar Trim Retainer Assembly--LH	*	1		
BO	71420	Body Trim Retainer Sheet Metal Screw	28	40	22	22

**FRONT DOOR**  
(TERRAPLANE DELUXE - 61)

C	116640	Front Door Assembly--RH--Skeleton	*	1		
C	116641	Front Door Assembly--LH--Skeleton	*	1		
C	116642	Front Door Assembly--RH--Skeleton	*		1	
C	116643	Front Door Assembly--LH--Skeleton	*		1	
C	116644	Front Door Assembly--RH--Skeleton	*		1	1
C	116645	Front Door Assembly--LH--Skeleton	*		1	1
C	118438	Front Door Assembly--RH--Skeleton	*			1
C	118439	Front Door Assembly--LH--Skeleton	*			1
BO	112850	Front Door Bumper--Upper	2	2	2	2
BO	107214	Front Door Bumper--Lower	2	2	2	4
BO	75152	Front Door Bumper Retainer	2	2	2	4
BO	70865	Front Door Bumper Screw	4	4	4	4
BO	94870	Front Door Dovetail--Male	2	2	2	2
BO	94541	Front Door Dovetail Tapping Plate	2	2	2	2
BO	107638	Front Door Dovetail Plate Retainer	2	2	2	2
BO	70079	Front Door Dovetail Plate Retainer Rivet	2	2	2	2
BO	70853	Front Door Dovetail to Door Screw	2	2	2	2
BO	94831	Front Door Dovetail Pocket Complete	2	2	2	2
BO	94834	Front Door Dovetail Cushion	4	4	4	4
BO	94833	Front Door Dovetail Cushion Retaining Spring	2	2	2	2
BO	70853	Front Door Dovetail Pocket to Pillar Screw	4	4	4	4
BO	18475	Front Door Dovetail Pocket to Pillar Screw Lockwasher	4	4	4	4
BO	107226	Front Door Lock Striker Plate	2	2	2	2
BO	111630	Front Door Lock Striker Plate Felt	2	2	2	2
BO	94427	Front Door Lock Striker Tapping Plate	2	2	2	2
BO	70853	Front Door Lock Striker Plate Screw	4	4	4	4
BO	18475	Front Door Lock Striker Plate Screw Lockwasher	4	4	4	4
BO	94115	Front Door Check Strap Bracket (On Body Pillar)	2	2	2	2
BO	112401	Front Door Check Strap	2	2	2	2
BZ	70854	Front Door Check Strap to Pillar Bracket Clevis Pin .	2	2	2	2
BO	107590	Front Door Check Strap to Guide--RH	1	1	1	1

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FRONT DOOR Cont'd.</b>						
BO	107591	Front Door Check Strap Guide--LH	1	1	1	
BO	18447	Front Door Check Strap Guide to Panel Bolt	8	8	8	
BO	107179	Front Door Check Strap Bumper	2	2	2	
BZ	18339	Front Door Check Strap Bumper Rivet	4	4	4	
BO	96089	Front Door Check Strap Anti Rattle Spring	2	2	2	
BO	112761	Front Door Trimboard Support	2	2	2	
BO	18464	Front Door Trimboard Support Bolt	4	4	4	
C	116836	Front Door Pillar to Regulator Strap Assembly	*	2	2	
C	116837	Front Door Pillar to Regulator Strap Assembly		2		
C	112790	Front Door Belt Cross Member to Regulator Strap	*	4	4	
C	117430	Front Door Bottom Weatherstrip and Cardboard Assembly	*	2	2	
C	117431	Front Door Bottom Weatherstrip and Cardboard Assembly	*		2	
BO	118674	Front Door Track Assembly--RH	*			
BO	118675	Front Door Track Assembly--LH				
BO	108796	Front Door Track Reinforcement and Trimboard Assembly --RH				
BO	108797	Front Door Track Reinforcement and Trimboard Assembly --LH				
BO	18464	Front Door Track Bolt				
BO	112848	Door Opening Weatherstrip (Above Door)	2		2	
BO	112847	Door Opening Weatherstrip		2		
C	112855	Door Opening Weatherstrip Retainer--RH--Upper	1			
C	112856	Door Opening Weatherstrip Retainer--LH--Upper	1			
C	112851	Door Opening Weatherstrip Retainer--RH--Upper		1		
C	112852	Door Opening Weatherstrip Retainer--LH--Upper		1		
C	112853	Door Opening Weatherstrip Retainer--RH--Upper			1	
C	112854	Door Opening Weatherstrip Retainer--LH--Upper			1	
C	114654	Door Opening Weatherstrip Retainer--RH--Rear		1		
C	114655	Door Opening Weatherstrip Retainer--LH--Rear		1		
BO	70733	Door Opening Weatherstrip Retainer Drive Screw (Header)	14	24	14	
BO	71369	Door Opening Weatherstrip Retainer Drive Screw (Pillar)	10	10	10	
<b>FRONT DOOR (EXCEPT MODEL 61)</b>						
C	116646	Front Door Assembly--RH--Skeleton	*	1	1	
C	116647	Front Door Assembly--LH--Skeleton	*	1	1	
C	116648	Front Door Assembly--RH--Skeleton	*		1	
C	116649	Front Door Assembly--LH--Skeleton	*		1	
C	116650	Front Door Assembly--RH--Skeleton	*		1	1
C	116651	Front Door Assembly--LH--Skeleton	*		1	1
C	118582	Front Door Assembly--RH--Skeleton	*			1
C	118583	Front Door Assembly--LH--Skeleton	*			1
BO	112850	Front Door Bumper--Upper	4	4	4	4
BO	107214	Front Door Bumper--Lower				
BO	75152	Front Door Bumper Retainer				4
BO	70865	Front Door Bumper Retainer Screw	4	4	4	4
BO	114660	Front Door Bumper Anti Rattle Spring				2
BO	71527	Front Door Bumper Anti Rattle Spring Screw				2
BO	94870	Front Door Dovetail--Male	2	2	2	2
BO	94541	Front Door Dovetail Tapping Plate	2	2	2	2
BO	107638	Front Door Dovetail Plate Retainer	2	2	2	2
BO	70079	Front Door Dovetail Plate Retainer Rivet	2	2	2	2
BO	70853	Front Door Dovetail to Door Screw	2	2	2	2
BO	94831	Front Door Dovetail Pocket Complete	2	2	2	2
BO	94834	Front Door Dovetail Dovetail Cushion	4	4	4	4
BO	94833	Front Door Dovetail Cushion Retaining Spring	2	2	2	2
BO	70853	Front Door Dovetail Pocket to Pillar Screw	4	4	4	4
BO	18475	Front Door Dovetail Pocket to Pillar Screen Lock Washer	4	4	4	4
BO	107226	Front Door Lock Striker Plate	2	2	2	2
BO	111630	Front Door Lock Striker Plate Felt	2	2	2	2
BO	94427	Front Door Lock Striker Tapping Plate	2	2	2	2

Part No.	Description	Bro.	Sed.	2C	4C	CC		
<b>FRONT DOOR Cont'd.</b>								
BO	70853	Front Door Lock Striker Plate Screw						
BO	38475	Front Door Lock Striker Plate Lock Washer						
BO	94115	Front Door Check Strap Bracket (On Body Pillar)						
BO	112401	Front Door Check Strap						
BO	70854	Front Door Check Strap to Pillar Bracket Clevis Pin						
BO	107590	Front Door Check Guide--RH						
BO	107591	Front Door Check Guide--LH						
BO	18447	Front Door Check Guide to Panel Bolt						
BO	107179	Front Door Check Strap Bumper						
BZ	18389	Front Door Check Strap Bumper Rivet						
BO	96089	Front Door Check Strap Anti Rattle Spring						
BO	116963	Door Opening Weatherstrip						
BO	116964	Door Opening Weatherstrip (62-63)						
BO	116965	Door Opening Weatherstrip (66-67)						
BO	112855	Door Opening Weatherstrip Retainer--RH						
BO	112856	Door Opening Weatherstrip Retainer--LH						
BO	112853	Door Opening Weatherstrip Retainer--RH						
BO	112854	Door Opening Weatherstrip Retainer--LH						
BO	112851	Door Opening Weatherstrip Retainer--RH--Upper	}	62-63				
BO	112852	Door Opening Weatherstrip Retainer--LH--Upper						
BO	114654	Door Opening Weatherstrip Retainer--RH--Rear						
BO	114655	Door Opening Weatherstrip Retainer--LH--Rear						
BO	112857	Door Opening Weatherstrip Retainer--RH--Upper	}	66-67				
BO	112858	Door Opening Weatherstrip Retainer--LH--Upper						
BO	116966	Door Opening Weatherstrip Retainer--RH--Lower						
BO	116967	Door Opening Weatherstrip Retainer--LH--Lower						
BO	70733	Door Opening Weatherstrip Retainer Drive Screw (Header)						
BO	71369	Door Opening Weatherstrip Retainer Drive Screw (Pillar)						
BO	114850	Front Door Track Assembly--RH						
BO	114851	Front Door Track Assembly--LH						
BO	109428	Front Door Track Assembly--RH						
BO	109429	Front Door Track Assembly--LB						
BO	18464	Front Door Track Bolt						
BC	114853	Front Door Track Spring						
BO	114854	Front Door Track Spring Buffer						
BO	70523	Front Door Track Spring Buffer Rivet						
BO	108796	Front Door Track Reinforcement and Trimboard Support-- RH						
BO	108797	Front Door Track Reinforcement and Trimboard Support-- LH						
C	117430	Front Door Bottom Weatherstrip and Cardboard Assembly						
C	117431	Front Door Bottom Weatherstrip and Cardboard Assembly-- Except 66-67						
C	117430	Front Door. Bottom Weatherstrip and Cardboard Assembly-- 66-67						
<b>REAR DOOR</b>								
C	116654	Rear Door Assembly--RH--Skeleton	}	Except 66-67				
C	116655	Rear Door Assembly--LH--Skeleton						
C	116656	Rear Door Assembly--RH--Skeleton			}	66-67		
C	116657	Rear Door Assembly--LH--Skeleton						
BO	107214	Rear Door Bumper						
BO	75152	Rear Door Bumper Retainer						
BO	94870	Rear Door Dovetail--Male						
BO	94541	Rear Door Dovetail Tapping Plate						
BO	107178	Rear Door Dovetail Plate Retainer						
BO	70853	Rear Door Dovetail to Door Screw						
BO	94831	Rear Door Dovetail Pocket Complete						
BO	94834	Rear Door Dovetail Cushion						
BO	94833	Rear Door Dovetail Cushion Retaining Spring						
BO	70853	Rear Door Dovetail Pocket to Pillar Screw						
BO	18475	Rear Door Dovetail Pocket to Pillar Screw Lockwasher .						
BO	107227	Rear Door Lock Striker Plate						

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>REAR DOORS Cont'd.</b>						
BO	96855	Rear Door Lock Striker Plate Felt		2		
BO	94427	Rear Door Lock Striker Tapping Plate		2		
BO	70853	Rear Door Lock Striker Plate Screw		4		
BO	18475	Rear Door Lock Striker Plate Screw Lockwasher		4		
BO	94115	Rear Door Check Strap Bracket (On Body Pillar)		2		
BO	118616	Rear Door Check Strap	*	2		
BO	70854	Rear Door Check Strap to Pillar Bracket Clevis Pin		2		
BO	107170	Rear Door Check Strap Guide		2		
BO	18447	Rear Door Check Strap Guide to Panel Bolt		8		
BO	109091	Rear Door Check Strap Bumper		2		
BZ	18389	Rear Door Check Strap Bumper Rivet		4		
BO	96089	Rear Check Strap Anti Rattle Spring		2		
BO	117432	Rear Door Bottom Weatherstrip and Cardboard Assembly		2		
<b>DOOR LOCKS AND HANDLES</b>						
BO	107210	Door Lock Assembly--RH--Front	1	1	1	1
BO	107211	Door Lock Assembly--LH--Front	1	1	1	1
BO	107212	Door Lock Assembly--RH--Rear		1		
BO	107213	Door Lock Assembly--LH--Rear		1		
BO	111468	Door Lock Bolt Spring	2	4	2	2
BO	114875	Door Lock Bolt Spring Clip	2	4	2	2
BO	18464	Door Lock to Frame Screw	4	8	4	4
BO	70091	Door Lock to Frame Screw	2	4	2	2
BO	108617	Door Lock Remote Control Assembly--RH--Rear		1		
BO	108618	Door Lock Remote Control Assembly--LH--Rear		1		
BO	18459	Door Lock Remote Control Assembly to Frame Screw		6		
BO	18479	Door Lock Remote Control Assembly to Frame Nut		6		
BO	114092	Door Inside Handle--Terraplane	2	4	2	2
BO	116867	Door Inside Handle--Hudson--Except 65-67	2	4	2	2
BO	107987	Door Inside Handle--65-67	2	4	2	2
BO	79308	Door Inside Handle Pin	6	10	6	6
BO	79709	Door Inside Handle Escutcheon Spring	6	10	6	6
BO	95136	Door Inside Handle Escutcheon Plate--Terraplane	6	10	6	6
BO	116869	Door Inside Handle Escutcheon Plate--Hudson	*	8	6	6
BO	108377	Door Pull-to-Handle--Except 61	1	1	1	1
BO	116927	Door Outside Handle and Cylinder Assembly--Terraplane	*	1	1	1
BO	116928	Door Outside Handle (Less Cylinder)--Terraplane,	*	1	1	1
BO	116929	Door Outside Handle and Cylinder Assembly--Hudson	*	1	1	1
BO	116930	Door Outside Handle (Less Cylinder)--Hudson	*	1	1	1
BO	118173	Door Outside Handle Cylinder and Keys	*	1	1	1
BO	108044	Door Outside Handle (LH-Front)--Terraplane	1	1	1	1
BO	108045	Door Outside Handle (Rear)--Terraplane		2		
BO	108048	Door Outside Handle (LH-Front)--Hudson	1	1	1	1
BO	108049	Door Outside Handle (Rear)--Hudson		2		
BO	70526	Door Outside Handle to Door Bolt	4	8	4	4
<b>DOOR HINGES</b>						
BO	117500	Front Door Hinge--Upper--RH--Door Half	*	1	1	
BO	117501	Front Door Hinge--Upper--LH--Door Half	*	1	1	
BO	117994	Front Door Hinge--Upper--RH--Door Half	*		1	1
BO	117995	Front Door Hinge--Upper--LH--Door Half	*		1	1
BO	117502	Front Door Hinge--Upper--RH--Body Half	*	1	1	
BO	117503	Front Door Hinge--Upper--LH--Body Half	*	1	1	
BO	117506	Front Door Hinge--Lower--RH--Door Half	*	1	1	
BO	117507	Front Door Hinge--Lower--LH--Door Half	*	1	1	
BO	117508	Front Door Hinge--Lower--RH--Body Half	*	1	1	
BO	117509	Front Door Hinge--Lower--LH--Body Half	*	1	1	
BO	118504	Front Door Hinge--Upper--RH--Door Half	*			
BO	118505	Front Door Hinge--Upper--LH--Door Half	*			1
BO	118506	Front Door Hinge--Upper--RH--Body Half	*			1
BO	118507	Front Door Hinge--Upper--LH--Body Half	*			1
BO	107340	Front Door Hinge--Lower--RH--Door Half	*			1
BO	107341	Front Door Hinge--Lower--LH--Door Half	*			1
BO	107343	Front Door Hinge--Lower--Body Half	*			2

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>DOOR HINGES Cont'd.</b>						
BO	117512	Rear Door Hinge--Upper--RH--Door Half	*	1		
BO	117513	Rear Door Hinge--Upper--LH--Door Half	*	1		
BO	117514	Rear Door Hinge--Upper--RH--Body Half	*	1		
BO	117515	Rear Door Hinge--Upper--LH--Body Half	*	1		
BO	117518	Rear Door Hinge--Lower--Door Half	*	2		
BO	117520	Rear Door Hinge--Lower--Body Half	*	2		
BO	117524	Hinge Pin--Upper	*	2	4	2 2 2
BO	117525	Hinge Pin--Lower	*	2	4	2 2 2
BO	118508	Hinge Pin--Upper	*			
BO	107351	Hinge Pin--Lower				
BO	70870	Hinge Rivet--Door Half	14	20	14	14 14
BO	71307	Hinge Rivet--Body Half	12	24	12	12 12
BO	70970	Hinge Rivet--Door Half--Lower Rear		8		
<b>FRONT DOOR WINDOW - SLIDING TYPE Model 61</b>						
BO	114960	Front Door Lock Pillar Glass Run Channel and Bracket Assembly--RH	1	1	1	1
BO	114961	Front Door Lock Pillar Glass Run Channel and Bracket Assembly--LH	1	1	1	1
BO	114971	Front Door Lock Pillar Glass Run--Lower	2	2	2	2
BO	114968	Front Door Hinge Pillar Glass Run and Channel Assembly--RH	1	1	1	1
BO	114969	Front Door Hinge Pillar Glass Run and Channel Assembly--LH	1	1	1	1
BO	114970	Front Hinge Pillar Glass Run--Lower	2	2	2	2
BO	114972	Front Door Glass Rest Channel Assembly--RH	1		1	1
BO	114973	Front Door Glass Rest Channel Assembly--LH	1		1	1
BO	114976	Front Door Glass Rest Channel Assembly--RH		1		
BO	114977	Front Door Glass Rest Channel Assembly--LH		1		
BO	118664	Front Door Glass Rest Channel and Brace Assembly--RH	*			1
BO	118665	Front Door Glass Rest Channel and Brace Assembly--LH	*			1
BO	114992	Front Door Glass Rest Channel Weatherseal--RH	1		1	1
BO	114993	Front Door Glass Rest Channel Weatherseal--LH	1		1	1
BO	114994	Front Door Glass Rest Channel Weatherseal--RH		1		
BO	114995	Front Door Glass Rest Channel Weatherseal--LH		1		
BO	118666	Front Door Glass Rest Channel Weatherseal	*			2
C	112765	Front Door Lock Pillar Glass Run Assembly--Upper		2		
C	112767	Front Door Lock Pillar Glass Run Assembly--Upper	2		2	2
BO	112768	Front Door Hinge Pillar Glass Run--Upper	2	2		
BO	112769	Front Door Hinge Pillar Glass Run--Upper			2	2
BO	70814	Front Door Hinge Pillar Glass Run Screw--Upper	4	4	4	4
BO	112754	Front Door Lock Pillar Glass Run Cushion--Long	2	2	2	2
BO	112755	Front Door Lock Pillar Glass Run Cushion--Short	4	4	4	4
BO	70818	Front Door Lock Pillar Glass Run Cushion Screw	2	2	2	2
BO	18447	Front Door Lock Pillar Glass Run Screw--Lower	2	2	2	2 2
BZ	70677	Front Door Lock Pillar Glass Run Screw Nut	2	2	2	2 2
BO	71515	Front Door Glass Run Screw	10	6	6	6
BO	70042	Front Door Glass Run Rivet	22	22	22	22
BO	75261	Front Door Glass Run Clip	2	2	2	2
BO	70304	Front Door Glass Run Channel to Pillar Screw	2	2	2	2 2
BO	99542	Front Door Glass Bumper	4	4	4	4
BO	96485	Front Door Glass Bumper				2
BO	111843	Front Door Glass Bumper--Outer				2
BO	109504	Front Door Glass Stop--Upper				2
BO	94427	Front Door Glass Stop Tapping Plate				2
BO	70853	Front Door Glass Stop Tapping Plate Screw				4
BO	109438	Front Door Glass Run Channel Assembly--RH				1
BO	109439	Front Door Glass Run Channel Assembly--LH				1
BO	109424	Front Door Glass Run Channel Assembly--RH--Front				1
BO	109425	Front Door Glass Run Channel Assembly--LH--Front				1
BO	118658	Front Door Glass Frame Assembly--RH	*			1
BO	118659	Front Door Glass Frame Assembly--LH	*			1
BO	109643	Front Door Glass Rest Channel and Roller Guide Assembly				2
BZ	18464	Front Door Glass Rest Channel and Roller Guide Bolt				4

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FRONT DOOR WINDOW - DIVIDED TYPE Except Model 61</b>						
C	108025	Front Door Lock Pillar Glass Run Channel Assembly--RH	1	1	1	1
C	108026	Front Door Lock Pillar Glass Run Channel Assembly--LH	1	1	1	1
BO	107878	Front Door Hinge Pillar Glass Run Channel and Bracket Assembly--RH	1	1	1	1
BO	107879	Front Door Hinge Pillar Glass Run Channel and Bracket Assembly--LH	1	1	1	1
BO	109434	Door Window Glass Run Channel Assembly--RH--Front				1
BO	109435	Door Window Glass Run Channel Assembly--LH--Front				1
BO	109438	Door Window Glass Run Channel Assembly--RH--Rear				1
BO	109439	Door Window Glass Run Channel Assembly--LH--Rear				1
C	112689	Front Door Window Glass Run Assembly	2			
C	112685	Front Door Window Glass Run Assembly		2		
BO	112691	Front Door Window Glass Run Channel			2	2
BO	75261	Front Door Window Glass Run Clip	2	2	2	2
BO	71369	Front Door Window Glass Run Screw	6	8	6	6
BO	70042	Front Door Window Glass Run Clip Rivet	4	4	4	4
BO	109424	Door Window Glass Run--RH--Center				1
BO	109425	Door Window Glass Run--LH--Center				1
BO	1636	Door Window Glass Run to Cradle Screw				8
BO	107814	Front Door Glass Rest Channel and Brace Assembly--RH	1		1	1
BO	107815	Front Door Glass Rest Channel and Brace Assembly--LH	1		1	1
BO	107816	Front Door Glass Rest Channel and Brace Assembly--RH		1		
BO	107817	Front Door Glass Rest Channel and Brace Assembly--LB		1		
BO	109316	Door Rest Channel and Brace Assembly--RH				1
BO	109317	Door Rest Channel and Brace Assembly--LH				1
BO	111172	Door Rest Channel Weatherseal	2		2	2
BO	111173	Door Rest Channel Weatherseal		2		
BO	114643	Door Rest Channel Weatherseal				2
BO	107836	Front Door Glass Cantilever Support Assembly--RH	1	1	1	1
BO	107837	Front Door Glass Cantilever Support Assembly--LH	1	1	1	1
BO	18464	Front Door Glass Cantilever Support Bolt	4	4	4	4
BO	108508	Front Door Glass Weatherstrip	2	2	2	2
BO	109366	Front Door Glass Weatherstrip Channel and Anchor Assembly--RH	1	1	1	1
BO	109367	Front Door Glass Weatherstrip Channel and Anchor Assembly--LH	1	1	1	1
BO	109142	Front Door Glass Channel Guide Pad--RH--Inner	1	1	1	1
BO	109143	Front Door Glass Channel Guide Pad--LH--Inner	1	1	1	1
BO	70304	Front Door Glass Channel Guide Pad Screw	4	4	4	4
BZ	70677	Front Door Glass Channel Guide Pad Screw Nut	4	4	4	4
BO	99452	Front Door Glass Bumper--Outer	2	6	2	2
BO	111843	Front Door Glass Bumper--Outside				2
BO	109431	Front Door Glass Stop--Lower				2
BO	18464	Door Window Glass Stop to Track Bolt				4
BZ	70676	Door Window Glass Stop to Track Bolt Nut				4
BO	109504	Door Window Glass Stop--Upper				2
BO	94427	Door Window Glass Stop Tapping Plate				2
BO	70853	Door Window Glass Stop Tapping Plate Screw				4
C	109414	Door Window Glass Frame				2
<b>REAR DOOR WINDOW</b>						
BO	107186	Rear Door Rest Channel and Guide Assembly--RH		1		
BO	107187	Rear Door Rest Channel and Guide Assembly--LH		1		
BO	111174	Rear Door Rest Channel Weatherseal		2		
BO	107172	Rear Door Hinge Pillar Glass Run Channel Assembly--RH		1		
BO	107173	Rear Door Hinge Pillar Glass Run Channel Assembly--LB		1		
BO	112687	Rear Door Glass Run		2		
BO	75261	Rear Door Glass Run Clip		4		
BO	70042	Rear Door Glass Run Clip Rivet		8		
BO	71369	Rear Door Glass Run Screw		8		
BO	99542	Rear Door Glass Bumper--Outer		4		
BO	96485	Rear Door Glass Bumper		2		

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FRONT DOOR WING</b>						
BO 111752	Wing Cradle Complete--RH--With Glass	1	1	1	1	
BO 111753	Wing Cradle Complete--LH--With Glass	1	1	1	1	.
BO 111763	Wing Cradle Complete--RH--With Glass					1
BO 111764	Wing Cradle Complete--LH--With Glass					1
BO 111754	Wing Cradle Complete--RH--Less Glass	1	1	1	1	
BO 111755	Wing Cradle Complete--LH--Less Glass	1	1	1	1	
BO 111844	Wing Cradle Complete--RH--Less Glass					1
BO 111845	Wing Cradle Complete--LH--Less Glass					1
BO 108522	Wing Glass and Frame Assembly--RH	1	1	1	1	
BO 108523	Wing Glass and Frame Assembly--LH	1	1	1	1	
BO 109392	Wing Glass and Frame Assembly--RH					1
BO 109393	Wing Glass and Frame Assembly--LH					1
BO 109446	Wing Cradle and Channel Assembly--RH					1
BO 109447	Wing Cradle and Channel Assembly--LH					1
BO 109430	Wing Cradle Channel and Roller Assembly					2
BO 71418	Wing Cradle Channel and Roller Assembly to Cradle Rivet					6
BO 108907	Wing Pivot Screw	2	2	2	2	2
BO 108510	Wing Upper Pivot Shim--Thin	2	2	2	2	2
BO 108511	Wing Upper Pivot Shim--Thick	2	2	2	2	2
BO 108500	Wing Operating Cam--RH	1	1	1	1	1
BO 108501	Wing Operating Cam--LH	1	1	1	1	1
BO 108516	Wing Cam to Cradle Pin	2	2	2	2	2
BO 108513	Wing Cam Adjusting Stud	2	2	2	2	2
BO 6536	Wing Cam Adjusting Stud to Cam Rivet	2	2	2	2	2
BO 71398	Wing Cam Adjusting Stud Lock Nut	4	4	4	4	4
BO 71395	Wing Cam Adjusting Stud Lock Washer	2	2	2	2	2
BO 108518	Wing Operating Lever--RH	1	1	1	1	1
BO 108519	Wing Operating Lever--LH	1	1	1	1	1
BO 108517	Wing Operating Lever to Rack Pin	2	2	2	2	2
BO 108515	Wing Cushion	2	2	2	2	2
BO 111022	Wing Regulator Stop--RH--Upper	1	1	1	1	1
BO 111023	Wing Regulator Stop--LH--Upper	1	1	1	1	1
BO 71533	Wing Regulator Stop to Cam Screw	2	2	2	2	2
BO 70681	Wing Regulator Stop to Cam Screw Lockwasher	2	2	2	2	2
BO 109245	Wing Brake Assembly--RH	1	1	1	1	1
BO 109246	Wing Brake Assembly--LH	1	1	1	1	1
BO 71386	Wing Brake to Cradle Rivet	4	4	4	4	4
BO 109092	Wing Shaft Friction Spring--RH	1	1	1	1	1
BO 109093	Wing Shaft Friction Spring--LH	1	1	1	1	1
BM 70855	Wing Shaft Friction Spring Screw	2	2	2	2	2
BO 108174	Wing Weatherstrip--RH	1	1	1	1	
BO 108175	Wing Weatherstrip--LH	1	1	1	1	
BO 109426	Wing Weatherstrip--RH					1
BO 109427	Wing Weatherstrip--LH					1
BO 111884	Wing Weatherstrip Retaining Pin	2	2	2	2	2
BO 112864	Wing Cradle Weatherstrip--RH--Outside	1	1	1	1	
BO 112865	Wing Cradle Weatherstrip--LH--Outside	1	1	1	1	
BO 112866	Wing Cradle Weatherstrip--RH--Outside					1
BO 112867	Wing Cradle Weatherstrip--LH--Outside					1
BO 70863	Wing Cradle Weatherstrip Screw	8	8	8	8	8
BO 71499	Wing Cradle Weatherstrip Screw Washer	8	8	8	8	8
BO 108502	Wing Cradle Weatherstrip Former--RH	1	1	1	1	
BO 108503	Wing Cradle Weatherstrip Former--LH	1	1	1	1	
BO 71444	Wing Cradle Weatherstrip Former Rivet	4	4	4	4	
<b>WINDOWS - QUARTER AND REAR</b>						
BO 116950	Quarter Window Glass Run Channel Assembly--Top	*	2			
BO 116452	Quarter Window Glass Weatherstrip	*		2	2	
BO 116915	Quarter Window Rest Channel Assembly	*	2			
BO 116926	Quarter Window Rest Channel Weatherseal	*	2			
BO 117339	Quarter Window Weatherstrip and Foundation Assembly-- Inner	*		2		
BO 117340	Quarter Window Weatherstrip and Foundation Assembly-- Outer	*		2		

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>WINDOWS - QUARTER AND REAR Cont'd.</b>						
BO	117493	Quarter Window Belt Weatherstrip Assembly	*	2		
BO	116920	Quarter Window Glass Run	*	2		
BO	116957	Quarter Window Glass Run--Front	*		2	
BO	116958	Quarter Window Glass Run--Bottom	*		2	
BO	99452	Quarter Window Glass Bumper	*	4		
C	112457	Quarter Window Drain Trough Assembly--RH			1	
C	112458	Quarter Window Drain Trough Assembly--LH			1	
C	117126	Quarter Window Drain Trough Assembly--RH	*	1		
C	117127	Quarter Window Drain Trough Assembly--LH	*	1		
BO	112461	Quarter Window Drain Trough Hose			2	
BO	116450	Rear Window Weatherstrip	*	2	2	2
BO	117536	Rear Window Center Moulding	*		1	1
BZ	114449	Rear Window Center Moulding Clip			5	5
<b>WINDOW REGULATORS</b>						
BO	112752	Front Door Window Regulator Assembly--RH		1	1	1
BO	112753	Front Door Window Regulator Assembly--LH		1	1	1
BO	111070	Front Door Wing Regulator Assembly--RH		1	1	1
BO	111071	Front Door Wing Regulator Assembly--LH		1	1	1
BO	18464	Front Door Wing Regulator Attaching Bolt		10	10	10
BO	111072	Front Door Window Regulator Assembly--RH		1	1	1
BO	111073	Front Door Window Regulator Assembly--LH		1	1	1
BO	111074	Front Door Window Regulator Assembly--RH			1	
BO	111075	Front Door Window Regulator Assembly--LH			1	
BO	109462	Front Door Window Regulator Assembly--RH				
BO	109463	Front Door Window Regulator Assembly--LH				
BO	18464	Front Door Window Regulator Attaching Bolts		10	10	10
BO	107230	Rear Door Window Regulator Assembly--RH			1	
BO	107231	Rear Door Window Regulator Assembly--LH			1	
BO	70865	Rear Door Window Regulator Screw			8	
BO	116775	Quarter Window Regulator Assembly	*		2	
BO	117423	Quarter Window Regulator Rubber Spring	*		2	
BZ	18218	Quarter Window Regulator Bolt			4	
BO	86272	Quarter Window Regulator Washer			4	
BO	71500	Quarter Window Regulator to Channel Screw			4	
BO	112597	Quarter Window Regulator Assembly--RH		1		
30	112598	Quarter Window Regulator Assembly--LH		1		
BO	96023	Quarter Window Regulator Screw Tee Nut		4		
BO	70008	Quarter Window Regulator Bolt		4		
BZ	70676	Quarter Window Regulator Bolt Nut		4		
BZ	71300	Quarter Window Regulator to Strap Screw		4		
BO	116864	Door Wing Regulator Handle Assembly--63-64-66	*	2	2	2
BO	112673	Door Wing Regulator Handle Assembly--62		2	2	2
BO	107986	Door Wing Regulator Handle Assembly--65-67		2	2	2
BO	116865	Door and Quarter Window Regulator Handle Assembly--63-64-66	*	4	4	2
BO	116866	Quarter Window Regulator Handle Assembly	*		2	
BO	112674	Door Window Regulator Handle Assembly--61-62		2	4	2
BO	112674	Quarter Window Regulator Handle Assembly		2		
BO	107988	Door Window Regulator Handle Assembly--Model 65		2	4	2
BO	107988	Quarter Window Regulator Handle Assembly		2		
BO	117793	Quarter Window Regulator Handle Escutcheon Plate			2	
BO	71519	Quarter Window Regulator Screw			2	
<b>WINDOW FINISH MOULDINGS Model 61</b>						
C	116560	Front Door Window Finish Moulding Assembly--RH	*	1		
C	116561	Front Door Window Finish Moulding Assembly--LH	*	1		
C	116566	Front Door Window Finish Moulding Assembly--RH	*		1	
C	116567	Front Door Window Finish Moulding Assembly--LH	*		1	
C	116572	Front Door Window Finish Moulding Assembly--RH	*			1
C	116573	Front Door Window Finish Moulding Assembly--LH	*			1
BO	118620	Front Door Window Finish Moulding Assembly--RH	*			
BO	118621	Front Door Window Finish Moulding Assembly--LH	*			1
C	116614	Rear Door Window Finish Moulding Assembly--RH	*			1



Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>WINDOW FINISH MOULDINGS Model 61 Cont'd.</b>						
C	116615	Rear Door Window Finish Moulding Assembly--LH	*	1		
C	116542	Quarter Window Finish Moulding Assembly--RH	*	1		
C	116543	Quarter Window Finish Moulding Assembly--LB	*	1		
C	116548	Quarter Window Finish Moulding Assembly--RH	*		1	
C	116549	Quarter Window Finish Moulding Assembly--LH	*		1	
C	116554	Quarter Window Finish Moulding Assembly--RH	*		1	1
C	116555	Quarter Window Finish Moulding Assembly--LH	*		1	1
C	116536	Rear Window Finish Moulding Assembly--RH	*	1	1	1
C	116537	Rear Window Finish Moulding Assembly--LH	*	1	1	1
BO	118828	Body Lock Pillar Finish Moulding Assembly--RH	*			1
BO	118829	Body Lock Pillar Finish Moulding Assembly--LH	*			1
BO	117491	Front Door Window Belt Weatherstrip--Inside	*	2		
BO	117492	Front Door Window Belt Weatherstrip--Inner	*		2	
BO	118797	Front Door Window Belt Weatherstrip--Inner	*			2
BO	118792	Front Door Window Belt Weatherstrip--Outer--RH	*			1
BO	118793	Front Door Window Belt Weatherstrip--Outer--LH	*			1

### WINDOW FINISH MOULDINGS Model 62

C	116578	Front Door Window Finish Moulding Assembly--RH	*	1		
C	116579	Front Door Window Finish Moulding Assembly--LH	*	1		
C	116584	Front Door Window Finish Moulding Assembly--RH	*		1	
C	116585	Front Door Window Finish Moulding Assembly--LH	*		1	
C	116590	Front Door Window Finish Moulding Assembly--RH	*		1	1
C	116591	Front Door Window Finish Moulding Assembly--LH	*		1	1
C	109856	Front Door Window Finish Moulding Assembly--RH	*			1
C	109857	Front Door Window Finish Moulding Assembly--LH	*			1
C	116614	Rear Door Window Finish Moulding Assembly--RH	*		1	
C	116615	Rear Door Window Finish Moulding Assembly--LH	*		1	
C	116542	Quarter Window Finish Moulding Assembly--RH	*	1		
C	116543	Quarter Window Finish Moulding Assembly--LH	*	1		
C	116548	Quarter Window Finish Moulding Assembly--RH	*		1	
C	116549	Quarter Window Finish Moulding Assembly--LH	*		1	
C	116554	Quarter Window Finish Moulding Assembly--RH	*		1	1
C	116555	Quarter Window Finish Moulding Assembly--LH	*		1	1
C	116536	Rear Window Finish Moulding Assembly--RH	*	1	1	1
C	116537	Rear Window Finish Moulding Assembly--LH	*	1	1	1
C	118828	Body Lock Pillar Finish Moulding Assembly--RH	*			1
C	118829	Body Lock Pillar Finish Moulding Assembly--LH	*			1
BO	117387	Front Door Belt Weatherstrip--Inner	*	2		2
BO	117386	Front Door Belt Weatherstrip--Inner	*		2	
BO	118794	Front Door Belt Weatherstrip Rear--RH--Outer	*			1
BO	118795	Front Door Belt Weatherstrip Rear--LH--Outer	*			1
BO	118796	Front Door Belt Weatherstrip Front--Outer	*			4
BO	118797	Front Door Belt Weatherstrip--Inner	*			2

### WINDOW FINISH MOULDINGS Hudson

C	116580	Front Door Window Finish Moulding Assembly--RH	} Except 63 Sedan Model 63	*	1	1	
C	116581	Front Door Window Finish Moulding Assembly--LH		*	1	1	
C	116586	Front Door Window Finish Moulding Assembly--RH		*		1	
C	116587	Front Door Window Finish Moulding Assembly--LH		*		1	
C	116592	Front Door Window Finish Moulding Assembly--RH		*		1	1
C	116593	Front Door Window Finish Moulding Assembly--LH		*		1	1
C	109860	Front Door Window Finish Moulding Assembly--RH		*			1
C	109861	Front Door Window Finish Moulding Assembly--LH		*			1
C	116616	Rear Door Window Finish Moulding Assembly--RH		*		1	
C	116617	Rear Door Window Finish Moulding Assembly--LH		*		1	
C	116544	Quarter Window Finish Moulding Assembly--RH		*	1		
C	116545	Quarter Window Finish Moulding Assembly--LH		*	1		
C	116550	Quarter Window Finish Moulding Assembly--RH		*		1	
C	116551	Quarter Window Finish Moulding Assembly--LH		*		1	
C	116556	Quarter Window Finish Moulding Assembly--RH		*		1	1
C	116557	Quarter Window Finish Moulding Assembly--LH		*		1	1
BO	118828	Body Lock Pillar Finish Moulding--RH		*			1
BO	118829	Body Lock Pillar Finish Moulding--LH		*			1
BO	117387	Front Door Belt Weatherstrip--Inner		*	2		2

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>WINDOW FINISH MOULDINGS Hudson Cont'd.</b>						
BO	117386	Front Door Belt Weatherstrip--Inner	*	2		1
BO	118794	Front Door Belt Weatherstrip--Rear--RH--Outer	*			1
BO	118795	Front Door Belt Weatherstrip--Rear--LH--Outer	*			4
BO	118796	Front Door Belt Weatherstrip--Front--Outer	*			2
BO	118797	Front Door Belt Weatherstrip--Inner	*			
BO	116870	Front Door Window Moulding Valance--RH	1	1	1	1
BO	116871	Front Door Window Moulding Valance--LH	*	1	1	
BO	116876	Rear Door Window Moulding Valance--67	*	2		
BO	116879	Quarter Window Moulding Valance--65	*	2		
BO	116882	Quarter Window Moulding Valance--67	*	2		
BO	117138	Front End Panel Belt Moulding--RH	*	1	1	1
BO	117139	Front End Panel Belt Moulding--LH	*	1	1	1
BO	117140	Front Door Panel Belt Moulding--RH	1	1		
BO	117141	Front Door Panel Belt Moulding--LH	*	1		
C	117142	Front Door Panel Belt Moulding--RH	*	1		
C	117143	Front Door Panel Belt Moulding--LH	*	1		
C	117144	Rear Door Panel Belt Moulding	*	2		
C	117145	Quarter Panel Belt Moulding	*	2		
BO	117146	Quarter Panel Belt Moulding	*	2		
BO	117147	Quarter Panel Belt Moulding	*		2	2
BZ	114449	Belt Moulding Clips	40	44	32	32

**WINDOW FINISH MOULDINGS MISCELLANEOUS**

BO	70891	Door Moulding Screw-- Long	4	10	4	4
BO	71354	Door Moulding Screw -- Short	6	12	6	6
BO	71449	Door Moulding Screw--Front	2	2	2	2
BO	71652	Door Moulding Screw				12
BO	71537	Quarter Moulding Screw	12	8		
BO	71606	Quarter Moulding Screw			16	16
BO	71606	Rear Moulding Screw	16	16	16	16
BO	70938	Rear Moulding Screws--Clamp Type	1	1	1	1
BO	71302	Door Weatherstrip Screw				22
BO	70700	Door Weatherstrip Screw	8	16	8	8

**TOP - CLOSED BODIES**

C	116721	Roof Bow #1	*	1	1	1	1
C	116722	Roof Bow #2	*	1	1		
C	116732	Roof Bow #2	*			1	1
C	116723	Roof Bow #3	*	1			
C	116733	Roof Bow #3	*			1	1
C	116724	Roof Bow #3	*		1		
C	116725	Roof Bow #4	*	1	1		
C	116734	Roof Bow #4	*			1	1
C	116726	Roof Bow #5	*	1	1		
C	116727	Roof Bow #6	*	1	1		
C	116730	Roof Bow--Rear	*	1	1		
C	116735	Roof Bow--Rear	*			1	1
BO	71625	Roof Bow Attaching Bolt--Medium		18	20	18	18
BO	71626	Roof Bow Attaching Bolt--Long		8			
BZ	18218	Roof Bow Attaching Bolt		2	10	2	2
BO	117534	Roof Bow Tapping Plate	*	4	10	4	4
BO	87602	Roof Bow Tapping Plate		4			
C	116206	Body Header--RH	*	1			
C	116207	Body Header--LH	*	1			
C	116208	Body Header--RH	*		1		
C	116209	Body Header--LH	*		1		
C	116210	Body Header--RH	*		1		
C	116211	Body Header--LH	*		1		
C	116220	Body Header--RH	*			1	1
C	116221	Body Header--LH	*			1	1

**FLOOR**

BO	116014	Toe Board Riser Assembly--RH *	*	1	1	1	1
BO	116015	Toe Board Riser Assembly--LH	*	1	1	1	1

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FLOOR Cont'd.</b>						
BO	106300	Toe Board Riser Hole Plug	2	2	2	2
C	107224	Transmission Opening Floor Cover (Without Electric Hand)	1	1	1	1
C	100021	Transmission Opening Floor Cover (With Electric Hand)	1	1	1	1
BZ	70983	Transmission Opening Floor Cover Bolt	13	13	13	13
BO	12310	Transmission Opening Floor Cover Body Bolt	2	2	2	2
BO	117437	Transmission Opening Floor Cover Body Bolt Nut	* 2	2	2	2
BO	100829	Transmission Opening Cover Pad	1	1	1	1
BO	100924	Steering Column Hole Cover (Rubber)	1	1	1	1
C	116858	Front Door Scuff Plate--RH	* 1		1	1
C	116859	Front Door Scuff Plate--LH	* 1		1	1
BO	116860	Front Door Scuff Plate--RH	* 1	1		
BO	116861	Front Door Scuff Plate--LH	* 1	1		
C	116858	Front Door Scuff Plate--RH	* 1	1		
C	116859	Front Door Scuff Plate--LH	* 1	1		
C	116624	Front Door Scuff Plate--RH	* 1	1	1	1
C	116625	Front Door Scuff Plate--LH	* 1	1	1	1
BO	116862	Rear Door Scuff Plate--RH	* 1	1		
BO	116863	Rear Door Scuff Plate--LH	* 1	1		
BO	116626	Rear Door Scuff Plate--RH	* 1	1		
BO	116627	Rear Door Scuff Plate--LH	* 1	1		
BO	70891	Scuff Plate Screw	10	12	10	10
BO	107655	Battery Hole Cover	1	1	1	1
HZ	71300	Battery Hole Cover Bolt	2	2	2	2
BO	106300	Rear Seat Tray Hole Plug	2	2		
BZ	71404	Rear Seat Tray Hole Plug	4	4		
BO	100782	Rear Seat Tray Hole Plug	6	6		
BO	116757	Body Air Cleaner Assembly	* 1	1	1	1
BO	71302	Body Air Cleaner Screw	4	4	4	4
C	116133	Underbody Panel Assembly--Except 66-67	* 1	1		
C	116141	Underbody Panel Assembly--66-67	* 1	1		
C	116136	Underbody Panel Assembly	* 1		1	
C	118415	Underbody Panel Assembly	* 1		1	
C	118632	Underbody Panel Assembly	* 1			1
C	116025	Underbody Panel Extension--RH	* 1	1		
C	116026	Underbody Panel Extension--LH	* 1	1		
C	116027	Underbody Panel Extension--RH	* 1		1	1
C	116028	Underbody Panel Extension--LH	* 1		1	1
C	116029	Underbody Panel Extension--RH	* 1	1		
C	116030	Underbody Panel Extension--LH	* 1	1		
BO	18474	Underbody Panel Rivet	4	4	4	4
BO	70028	Underbody Panel Rivet	2	2	2	2
BO	106300	Underbody Panel Plug	8	8	8	8
BO	107707	Underbody Panel Plug	10	10	10	10
BO	118297	Rear Floor Carpet Assembly	* 1			
BO	117784	Rear Floor Carpet Assembly--Except 66-67	* 1	1		
BO	117785	Rear Floor Carpet Assembly--66-67	* 1	1		
BO	71354	Rear Floor Carpet Screw	8	6		

**FLOOR - R.H.D.**

BO	116016	Toe Board Riser Assembly--RH	* 1	1	1	1
BO	116017	Toe Board Riser Assembly--LH	* 1	1	1	1
BO	100828	Transmissions Opening Cover Pad	1	1	1	1
BO	100829	Transmission Opening Floor Cover	1	1	1	1
BO	118298	Rear Floor Carpet Assembly	* 1			

**FRONT SEATS Model 61**

C	118057	Drivers Seat Cushion Complete	* 1			
C	118037	Drivers Seat Back Complete	* 1			
C	118047	Drivers Seat Back Valance	* 1			
C	118059	Passenger Seat Cushion Complete	* 1			
C	118039	Passenger Seat Back Complete	* 1			
C	118047	Passenger Seat Back Complete	* 1			
C	117851	Front Seat Cushion Complete	* 1	1		

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FRONT SEATS Model 61 Cont'd.</b>						
C	117847	Front Seat Back Complete	*	1		
C	117873	Front Seat Back Valance	*	1		
C	118400	Front Seat Cushion Complete	*		1	1
C	118394	Front Seat Back Complete	*		1	1
C	119117	Front Seat Cushion Complete	*			
C	119115	Front Seat Back Complete	*			
C	119119	Front Seat Cushion Trim Assembly	*			
C	119116	Front Seat Back Trim Assembly	*			
C	117908	Front Seat Cushion Spring--RH	*	1		
C	117910	Front Seat Back Spring--RH	*	1		
C	117909	Front Seat Cushion Spring--LH	*	1		
C	117911	Front Seat Back Spring--LH	*	1		
C	117714	Front Seat Cushion Spring	*		1	
C	117716	Front Seat Back Spring	*		1	
C	118074	Front Seat Cushion Spring	*		1	1
C	118076	Front Seat Back Spring	*		1	1
C	119008	Front Seat Cushion Spring	*			1
C	119010	Front Seat Back Spring	*			1
BO	117224	Folding Seat Back Support--RH	*	2		1
BO	117225	Folding Seat Back Support--LH	*	2		1
BO	71617	Folding Seat Back Support Rivet		16		
BO	71618	Folding Seat Back Support Rivet		8		
BO	108530	Folding Seat Cushion Frame Slide Bracket		4		
BO	108529	Folding Back Pivot Collar		4		
BO	71428	Folding Seat Back Pivot Collar Washer		4		
BO	70135	Folding Seat Back Pivot Collar Taper Pin		4		
BO	117226	Passenger Seat Frame to Back Frame Bracket--RH	*	1		
BO	117227	Passenger Seat Frame to Back Frame Bracket--LH	*	1		
BO	71617	Passenger Seat Frame to Back Frame Bracket Rivet		4		
BZ	70692	Passenger Seat Frame to Back Frame Bracket Bolt		2		
BZ	70674	Passenger Seat Frame to Back Frame Bracket Bolt Nut		2		
BO	117228	Passenger Seat Frame Support Bracket--Lower		2		
BO	109954	Passenger Seat Frame Support Bracket--Upper		2		
BZ	549	Passenger Seat Frame Support Bracket Clevis Pin		2		
BO	70095	Passenger Seat Frame Support Bracket Bolt--Lower		2		
BZ	70674	Passenger Seat Frame Support Bracket Bolt Nut		2		
BO	116979	Drivers Seat Track Assembly--Outer	*	1		
BO	116980	Drivers Seat Track Assembly--Inner	*	1		
BO	116985	Front Seat Track Assembly--LH	*		1	1
BO	116986	Front Seat Track Assembly--RH	*		1	1
BO	108317	Front Seat Track Lock Rod		1	1	1
BO	70155	Front Seat Track Lock Rod Washer		1	1	1
BO	96089	Front Seat Track Lock Rod Anti Rattle Spring		2	2	2
BO	111696	Front Seat Track Lock Bracket Spring			2	2
BO	109599	Front Seat Track Lock Bracket Spring		2		
BO	71384	Front Seat Track Bolt		4		
BO	71600	Front Seat Track to Floor Bolt--Front		2	2	2
BO	71466	Front Seat Track to Floor Bolt--Rear		2	2	2
BO	71601	Front Seat Track to Seat Bolt--Rear		2	2	2
BO	70993	Front Seat Track to Seat Bolt--Front		2	2	2

**FRONT SEATS Except Model 61**

C	118057	Drivers Seat Cushion Complete	*	1		
C	118037	Drivers Seat Back Complete	*	1		
C	118047	Drivers Seat Back Valance	*	1		
C	118058	Passenger Seat Cushion Complete	*	1		
C	118041	Passenger Seat Back Complete	*	1		
C	118047	Passenger Seat Back Valance	*	1		
C	118063	Drivers Seat Cushion Complete	*	1		
C	118043	Drivers Seat Back Complete	*	1		
C	118047	Drivers Seat Back Valance	*	1		
C	118062	Passenger Seat Cushion Complete	*	1		
C	118045	Passenger Seat Back Complete	*	1		
C	118047	Passenger Seat Back Valance	*	1		

}

Model--62

Model--63-64

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>FRONT SEATS Except Model 61 Cont'd.</b>						
C	118065 Drivers Seat Cushion Complete	*	1			
C	118043 Drivers Seat Back Complete	*	1			
C	118047 Drivers Seat Back Valance	*	1			
C	118064 Passenger Seat Cushion Complete	*	1			
C	118045 Passenger Seat Back Complete	*	1			
C	119047 Passenger Seat Back Valance	*	1			
C	117852 Front Seat Cushion Complete	*		1		
C	117848 Front Seat Back Complete	*		1		
C	117852 Front Seat Cushion Complete	*		1		
C	117868 Front Seat Back Complete	*		1		
C	117869 Front Seat Back Complete	*		1		
C	117853 Front Seat Cushion Complete	*		1		
C	117851 Front Seat Cushion Complete	*		1		
C	117847 Front Seat Back Complete	*		1		
C	117873 Front Seat Back Valance	*		1		
C	118400 Front Seat Cushion Complete	*		1	1	
C	118394 Front Seat Back Complete	*		1	1	
C	118401 Front Seat Cushion Complete	*		1	1	
C	118395 Front Seat Back Complete	*		;	;	
C	118402 Front Seat Cushion Complete	*		1	1	
C	118395 Front Seat Back Complete	*		1	1	
C	119117 Front Seat Cushion Complete					1
C	119115 Front Seat Back Complete					1
C	119119 Front Seat Cushion Trim Assembly					1
C	119116 Front Seat Back Trim Assembly					1
C	119118 Front Seat Cushion Complete					1
C	119115 Front Seat Back Complete					1
C	119119 Front Seat Cushion Trim Assembly					1
C	119116 Front Seat Back Trim Assembly					1
C	117908 Front Seat Cushion Spring--RH	*	1			
C	117910 Front Seat Back Spring--RH	*	1			
C	117909 Front Seat Cushion Spring--LH	*	1			
C	117911 Front Seat Back Spring--LH	*	1			
C	117714 Front Seat Cushion Spring	*		1		
C	117716 Front Seat Back Spring	*		1		
C	117715 Front Seat Cushion Spring	*		1		
C	117716 Front Seat Back Spring	*		1		
C	118074 Front Seat Cushion Spring	*		1	1	
C	118076 Front Seat Back Spring	*		1	1	
C	118075 Front Seat Cushion Spring	*		1	1	
C	118076 Front Seat Back Spring	*		1	1	
BO	116979 Drivers Seat Track Assembly--Outer	*	1			
BO	116980 Drivers Seat Track Assembly--Inner	*	1			
BO	116981 Passenger Seat Track Assembly--Outer	*	1			
BO	116982 Passenger Seat Track Assembly--Inner	*	1			
BO	116985 Front Seat Track Assembly--LH	*		1	1	1
BO	116986 Front Seat Track Assembly--RH	*		1	1	1
BO	109599 Front Seat Track Lock Rod Bracket Spring			2		
BO	111696 Front Seat Track Lock Rod Bracket Spring	*	1	2	2	2
BO	108317 Front Seat Track Lock Rod			1	1	1
BO	70155 Front Seat Track Lock Rod Washer			1	1	1
BO	96089 Front Seat Track Lock Rod Anti Rattle Spring			2	2	2
BO	108530 Folding Seat Cushion Frame Slide Bracket		8			
BO	117229 Passenger Seat Slide Lock Link	*	1			
BO	71380 Passenger Seat Slide Lock Link Clevis Pin		1			
BO	71384 Folding Seat Track to Seat Bracket Bolt		8			
BO	71466 Front Seat Track to Floor Bolt--Rear		4	2	2	2
BO	71600 Front Seat Track to Floor Bolt--Front		4	2	2	2
BO	116983 Drivers Seat Track Assembly--Inner--RHD	*				
BO	116984 Front Seat Track Assembly--RH--RHD	*		1	1	1
BO	116987 Front Seat Track Assembly--LH--RHD	*		1	1	1

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>REAR SEATS</b>						
C	117866 Rear Seat Back Complete	*	1			
C	117861 Rear Seat Cushion Complete	*	1			
C	117857 Rear Seat Back Complete	*		1		
C	117861 Rear Seat Cushion Complete	*		1		
C	117867 Rear Seat Back Complete	*	1			
C	117862 Rear Seat Cushion Complete	*	1			
C	117867 Rear Seat Back Complete	*	1			
C	117863 Rear Seat Cushion Complete	*	1			
C	117858 Rear Seat Back Complete	*		1		
C	117863 Rear Seat Cushion Complete	*				
C	117858 Rear Seat Back Complete	*		1		
C	117862 Rear Seat Cushion Complete	*		1		
C	118410 Rumble Seat Cushion Complete	*		1	1	1
C	118411 Rumble Seat Cushion Trim Assembly	*			1	1
C	118408 Rumble Seat Back Complete	*			1	1
C	118409 Rumble Seat Back Trim Assembly	*			1	1
BO	103175 Rumble Seat Door Windlace Assembly				1	1
BO	87855 Rumble Seat Cord Welt Assembly				1	1
C	117717 Rear Seat Cushion Spring	*	1		1	1
C	117741 Rear Seat Back Spring	*	1			
C	117717 Rear Seat Cushion Spring	*		1		
C	117719 Rear Seat Back Spring	*		1		
C	117718 Rear Seat Cushion Spring	*				
C	117741 Rear Seat Back Spring	*		1		
C	117718 Rear Seat Cushion Spring	*		1		
C	117719 Rear Seat Back Spring	*		1		
C	118112 Rumble Seat Cushion Spring	*			1	1
C	108905 Rumble Seat Back Spring	*			1	1

**REAR COMPARTMENT Except Trunk Models**

C	116151 Rear Compartment Door Assembly	*	1	1		
C	116081 Rear Compartment Door Panel--Outside	*	1	1		
BO	116620 Door Hinge Bracket--RH	*	1	1		
BO	116621 Door Hinge Bracket--LH	*	1	1		
BO	18454 Door Hinge Bracket Rivet		8	8		
BO	116262 Door Hinge Assembly	*	2	2		
EX	3197 Door Hinge Rivet		2	2		
BZ	1062 Door Hinge to Panel Bolt		4	4		
BZ	4963 Door Hinge to Panel Bolt Nut		4	4		
BO	107450 Door Hinge Tapping Plate		2	2		
BO	116253 Door Check Arm and Bracket Assembly	*	1	1		
BO	116256 Door Check Arm Upper	*	1	1		
BO	116255 Door Check Arm Lower	*	1	1		
BO	116257 Door Check Arm Bracket (On Door)	*	1	1		
BO	116259 Door Check Arm Bracket (On Body)	*	1	1		
BZ	70970 Door Check Arm Rivet		3	3		
BO	83191 Door Check Arm Bracket Tapping Plate (On Door)		1	1		
BO	9159 Door Check Arm to Panel and Trough Bolt		2	2		
BZ	70676 Door Check Arm to Panel and Trough Bolt Nut		2	2		
BO	70242 Door Check Arm to Opening Reinforcement Bolt		2	2		
BO	116779 Door Lock Assembly	*	2	2		
BO	18464 Door Lock Bolt		8	8		
BO	116944 Door Lock Handle and Cylinder Assembly	*	2	2		
BO	116945 Door Lock Handle (Less Cylinder)	*	2	2		
BO	118174 Door Lock Handle Cylinder and Keys	*	2	2		
BO	116976 Door Lock Handle and Cylinder Assembly	*	2	2		
BO	116977 Door Lock Handle (Less Cylinder)	*	2	2		
BO	118174 Door Lock Handle Cylinder and Keys	*	2	2		
BO	70526 Door Lock Handle Screws		4	4		
BO	116085 Door Lock Striker Plate	*	2	2		
BO	116270 Door Weatherstrip	*	1	1		
BO	116271 Body Weatherstrip	*	1	1		
BO	150209 Service Light Switch	*	1	1		
BO	4929 Service Light Switch Screw		2	2		

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>REAR COMPARTMENT Except Trunk Models Cont'd.</b>						
BO	70863	Service Light Switch Terminal Screw	2	2		
BO	117290	Rear Compartment Panel Ornament	*	1	1	
BM	70855	Rear Compartment Panel Ornament Screw	4	4		
BO	96014	Rear Compartment Panel Ornament Cup Washer	4	4		
BO	116902	Rear Compartment Panel Ornament	*	1	1	
BM	70855	Rear Compartment Panel Ornament Screw	4	4		
BO	116816	Rear Compartment Panel Ornament Leather Washer	4	4		
HZ	96014	Rear Compartment Panel Ornament Cup Washer	4	4		
BO	117433	Crank Extension Clip	*	2	2	
BO	18474	Crank Extension Clip Rivet	4	4		
BO	108898	Luggage Strap	2	2		
BO	71392	Luggage Strap Footman Loop	4	4		
BO	71634	Luggage Strap Footman Loop Rivet	8	8		
C	117206	Rear Compartment Floor Board Assembly	*	1	1	
C	117212	Floor Board Riser--RH	*	1	1	
C	117213	Floor Board Riser--LH	*	1	1	
BO	117148	Floor Board Riser Bracket	*	7	7	
BO	117479	Floor Board Riser Bracket	*	1	1	
BO	71630	Floor Board Riser Rivet	8	8		
BO	70185	Floor Board Riser Bolt	2	2		
BO	70874	Floor Board Riser Bolt Nut	2	2		
BO	117216	Floor Board Cross Bar	*	1	1	
BO	1586	Floor Board Cross Bar to Panel Bolt	4	4		
BZ	70674	Floor Board Cross Bar to Panel Bolt Nut	4	4		

#### REAR COMPARTMENT With Trunk

C	116460	Trunk Lid Panel Assembly	*	1	1	
C	116150	Trunk Lid Panel--Outside	*	1	1	
C	117906	Trunk Lid Liner Assembly	*	1	1	
BO	116779	Trunk Lid Lock Assembly	*	2	2	
BO	18464	Trunk Lid Lock Bolt	8	8		
BO	117496	Trunk Lid Lock Handle and Cylinder Assembly	*	2	2	
BO	117497	Trunk Lid Handle (Less Cylinder Assembly)	*	2	2	
BO	118174	Trunk Lid Handle Cylinder and Keys Assembly	*	2	2	
BO	117498	Trunk Lid Handle and Cylinder Assembly	*	2	2	
BO	117499	Trunk Lid Handle (Less Cylinder Assembly)	*	2	2	
BO	118174	Trunk Lid Handle Cylinder and Keys Assembly	*	2	2	
BO	70526	Trunk Lid Handle Screw	4	4		
BO	116270	Trunk Lid Weatherstrip	*	1	1	
BO	71552	Tail Lamp Grommet	2	2		
C	117207	Floor Board Assembly--Front	*	1	1	
C	117208	Floor Board Assembly--Rear	*	1	1	
C	117214	Floor Board Riser Assembly--RH	*	1	1	
C	117215	Floor Board Riser Assembly--LH	*	1	1	
BO	117216	Floor Board Cross Bar	*	1	1	
BO	6371	Floor Board Wood Screw	6	6		
BO	117149	Floor Board Riser Bracket	*	7	7	
BO	117479	Floor Board Riser Bracket	*	1	1	
BO	71630	Floor Board Rivet	8	8		
BO	70185	Floor Board Bolt	2	2		
BO	70874	Floor Board Bolt Nut	2	2		
BO	1586	Floor Board Cross Bar to Panel Bolt	4	4		
BO	108898	Luggage Strap	2	2		
BO	71392	Luggage Strap Footman Loop	4	4		
BO	71364	Luggage Strap Footman Loop Rivet	8	8		
C	117790	Trunk Strap Rear Compartment Bar	*	1	1	
BO	12194	Trunk Strap Rear Compartment Bar Bolt	4	4		
BO	70674	Trunk Strap Rear Compartment Bar Bolt Nut	4	4		
BO	71392	Trunk Strap Rear Compartment Loop Side Mount	2	2		
BO	70865	Trunk Strap Rear Compartment Loop Screw	4	4		
BO	70874	Trunk Strap Rear Compartment Loop Screw Nut	4	4		
BO	71364	Trunk Strap Rear Compartment Rivet	4	4		
BO	117290	Trunk Lid Ornament	*	1	1	
BO	96014	Trunk Lid Ornament Cup Washer	4	4		
BM	70855	Trunk Lid Ornament Screw	4	4		

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>REAR COMPARTMENT With Trunk Cont'd.</b>						
BO	116902	Trunk Lid Ornament	*	1	1	
BO	96014	Trunk Lid Ornament Cup Washer		4	4	
BO	116816	Trunk Lid Ornament Leather Washer		4	4	
BM	70855	Trunk Lid Ornament Screw		4	4	
		} Hudson				
<b>REAR DECK - COUPES</b>						
C	107594	Deck Lid Assembly			1	
C	107595	Deck Lid Assembly				1
C	107567	Deck Lid Panel--Inside		1	1	1
C	107565	Deck Lid Panel--Outside		1		
C	107566	Deck Lid Panel--Outside			1	1
BO	107298	Hinge Assembly		2		
BO	95186	Hinge--RH--Body Half			1	1
BO	95187	Hinge--LH--Body Half			1	1
BO	107545	Hinge--Door Half			2	2
BO	116722	Hinge Support Assembly	*		2	2
BO	107540	Hinge Tapping Plate		2		
BZ	1062	Hinge to Door Bolt		4		
BO	70004	Hinge to Panel Rivet			20	20
BO	70444	Hinge to Support Taper Pin			4	4
BO	70095	Hinge to Support Bolt			4	4
BO	95428	Hinge Bolt			2	2
BO	18073	Hinge Bolt Nut			2	2
BO	70028	Hinge to Wheel House Panel Rivet			8	8
BO	9159	Hinge Support to Trough Bolt			4	4
BO	70676	Hinge Support to Trough Bolt Nut			4	4
BO	108245	Check Arm and Bracket Assembly		1		
BO	108247	Check Arm--Upper		1		
BO	107297	Check Arm--Lower		1		
BO	107289	Check Arm Bracket (On Body)		1		
BO	83187	Check Arm Bracket (On Door)		1		
BO	83191	Check Arm Bracket Tapping Plate		1		
BO	9159	Check Arm to Panel and Trough Bolt		4		
BZ	70676	Check Arm to Panel and Trough Bolt Nut		4		
BZ	70970	Check Arm Rivet		3		
BO	111657	Lid Lock Assembly		1	1	1
BO	107316	Lid Lock Assembly				
BO	18453	Lid Lock Bolt		4	4	4
BO	18464	Lid Lock Bolt	*			
BO	117373	Lock Handle and Cylinder Assembly	*	1		
BO	117374	Lock Handle (Less Cylinder Assembly)	*	1	1	1
BO	116947	Lock Handle and Cylinder Assembly	*		1	1
BO	116948	Lock Handle (Less Cylinder Assembly)	*		1	1
BO	118176	Lock Handle Cylinder and Keys Assembly	*	1		
BO	117375	Lock Handle and Cylinder Assembly	*	1		
BO	117376	Lock Handle (Less Cylinder Assembly)	*	1	1	1
BO	116988	Lock Handle and Cylinder Assembly	*		1	1
BO	116989	Lock Handle (Less Cylinder Assembly)	*		1	1
BO	118176	Lock Handle Cylinder and Keys Assembly	*	1	2	2
BO	70526	Lock Handle Screws		2		
BO	111658	Lock Striker Plate		1	1	1
BO	94969	Lock Striker Plate				
BO	9159	Lock Striker Plate Bolt		2		
BZ	70676	Lock Striker Plate Bolt Nut		2	1	1
BO	87798	Lock Striker Plate Spacer			2	2
BO	18447	Lock Striker Plate to Trough Screw			2	2
BZ	70677	Lock Striker Plate to Trough Screw Nut				
BO	107621	Deck Lid Weatherstrip		1	1	1
BO	107620	Deck Lid Weatherstrip			2	2
BO	107785	Deck Lid Bumper		2		
C	107719	Deck Drain Trough Assembly		1		
C	107720	Deck Drain Trough Assembly			1	1
BO	108890	Deck Drain Trough Spout Assembly			2	2
BO	117589	Deck Drain Trough Hose			2	2



Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>REAR DECK - COUPES Cont'd.</b>						
BO	117588	Deck Drain Trough Hose	*			
BO	117586	Deck Drain Trough Tube	*			
BO	117282	Deck Drain Trough Bracket Assembly--RH	*			
BO	117283	Deck Drain Trough Bracket Assembly--LH	*			
BO	117278	Deck Drain Trough to Wheelhouse Bracket Assembly--RH	*			
BO	117279	Deck Drain Trough to Wheelhouse Bracket Assembly--LH	*			
BO	18474	Deck Drain Trough to Wheelhouse Bracket Rivet				
BO	117382	Deck Drain Trough to Rear Window Bracket Assembly				
BO	70882	Deck Drain Trough to Rear Window Bracket Bolt				
BZ	70676	Deck Drain Trough to Rear Window Bracket Bolt Nut				
BZ	8683	Deck Drain Trough Bracket Hinge Clevis Pin				
C	118190	Side Finish Panel--RH				
C	118191	Side Finish Panel--LH				
BO	18470	Side Finish Panel Screw				
BO	71348	Side Finish Panel Screw				
BO	12316	Side Finish Panel Screw Finish Washer				
BO	116514	Upper Step Assembly	*			
BO	100599	Upper Step Fender Reinforcement				
BO	70047	Upper Step Fender Bolt Nut				
BO	108802	Lower Step Assembly				
BO	116515	Lower Step Bracket	*			
BO	70752	Lower Step to Bumper Bolt				
BZ	70674	Lower Step to Bumper Bolt Nut				
BZ	70747	Lower Step Plate Bolt				
BO	70047	Lower Step Plate Bolt Nut				
<b>INTERIOR FITTINGS</b>						
BO	116996	Rear View Mirror and Bracket Assembly	*	1	1	1
BO	117477	Rear View Mirror Bracket (Specify Color)	*	1	1	1
BO	70704	Rear View Mirror Bolt		2	2	2
BO	108069	Dome Lamp Assembly		1	1	1
BO	108070	Dome Lamp Reflector and Socket Assembly		1	1	1
BO	112605	Dome Lamp Assembly			1	
BO	112606	Dome Lamp Reflector and Socket Assembly			1	
BO	70863	Dome Lamp Terminal Screw			1	
BO	150709	Dome Lamp Switch Assembly	*		1	
BO	112608	Dome Lamp Switch Escutcheon Plate			1	
BO	71523	Dome Lamp Switch Escutcheon Plate Screw			2	
BO	108071	Dome Lamp Glass		1	1	1
BO	108072	Dome Lamp Glass Retainer		1	1	1
BO	116817	Cigar Lighter Assembly	*	1	1	1
BO	116819	Cigar Lighter Base and Wire Assembly	*	1	1	1
BO	116822	Cigar Lighter Element Assembly	*	1	1	1
BZ	70122	Cigar Lighter Base Clamp Nut		1	1	1
BO	70121	Cigar Lighter Base Clamp Nut Washer		1	1	1
BO	117341	Front Seat Back Ash Receiver Assembly--Terraplane	*		1	
BO	117342	Front Seat Back Ash Receiver Assembly--63-66-67			1	
BO	117343	Front Seat Back Ash Receiver Tray and Cover Assembly			1	
BO	12187	Front Seat Back Ash Receiver Screws			3	
BO	117346	Rear Quarter Ash Receiver Assembly		1		
BO	117347	Rear Quarter Ash Receiver Tray and Cover Assembly	*	1		
BO	117344	Rear Quarter Ash Receiver Assembly		1		
BO	117345	Rear Quarter Ash Receiver Tray and Cover Assembly	*	1		
BO	108736	Garnish Moulding Valance Ash Receiver Assembly--65-67	*	2	2	
BO	70042	Rear Quarter Ash Receiver to Trim Board Rivet		2	4	
BO	7762	Rear Quarter Ash Receiver to Trim Board Rivet		2	4	
C	108304	Foot Rest Assembly--Model 66			1	
C	108303	Foot Rest Assembly--Model 67			1	
BO	71438	Foot Rest to Floor Screws			4	
BO	118492	Rear Curtain and Roller Assembly--63-64-65	*		1	1
BO	117441	Rear Curtain and Roller Assembly--Hudson	*	1	1	
BO	18084	Rear Curtain Fastener Studs		1	1	1
BO	8339	Rear Curtain Cord			2	2

Part No.	Description	Bro.	Sed.	2C	4C	CC
<b>INTERIOR FITTINGS Cont'd.</b>						
BO 70920	Rear Curtain Cord Anchor Washer			2	2	
BO 9585	Rear Curtain Bracket Screw	4	4			
BO 71354	Rear Curtain Bracket Screw			4	4	
BO 116300	Robe Hanger Assembly--63-66-67		1			
BO 117584	Robe Hanger Assembly--Terraplane	*	1			
BO 17922	Robe Hanger Bracket Screw	*	4			
BO 262	Robe Hanger Spacer--Terraplane		4			
BO 117369	Inside Visor and Brackets Assembly	1	1	1	1	
BO 70044	Inside Visor Screws	2	2	2	2	
HA 117360	Inside Visor and Brackets Assembly--LH	*	1	1	1	1
HA 117361	Inside Visor and Brackets Assembly	*	1	1	1	1
BO 117362	Inside Visor Support Rod--LH	*	1	1	1	1
BO 117363	Inside Visor Support Rod--RH	*	1	1	1	1
BO 117364	Inside Visor Bracket Arm	1	1	1	1	1
BO 117367	Inside Visor Hinge Clamp	1	1	1	1	1
BO 117365	Inside Visor Hinge Plate	1	1	1	1	1
BO 117366	Inside Visor Support Rod Clamp	1	1	1	1	1
BO 71637	Inside Visor Clamp Bolt	2	2	2	2	2



## INDEX

## CHASSIS

	Page		Page
Axle--Front	3	Fan	22
Axle to Frame Arm	3	Fenders	38
Axle--Rear	4	Floor Mats and Pads	41
		Frame	15
Battery	45	Fuel Pump	23
Bonnet	37		
Brakes	5	Gasoline Tank, Straps and Pipes	34
Bumpers	14		
		Heavy Duty Stabilizer	13
Carburetor	23	Horn	46
Clutch	25		
Coil	45	Instruments and Mounting	46
Controls	6		
Brake Control	6	Lamps	43
Clutch Control	26		
Clutch Vacuum Control	26	Muffler and Exhaust Pipes	35
Hand Brake--Floor Type	8		
Hand Brake--Dash Type	9	Propeller and Universal Joint	33
Pedals	9		
Throttle	24	Radiator	36
Transmission--Conventional	29	Radio	48
Transmission--Electric Hand	30	Running Boards	41
Drag Link	34	Shock Absorbers	13
		Splash Guards	40
Engine	16	Springs	12
Camshaft	20	Starting Motor	45
Connecting Rod	20	Steering Gear	33
Cylinder	17	Switches	45
Distributor Mounting	45		
Exhaust Manifold	18	Tire Cover	11
Flywheel and Crankshaft	19	Tools	40
Generator and Control	45	Transmission	27
Intake Manifold	18		
Oil Pan	21	Wheels	10
Oil Pump and Check Valve	22	Wheel Carrier--Rear	10
Piston	20	Wheel Carrier--Side	11
Timing Gears and Cover	23	Windshield Cleaner	46
Valves	21	Wiring	42
Vibration Dampener	21		
Water Pump	22		

## BODY

Body Bolts and Shims	53	Rear Compartment	69
		Rear Compartment--Trunk Models	70
Cowl Ventilator	54	Rear Deck--Coupes	71
			66
Doors	56	Seats	
Front Door--Terraplane DeLuxe	56	Front Seat--Terraplane DeLuxe	66
Front Door--Except Terraplane DeLuxe	57	Front Seat--Except Terraplane DeLuxe	67
Front Door Window--Sliding Type	60	Rear Seats	69
Front Door Window--Divided Type	61		
Front Door Wing	62	Top--Closed Bodies	65
Rear Door	58	Trim Rails	55
Rear Door Window	61		
Door Hinges	59	Windshield	54
Door Locks and Handle-	59	Windows	60
		Front Door Window--Sliding	60
Floor	65	Front Door Window--Divided	61
Front End	53	Front Door Wing	62
		Rear Door Window	61
Interior Fittings	72	Windows--Quarter and Rear	62
		Window Finish Mouldings	63
Panels--Metal	54	Window Regulators	63
Pillar	55		



PRINTED IN U.S.A.