

HUDSON TERRAPLANE

GROUP PARTS BOOK



1937

HUDSON MOTOR CAR COMPANY
DETROIT, MICHIGAN

HUDSON TERRAPLANE

GROUP PARTS BOOK

1 9 3 7



A List of Chassis and Body Parts
Arranged in Unit Groups
for the
1937

HUDSON and TERRAPLANE
Passenger and Commercial Cars



TABLE OF CONTENTS

	Page		Page
Warranty	2	Chassis Parts	7-94
Introduction	3	Body Parts	107-149
Instructions for Ordering Parts	3	Canadian Section	97
Telegraph Code	4	Group Index - Chassis	151
Chassis Models	5	Group Index - Body	152
Body Models	106	Index of Illustrations	152



HUDSON MOTOR CAR COMPANY
DETROIT, MICHIGAN

WARRANTY

"We warrant each new passenger automobile manufactured by us to be free from defects in material and workmanship under normal use and service, our obligation under this warranty being limited to making good at our factory any part or parts thereof, including all equipment or trade accessories (except tires) supplied by the car manufacturer, which shall, within ninety (90) days after making delivery of such vehicle to the original purchaser or before such vehicle has been driven 4,000 miles, whichever event shall first occur, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective, this warranty being expressly in lieu of all other warranties expressed or implied and of all other obligations or liabilities on our part, and we neither assume nor authorize any other person to assume for us any liability in connection with the sale of our vehicles.

"This warranty shall not apply to any vehicle which shall have been repaired or altered by other than an authorized Hudson and Terraplane Distributor or Dealer in any way so as, in the judgment of the manufacturer, to affect its stability or reliability nor which has been subject to misuse, negligence or accident."

HUDSON MOTOR CAR COMPANY
Detroit, Michigan, U. S. A.

INTRODUCTION

This book contains a list of chassis and body service replacement parts for the 1937 Hudson and Terraplane passenger and commercial cars.

The parts are arranged in unit groups, such as FRONT AXLE, BRAKES, ENGINE, etc. Any desired group may be easily located by means of the Group Index just inside the back cover.

Each part is shown by symbol and name. The quantity per car and the models on which it is used are indicated in their proper columns.

To assist in the identification of parts, a number of illustrations are included, each being placed at the start of the group to which it refers.

In addition to regular service parts, this book covers several units not supplied by the Hudson Motor Car Company, among which are Carter Carburetors, Electric Auto-Lite equipment and A. C. Fuel Pumps. These parts appear under the symbols of their respective manufacturers, and are included as an aid in ordering direct from these manufacturers or their authorized service outlets.

Parts for Canadian built cars are in many cases different from the corresponding parts for cars built in the United States. These non-interchangeable parts are listed in a Canadian Supplement on the colored pages.

Instructions for Ordering Parts

Dealers order from their Distributor.

Distributors order from the Factory.

Always give letter prefix, part number and name of each part ordered.

In ordering parts, such as trim panels, for which part numbers are not available, give complete description of each part; also serial number of car on which it is to be used.

In the case of printed parts, specify color desired and give serial number of car.

Specify how shipments are to be made.

Avoid telegraphic orders by carrying an adequate stock of parts.

PARTS TELEGRAPH CODE

The following PARTS TELEGRAPH CODE is offered for your convenience in ordering parts and transacting parts business with the Factory Parts Department. It is to be used for this purpose only.

HUDSONWIRE 1 2 3 4 5 6 7 8 9 0
GY-100000

WUPTA - Ship to us by Air Express

WUPRY - Ship to us by Air Mail

WUPMU - Ship to us by Parcel Post

WUPOW - Ship to us by Parcel Post Special Delivery WUPAH
- Ship to us by Express

WUPIP - Ship to us by Freight

WUPHO - Ship to us by Motor Truck

WUSAF - Charge our account and ship by Air Express to-WUSDI -
Charge our account and ship by Air Mail to-WUSEJ - Charge our
account and ship by Parcel Post to-WUSIN - Charge our account and
ship by Parcel Post Special

Delivery to-

WUSJO - Charge our account and ship by Express to-WUSTY -
Charge our account and ship by Freight to-WUSVA - Charge our
account and ship by Motor Truck to-

WUTAE - Ship C.O.D. by Air Express to-WUTIM -

Ship C.O.D. by Air Mail to-WUTKO - Ship C.O.D.

by Parcel Post to-

WUTOT - Ship C.O.D. by Parcel Post Special Delivery to-

WUTPU - Ship C.O.D. by Express to-WUTWA - Ship

C.O.D. by Freight to-WUTYC - Ship C.O.D. by Motor

Truck to-

WUUBE - We will call and pick up parts

WURCI - When and how (will or did) you ship parts called for in our
telegram of-

WUROV - When and how (will or did) you ship parts called for in
our letter of-

WURNU - When and how (will or did) you ship parts called for in our order of (or number)
HOW TO USE CODE

Any telegram which makes use of the number code HUDSONWIRE must start with the word "PARTS."

In ordering parts, follow the word "PARTS" with one of the code words to give shipping instructions.

Spell out - not code - quantities of parts desired.

Give part numbers by means of the corresponding letters in the phrase HUDSONWIRE.

If there are several part numbers of six figures, expense may be saved by using the code word GY (which means "Add 100000") and omitting the first figure of the succeeding part numbers. This avoids the use of six-letter code words, each of which is counted as two words.

In asking for information concerning parts shipments, combine the proper code word with the date or number of your previous telegram, letter or order. As this does not make use of the number code, the word "Parts" may be omitted.

EXAMPLES

Ship us by express three 45142 and one 150622. PARTS
WUPAH THREE SOHSU ONE HOENUU

Ship to us by freight one each 116824, 150270, 150493, 15 1320, and 151079. PARTS
WUPIP ONE GY HNIUS OEUWE OESRD OHDUE OHNWR

When and how did you ship parts called for in our letter of December 18th?

WUROV DECEMBER EIGHTEEN

CHASSIS MODELS

MODEL 70—Terraplane Commercial—Six Cylinder—117" Wheelbase.
Numbered 70101 and Upward

MODEL 71—Terraplane Deluxe—Six Cylinder—117" Wheelbase.
Numbered 71101 and Upward.

MODEL 72—Super Terraplane—Six Cylinder—117" Wheelbase.
Numbered 72101 and Upward

MODEL 74—Hudson Deluxe—Eight Cylinder—122" Wheelbase.
Numbered 74101 and Upward.

MODEL 75—Hudson Custom—Eight Cylinder—122" Wheelbase.
Numbered 75101 and Upward.

MODEL 76—Hudson Deluxe—Eight Cylinder—129" Wheelbase.
Numbered 76101 and Upward.

MODEL 77—Hudson Custom—Eight Cylinder—129" Wheelbase.
Numbered 77101 and Upward.

MODEL 78—Terraplane Commercial—Six Cylinder—124" Wheelbase.
Numbered 78101 and Upward.

TERRAPLANE ENGINES—Six Cylinder.
Numbered 250000 and Upward.

HUDSON ENGINES—Six Cylinder.
Numbered 90000 and Upward.

HUDSON ENGINES—Eight Cylinder.
Numbered 18000 and Upward.


BODY MODEL ABBREVIATIONS

UTILITY COACH
UTILITY COUPE
PANEL DELIVERY
STATION WAGON
CAB
CAB PICK-UP
BROUGHAM

U. Co.
U. Cpe.
Panel
Station
Cab
Cab Pu.
Bro.
SEDAN
3-PASSENGER COUPE
4-PASSENGER COUPE
BUSINESS COUPE
CONVERTIBLE COUPE
CONVERTIBLE BROUGHAM


Sed.
3-Cpe.
4-Cpe.
Bs. Cpe.
Cv. Cpe.
Cv. Bro

* Designates Non-Interchangeable Parts

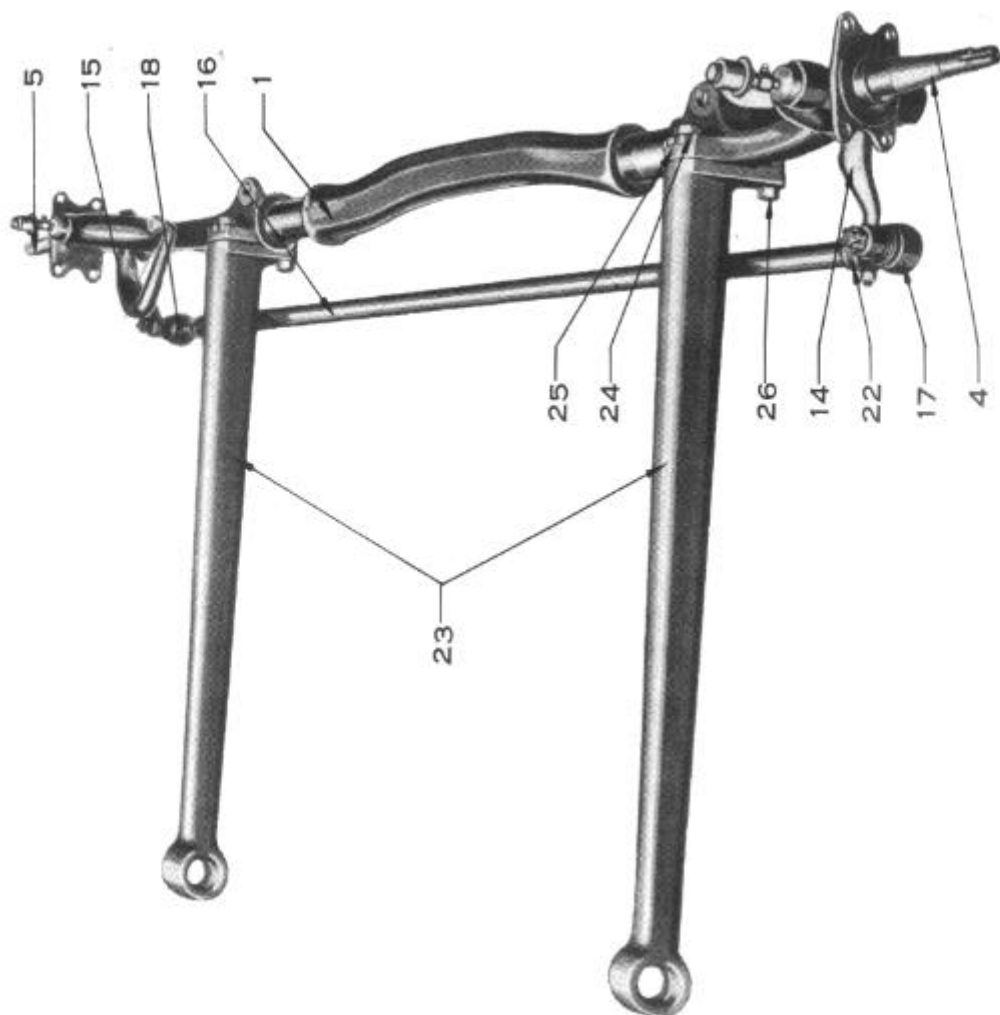

FRONT AXLE

ILLUS. NO	PART NO	NAME				PER CAR	MODEL
FRONT AXLE							
NOTE: Front axle parts for 71 Business Coupe are the same as for model 70.							
A-1	C	152702	Front Axle Assembly	L.H.D.	*	1	70, 71, Bs Cpe., 78
	C	152700	Front axle assembly	L.H.D.	*	1	71 exc. Bs Cpe., 72, 73
	C	152706	Front axle assembly	L.H.D.	*	1	74, 75, 76, 77
	C	152715	Front axle center assembly		*	1	70, 71 Bs Cpe, 78
	C	152714	Front axle center assembly		*	1	71 exc. 9s Cpe, 72, 73, 74, 75, 76, 77
A-2	F	152721	Pivot pin thrust washer and ball cup assembly		*	2	All
A-3	F	152723	Pivot pin bushing-lower		*	2	All
	C	153661	Front axle rebushing kit		*	1	All
STEERING SPINDLE							
A-4	BX	152719	Steering spindle-R.H		*	1	All
A-5	BX	152720	Steering spindle-L.H		*	1	All
A-6	BX	152718	Expansion plug-plain - To car Nos. 70706-7113884-724651-732226-741966-751117-76537-771420		*	2	70 thru 77
A-6	BX	154489	Expansion plug-tapped	} After above car numbers	*	2	All
	BX	154488	Relief valve assembly		*	2	All
A-7	F	154490	Pivot pin		*	2	All
A-3	F	152723	Pivot pin bushing-lower		*	2	All
A-9	BX	152726	Pivot pin oil seal		*	2	All
A-27	BX	152192	Pivot pin Zerk	90°		2	All
A-8	BX	103	Pivot pin thrust ball	1/4"		14	All
	BX	152727	Pivot pin shim-thin			AR	All
	BX	152728	Pivot pin shim-medium		*	AR	All
	BX	152729	Pivot pin shim-thick		*	AR	All
A-12	9X	71154	Spindle pivot pin key			2	All
	BX	152547	Spindle pivot pin key seal		*	2	All
	BX	71206	Spindle to backing plate bolt	3/8"-24x7/8"		8	All
A-10	9X	62	Spindle to Backing plate bolt nut	3/8"-24x21/64"		8	All
	BX	71608	Spindle nut	11/16"-18x35/64"		2	All
A-11	BX	150572	Spindle washer			2	All
A-13	BX	43797	Spindle grease washer retainer assembly			2	All
	BX	40020	Washer retainer-inner			2	All
	BX	43798	Washer retainer-outer			2	All
	BX	40022	Felt washer			2	All
A-14	BX	152735	Steering arm-R.H	L.H.D.	*	1	All
A-15	BX	152736	Steering arm-L.H	L.H.D.	*	1	All
	BX	71156	Steering arm nut			2	All
	BZ	71705	Steering arm washer			2	All
	BX	40172	Wheel grease deflector			2	All
TIE ROD							
A-16	C	153471	Tie rod assembly		*	1	70, 71, 72, 73, 78
A-16	C	153472	Tie rod assembly		*	1	74, 75, 76, 77
A-17	C	153473	Tie rod		*	1	70, 71, 72, 73, 78
A-18	C	153474	Tie rod		*	1	74, 75, 76, 77
A-17	BX	153481	Tie rod end assembly-R.H		*	1	70, 71, 72, 73, 78
A-18	BX	153482	Tie rod end assembly-L.H		*	1	70, 71, 72, 73, 78
A-19	BX	153483	Tie rod end assembly-R.H		*	1	74, 75, 76, 77
	BX	153484	Tie rod end assembly-L.H		*	1	74, 75, 76, 77
A-21	BX	71156	Tie rod end stud nut			2	All
A-20	BX	154652	Tie rod end Zerk	45°	*	2	All
A-22	BX	153497	Tie rod end Zerk	Straight	*	2	All
A-22	BX	153498	Tie rod end dust seal	Rubber	*	2	All
	BX	153500	Tie rod clamp		*	2	70, 71, 72, 73, 78
	BX	153502	Tie rod clamp		*	2	74, 75, 76, 77
	BX	70361	Tie rod clamp bolt	5/16"-24x1 5/16"	*	2	All
	BO	12481	Tie rod clamp bolt nut	5/16"-24x17/64"		2	All
	F	153475	Tie rod ends complete-right and left-service kit		*	1	70, 71, 72, 73, 78
	F	153476	Tie rod ends complete-right and left-service kit		*	1	74, 75, 76, 77
	F	153477	Tie rod end complete-R.H.-service kit		*	1	70, 71, 72, 73, 78
	F	153478	Tie rod end complete-L.H.-service kit		*	1	70, 71, 72, 73, 78

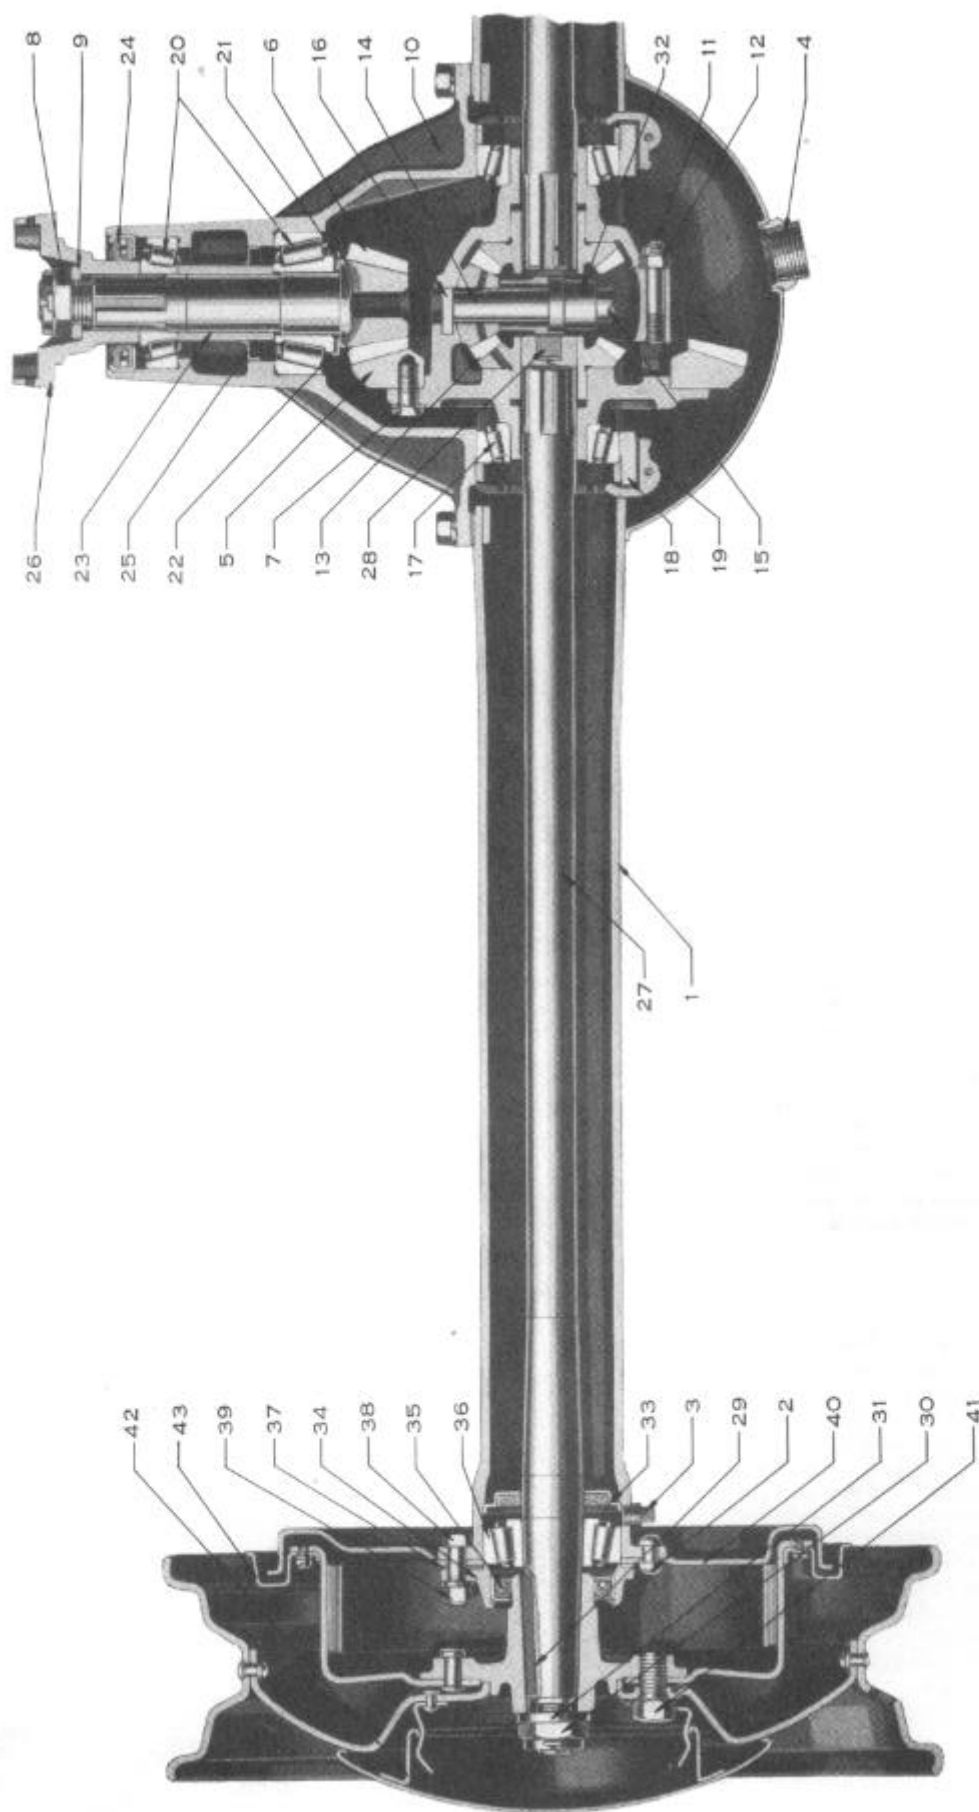
REAR AXLE
Illustration B

ILLUS. NO	PART NO	NAME		PER CAR	MODEL	
TIE ROD (cont.)						
F	153479	Tie rod end complete-R.H.-service kit		*	1 74, 75, 76, 77	
F	153480	Tie rod end complete-L.H.-service kit		*	1 74, 75, 76, 77	
FRONT AXLE-R.H.D.						
C	152703	Front axle assembly	R.H.D.	*	1 70, 71 Rs Cpe, 78	
C	152701	Front axle assembly	R.H.D.	*	1 71 exc. Bs Cpe, 72, 73	
C	152707	Front axle assembly	R.H.D.	*	1 74, 75, 76, 77	
BX	152737	Steering arm-R.H	R.H.D.	*	1 All	
BX	152738	Steering arm-L.H	R.H.D.	*	1 All	
FRONT AXLE TO FRAME ARM Not used on 71 Business Coupe						
A-23	C 152730	Front axle to frame arm		*	2 71, 72	
A-23	C 152731	Front axle to frame arm		*	2 73, 74, 75, 76, 77	
	BX 150560	Front axle to frame arm bolt-rear		*	2 71 thru 77	
	BX 71155	Front axle to frame arm bolt nut		*	2 71 thru 77	
	BX 150561	Front axle to frame arm grommet		*	3 71 thru 77	
A-24	BX 152732	Front axle to frame arm bolt-upper		*	2 71 thru 77	
A-26	BX 152733	Front axle to frame arm bolt-lower		*	2 71 thru 77	
A-25	BX 170006	Front axle to frame arm bolt lock washer		*	3 71 thru 77	
	BX 154199	Front axle to frame arm angle spacer	.020"	AR	71 thru 77	
REAR AXLE						
Note: 4-1/9 to 1 ratio-Standard for all models except commercial, Standard on 78 Sedan. Standard for commercial Utility Coach and Utility Coupe. Optional for model 70 except Utility Coach and Utility Coupe.						
4-5/9 to 1 ratio-Standard model 70 except Utility Coach and Utility Coupe. Optional 70 Utility Coach and Utility Cpe. Optional 71 thru 78						
5-1/8 to 1 ratio-Standard for 78 except Sedan Optional for 70 except U Co. & U Cpe.						
3-8/9 to 1 ratio-Optional extra cost for 70 thru 77 3-5/9 to 1 ratio-Optional extra cost for 70 thru 77						
C	152650	Rear axle assy.-4-1/9 to 1	Used with first type frame. See note on page 27	L.H.D.	*	1 70, 71, 72,73
C	152651	Rear axle assy.-4-1/9 to 1		L.H.D	*	1 74, 75
C	152652	Rear axle assy.-4-1/9 to 1		L.H.D.	*	1 76, 77
C	152656	Rear axle assy.-4-5/9 to 1		L.H.D.	*	1 70,71,72,73
C	152857	Rear axle assy.-4-5/9 to 1		L.H.D.	*	1 74, 75
C	152858	Rear axle assy.-4-5/9 to 1		L.H.D.	*	1 76,77
C	152671	Housing assy.-less brake shoes			1 70, 71, 72, 73	
C	152872	Housing assy.-less brake shoes			1 74, 75, 76, 77	
C	154340	Rear axle assembly-4-1/9 to 1	Used with second type frame.	L.H.D.	*	1 70, 71, 72, 73
C	154342	Rear axle assembly-4-1/9 to 1		L.H.D.	*	1 74, 75
C	154344	Rear axle assembly-4-1/9 to 1		L.H.D.	*	1 76, 77
C	154640	Rear axle assembly-4-1/9 to 1		L.H.D.	*	1 78
C	154348	Rear axle assembly-4-5/9 to 1		L.H.D.	*	1 70, 71, 72, 73
C	154350	Rear axle assembly-4-5/9 to 1		L.H.D.	*	1 74,75
C	154352	Rear axle assembly-4-5/9 to 1		L.H.D.	*	1 76, 77
C	154642	Rear axle assembly-4-5/9 to 1	See note on page 27	L.H.D.	*	1 78
C	154750	Rear axle assembly-5-1/8 to 1		L.H.D.	*	1 70
C	154700	Rear axle assembly-5-1/8 to 1		L.H.D.	*	1 78
B-1	C 154375	Housing assembly-less brake shoes			*	1 70, 71, 72, 73, 78
B-1	C 154376	Housing assembly-less brake shoes				1 74, 75, 76, 77

Note: Second type housing is identical with first type except spring seats
seats are rotated to a great angle.


ILLUS. NO	PART NO	NAME	PER CAR	MODEL
REAR AXLE-Cont'd				
	BZ 154597	Rear axle housing spring seat tapered shim * To permit use of first type axle housing with second type frame, and vice versa.	2	70 thru 77
B-2	BZ 326	Housing to backing plate rivet-5/16"x3/4"	4	All
B-3	BM 120	Housing hole plug	2	All
B-4.	BM 1491	Housing drain plug	1	All
DIFFERENTIAL AND CARRIER				
	C 152655	Differential carrier and gear set assy.	*	1 All
	F 44539	Drive gear and pinion-matched	} 4-1/9 to 1	1 All
	F 42256	Drive gear		1 All
	F 44542	Drive pinion		1 All
	F 152862	Differential carrier and gear set assy.	*	1 All
	F 44540	Drive gear and pinion-matched	} 4-5/9 to 1	1 All
B-5	F 44541	Drive gear		1 All
B-6	F 44543	Drive pinion		1 All
	C 154754	Differential carrier and gear set assy.	*	1 70, 78
	BX 154755	Drive gear and pinion-matched	} 5-1/8 to 1	* 1 70, 78
B-5	BX 154756	Drive gear		* 1 70, 78
B-6	BX 154757	Drive pinion		* 1 70, 78
	BX 46657	Drive gear and pinion-matched	} 3-8/9 to 1	1 71 thru 77
B-5	BX 43565	Drive gear		1 71 thru 77
B-6	BX 46858	Drive pinion		1 71 thru 77
	BX 48670	Drive gear and pinion-matched	} 3-5/9 to 1	1 71 thru 77
B-5	BX 48671	Drive gear		1 71 thru 77
B-6	BX 48872	Drive pinion		1 71 thru 77
B-7	BZ 71178	Drive gear screw	3/8"-24x7/8"	6 All
	BX 40157	Drive gear screw lock		3 All
B-8	BM 71261	Drive pinion nut	7/8"-18x9/16"	1 All
B-9	BM 71051	Drive pinion washer		1 All
B-10	BX 44580	Differential carrier and cap assembly		1 All
	BX 71480	Bearing cap screw-plain	7/16"-14x2"	4 All
	BO 70867	Bearing cap screw-lockwasher-7/8" shakeproof		4 All
	BX 150072	Differential case and stud assembly		1 All
B-11	BX 71248	Differential case stud	3/8"x2 7/32"	6 All
B-12	BZ 124	Differential case stud nut		6 All
B-13	BX 42272	Differential gear		2 All
	BX 41225	Differential gear thrust washer		2 All
B-14	BX 152677	Differential pinion assembly	*	2 All
	BX 41126	Differential pinion thrust washer		2 All
B-15	BX 40191	Differential pinion shaft		1 All
B-16	BZ 71175	Differential pinion shaft locating pin		1 All
B-17	BX 71710	Differential bearing assembly		2 All
	BX 71711	Bearing cone		2 All
	BX 71283	Bearing cup		2 All
B-18	BX 44578	Differential bearing adjusting nut		2 All
B-19	BX 150488	Differential bearing adjusting nut lock		2 All
B-20	BX 71181	Pinion bearing assembly		2 All
	BX 71182	Bearing cone		2 All
	BX 71192	Bearing cup		2 All
B-21	BX 40212	Pinion rear bearing shim-thin	AR	All
B-21	BX 41099	Pinion rear bearing shim-medium	AR	All
B-21	BX 40213	Pinion rear bearing shim-thick	AR	All
8-22	BX 40192	Pinion rear bearing shim retainer	1	All
B-23	BX 44585	Pinion bearing spacer	1	All
	BX 44588	Pinion bearing spacer shim-thin	AR	All
	BX 44587	Pinion bearing spacer shim-medium	AR	All
	BX 44588	Pinion bearing spacer shim-thick	AR	All
B-24	BX 48343	Pinion oil seal	1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
DIFFERENTIAL AND CARRIER (Cont'd)				
B-25	BX 44590	Pinion housing oil baffle	1	All
B-26	BX 150098	Pinion companion flange	1	All
	BZ 44263	Differential carrier to housing bolt	8	All
	BZ 71237	Differential carrier to hsg.bolt nut-3/8"-24x21/84"	8	All
	BO 71078	Differential carrier to housing bolt lockwasher	8	All
	F 44584	Differential carrier gasket	1	All
DRIVE SHAFT				
B-27	F 150067	Drive shaft assembly	2	All
B-28	BX 35380	Drive shaft thrust button	2	All
B-29	BX 71180	Drive shaft key	2	All
B-30	BX 71577	Drive shaft nut	2	All
B-31	BX 71055	Drive shaft nut washer	2	All
B-32	BX 40181	Drive shaft thrust spacer	1	All
B-33	BX 150069	Drive shaft oil seal assembly	2	All
REAR WHEEL BEARINGS				
B-34	BX 150064	Wheel bearing adjusting cap assembly	2	All
B-35	BX 150066	Oil seal	2	All
B-36	BX 71595	Wheel bearing assembly	2	All
	BX 71596	Bearing cone	2	All
	BX 71597	Bearing cup	2	All
B-37	BX 44558	Adjusting cap shim-thin	AR	All
B-37	BX 44559	Adjusting cap shim-medium	AR	All
B-37	BX 44560	Adjusting cap shim-thick	AR	All
B-38	BX 44561	Adjusting cap bolt	8	All
B-39	BX 71237	Adjusting cap bolt nut	8	All
REAR AXLE-R.H.D.				
C	153790	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 70, 71, 72, 73
C	153791	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 74, 75
C	153792	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 76, 77
C	153793	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 70, 71, 72, 73
o	153794	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 74, 75
C	153795	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 78, 77
C	154341	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 70, 71, 72, 73
C	154343	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 74, 75
C	154345	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 76, 77
C	154641	Rear axle assembly-4-1/9 to 1	R.H.D. *	1 78
C	154349	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 70, 71, 72, 73
C	154351	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 74, 75
C	154353	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 76, 77
C	154643	Rear axle assembly-4-5/9 to 1	R.H.D. *	1 78
C	154751	Rear axle assembly-5-1/8 to 1	R.H.D. *	1 70
C	154701	Rear axle assembly-5-1/8 to 1	R.H.D. *	1 78
BRAKES-FRONT AND REAR				
A-28	BX 152630	Backing plate assembly-R.H.-front	*	1 70, 71, 72, 73, 78
	BX 152631	Backing plate assembly-L.H.-front	*	1 70, 71, 72, 73, 78
A-28	BX 152632	Backing plate assembly-R.H.-front	*	1 74, 75, 76, 77
	BX 152633	Backing plate assembly-L.H.-front	*	1 74, 75, 76, 77
	BX 150977	Backing plate assembly-R.H.-rear		1 70, 71, 72, 73, 78
B-40	BX 150978	Backing plate assembly-L.H.-rear		1 70, 71, 72, 73, 78
	BX 150981	Backing plate assembly-R.H.-rear		1 74, 75, 76, 77
B-40	BX 150982	Backing plate assembly-L.H.-rear		1 74, 75, 76, 77
	BX 150995	Conduit abutment cap		2 All
	BX 45408	Conduit abutment cap felt seal		2 All

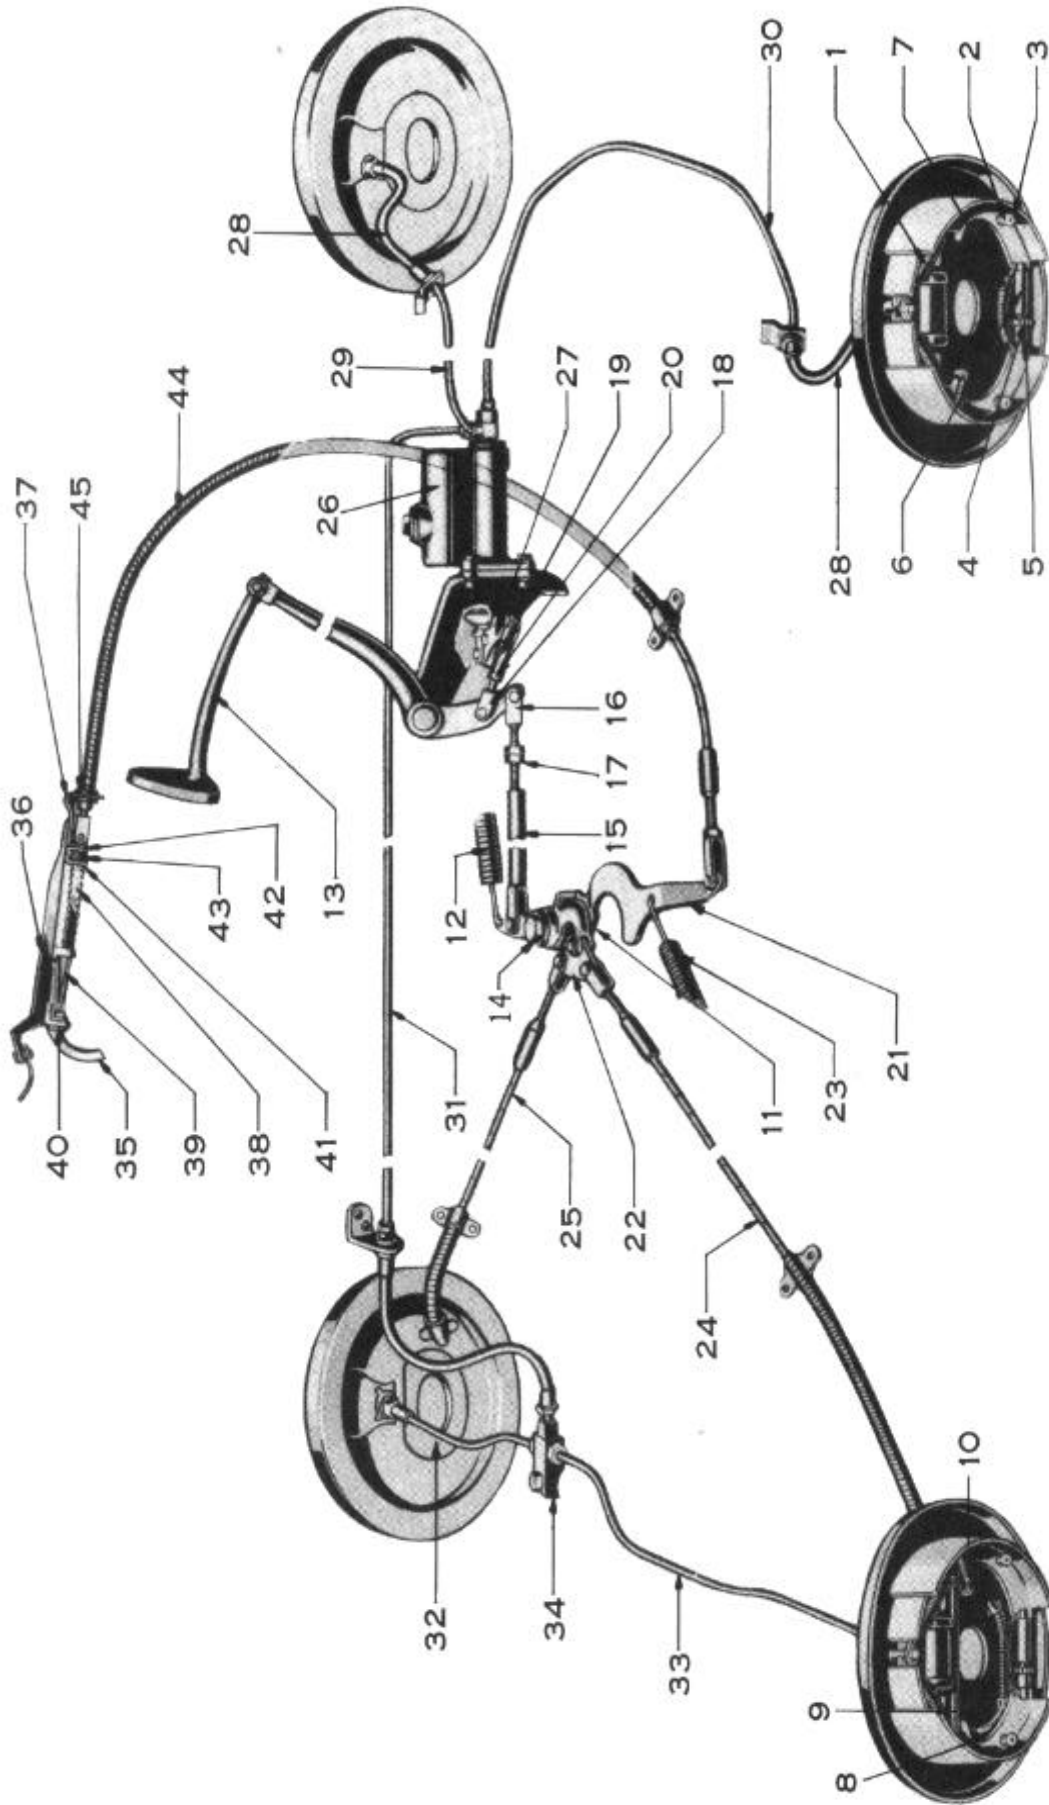


BRAKE CONTROL
Illustration C

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
BRAKES-FRONT AND REAR (Cont'd.)				
	BT 71410	Conduit abutment cap bolt 5/16"-24 x 5/8"	4	All
	BX 152173	Brake shoes and lining assy.-R.H.(one wheel)	2	70, 71,72,73,78
	BX 152174	Brake shoes and lining assy.-L.H.(one wheel)	2	70,71,72,73,78
	BX 150997	Brake shoes and lining assy.-(one wheel)	4	74,75,76,77
	F 151010	Lining and rivets (Package for 4)	1	70,71,72,73,78
	BX 151011	Lining and rivets (Package for 4)	1	74,75,76,77
C-1	BX 151026	Brake shoe to anchor pin spring-primary	4	70,71,72,73,78
C-1	BX 151027	Brake shoe to anchor pin spring-primary	4	74,75,76,77
	BX 154480	Brake shoe to anchor pin spring-secondary	* 4	70,71,72,73,78
	BX 154481	Brake shoe to anchor pin spring-secondary	* 4	74,75,76,77
C-2	BX 45424	Brake shoe hold down spring	8	All
	BX 43379	Brake shoe hold down spring pin	8	All
C-3	BX 37999	Brake shoe hold down spring cup	8	All
	BX 38000	Brake shoe hold down spring centralizing cup	8	All
	BX 152217	Brake anchor pin and shoe guide assembly	4	All
	BT 398	Brake anchor pin nut	4	All
	BX 37977	Brake eccentric assembly	4	All
	BZ 62	Brake eccentric nut 3/8"-24 x 21/64"	4	All.
C-4	BX 40739	Brake adjusting screw (Star wheel)	4	70,71,72,73,78
C-4	BX 45447	Brake adjusting screw (Star wheel)	4	74,75,76,77
C-5	BX 40740	Brake adjusting screw pivot nut	4	70,71,72,73,78
C-5	BX 45448	Brake adjusting screw pivot nut	4	74,75,76,77
C-6	BX 40741	Brake adjusting screw socket	4	70,71,72,73,78
C-6	BX 45449	Brake adjusting screw socket	4	74,75,76,77
C-7	BX 40742	Brake adjusting screw spring	4	70,71,72,73,78
C-7	BX 37985	Brake adjusting screw spring	4	74,75,76,77
	BX 63974	Brake adjusting screw cover	4	All
C-8	BX 151015	Brake shoe cable lever-R.H.-Rear brake	1	70,71,72,73,78
	BX 151018	Brake shoe cable lever-L.H.-Rear brake	1	70,71,72,73,78
C-8	BX 151017	Brake shoe cable lever-R.H.-Rear brake	1	74,75,76,77
	BX 151018	Brake shoe cable lever-L.H.-Rear brake	1	74,75,76,77
	BX 154718	Brake shoe cable lever-R.H.-Rear brake	* 1	74,75,76,77
	BX 154717	Brake shoe cable lever-L.H.-Rear brake	* 1	74,75,76,77
	BX 154718	Brake shoe cable lever to shoe pin Spring washer	* 1	74,75,76,77
	BX 151019	Brake shoe cable lever to shoe pin	2	70,71,72,73,78
	BX 151020	Brake shoe cable lever to shoe pin	2	74,75,76,77
	BX 62	Brake shoe cable lever to shoe pin nut	2	74,75,76,77,78
	BX 151021	Brake shoe cable lever to shoe pin spring	2	70,71,72,73,78
C-9	BX 151022	Brake shoe cable lever strut	2	70,71,72,73,78
C-9	BX 151023	Brake shoe cable lever strut-R.H	1	74,75,76,77
	BX 151024	Brake shoe cable lever strut-L.H	1	74,75,76,77
	BX 151021	Brake shoe cable lever strut to lever spring	2	All
	BX 151025	Brake shoe cable lever to shoe spring	2	All
C-10	BX 151028	Brake shoe to anchor bracket spring	4	70,71,72,73,78
C-10	BX 151029	Brake shoe to anchor bracket spring	4	74,75,76,77
	BX 152219	Brake shoe to cylinder link	8	All
	BX 152311	Brake shoe to cylinder link rivet	* 8	All
	BX 3820	Brake cylinder to backing plate bolt 5/16"-18x1/2"	8	All
BRAKE CONTROL				
C-11	BX 152578	Brake control lever assembly L.H.D.	* 1	All
C-12	BX 33980	Control lever return spring	1	All
	BX 43033	Control lever bushing	2	All
	BX 152582	Control lever bracket and pivot pin	* 1	All
	BX 152586	Control lever pivot pin spacer	* 1	All
	BO 12481	Control lever pivot pin nut	1	All
C-14	BM 219	Control lever bracket bolt 5/16"-18 x 3/4"	4	All
	BZ 122	Control lever bracket bolt nut	4	All
C-15	BZ 152575	Push rod-to brake control lever	* 1	All

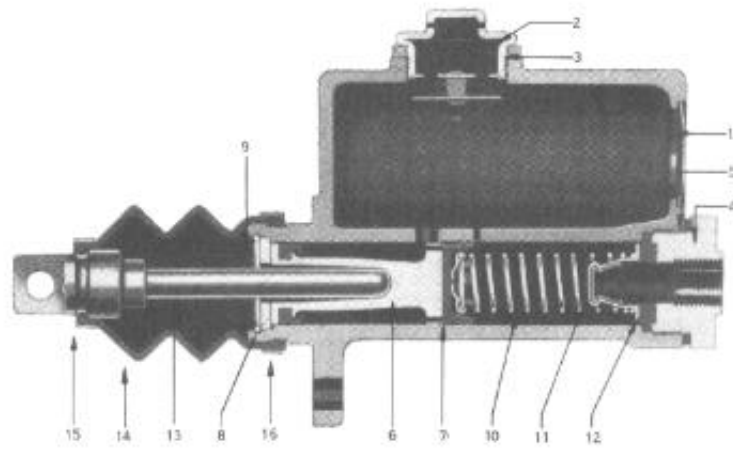

MASTER CYLINDER
Illustration D

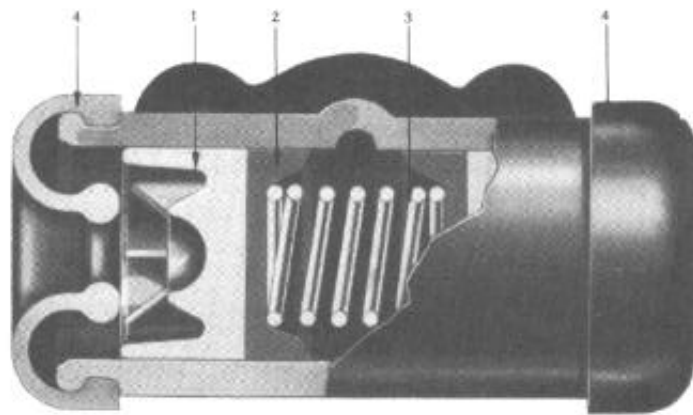


WHEEL CYLINDER
Illustration E

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
BRAKE CONTROL (Cont'd.)				
C-16	BZ 152578	Push rod adjustable yoke and nut assembly	*	1 All
C-17	BZ 62	Push rod adjustable yoke lock nut		2 All
	BZ 3118	Push rod clevis pin		1 All
	BZ 8683	Push rod clevis pin		1 All
	BZ 152573	Pedal link assembly-to master cylinder	*	1 All
C-18	BZ 45236	Pedal link		1 All
C-19	BZ 5777	Pedal link clevis		1 All
C-20	BT 71030	Pedal link clevis nut		1 All
	BZ 8883	Pedal link clevis pin		2 All
C-21	BZ 152588	Pull rod lever	*	1 All
C-22	BZ 150519	Brake control lever cable toggle		1 All
	BZ 18251	Brake control lever cable swivel pin		1 All
C-23	BZ 152587	Brake control lever cable return spring	*	1 All
C-24	C 152594	Rear brake cable assembly-R.H.	*	1 70,71,72,73,74,75
C-25	C 152595	Rear brake cable assembly-L.H.		1 70,71,72,73,74,75
		*		
	C 152596	Rear brake cable assembly-R.H. } To car Nos. L.H.D. *	1	78,77
	C 152597	Rear brake cable assembly-L.H. } 76368-77784 L.H.D. *	1	78,77
	C 154454	Rear brake cable assembly-R.H. } After car L.H.D. *	1	76,77,78
	C 154455	Rear brake cable assembly-L.H. } Nos.78368- L.H.D. *	1	76,77,78
		77784-78101		
	BZ 5777	Rear brake cable clevis		2 All
	BO 12481	Rear brake cable nut		2 All
	BZ 8683	Rear brake cable clevis pin		2 All
	BZ 152598	Rear brake cable mounting bracket-R.H.	*	1 70,71,72,73,74,75
	BZ 152600	Rear brake cable mounting bracket-R.H.	*	1 76,77,78
	BZ 12275	Rear brake cable mounting bracket bolt		2 All
	BZ 12115	Rear brake cable mounting bracket nut		2 All
	BZ 150995	Rear brake cable support bracket		1 70,71,72,73,74,75
	BZ 150667	Rear brake cable support bracket-rear		1 All
	BM 219	Rear brake cable support bracket bolt		4 All
	BZ 12115	Rear brake cable support bracket bolt nut		4 All
	BO 71554	Rear brake cable clip		2 All
	BZ 908	Rear brake cable clip bolt		2 70 U Co.,U Cpe.,71 thru 78
	BT 395	Rear brake cable clip bolt		2 70 exc.U Co., U Cpe.
	BZ 12115	Rear brake cable clip bolt nut		2 70 U Co.,U Cpe.,71 thru 78
	BZ 14911	Rear brake cable grommet-in frame brace plate		1 70,71,72,73,74,75
C-26	BZ 150761	Master cylinder assembly-less tube fittings		1 All
D-1	BZ 71264	Master cylinder expansion plug		1 All
D-2	BZ 151057	Master cylinder filler cap assy		1 All
D-3	BZ 151059	Master cylinder filler cap gasket		1 All
D-4	BZ 151064	Master cylinder head		1 All
D-5	BZ 151820	Master cylinder head gasket		1 All
	BZ 151066	Master cylinder outlet fitting		1 All
	BZ 151068	Master cylinder outlet fitting bolt } Not used with	1	All
		hydraulic Hillhold		
	BZ 151067	Master cylinder outlet fitting gasket		1 All
	BZ 151069	Master cylinder outlet fitting bolt gasket		1 All
D-6	BZ 151070	Master cylinder piston complete		1 All
D-7	BZ 151073	Master cylinder piston cup-primary		1 All
D-8	BZ 151077	Master cylinder piston stop plate		1 All
D-9	BZ 151078	Master cylinder piston stop plate lock wire		1 All
D-10	BZ 151079	Master cylinder piston spring assy		1 All
D-11	BZ 151082	Master cylinder check valve assy		1 All
	BZ 151083	Master cylinder check valve cup-rubber		1 All
	BZ 151084	Master cylinder check valve retainer		1 All
D-12	BZ 151085	Master cylinder check valve seat		1 All
D-13	BZ 151086	Master cylinder push rod assy		2 All
D-14	BZ 151089	Master cylinder push rod guard		1 All
D-15	BZ 151090	Master cylinder push rod guard strap-small		2 All
D-18	BZ 151091	Master cylinder push rod guard strap-large		1 All
	BO 71036	Master cylinder to bracket bolt		1 All
	BM 119	Master cylinder to bracket bolt		1 All
	BM 110	Master cylinder to bracket bolt nut.		1 All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
C-27	BRAKE CONTROL (Cont'd.)			
	BZ 152602	Master cylinder operating lever assy	* 1	All
	BZ 150533	Master cylinder operating lever bushing	1	All
	BZ 150534	Master cylinder operating lever pivot bolt	1	All
	BZ 71258	Master cylinder operating lever clevis pin...		
		5/16"x1-1/18"	1	All
	BZ 151031	Wheel cylinder assembly-R.H	2	All
	BZ 151032	Wheel cylinder assembly-L.H	2	All
E-1	BZ 151094	Wheel cylinder piston	8	All
E-2	BZ 151095	Wheel cylinder piston cup	8	All
E-3	BZ 152063	Wheel cylinder piston cup spring	* 4	All
E-4	BZ 151097	Wheel cylinder end guard	8	All
	BZ 151098	Wheel cylinder bleeder screw	4	All
	BZ 151099	Wheel cylinder tube fitting-rear	2	All
	BZ 151100	Wheel cylinder tube fitting-gasket	2	All
C-28	BZ 151101	Wheel cylinder hose assy	3	All
	BZ 151100	Wheel cylinder hose gasket	3	All
	BZ 5883	Wheel cylinder hose nut	3	All
C-29	BZ 153530	Tube assy.-master cylinder to L.H. front hose-	L.H.D. *	70,71,72,78
C-29	BZ 153534	Tube assy.-master cyl. to L.H.front hose..	L.H.D. *	73,74,75,76,77
C-30	BZ 153540	Tube assy.-master cyl. to R.H.front hose..	L.H.D. *	70,71,72,78
C-30	BZ 153544	Tube assy.-master cyl. to R.H.front hose..	L.H.D. *	73
C-30	BZ 153548	Tube assy.-master cyl. to R.H.front hose..	L.H.D. *	74,75,76,77
C-30	BZ 154593	Tube assy.-master cyl. to rear axle hose..	L.H.D. *	70 thru 75 closed models
C-31	BZ 154495	Tube assy.-master cyl. to rear axle hose..	L.H.D. *	Cv.Cpe.-Cv.Bro.
C-31	BZ 154595	Tube assy.-master cyl. to rear axle hose..	L.H.D. *	76,77,78
C-32	BZ 153745	Tube assy.-rear axle tee to L.H. rear wheel	* 1	All
C-33	BZ 153747	Tube assy.-rear axle tee to R.H. rear wheel	* 1	All
	BZ 71822	Tube nut	1/4" 10	All
	BZ 40029	Tube clip-snap type	2	All
	BZ 151425	Tube clip-offset type	1	All
	BZ 41030	Tube clip-strap type	5	All
	BO 18197	Tube clip-single	1	All
	BM 7753	Tube clip screw	10-32x1/2" 2	All
	BZ 71295	Tube clip screw (without Hill Hold)	5/18"x5/8" 2	70,71,72,78
	BZ 170041	Tube clip screw self tapping	* AR	All
C-34	BZ 151102	Rear axle tee	1	All
	BO 18328	Rear axle tee bolt	1	All
	HA 151105	Brake fluid-pint	AR	All
	HA 151987	Brake fluid-quart	AR	All
	HA 151988	Brake fluid-gallon	AR	All
	HA 151972	Brake fluid-quart	AR	All
	HA 151971	Brake fluid-gallon	AR	All
			1	
	BRAKE CONTROL-R.H.D.			
	BZ 152579	Brake control lever assembly	* 1	All
	BZ 152589	Brake control hand brake cable lever	* 1	All
	BZ 152595	Rear brake cable assembly-R.H	* 1	70 thru 75
	C 152594	Rear brake cable assembly-L.H	* 1	70 thru 75
			*	
C	152597	Rear brake cable assembly-R.H.	* 1	76,77
C	152598	Rear brake cable assembly-L.H.	* 1	76,77
		With first type frame		
		See note on page 27		
C	154455	Rear brake cable assembly-R.H.	* 1	76,77,78
C	154454	Rear brake cable assembly-L.H.	* 1	76,77,78
		With second type frame		
	BZ 152801	Rear brake cable mounting bracket-L.H	* 1	76,77,78
	BZ 153532	Tube assembly-master cylinder to left front hose	* 1	70,71,72,78
	BZ 153538	Tube assembly-master cylinder to left front hose	* 1	73,74,75,76,77
	BZ 153542	Tube assembly-master cylinder to right front hose	* 1	70,71,72,78
	HZ 153548	Tube assembly-master cylinder to right front hose	* 1	73,74,75,76,77
	BZ 153552	Tube assembly-master cylinder to rear axle hose	* 1	70 thru 75
	BZ 153556	Tube assembly-master cylinder to rear axle hose	* 1	76,77,78
	BZ 71881	Tube clip	No.14 x 5/8" 2	73,74,75,76,77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

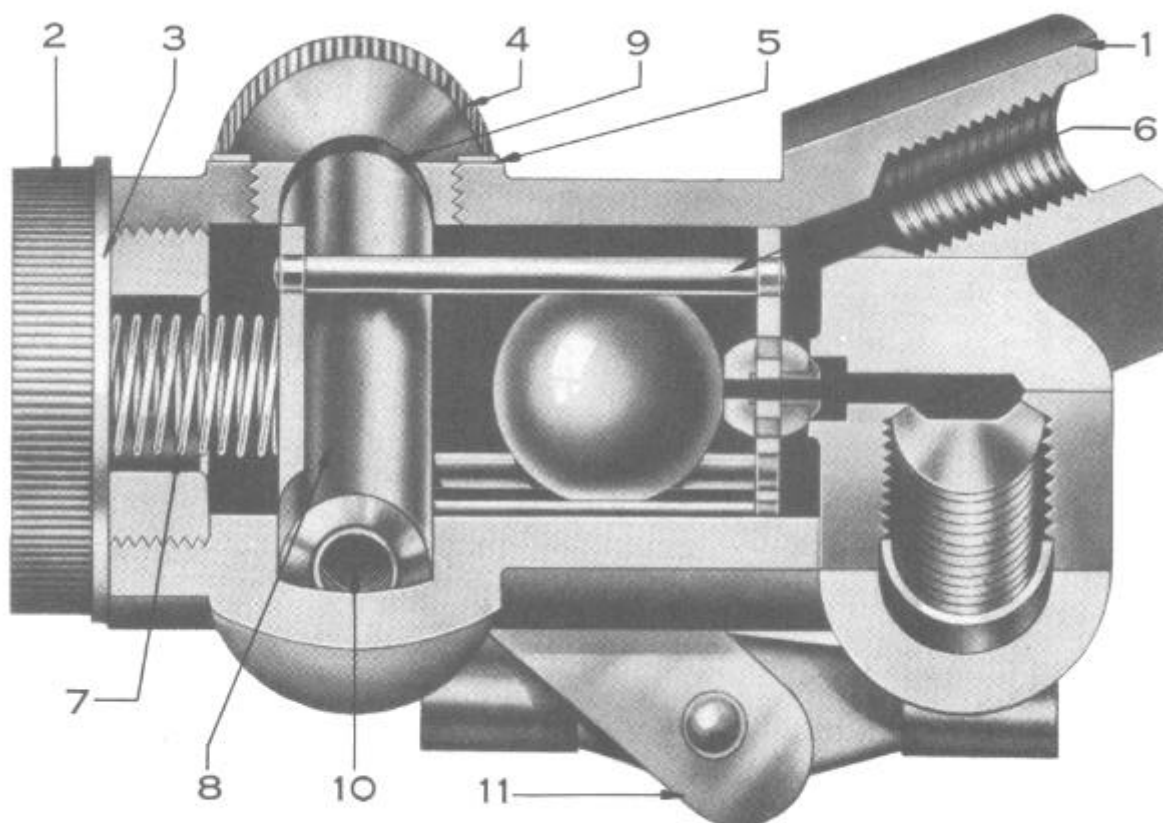

• HYDRAULIC HILL-HOLD
Illustration F

HYDRAULIC HILL HOLD
For L.H.D. cars only.

	BZ 154114	Hydraulic hill hold assembly	*	1	All
F-1	BZ 154722	Valve body	*	1	All
F-2	BZ 154723	Valve body plug-ball cage chamber	*	1	All
F-3	HZ 154724	Valve body plug gasket	*	1	All
F-4	BZ 154725	Valve body plug-camshaft chamber	*	1	All
F-5	BZ 154728	Valve body plug gasket	*	1	All
F-8	BZ 154730	Ball and cage assembly	*	1	All
F-7	BZ 154731	Ball cage spring	*	1	All
F-8	HZ 154732	Camshaft	*	1	All
F-9	BZ 154733	Camshaft sealing washer	*	1	All
F-10	BZ 154734	Camshaft spring	*	1	All
F-11	BZ 154721	Valve lever and rod guide assembly	*	1	All
	BZ 154728	Valve lever clamp screw	*	1	All
	BZ 154727	Hill hold to master cylinder fitting	*	1	All
	HZ 154447	Hill hold to master cylinder fitting bolt	*	1	All
	BZ 151087	Hill hold to master cylinder fitting bolt gasket - small	*	1	All
	BZ 151089	Hill hold to master cylinder fitting bolt gasket - large	*	1	All
	BZ 154729	Outlet fitting	*	1	All
	BZ 154447	Outlet fitting bolt	*	1	All
	BZ 151087	Outlet fitting bolt gasket-small	*	1	All
	BZ 151089	Outlet fitting bolt gasket-large	*	1	All
	BZ 154719	Hill hold valve rod	*	1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
HYDRAULIC HILL HOLD (Cont'd.)				
For L.H.D. cars only				
	BZ 154629	Hill hold valve rod spring	* 1	All
	BZ 154720	Hill hold valve rod connector	* 1	All
	BZ 154115	Tube assembly-hill-hold to front tee	* 1	70,71,72,78
	BZ 154117	Tube assembly-hill-hold to front tee	* 1	73,74,75,76,77
	BZ 154120	Tube assembly-front tee to left front hose	* 1	70,71,72,78
	BZ 154122	Tube assembly-front tee to left front hose	* 1	73,74,75,76,77
	BZ 154124	Tube assembly-front tee to right front hose	* 1	70,71,72,78
	BZ 154126	Tube assembly-front tee to right front hose	* 1	73,74,75,76,77
	BZ 154128	Tube assembly-hill-hold to rear brake union	* 1	All
	BZ 71622	Tube nut 1/4"	8	All
	BZ 154119	Tube tee-front	* 1	All
	BT 395	Tube tee bolt 5/18"-18x5/8"	1	All
	BZ 12115	Tube tee nut 5/18"-18x17/84"	1	All
	BZ 41030	Tube clip	1	All
	BZ 71295	Tube clip bolt 5/18"x5/8"	1	All
	BZ 170000	Tube union	* 1	All
	BZ 154133	Clutch pedal shaft assembly	* 1	All
	BZ 154136	Clutch pedal shaft end lever to hill hold rod	* 1	All
	BO 71443	Rod nut 1/4"-28x7/32"	1	All
	HA 154956	Hydraulic hill hold complete-Service kit	1	70,71,72,78
	HA 154957	Hydraulic hill hold complete-Service kit	1	73, thru 77
HAND BRAKE				
			1	All
C-35	BT 150652	Hand brake grip	1	All
	BT 71653	Hand brake grip pin	1	All
C-38	BT 150654	Hand brake mounting bracket	1	All
	BT 71359	Mounting bracket to instrument panel bolt- 5/16"-24x7/8"	1	All
	BO 12481	Mounting brkt.to inst.panel bolt nut 5/16"-24x17/64"	1	All
	BZ 70692	Mounting brkt. to dash bolt nut 5/16"-18x3/4"	1	All
	BZ 122	Mounting bracket to dash bolt nut	1	All
C-37	BT 150656	Mounting bracket support	1	All
	BZ 71631	Hand brake support to dash screw 1/4"-20x1/2"	1	All
	BZ 70874	Hand brake support to dash screw nut 1/4"-20x1/4"	1	All
C-38	BT 150657	Hand brake ratchet rod	1	All
	BZ 8683	Hand brake ratchet rod clevis pin 5/16"xl-1/32"	1	All
C-39	BT 150658	Hand brake ratchet rod lock spring	1	All
	BZ 6440	Hand brake ratchet rod lock spring spacer	1	All
C-40	BT 150659	Hand brake ratchet rod housing		
	BX 3820	Hand brake ratchet rod housing bolt-short- 5/18"-18x1/2"	1	All
	BZ 70752	Hand brake ratchet rod housing bolt-long 5/16"-18x1-1/2"	1	All
	BZ 122	Hand brake ratchet rod housing bolt nut	1	All
C-41	BT 150660	Hand brake ratchet stabilizer-inner	1	All
C-42	BT 150661	Hand brake ratchet stabilizer-outer	1	All
C-43	BT 150662	Hand brake ratchet stabilizer spring	1	All
C-44	BT 153024	Hand brake cable and conduit assembly L.H.D. *	1	All
C-44	BT 154715	Hand brake cable and conduit assembly R.H.D. *	1	All
	BZ 5777	Hand brake cable clevis-control lever end	1	All
	BO 12481	Hand brake cable clevis lock nut 5/16"-24x17/64"	1	All
	BZ 8683	Hand brake cable clevis pin 5/16"xl-1/32"	1	All
C-45	BT 150666	Hand brake cable to dash retainer	1	All
	BT 150667	Hand brake support bracket	1	All
	BM 219	Hand brake support bracket bolt 5/16"-18x3/4"	2	All
	BZ 122	Hand brake support bracket bolt nut	2	All
	BZ 71554	Hand brake cable conduit clip L.H.D.	1	All
	BZ 46803	Hand brake cable conduit clip (used on approximately 8000 cars) L.H.D.	1	All
	BZ 153738	Hand brake cable conduit clip R.H.D.	1	All


ILLUS. NO	PART NO	NAME	PER CAR	MODEL
PEDALS				
C-13	BZ 152782	Brake pedal assembly	* 1	All
	BZ 152783	Clutch pedal assembly L.H.D.	* 1	All
	BZ 150699	Pedal pad cover	2	All
	BZ 152792	Clutch pedal lever	* 1	All
	BZ 2354	Clutch pedal lever to shaft pin L.H.D.	* 2	All
	BZ 152795	Brake pedal lever assembly L.H.A.D.	* 1	All
	BZ 152794	Brake pedal lever bushing L.H.D.	* 2	All
	BZ 152779	Brake pedal lever return spring	* 1	All
	BZ 152959	Clutch pedal lever return spring	* 1	All
	BZ 30868	Pedal lever return spring clip	* 2	All
	BZ 8663	Brake pedal link clevis pin 5/16"x1-1/32"	5/16"x1-1/32" 2	All
	BZ 12310	Pedal lever bolt 3/8"-24x1-3/8"	3/8"-24x1-3/8" 2	All
	BZ 62	Pedal lever bolt nut 3/8"-24x21/64"	3/8"-24x21/64" 2	All
	BZ 152952	Pedal lever shaft assy.(without hill-hold)	L.H.D. *	1 All
	BZ 154133	Pedal lever shaft assy.(with hill-hold)	L.H.D. *	1 All
	BZ 152956	Pedal bracket assembly	L.H.D. *	1 All
	BZ 152794	Pedal bracket bushing	L.H.D. *	2 All
	BM 1308	Pedal bracket bolt 3/8"-16x1-1/8"	3/8"-16x1-1/8" 3	All
	BM 110	Pedal bracket bolt nut 3/8"-16x3/8"	3/8"-16x3/8" 3	All
	BZ 45928	Pedal bracket grease fitting-67-1/2°	L.H.D. 1	All
	BZ 44978	Pedal toe plate rubber bumper	2	All
	BZ 44998	Pedal toe plate bumper spring	1	All
	BZ 43528	Pedal toe plate bumper fiber washer	2	All
PEDALS-R.H.D.				
	BZ 152784	Clutch pedal assembly	* 1	All
	BZ 152791	Clutch pedal lever assembly	* 1	All
	BZ 152794	Clutch pedal lever bushing	* 2	All
	BZ 152796	Brake pedal lever assembly	* 1	All
	BZ 2354	Brake pedal lever pin 1-3/8"	2	All
	BZ 152959	Pedal lever return spring	* 1	All
	BZ 152954	Pedal lever shaft	* 1	All
	BZ 2354	Pedal lever shaft to bracket pin 1-3/8"	1	All
	BZ 18227	Pedal shaft washer	2	All
	BZ 152958	Pedal	* 1	All
WHEELS				
C	152618	Wheel assy.-steel-for 16x6.00 tire	* 5	71,72,73
C	152619	Wheel assy.-steel-for 18x8.00 tire	* 5	70,74,75,78,77,78
HA	153280	Wheel finish disc-for 18" wheel	* 4	All
C	154469	Wheel assy.-steel-for 18x8.00 tire	5	71,72,73
C	154470	Wheel assy.-steel-for 18x8.00 tire	5	70,74,75,78,77,78
HA	154472	Wheel finish disc-for 18" wheel	4	All
NOTE: First and second type 18" are inter-changeable. Second type only supplied by service.				
C	152620	Wheel assembly-steel-for 15x7.00 tire-first type	* 5	71 thru 77
C	154471	Wheel assy.-steel-for 15x7.00 tire-second type, after car Nos.7110527-723672-731942-741604-75897-76496-771294	* 5	71 thru 77
HA	152687	Wheel rim trim ring-for 15" wheel	* 5	75-77
B-41	BZ 42964	Hub bolt	20	All
	BZ 152685	Hub cap-outer	* 4	70,71,72,78
	BZ 152686	Hub cap-outer	* 4	73,74,75,78,77
B-42	BZ 153173	Hub cap clip	* 25	All
	BZ 9152	Hub cap clip rivet	25	All
C	151764	Hub assembly-front(with brake drum and bearing Cups)	* 2	70,71,72,73,78
C	151765	Hub assembly-front(with brake drum and bearing Cups)	* 2	74,75,78,77
BZ	37878	Brake drum rivet	16	All
BZ	153A179	Brake drum rivet-pilot	* 4	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
WHEELS (Cont'd.)				
A-29	BZ 150451	Brake drum inspection hole cover	4	All
	BZ 40558	Hub cap-inner-front	2	All
	BZ 71213	Front wheel bearing assembly-inner	2	All
	BZ 71214	Cone	2	All
	BZ 71215	Cup	2	All
	BZ 71210	Front wheel bearing assembly-outer	2	All
	BZ 71211	Cone	2	All
	BZ 71212	Cup	2	All
	BZ 150440	Rear hub and brake drum complete	2	70,71,72,73,78
	BZ 150441	Rear hub and brake drum complete	2	74,75,76,77
B-43	BZ 150449	Brake drum dust shield	4	70,71,72,73,78
B-43	BZ 150450	Brake drum dust shield	4	74,75,76,77
	BO 154112	Tire tube valve stem extension (for spare tire)	* 1	All
SPARE WHEEL CARRIER-REAR ENCLOSED MOUNT				
	BO 116278	Spare tire anchor bracket	1	71 thru 77,78 Sed.
	BO 70970	Spare tire anchor bracket rivet	4	71 thru 77,78 Sed.
	BO 116274	Spare tire clamp	1	71 thru 77,78 Sed.
	BM 113	Spare tire clamp bolt	1	71 thru 77,78 Sed.
SPARE WHEEL CARRIER-SIDE MOUNT				
C	121686	Side wheel carrier complete-R.H	* 1	All
C	121687	Side wheel carrier complete-L.H	* 1	All
C	121684	Side wheel carrier-R.H	* 1	All
C	121685	Side wheel carrier-L.H	* 1	All
BZ	121689	Side wheel carrier screw	* 1	All
BZ	121690	Side wheel carrier screw lock screw	* 1	All
BZ	121691	Side wheel carrier screw lock pin	* 2	All
BZ	121692	Side wheel carrier screw column	* 1	All
BZ	71724	Side wheel carrier screw column grommet-first type	1	All
BZ	121246	Side wheel carrier screw column grommet	* 1	All
BZ	121244	Side wheel carrier column to well clamp	* 1	All
BZ	70715	Side wheel carrier column to well clamp bolt	2	All
BZ	71463	Side wheel carrier column to well clamp bolt nut	2	All
BZ	121245	Side wheel carrier column to well clamp plate	* 1	All
BO	70293	Side wheel carrier column to well clamp rivet	4	All
BZ	71723	Side wheel carrier screw column to well support rivet.	2	All
BO	121694	Side wheel lock cage assembly	* 1	All
BZ	118150	Side wheel tire lock and keys assembly	1	All
BZ	109323	Side wheel tire lock assembly-less cylinder	1	All
BZ	118149	Lock cylinder and keys assembly	1	All
BO	118147	Lock cylinder-blank	1	All
BO	109079	Lock key	2	All
BZ	70480	Spare tire anchor bracket bolt	1	All
			1	U Cpe.
SPARE WHEEL CARRIER-ENCLOSED FOR UTILITY COUPE				
C	122746	Inside tire carrier assembly	* 5	U Cpe.
BZ	70263	Tire carrier to partition bolt	1	U Cpe.
BZ	122754	Tire carrier clamp plate	* 1	U Cpe.
BZ	42964	Tire carrier clamp bolt	1	U Cpe.
BO	116278	Tire anchor bracket	4	U Cpe.
BZ	70970	Tire anchor bracket rivet	1	U Cpe.


ILLUS. NO	PART NO	NAME	PER CAR	MODEL
TIRE COVER				
	C 120765	Tire cover ring assembly	* 1	All
	C 120766	Tire cover ring moulding	* 1	All
	BZ 71328	Tire cover ring moulding rivet 3/18"x3/16"	4	All
	C 121378	Tire cover side plate assembly-R.H.-Specify color	* 1	All
	C 121379	Tire cover side plate assembly-L.H.-Specify color	* 1	All
	BZ 102835	Tire cover side plate bumper	2	All
	BO 70934	Tire cover side plate bumper rivet 3/16"x5/16"	2	All
	BZ 120763	Tire cover side plate spring clip	* 5	All
	BO 71266	Tire cover side plate spring clip screw 10-32x5/16"	5	All
	BO 71073	Tire cover side plate spring clip screw nut 10-32x1/8"	5	All
	C 124184	Tire cover assembly (for inside mounted tire)	1	70 U. Cpe
SPRINGS-FRONT				
	C 153758	Front spring assembly	* 2	70,78,71 Bs.Cpe
	F 153750	Front spring assembly	* 2	71 exc. Bs.Cpe.,72
	F 153751	Front spring assembly	* 2	72
	F 153752	Front spring assembly	* 2	74,75,76,77
	F 153753	Front spring assembly	* 2	71 exc. Bs. Cpe.,72
	F 153752	Front spring assembly	* 2	73
	F 153754	Front spring assembly	* 2	74,75,78,77
	BZ 151896	Front spring spacer plate assembly	2	71 exc.Bs.Cpe.,72 thru 77
	BZ 71221	Front spring center bolt nut	2	All
	BZ 151286	Front spring center bolt cover	2	70,78,71 Bs.Cpe.
	BZ 150468	Front spring center bolt cover	2	71 exc.Bs.Cpe.,72 thru 77
	BZ 153237	Front spring rear pivot bolt	* 2	70,78,71 Bs.Cpe.
	BO 45928	Front spring rear pivot bolt Zerk 67-1/2°	2	70,78,71,Bs.Cpe.
	BZ 45294	Front spring rear pivot bolt bushing	2	70,78,71 Bs.Cpe
	BZ 153228	Front spring seat and cap assembly	* 2	71 exc.Bs.Cpe.,72 thru 77
	BZ 150473	Front spring seat and cap seal	2	71 exc.Bs.Cpe.,72 thru 77
	BZ 45353	Front spring seat cap Zerk Straight	2	71 exc.Bs.Cpe.,72 thru 77
	BZ 153222	Spring shackle-R.H. front Right and left thread	* 1	70,78,71 Bs.Cpe.
	BZ 153223	Spring shackle-L.H. front Right hand thread	* 1	70,78,71 Bs.Cpe.
	BZ 153224	Spring shackle-R.H. front Right and left thread	* 1	71 exc.Bs.Cpe.,72 thru 77
	BZ 153225	Spring shackle-L.H. front Right hand thread	* 1	71 exc.Bs.Cpe.,72 thru 77
	BZ 42822	Spring shackle-R.H. rear Right hand thread	* 1	71 exc.Bs.Cpe.,72
	BZ 153221	Spring shackle-L.H. rear Right and left thread	* 1	71 exc.Bs.Cpe.,72
	BZ 153225	Spring shackle-R.H. rear Right hand thread	* 1	73,74,75,78,77
	BZ 153224	Spring shackle-L.H. rear Right and left thread	* 1	72,74,75,78,77
	BZ 153231	Shackle threaded bushing assy Right hand thread	* 3	70,78,71,Bs. Cpe.
	BZ 153231	Shackle threaded bushing assy Right hand thread	* 3	71 exc.Bs.Cpe.,72 thru 77
	BZ 153232	Shackle threaded bushing assy Left hand thread	* 4	70,78,71 Bs.Cpe.
	BZ 153232	Shackle threaded bushing assy Left hand thread	* 1	71 exc.Bs.Cpe.,72 thru 77
	BZ 153235	Shackle threaded bushing assy Right hand thread	* 2	71 exc.Bs.Cpe.,72 thru 77
	BZ 48573	Shackle threaded bushing plug Plain	2	All
	BZ 48571	Shackle threaded bushing plug Tapped	2	Bs.Cpe.
	BZ 48571	Shackle threaded bushing plug Tapped	2	70,78,71
	BZ 45928	Shackle threaded bushing Zerk 87-1/2°	8	71 exc.2s.Cpe.,72 thru 77
	BZ 45354	Shackle threaded bushing Zerk 90°	4	All
	BO 48574	Shackle threaded bushing Zerk Drive type	2	71 exc.Bs.Cpe.,72 thru 77
	BZ 154586	Front spring clip-front	* 2	71 exc.Bs.Cpe.,72 thru 77
	BZ 45985	Front spring clip-rear	2	71 Bs.Cpe.
	BZ 45985	Front spring clip	4	70,78
	BZ 153560	Front spring clip-front	* 2	71 exc.Bs.Cpe.,72,73
	BZ 153561	Front spring clip-rear	* 2	71 exc.Bs.Cpe.,72,73
	BZ 153560	Front spring clip-front	* 2	74,75,78,77
	BZ 153561	Front spring clip-rear	* 2	74,75,78,77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL		
SPRINGS-FRONT (Cont'd.)						
BZ 154235	Front spring clip-front	} Side tire mount	*	2	74,75,76,77	
BZ 154236	Front spring clip-rear		*	2	74,75,76,77	
BZ 71238	Front spring clip nut	7/16"-20x3/8"	8	70,78,71 Bs.Cpe.		
BZ 3433	Front spring clip nut	1/2"-20x7/18"	16	71exc.Bs.Cpe.,72 thru 77		
BZ 71445	Front spring clip lock washer	7/16"	8	70,78,71 Bs.Cpe.		
HZ 153937	Front spring cover assembly-R.H		*	2	72	
BZ 153938	Front spring cover assembly-L.H		*	2	72	
BZ 153939	Front spring cover assembly-R.H		*	2	73 thru 77	
BZ 153940	Front spring cover assembly-L.H		*	2	73 thru 77	
NOTE: For spring leaves and rebound clips, see SPRING CHART on page 96						
SPRINGS-REAR						
C 153765	Rear spring assembly	} Used with first type frame.	*	2	70 U Co.	
C 154505	Rear spring assembly		*	2	70 U Cpe.	
C 153766	Rear spring assembly		*	2	70 Cab Pu-Station	
C 153767	Rear spring assembly		*	2	70 Cab-Panel	
F 153760	Rear spring assembly		*	2	71 thru 75 Bro.	
F 153761	Rear spring assembly		*	2	71thru 75 Sod.	
F 154504	Rear spring assembly		See note on page 27	*	2	71-72 Cpes.-Cv.Cpe.
F 154500	Rear spring assembly			2	73-74-75 Cpes.-Cv.Cpe,All Co.Bro.	
	*			2	76-77 Sed.	
F 153764	Rear spring assembly	} Used with second type frame.	*			
C 154505	Rear spring assembly		*	2	70 U Co.	
C 154508	Rear spring assembly		*	2	70 U Cpe.	
C 154506	Rear spring assembly		*	2	Cab Pu-Station	
C 154507	Rear spring assembly		*	2	Cab-Panel	
F 154500	Rear spring assy.-to car Nos.7130357-729585-733678-743007-751773		*	2	71thru 75 Bro.	
F 154519	Rear spring assy.-after above car Nos.		*	2	71thru 75 Bro.	
F 154501	Rear spring assy.-to car Nos.7129040-729247-733557-742947-751680		See note on page 27	*	2	71thru 75 Sed.
F 154500	Rear spring assembly-after above Nos.		*	2	71thru 75 Sed.	
F 154503	Rear spring assy.-to car Nos.7134387-7210836		*	2	71-72Cpes.-Cv.Cpe.	
F 154520	Rear spring assembly-after above car Nos.		*	2	71-72Cpes.-Cv.Cpe.	
F 154504	Rear spring assy.-to car Nos.7130374-729611-733678-742998-751771		*	2	73-74-75 Cpes.Cv.Cpe.,All Cv.Bro.	
F 154519	Rear spring assembly-after above car Nos.		*	2	73-74-75 Cpes.Cv.Cpe.,All Cv.Bro.	
F 153781	Rear spring assy.-to car Nos.(not available)		*	2	76-77Sed.	
F 154501	Rear spring assy.-after above car Nos.	*	2	78-77-78 Sed.		
BZ 71221	Rear spring center bolt nut			2	All	
BZ 46204	Rear spring rebound clip bolt	5/18"-18x2-3/8"		4	Springs 153766-153767-154506 154507	
BZ 18045	Rear spring rebound clip bolt nut			4	Springs 153766-153767-154506 154507	
BZ 326	Rear spring rebound clip rivet	5/16"x11/16"		4	Springs 153766-153767-154506- 154507-154507	
HZ 154896	Rear spring rebound clip spacer			2	Springs 153766-153767-154506 154507	
BZ 153238	Rear spring pivot bolt-front		*	2	All	
BZ 153239	Rear spring pivot bolt bushing-front		*	2	All	
BO 45353	Rear spring pivot Zerk	Straight		2	All	
BZ 153226	Rear spring shackle-R.H.rear	Right & Left	*	1	All	
HZ 153227	Rear spring shackle-L.H.rear	Right hand thread	*	1	All	
BZ 153231	Shackle threaded bushing assy	Right hand thread	*	3	All	
BZ 153232	Shackle threaded bushing assy	Left hand thread	*	1	All	
BZ 48571	Shackle threaded bushing plug	Plain		4	All	
BO 45928	Shackle threaded bushing Zerk	67-1/2°		4	All	
BZ 45296	Rear spring clip			4	71 thru 77,70 U Co.U Cpe.,78 Sed.	
BZ 154237	Rear spring clip		*	4	70-78 exc.U Co.-U Cpe.	
BZ 3433	Rear spring clip nut			16	All	
BZ 153240	Rear spring clip plate-R.H		*	1	All	
BZ 153241	Rear spring clip plate-L.H		*	1	All	
HZ 45302	Rear spring clip cushion	Rubber		4	71 thru 77	
BZ 45303	Rear spring clip cushion retainer			4	71 thru 77	

ILLUS. NO	PART NO	NAME		PER CAR	MODEL		
SPRINGS REAR (Cont'd.)							
BZ	153941	Rear spring cover assembly-R.H.front		1	72 thru 77		
BZ	153942	Rear spring cover assembly-L.H.front		1	72 thru 77		
BZ	153943	Rear spring cover assembly-R.H.rear		1	72 thru 77		
9Z	153944	Rear spring cover assembly-L.H.rear		1	72 thru 77		
NOTE: For spring leaves and rebound clips, see SPRING CHART on page 96							
FRONT SPRING STABILIZER							
C	153251	Stabilizer bar complete	}	*	1	71 thru 77	
C	153252	Stabilizer torsion bar-Lower boss is at an angle with arm		First	*	1	71 thru 77
BZ	153257	Stabilizer connector brkt.-R.H.-2-7/8"long		type	*	1	71 thru 77
BZ	153258	Stabilizer connector brkt.-L.H.-2-7/8"long			*	1	71 thru 77
C	154657	Stabilizer bar complete	}	*	1	71 thru 77, 78 Sed.	
C	154658	Stabilizer torsion bar-Lower boss is straight with arm		Second	*	1	71 thru 77,78 Sed.
C	154653	Stabilizer connector brkt.-R.H.-3-3/4"long		type	*	1	71 thru 77,78 Sed.
C	154854	Stabilizer connector brkt.-L.H.-3-3/4"long			*	1	71 thru 77,78 Sed.
NOTE: First type torsion bar must be used with first type connector brackets.							
Second type torsion bar must be used with second type brackets.							
BZ	151782	Stabilizer bar bushing		2	71 thru 77,78 Sed.		
BZ	150703	Stabilizer bar bushing bracket		2	71 thru 77,78 Sed.		
B7	71704	Stabilizer bar bushing bracket bolt		4	71 thru 77,78 Sed.		
BM	232	Stabilizer bar bushing bracket bolt nut		4	71 thru 77,78 Sed.		
BZ	153254	Stabilizer bar mounting bracket-R.H		*	1	71 thru 77,78 Sed.	
BZ	153255	Stabilizer bar mounting bracket-L.H		*	1	71 thru 77,78 Sed.	
BX	71206	Stabilizer bar mounting bracket bolt		2	71 thru 77,78 Sed.		
BZ	62	Stabilizer bar mounting bracket bolt nut		2	71 thru 77,78 Sed.		
BZ	153256	Stabilizer connector assembly	}	*	2	71 thru 77,78' Sed.	
BZ	154567	Stabilizer connector cushion		Service	*	8	71 thru 77,78 Sed.
BZ	154568	Stabilizer connector cushion bearing		type	*	8	71 thru 77,78 Sed.
BZ	154738	Stabilizer connector cushion seat-inner		connector	*	4	71 thru 77,78 Sed.
BZ	154739	Stabilizer connector adjusting plug			4	71 thru 77,78 Sed.	
REAR SPRING STABILIZER							
Service only							
HA	154929	Rear stabilizer kit		*	1	71 thru 77	
BZ	150703	Rear stabilizer torsion bar bushing bracket		2	71 thru 77		
BO	18236	Rear stabilizer torsion bar bushing bracket bolt		4	71 thru 77		
BM	232	Rear stabilizer torsion bar bushing bracket bolt nut		4	71 thru 77		
BZ	152898	Rear stabilizer torsion bar mounting bracket		*	2	71 thru 77	
BZ	71682	Mounting bracket bolt-front	5/16-18x5/8"	2	71 thru 77		
BT	395	Mounting bracket bolt-rear	5/16"-18x5/8"	2	71 thru 77		
BZ	12115	Mounting bracket bolt-nut	5/16"-18x17/64"	4	71 thru 77		
BX	70125	Stabilizer connector stud nut	1/2"-20x7/18"	2	71 thru 77		
BZ	154747	Rear spring clip plate-R.H		*	1	71 thru 77	
BZ	154748	Rear spring clip plate-L.H		*	1	71 thru 77	
SHOCK ABSORBERS							
BZ	152941	Shock absorber assembly-front	Monroe	*	2	71 exc.Bs.Cpe.,72	
BZ	154432	Shock absorber assembly-front	Monroe	*	2	70,78,71 Bs.Cpe.	
BZ	152943	Shock absorber assembly-front	Delco	*	2	73 thru 77	
BZ	152942	Shock absorber assembly-rear-First type (Monroe) (short), to car Nos.7128941-729206		*	2	71,72	
BZ	154707	Shock absorber assembly-rear-Second type Monroe (long), after above car numbers		*	2	71,72,78 Sed.	

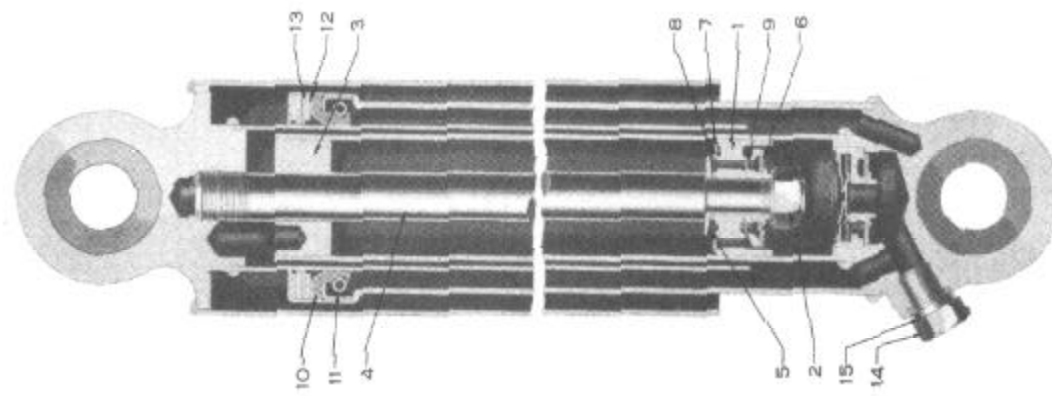

SHOCK ABSORBER -Terraplane
Illustration G

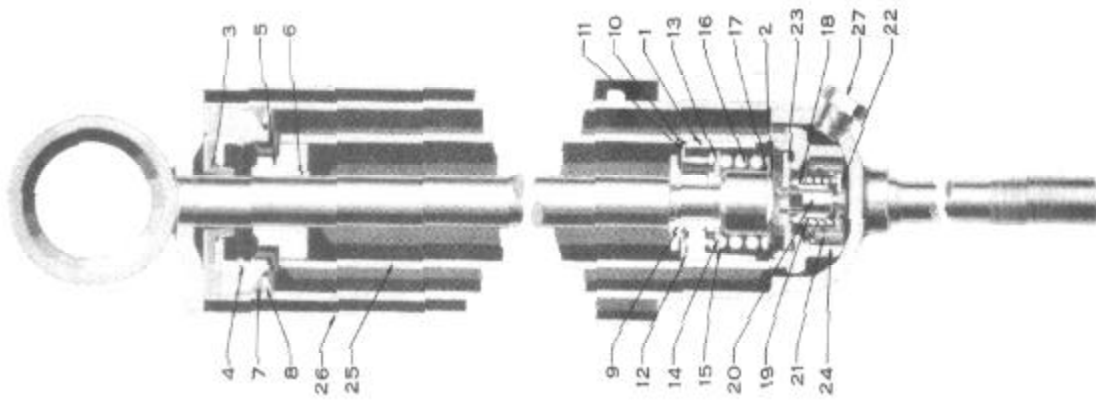

SHOCK ABSORBER—Hudson
Illustration H

ILLUS. NO	PART NO	NAME		PER CAR	MODEL
SHOCK ABSORBERS (Cont'd.)					
	BZ 154433	Shock absorber assembly-rear-First type Monroe (short) to Car No. 702555		* 2	70 U Co.-U Cpe.
	BZ 154709	Shock absorber assembly-rear-Second type Monroe (long) after Car No. 702555		* 2	70 U Co.-U Cpe.
	BZ 152944	Shock absorber assembly-rear-First type Delco (short)		* 2	73 thru 77
	BZ 154708	Shock absorber assembly-rear-First type Delco (long).		* 2	73 thru 77
	HZ 152362	Shock absorber assembly-rear		* 2	Cab-Cab Pu-Panel-Station
G-1	HZ 48768	Piston	Monroe	* 4	70,71,72,78
G-2	BO 611	Piston nut	Monroe	* 4	70,71,72,78
G-3	BZ 48103	Piston Rod, guide	Monroe	* 4	70,71,72,78
G-4	HZ 154227	Piston rod-front	Monroe	* 2	70,71,72,78
	BZ 154227	Piston rod-rear (first type-short)	Monroe	* 2	70,71,72,78
	HZ 154946	Piston rod-rear (second type-short)	Monroe	* 2	70,71,72,78
G-5	HZ 154209	Piston support washer	Monroe	* 4	70,71,72,78
G-6	BZ 154206	Piston pressure relief valve-front	Monroe	* 2	71 exc Bs.Cpe.,72
	BZ 153773	Piston pressure relief valve-front	Monroe	* 2	70,78,71 Bs.Cpe
	BZ 154207	Piston pressure relief valve-rear	Monroe	* 2	71,72
	BZ 153774	Piston pressure relief valve-rear	Monroe	* 2	70,78
G-7	BZ 154210	Piston intake valve	Monroe	* 4	70,71,72,78
G-8	BZ 154211	Piston intake valve star spring	Monroe	* 4	70,71,72,78
G-9	HZ 154208	Piston metering washer	Monroe	* 4	70,71,72,78
G-10	HZ 154217	Seal tube gasket-flanged leather	Monroe	* 4	70,71,72,78
G-11	BZ 154218	Seal tube gasket spring	Monroe	* 4	70,71,72,78
G-12	BZ 154219	Seal tube gasket washer-felt	Monroe	* 4	70,71,72,78
G-13	BZ 154220	Seal tube gasket retaining washer	Monroe	* 8	70,71,72,78
	BZ 154221	Seal tube gasket support ring	Monroe	* 4	70,71,72,78
G-14	HZ 45501	Filler plug	Monroe	* 4	70,71,72,78
G-15	BZ 45502	Filler plug gasket	Monroe	* 4	70,71,72,78
H-1	BZ 154251	Piston	Delco	* 4	73 thru 77
H-2	HZ 154252	Piston nut	Delco	* 4	73 thru 77
H-3	BZ 46716	Piston rod oil seal assembly	Delco	* 4	73 thru 77
H-4	HZ 46455	Piston rod oil seal gasket	Delco	* 4	73 thru 77
H-5	BZ 154253	Piston rod guide	Delco	* 4	73 thru 77
H-6	BZ 154254	Piston rod guide bushing	Delco	* 4	73 thru 77
H-7	BZ 48094	Piston rod guide gasket	Delco	* 4	73 thru 77
H-8	BZ 154255	Piston rod guide gasket retainer	Delco	* 4	73 thru 77
H-9	BZ 154256	Piston valve washer	Delco	* 4	73 thru 77
H-10	BZ 154257	Piston valve plate (compression intake)	Delco	* 4	73 thru 77
H-11	BZ 154258	Piston valve plate spider spring	Delco	* 4	73 thru 77
H-12	HZ 154485	Piston valve plate spider spring washer	Delco	* 4	73 thru 77
H-13	BZ 154259	Piston valve seat	Delco	* 4	73 thru 77
H-14	BZ 154260	Piston valve orifice plate	Delco	* 4	73 thru 77
H-15	BZ 154261	Piston valve orifice plate washer	Delco	* 4	73 thru 77
H-16	HZ 154262	Piston valve spring-front	Delco	* 2	73 thru 77
	BZ 154263	Piston valve spring-rear	Delco	* 2	73 thru 77
H-17	BZ 154499	Piston valve spring dampener	Delco	* 4	73 thru 77
	BZ 154264	Relief valve and cylinder end assembly-frt	Delco	* 2	73 thru 77
	HZ 154265	Relief valve and cylinder end assy.-rear	Delco	* 2	73 thru 77
H-18	BZ 154266	Relief valve-front	Delco	* 2	73 thru 77
	AZ 154267	Relief valve-rear	Delco	* 2	73 thru 77
H-19	BZ 154268	Relief valve spring-front	Delco	* 2	73 thru 77
	BZ 154269	Relief valve spring-rear	Delco	* 2	73 thru 77
H-20	BZ 154270	Relief valve stem	Delco	* 4	73 thru 77
H-21	BZ 154271	Relief valve stem spring	Delco	* 4	73 thru 77
H-22	BZ 154272	Relief valve stem spring washer	Delco	* 4	73 thru 77
H-23	BZ 154273	Intake valve	Delco	* 4	73 thru 77
H-24	BZ 154274	Cylinder end (holds valve assembly)	Delco	* 4	73 thru 77
H-25	BZ 154275	Pressure tube-front	Delco	* 2	73 thru 77
	BZ 154278	Pressure tube-rear-first type-short	Delco	* 2	73 thru 77
	BZ 154945	Pressure tube-rear-second type-long	Delco	* 2	73 thru 77
H-26	BZ 154280	Dirt shield tube-front	Delco	* 2	73 thru 77
	BZ 154281	Dirt shield tube-rear-first type-short	Delco	* 2	73 thru 77
	BZ 46707	Dirt shield tube-rear-second type-long	Delco	* 2	73 thru 77
H-27	BZ 154246	Filler screw	Delco	* 4	73 thru 77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
SCHOCK ABSORBERS (Cont'd.)				
BZ	47278	Shock absorber head grommet	8	All
BZ	47278	Rear shock absorber base grommet	4	All
BZ	47279	Front shock absorber base cushion	4	All
BZ	46718	Front shock absorber base cushion retainer	2	All
BZ	47605	Front shock absorber base cushion cup washer	2	All
BZ	46720	Front shock absorber base cushion nut	2	All
BZ	613	Front shock absorber upper bracket washer	4	All
BZ	71532	Front shock absorber bracket cotter-special	4	All
BZ	71511	Rear shock absorber upper bracket stud washer-inner	2	All
BZ	613	Rear shock absorber upper bracket stud washer-outer	2	All
HZ	71532	Rear shock absorber upper bracket cotter-special	2	All
BX	152948	Rear shock absorber upper bracket bolt	*	All
BX	70125	Rear shock absorber upper bracket bolt nut	2	All
		1/2 "-x20x7/16"		
HA	151964	Shock absorber fluid 1 Quart	AR	All
HA	151965	Shock absorber fluid 1 Gallons	AR	All
HA	151966	Shock absorber fluid 5 Gallons	AR	All
BUMPER-FRONT				
C	121185	Outside bar	*	1 70,71,72,78
C	121186	Outside bar	*	1 73 thru 77
C	121196	Frame bar assembly-R.H.	*	1 All exc.76-77
C	121197	Frame bar assembly-L.H.	*	1 All exc.76-77 76-77
C	121190	Frame bar assembly-R.H.	*	1 76-77
C	121191	Frame bar assembly-L.H.	*	1 All
BZ	122962	Front license plate bracket assembly	*	1 All
BO	100341	Front license plate clamp		1 All
BZ	70899	Front license plate clamp bolt 1/4"-20x5/8"		1 All
BZ	70874	Front license plate clamp bolt nut 1/4"-20x1/4"		1 All
BZ	117289	Outside bar-end bolt		4 All
BZ	116796	Outside bar bolt-center		1 All
BZ	71591	Outside bar bolt nut 7/18"-14x3/8"		5 All
BZ	1385	Bumper to frame bolt 7/16"-14x1-1/2"		4 All
BZ	71591	Bumper to frame bolt nut 7/16"-14x3/8"		4 All
BZ	170001	Bumper to frame front bolt spacer1 5/32"x1-5/8"x1/8"	*	4 70,78
HZ	121200	Bumper fender guard assembly	*	2 70,71,72,78
BZ	121201	Bumper fender guard assembly	*	2 73 thru 77
BZ	70194	Bumper fender guard nut 7/18"-20x3/8"		2 All
BZ	121170	Bumper grommet-R.H.	*	1 All
BZ	121171	Bumper grommet-L.H.-L.H.	*	1 All
BUMPER-REAR				
			1	70,71,72,78
			1	73 thru 77
C	121192	Outside bar	*	1 70-78 Panel
C	121193	Outside bar	*	1 70-78 Panel
C	121222	Frame bar assembly-R.H.	*	
C	121223	Frame bar assembly-L.H.		1 71 thru 75,70 U Co-U Cpe.
			*	1 71 thru 75,70 U Co-U Cpe.
C	121198	Frame bar assembly-R.H.	*	1 76,77
C	121199	Frame bar assembly-L.H.	*	1 76,77
C	121194	Frame bar assembly-R.H.	*	
C	121195	Frame bar assembly-L.H.		1 71 thru 75,70 U Co-U Cpe.,78 Sed.
			*	1 71 thru 75,70 U Co-U Cpe.,78 Sed.
C	124504	Frame bar assembly-R.H.		1 76,77
C	124505	Frame bar assembly-L.H.		1 76,77
C	124508	Frame bar assembly-R.H.		1
C	124507	Frame bar assembly-L.H.		
		After above car Nos.		
BZ	117289	Outside bar bolt	4	All
BZ	71591	Outside bar bolt nut 7/16"-14x3/8"	4	All
BZ	1385	Bumper to frame bolt 7/18"-14x1-1/2"	4	All exc. Panel
BZ	71725	Bumper to frame bolt nut 7/18"-14x1-1/4"	4	70-78 Panel
BZ	71591	Bumper to frame bolt nut 7/18"-14x3/8"	4	All
BZ	121200	Bumper fender guard assembly	*	2 70,71,72,78

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

BUMPER—REAR (Cont'd.)

BZ	121201	Bumper fender guard assembly	*	2	73 thru 77
BZ	70194	Bumper fender guard nut 7/16"-20x3/8"		2	All
BZ	121172	Bumper grommet-R.H	*	1	All
BZ	121173	Bumper grommet-L.H	*	1	All

FRAME


NOTE: Second type frame, with lower rear spring hanger,
became effective with the following car numbers:

70320 U Co.
70513 Cab-Cab Pu-Panel-Station
70547 U Cpe.
714193
721311
731521 } Except Cv.Cpe.-Cv.Bro.
74 866
75300
76336
77654

Second type frame for Cv.Cpe.and Cv.Bro.effective
with car Nos.7122477-727343-732029-742439-751413

See also changes in Rear Springs, Rear Axle Housing,
Propeller Shaft and Brake cables.

	C	152809	Frame assembly		*	1	70
	C	152808	Frame assembly		*	1	71-72 exc.Bs.Cpe.& Convertible
	C	152810	Frame assembly		*	1	73 exc.Convertibles
	C	152811	Frame assembly	First type	*	1	74,75 exc.Convertibles
	C	152812	Frame assembly		*	1	78,77
	C	152813	Frame assembly		*	1	71-72 Cv.Cpe.-Cv.Bro.
	C	152814	Frame assembly		*	1	73 Cv.Cpe.-Cv.Bro.
	C	152815	Frame assembly		*	1	74-75 Cv.Cpe.-Cv.Bro.
	C	154309	Frame assembly		*	1	70,71 Bs.Cpe.
	C	154308	Frame assembly		*	1	71-72 exc.Bs.Cpe.& Convertibles
	C	154310	Frame assembly		*	1	73 exc.Convertibles
	C	154311	Frame assembly	Second type	*	1	74-75 exc.Convertibles
	C	154312	Frame assembly		*	1	76,77
	C	154313	Frame assembly		*	1	71-72 Cv.Cpe.Cv.Bro.
	C	154314	Frame assembly		*	1	73 Cv.Cpe.-Cv.Bro.
	C	154315	Frame assembly		*	1	74-75 Cv.Cpe.-Cv.Bro.
	C	154831	Frame assembly		*	1	78
	C	152824	Frame side member assembly-R.H.	} Not used on Convertibles	*	1	70,71,72
	C	152825	Frame side member assembly-L.H.		*	1	70,71,71=2
K-1	C	152828	Frame side member assembly-R.H.		*	1	73,74,75
K-2	C	152829	Frame side member assembly-L.H.		*	1	73,74,75
	C	153922	Frame side member assembly-R.H		*	1	71-72 Cv.Cpe.-Cv.Bro.
	C	153923	Frame side member assembly-L.H		*	1	71-72 Cv.Cpe.-Cv.Bro.
	C	153924	Frame side member assembly-R.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
	C	153925	Frame side member assembly-L.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
	C	152830	Frame side member assembly-R.H		*	1	76,77
	C	152831	Frame side member assembly-L.H		*	1	76,77
	C	154632	Frame side member assembly-R.H		*	1	78
	C	154633	Frame side member assembly-L.H		*	1	78
	BZ	152914	Front spring rear bracket-R.H		*	1	70,71 Bs.Cpe.,78
	BZ	152915	Front spring rear bracket-L.H		*	1	70,71 Bs.Cpe.,78
	BZ	152912	Front spring rear bracket-R.H		*	1	71exc. Bs.Cpe.,72
	BZ	152913	Front spring rear bracket-L.H		*	1	71exc. Bs.Cpe.,72
	BZ	152916	Front spring rear bracket-R.H		*	1	73 thru 77
	BZ	152917	Front spring rear bracket-L.H		*	1	73 thru 77
	BZ	152933	Front spring rear bracket reinforcement plate		*	2	70,71Bs.Cpe., 78
	BZ	154488	Front spring rear bracket reinforcement washer		*	2	71 exc. Bs.Cpe., 72 thru 77
	BZ	80	Front spring rear bracket rivet	8"x1-1/8"	*	6	All

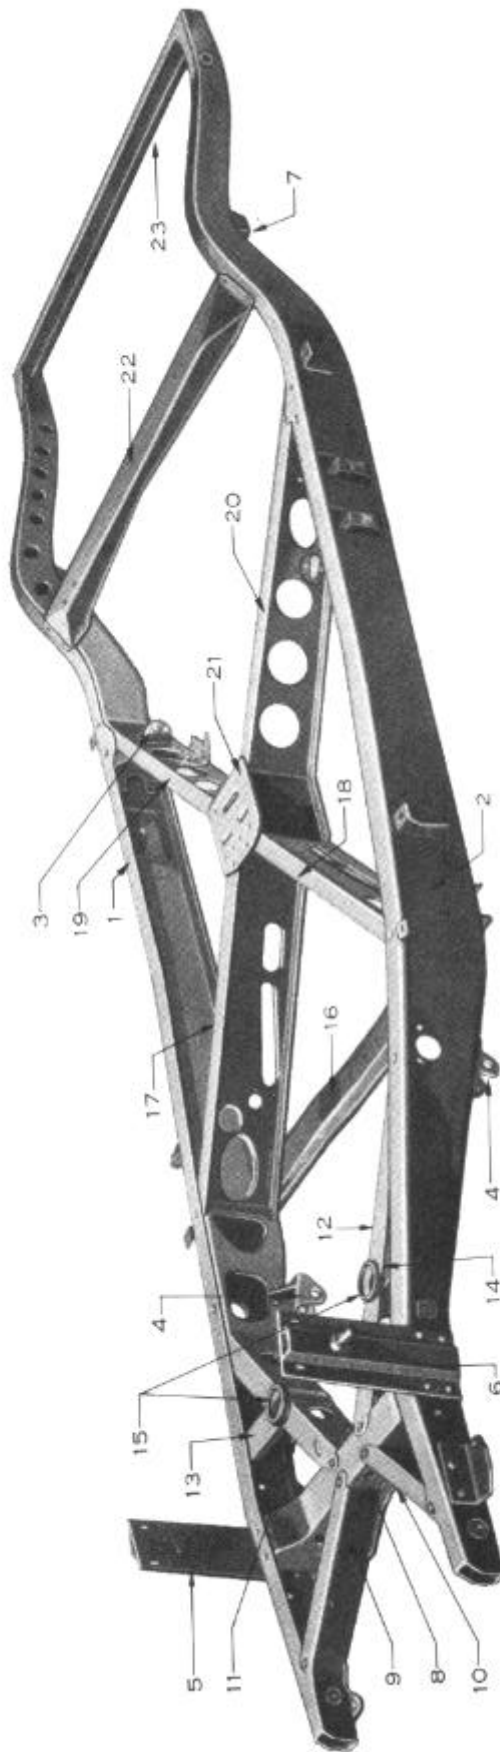


FRAME
Illustration K

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
FRAME (Cont'd.)				
K-3	BZ 152923	Rear spring front bracket assembly-R.H.	* 1	70 thru 75
	BZ 152924	Rear spring front bracket assembly-L.H.	* 1	70 thru 75
	BZ 152925	Rear spring front bracket assembly-R.H.	* 1	76,77
	BZ 152926	Rear spring front bracket assembly-L.H.	* 1	76,77
	HZ 154702	Rear spring front bracket-R.H.	* 1	All
	BZ 154703	Rear spring front bracket-L.H.	* 1	All
	BZ 154329	Rear spring front brkt.reinf.-R.H.	* 1	70 thru 75 exc.Convertibles, 78
	BZ 154330	Rear spring front brkt.reinf.-L.H.	* 1	70 thru 75 exc.Convertibles, 78
	BZ 154329	Rear spring front brkt.reinf	* 2	76,77
	BZ 152896	Rear shock absorber bracket-R.H	* 1	All
	BZ 152897	Rear shock absorber bracket-L.H	* 1	All
K-4	HZ 152905	Front axle to frame arm bracket-R.H	* 1	71 exc.Bs.Cpe.,72 thru 77
	BZ 152906	Front axle to frame arm bracket-L.H	* 1	71 exc.Bs.Cpe.,72 thru 77
	BZ 151229	Front axle to frame arm reinforcement	* 2	71 exc.Bs.Cpe.,72 thru 77
	BZ 80	Front axle to frame arm bracket rivet	3/8"x1-1/8"	71 exc.Bs.Cpe.,72 thru 77
	BZ 152932	Body bolt bracket No. 1	* 2	All
	BZ 47737	Body bolt bracket Nos. 2-3-4-5	8	All exc.Convertibles
	BZ 47737	Body bolt bracket Nos. 2-3-5	6	71 thru 75 Cv.Cpe.-Cv.Bro.
	BZ 154299	Body bolt bracket Nos. 4	* 2	71 thru 75 Cv.Cpe.-Cv.Bro.
	BZ 152934	Running board bracket-front	* 2	70,71,72
	BZ 152889	Running board bracket-front	* 2	73 thru 78
	BZ 152918	Running board bracket-rear	* 2	All
	HZ 3197	Running board bracket rivet	12	All
K-5	BZ 152939	Front fender support assembly-R.H	* 1	All
K-6	BZ 152940	Front fender support assembly-L.H	* 1	All
	BX 545	Front fender support rivet	8	All
	BZ 152935	Front axle bumper	* 2	All
K-7	BZ 152936	Rear axle bumper	* 2	All
	BZ 71295	Front and rear axle bumper bolt	5/16"x5/8"	8 All
	BZ 152937	Differential carrier bumper	* 1	All
	BM 219	Differential carrier bumper bolt..	5/16"-18x3/4"	2 All
	BZ 12115	Differential carrier bumper bolt nut	5/16"-18x17/64"	2 All
	BX 545	Frame rivet	5/18"x1"	AR All
	HZ 80	Frame rivet	3/8"x1-1/8"	AR All
	BZ 326	Frame rivet	5/16"x3/4"	AR All
	BX 3197	Frame rivet	5/16"x5/8"	AR All
	BZ 71050	Frame rivet	5/18"x5/8"	AR All
	BZ 1249	Frame rivet	5/16"x1-1/8"	AR All

FRAME CROSS MEMBERS

			*	
K-8	C 152838	Front cross member assembly	* 1	70,71,72,78
	C 152841	Front cross member assembly	* 1	73 thru 77
	C 152844	Front cross member to side member brace-R.H	* 1	70,71,72,78
	C 152844	Front cross member to side member brace-L.H	* 1	70,71,72,78
K-9	C 152846	Front cross member to side member brace-R.H	* 1	73 thru 77
K-10	C 152847	Front cross member to side member brace-L.H	* 1	73 thru 77
	C 152848	Side member reinforcement assembly-front-R.H	* 1	70,78,71-72 exc.Convertibles
	C 152849	Side member reinforcement assembly-front-L.H	* 1	70,78,71-72 exc.Convertibles
K-11	C 152850	Side member reinforcement assembly-front-R.H	* 1	74 thru 77 exc.Convertibles
K-12	C 152851	Side member reinforcement assembly-front-L.H	* 1	74 thru 77 exc.Convertibles
	C 154743	Side member reinforcement assembly-front-R.H	* 1	73 exc.Convertibles
	C 154744	Side member reinforcement assembly-front-L.H	* 1	73 exc.Convertibles
	C 152852	Side member reinforcement assembly-front-R.H	* 1	71-72 Cv.Cpe.-Cv.Bro.
	C 152853	Side member reinforcement assembly-front-L.H	* 1	71-72-Cv.Cpe.-Cv.Bro.
	C 152854	Side member reinforcement assembly-front-R.H	* 1	74-75 Cv.Cpe.-Cv.Bro.
	C 152855	Side member reinforcement assembly-front-L.H	* 1	74-75 Cv.Cpe.-Cv.Hro.
	C 154745	Side member reinforcement assembly-front-R.H	* 1	73 Cv.Cpe.-Cv.Bro.
	C 154746	Side member reinforcement assembly-front-L.H	* 1	73 Cv.Cpe.-Cv.Bro.
	C 152867	Engine support brace-R.H	* 1	70,71,72,78
	C 152868	Engine support brace-L.H	* 1	70,71,72,78
K-13	C 152921	Engine support brace-R.H	* 1	74,75,78,77
K-14	C 152922	Engine support brace-L.H	* 1	74,75,78,77
	C 152864	Radiator support cross member	* 1	73

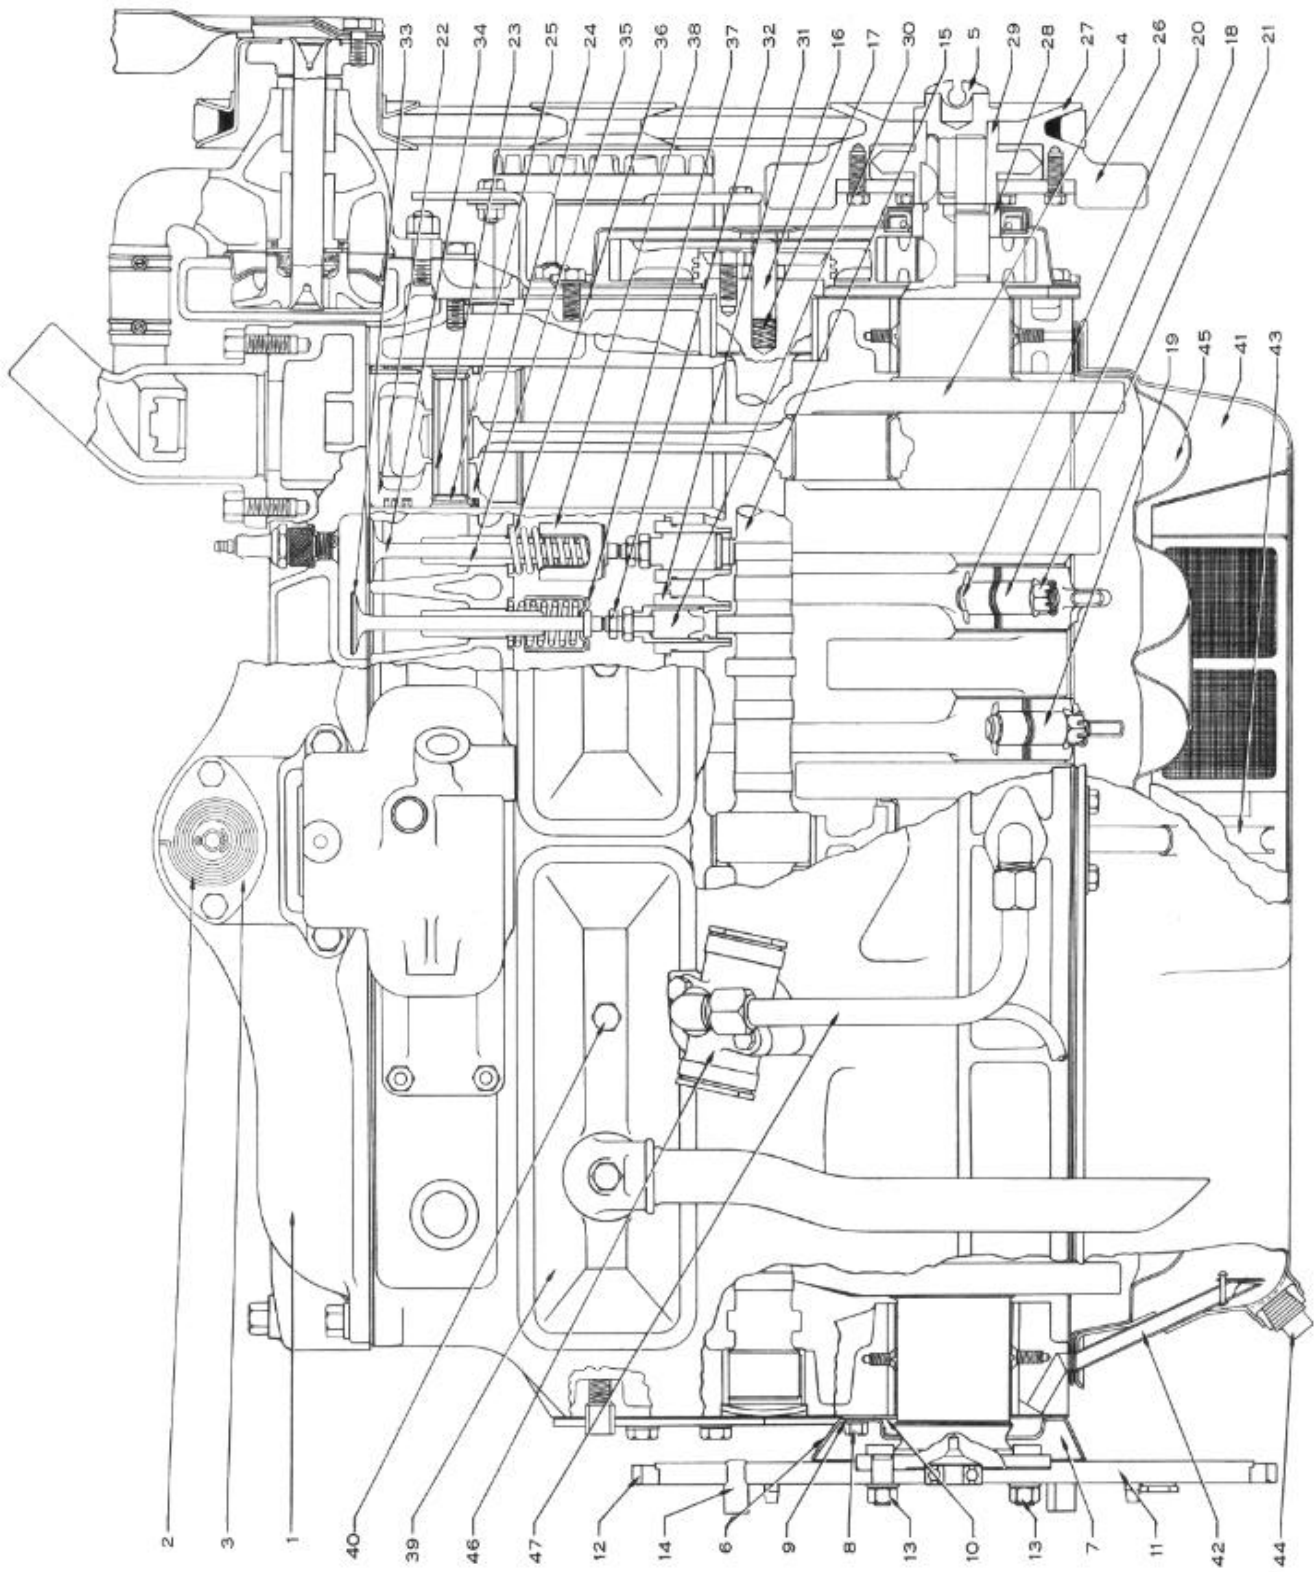

ENGINE
Illustration L

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
FRAME CROSS MEMBERS (Cont'd.)				
	BZ 152865	Engine support assembly	*	2 73
	BX 3197	Engine support rivet	5/16"x7/8"	8 73
K-15	BZ 40479	Engine support grommet cup		2 All
K-16	C 152872	Engine support-rear-cross member assembly	*	1 All
K-17	C 152876	Frame brace front member-R.H.	*	1 All exc.Convertibles
K-18	C 152877	Frame brace front member-L.H.	*	1 All exc.Convertibles
	C 152878	Frame brace front member-R.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	C 152879	Frame brace front member-L.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
K-19	C 152883	Frame brace rear member-R.H.	*	1 70 thru 75 exc.Convertibles
K-20	C 152884	Frame brace rear member-L.H.	*	1 70 thru 75 exc.Convertibles
	C 152887	Frame brace rear member-R.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	C 152888	Frame brace rear member-L.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	C 152885	Frame brace rear member-R.H.	*	1 76,77
	C 152886	Frame brace rear member-L.H.	*	1 76,77
	C 154322	Frame brace rear member-R.H.	*	1 70 thru 75 exc.Convertibles
	C 154323	Frame brace rear member-L.H.	*	1 70 thru 75 exc.Convertibles
	C 154326	Frame brace rear member-R.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	C 154327	Frame brace rear member-L.H.	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	C 154324	Frame brace rear member-R.H.	*	1 76,77,78
	C 154325	Frame brace rear member-L.H.	*	1 76,77,78
K-21	BZ 152880	Frame brace plate	*	1 70 thru 75 exc.Convertibles
	BZ 152881	Frame brace plate	*	1 71 thru 75 Cv.Cpe.-Cv.Bro.
	BZ 152880	Frame brace plate-First type, with two 3/4" holes- To car Nos.76859-772470	*	1 76,77,78 exc.Sedan
	BZ 154706	Frame brace plate-Second type-After above car Nos	*	1 76,77,78
K-22	BZ 152894	Frame rear axle cross member assembly	*	1 All
	BZ 152899	Differential carrier bumper support	*	1 All
K-23	BZ 152900	Frame rear cross member	*	1 All
	BZ 152901	Brake tube bracket (on rear axle cross member)	*	1 All
ENGINE AND MOUNTING				
	C 153527	Engine assembly	*	1 70,71
	C 153512	Engine assembly	*	1 72
	C 153513	Engine assembly	*	1 73 exc.Bs.Cpe.
	C 154610	Engine assembly	*	1 73 Bs.Cpe.
	C 153516	Engine assembly	*	1 74 thru 77
	C 154623	Engine assembly	*	1 78
	C 154672	Engine assembly	*	1 70,71
	C 154673	Engine assembly	*	1 72
	C 154674	Engine assembly	*	1 73 exc.Bs.Cpe.
	C 154675	Engine assembly	*	1 73 Bs.Cpe.
	C 154676	Engine assembly	*	1 74 thru 77
	C 154677	Engine assembly	*	1 78
BM	71251	Engine front mounting bolt-long	7/18"-20x2-15/16"	1 All
BM	71207	Engine front mounting bolt-short	7/16"-20x2-3/4"	1 All
BT	3488	Engine front mounting bolt nut	7/16"-20x2-9/64"	2 All
BM	40638	Engine front mounting bolt sleeve		2 All
BM	71219	Engine front mounting bolt washer	15/32"x1-5/8"x1/8"	4 All
BM	47121	Engine front mounting grommet-upper		2 70,71,72,73,78
BM	47123	Engine front mounting grommet-upper		2 74,75,76,77
BM	47122	Engine front mounting grommet-lower		2 70,71,72,73,78
BM	47124	Engine front mounting grommet-lower		2 74,75,76,77
BM	42545	Engine rear mounting		1 70,71,72,73,78
BM	42532	Engine rear mounting		1 74,75,76,77
BM	40642	Engine rear mounting to clutch housing bolt		1 All
BZ	908	Engine rear mounting to cross member bolt	5/16"-18x7/8"	2 All
BZ	122	Engine rear mounting to cross member bolt nut		2 All

ILLUS. NO	PART NO	NAME		PER CAR	MODEL
CYLINDER					
C	152504	Cylinder and Pistons assembly	*	1	70,71,72,73,78
C	152505	Cylinder and Pistons assembly	*	1	74,75,78,77
BM	14112	Cylinder expansion plug		7-3	All
BO	71049	Cylinder expansion plug-(camshaft)		1	All
BM	70568	Cylinder expansion plug-(intake port inspection Hole).		2	74,75,76,77
BM	227	Cyl.Stud(for generator adjusting brkt.) 3/8"-16x1-1/2"		1	All
BM	150415	Cylinder water jacket cover assembly		1	70,71,72,73,78
BM	150418	Cylinder water jacket cover assembly		1	74,75,78,77
F	37196	Cylinder water jacket cover gasket		1	70,71,72,73,78
F	33144	Cylinder water jacket cover gasket		1	74,75,78,77
BM	395	Cylinder water jacket cover bolt	5/16"-18x5/8"	16-24	A11
BM	7909	Cyl.water jacket cover bolt-slotted..	5/16"-18x5/8"	2	
BZ	908	Cylinder water jacket cover bolt-vacuum clutch brkt		3	All
BM	70177	Cylinder water jacket cover bolt washer		AR	All
BM	231	Cylinder water jacket drain plug		1	All
BM	42787	Cylinder support plate assembly-front		1	All
BM	152606	Cylinder support plate assembly-front	*	1	70,71,72,73,78
BM	40339	Cylinder support plate gasket		1	74,75,76,77
BM	1157	Cylinder support plate-front-bolt		8	All
BM	61446	Cylinder support plate-front-bolt lock		2	All
BM	47110	Cylinder support plate-rear		1	All
BM	40342	Cylinder support plate-rear-gasket		1	All
BM	9168	Cylinder support plate-rear-to cylinder-bolt	7/16"-14x1-3/8"		All
BM	40343	Cylinder support plate-rear-to cylinder dowel		1	All
BM	71197	Cylinder support plate-rear-to cylinder bolt washer		2	All
BM	1157	Cylinder support plate-rear-bolt	3/8"-18x3/4"	1	All
BM	152814	Oil level gauge assembly	*	4	All
BM	152615	Oil level gauge assembly	*	1	70,71,72,73,78
CYLINDER HEAD					
C	152609	Cylinder head assembly	*	1	74,75,76,77
C	152610	Cylinder head assembly	*	1	70,71,72,78
C	152611	Cylinder head assembly	*	1	73
F	152612	Cylinder head gasket	Standard	*	74,75,78,77
F	152613	Cylinder head gasket	Compression	*	70,71,72,73,78
BM	9751	Cylinder head expansion plug		1	74,75,78,77
				4	All
C	154196	Cylinder head assembly		1	70,71,72,73,78
C	150370	Cylinder head assembly		1	74,75,76,77
F	152812	Cylinder head gasket	High	1	70,71,72,73,78
F	150086	Cylinder head gasket	Compression	1	74,75,76,77
BM	12371	Cylinder head stud washer		21	70,71,72,73,78
BM	71138	Cylinder head stud washer		30	74,75,76,77
BM	150390	Cylinder head water outlet		1	70,71,73 Bs.Cpe.,78
BM	150391	Cylinder head water outlet		1	72,73 exc.Bs.Cpe.,74 thru 77
BM	150379	Cylinder head water outlet gasket		1	All
BT	1308	Cylinder head water outlet bolt		2	All
BM	2348	Cylinder head pipe plug (For heater connection)		1	All
BM	150406	Cylinder head thermostat		1	72,73,exc.Bs.Cpe.,74 thru 77
BM	150553	Cylinder head temperature indicator element		1	All
BM	70863	Temperature indicator element terminal screw		1	All
			8-32x1/4"		
BM	150380	Cylinder head stud	3-3/32" long	16	70,71,72,73,78
BM	150382	Cylinder head stud	3-15/32" long	2	70,71,72,73,78
BM	150384	Cylinder head stud	3-11/16" long	2	70,71,72,73,78
BM	42891	Cylinder head stud	3-11/32" long	1	70,71,72,73,78
BM	150386	Cylinder head stud	3-3/16" long	28	74,75,76,77
BM	150388	Cylinder head stud	3-27/32" long	2	74,75,76,77
BM	71578	Cylinder head stud nut	3/8"-18x3/8"	21	70,71,72,73,78
BM	9885	Cylinder head stud nut	7/16"-14x3/8"	30	74,75,78,77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
EXHAUST MANIFOLD				
L-1	C 153152	Exhaust manifold assembly	* 1	70,71,73 Bs.Cpe.,78
	C 153147	Exhaust manifold assembly	* 1	72,73 exc.Bs.Cpe.
	C 153148	Exhaust manifold assembly	* 1	74,75,76,77
	BM 40707	Exhaust manifold stud-long	1	70,71,72,73,78
	BM 4131	Exhaust manifold stud	3/8"-18x1-5/8"	1-3 All
	BM 227	Exhaust manifold stud	3/8"-16x1-1/2"	4-7 All
	BM 71058	Exhaust manifold stud nut	3/8"-16x3/8"	6-10 All
	F 153155	Exhaust manifold Gasket-front	* 1	70,71,72,73,78
	F 153156	Exhaust manifold gasket-center	* 1	70,71,72,73,78
	F 153157	Exhaust manifold gasket-rear	1	70,71,72,73,78
	F 153158	Exhaust manifold gasket-end	2	74,75,76,77
	F 153159	Exhaust manifold gasket-intermediate	2	74,75,76,77
	F 153180	Exhaust manifold gasket-center	1	74,75,76,77
	BM 153165	Exhaust damper and shaft assembly	1	72 thru 77 exc.Bs.Cpe.
	BM 38089	Exhaust damper shaft bushing	2	72 thru 77 exc.Bs.Cpe.
	BM 37946	Exhaust damper spring-front	1	72 thru 77 exc.Bs.Cpe.
	BM 45751	Exhaust damper spring-rear	1	72 thru 77 exc.Bs.Cpe.
	BM 153582	Exhaust damper anti rattle spring	* 1	72 thru 77 exc.Bs.Cpe.
	BM 37947	Exhaust damper spring front retainer	1	72 thru 77 exc.Bs.Cpe.
	BM 45731	Exhaust damper spring-rear retainer	1	72 thru 77 exc.Bs.Cpe.
	BM 37949	Exhaust damper spring-front-stud	1	72,73 exc.Bs.Cpe.
	BM 153168	Exhaust damper spring-Top-stud	* 1	74 thru 77
	BM 45533	Exhaust Manifold damper spring-rear-stud	1	72,73 exc.Bs.Cpe.
	BM 37949	Exhaust damper spring-lower-stud	1	74 thru 77
L-2	BM 45528	Exhaust damper Thermostat	1	72 thru 77 exc.Bs.Cpe,
L-3	BM 153169	Exhaust damper cover assembly (includes bushing)	* 1	72 thru 77 exc.Bs.Cpe.
	BM 153171	Exhaust damper cover gasket	* 1	72 thru 77 exc.Bs.Cpe.
	BM 38088	Exhaust damper cover damper stop	2	72 thru 77 exc.Bs.Cpe.
	BM 13073	Exhaust damper cover stud	2	72 thru 77 exc.Bs.Cpe.
	BM 71687	Exhaust damper cover stud nut	* 2	72 thru 77 exc.Bs.Cpe.
	BM 153161	Exhaust damper	* 1	70,71,73 Bs.Cpe.,78
	BM 153162	Exhaust damper gasket	* 1	70,71,73 Bs.Cpe.,78
	BM 153163	Exhaust damper retainer	1	70,71,73 Bs.Cpe.,78
	BM 71218	Exhaust damper retainer stud	7/16"x1-5/8"	2 70,71,73 Bs.Cpe.,78
	BM 70177	Exhaust damper ret.stud washer .	.317"x5/8"x1/32"	2 70,71,73 Bs.Cpe.,78
	BM 71108	Exhaust damper ret. stud nut	5/16"-24x17/64"	2 70,71,73 Bs.Cpe.,78

INTAKE MANIFOLD

C 152534	Intake manifold assembly	* 1	70,71,73 Bs.Cpe.,78
C 152535	Intake manifold assembly	* 1	72,73 exc.Bs.Cpe.
C 152536	Intake manifold assembly	* 1	74,75,76,77
BM 71233	Carburetor stud-plain	3/8"-16x1-3/8"	1 70,71,73 Bs.Cpe.,78
BM 150404	Carburetor stud-drilled	1	70,71,73 Bs.Cpe.,78
BM 152989	Carburetor stud-plain	* 3	72 thru 77 exc.Bs.Cpe.
BM 152990	Carburetor stud-drilled	* 1	72 thru 77 exc.Bs.Cpe.
BM 6189	Carburetor stud nut	3/8"-16x21/64"	2 70,71,73 Bs.Cpe.,78
BM 611	Carburetor stud nut	4	72 thru 77 exc.Bs.Cpe.
BM 70568	Expansion plug	1-2	70,71,72,73,78
BM 12437	Expansion plug	1	74,75,76,77
BM 13073	Intake manifold to cylinder stud	5/16"-18x1-1/4"	6 70,71,72,73,78
BM 71688	Intake manifold to cylinder stud	5/16"-18x2"	2 70,71,72,73,78
BM 227	Intake manifold to cylinder stud nut	3/8"-16x1-1/2"	8 74,75,76,77
BM 122	Intake manifold to cylinder stud nut	5/16"-18x5/16"	8 70,71,72,73,78
BM 110	Intake to manifold to cylinder stud nut	3/8"-16x3/8"	8 74,75,76,77
BM 71044	Intake to exhaust manifold bolt	3/8"-16x1-1/8"	2 70,71,72,73,78
BM 71243	Intake to exhaust manifold bolt	3/8"-16x1-1/4"	4 74,75,76,77
BM 18308	Intake to exhaust manifold bolt washer	2-4	All
F 152539	Intake manifold to cylinder gasket	* 1	70,71,72,73,78
F 152538	Intake manifold to cylinder gasket-large	2	74,75,76,77
F 152537	Intake manifold to cylinder gasket-small	* 2	74,75,76,77
BM 48590	Intake to exhaust manifold gasket	1	70,71,72,73,78
BM 152530	Intake to exhaust manifold gasket	* 1	74,75,76,77
BM 48613	Stud-for throttle return spring	1	70,71,73 Bs.Cpe.,78
BM 152699	Stud-for throttle return spring	* 1	72 thru 77 exc.Bs.Cpe.
BM 71691	Stud-for electric hand clip	1	72 thru 77 exc.Bs.Cpe.

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
INTAKE MANIFOLD (Cont'd.)				
BM 40633	Intake manifold windshield cleaner tube		1	70,71,73 Bs.Cpe.,78
BM 152540	Intake manifold windshield cleaner tube assembly		*	72 thru 77 exc.Bs.Cpe.
BM 11841	Windshield cleaner tube connector	Straight	1	70,71,73 Bs.Cpe.
BM 70661	Windshield cleaner tube connector	45°	1	72 thru 77 exc.Bs.Cpe.
BM 11842	Windshield cleaner tube nut	1/4"	1	All
BM 71100	Pipe plug (used without Vacuum clutch or Electric Hand)	3/8"	1	All
BM 71692	Vacuum connection elbow-single (Either vac.clutch or electric hand)	With Standard	1	70,71,72,73,78
BM 71694	Vacuum connection elbow-double (Both vac.clutch and electric hand)	Fuel pump	1	70,71,72,73,78
BM 71693	Vacuum connection elbow-single (Either vac.clutch or electric hand)	With combina-	1	70,71,72,73,78
BM 71695	Vacuum connection elbow-double - (Both vac.clutch and electric hand)	tion fuel	1	70,71,72,73,78
BM 71696	Reducing bushing (Neither vac.clutch nor electric hand)	pump	1	70,71,72,73,78
BM 120	Vacuum connection pipe plug		1	70,71,72,73,78
BM 71693	Vacuum connection elbow-single (Either vac.clutch or electric hand)		1	74 thru 77
BM 71695	Vacuum connection elbow-double (Both vac.clutch and electric hand)		1	74 thru 77
BM 71696	Reducing bushing (Neither vac. clutch nor elec. hand)		1	74 thru 77
BM 153881	Intake manifold drip pipe assembly		*	70,71,73 Bs.Cpe.,78
BM 153883	Intake manifold drip pipe assembly		*	72,73 exc.Bs.Cpe.
BM 153885	Intake manifold drip pipe assembly		*	74,75,76,77
BM 71622	Intake manifold drip pipe nut	1/4"	1	All
BM 152008	Intake manifold drip pipe check valve		1	All

FLYWHEEL AND CRANKSHAFT


L-5	C 152044	Crankshaft assembly	1	Six cylinder engine
	C 152045	Crankshaft assembly	1	Eight cylinder engine
	BM 44671	Crankshaft starting jaw	1	All
	BM 37015	Crankshaft starting jaw washer	1	All
	BM 40314	Bearing cap assembly No. 1	1	Six cylinder engine
	BM 42005	Bearing cap assembly No. 1	1	Eight cylinder engine
	BM 40315	Bearing cap No. 1	1	Six cylinder engine
	BM 42006	Bearing cap No. 1	1	Eight cylinder engine
	BM 37234	Bearing-upper No. 1	1	Six cylinder engine
	BM 37334	Bearing-upper No. 1	1	Eight cylinder engine
	BM 37235	Bearing-lower No. 1	1	Six cylinder engine
	BM 37335	Bearing-lower No. 1	1	Eight cylinder engine
	BM 37236	Bearing cap shim-thin No. 1	6	Six cylinder engine
	BM 37336	Bearing cap shim-thin-No. 1	6	Eight cylinder engine
	BM 37237	Bearing cap shim-thick-No. 1	6	Six cylinder engine
	BM 37337	Bearing cap shim-thick-No., 1	6	Eight cylinder engine
	BM 44672	Bearing cap assembly-No. 2	1	Six cylinder engine
	BM 37338	Bearing cap assembly-No. 2	1	Eight cylinder engine
	BM 35077	Bearing cap-No., 2	1	Six cylinder engine
	BM 33109	Bearing cap-No. 2	1	Eight cylinder engine
	BM 44673	Bearing--upper-No., 2	1	Six cylinder engine
	BM 37339	Bearing-upper-No. 2	1	Eight cylinder engine
	BM 44674	Bearing-lower-No. 2	1	Six cylinder engine
	BM 37340	Bearing-lower-No. 2	1	Eight cylinder engine
	BM 37241	Bearing cap shim-thin-No. 2 and 4	6	Six cylinder engine
	BM 37341	Bearing cap-shim-thin-No. 2 and 4	12	Eight cylinder engine
	BM 37242	Bearing cap shim-thick-No. 2 and 4	6	Six cylinder engine
	BM 37342	Bearing cap shim--thick-No. 2 and 4	12	Eight cylinder engine
	BM 37026	Bearing cap assembly-No. 3	1	Six cylinder engine
	BM 37343	Bearing cap assembly-No. 3	1	Eight cylinder engine
	BM 37016	Bearing cap-No. 3	1	Six cylinder engine
	BM 33114	Bearing-upper-No. 3	1	Eight cylinder engine
	BM 37017	Bearing-upper-No. 3	1	Six cylinder engine

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
FLYWHEEL AND CRANKSHAFT (Cont'd.)				
	BM 37344	Bearing-upper-No. 3	1	Eight cylinder engine
	BM 37018	Bearing-lower-No. 3	1	Six cylinder engine
	BM 37345	Bearing-lower-No. 3	1	Eight cylinder engine
	BM 38762	Bearing cap shim-thin-No. 3	6	Six cylinder engine
	BM 37346	Bearing cap shim-thin-No. 3	6	Eight cylinder engine
	BM 38763	Bearing cap shim-thick--No. 3	6	Six cylinder engine
	BM 37347	Bearing cap shim-thick-No. 3	6	Eight cylinder engine
	BM 37348	Bearing cap assembly-No. 4	1	Eight Cylinder engine
	BM 33119	Bearing cap-No. 4	1	Eight cylinder engine
	BM 37349	Bearing-upper-No. 4	1	Eight cylinder engine
	BM 37350	Bearing-lower-No. 4 (See No. 2 bearing for shims)	1	Eight cylinder engine
	BM 37353	Bearing cap assembly-No. 5	1	Right cylinder engine
	BM 37352	Bearing cap-No. 5	1	Eight cylinder engine
	BM 37354	Bearing-upper-No. 5	1	Eight cylinder engine
	BM 37355	Bearing-lower-No. 5	1	Eight cylinder engine
	BM 38764	Bearing cap shim-thin-No. 5	6	Eight cylinder engine
	BM 38765	Bearing cap shim-thick-No. 5	6	Eight cylinder engine
	BM 2335	Bearing screw	6-10	All
	BM 13569	Bearing cap (No. 1) packing	AR	All
	BM 37027	Bearing cap stud-No. 2 bearing	2	Six cylinder engine
	BM 60041	Bearing cap stud (short)	4-8	All
	BM 60042	Bearing cap stud (long)	2	All
				Six cylinder engine
	BM 154740	Bearing cap stud-No.2 bearing	2	All
	BM 154741	Bearing cap stud-short	4-8	All
	BM 154742	Bearing cap stud-long	2	All
	BM 33801	Bearing cap stud nut-First type	Castle	8-10
	BX 3433	Bearing cap stud nut-Second type	Plain	8-10
L-6	BM 44675	Crankshaft oil throw assembly--upper	1	All
L-7	BM 44677	Crankshaft oil throw-lower	1	All
L-9	BM 37327	Crankshaft oil throw gasket-upper	1	All
	BM 37328	Crankshaft oil throw gasket-lower	1	All
	BM 38948	Crankshaft oil throw reinforcement-lower	2	All
L-8	BM 70484	Crankshaft oil throw bolt	5	70,71,72,73
	BO 9159	Crankshaft oil throw bolt-lower	2	74,75,76,77
L-11	C 150100	Flywheel assembly--includes ring	1	78
L-11	C 44679	Flywheel assembly--includes ring	1	All
L-11	C 154613	Flywheel assembly--includes ring	1	All
L-12	F 44729	Flywheel ring	1	All
L-13	BM 40280	Flywheel bolt	6	All
	BM 71237	Flywheel bolt nut	3/8"-24x21/64"	6
	BM 40281	Flywheel drain plug	2	All
	BM 12117	Flywheel drain plug gasket	2	All
	BM 42082	Flywheel dowel pin	2	All
	BM 44684	Flywheel driving pin	3	All


CAMSHAFT

L-15	C 152644	Camshaft	*	1	Six cylinder engine
	C 152645	Camshaft	*	1	Eight cylinder engine
	BM 45480	Camshaft bearing No. 1		1	Six cylinder engine
	BM 45481	Camshaft bearing No. 1		1	Eight cylinder engine
	BM 45482	Camshaft bearing No. 2		1	Six cylinder engine
	BM 45483	Camshaft bearing No. 2		1	Eight cylinder engine
	BM 45484	Camshaft bearing No. 3		1	Six cylinder engine
	BM 45485	Camshaft bearing No. 3		1	Eight cylinder engine
	BM 45486	Camshaft bearing No. 4		1	Eight cylinder engine
	BM 45487	Camshaft bearing No. 5		1	Eight cylinder engine
	BM 61074	Camshaft bearing anchor plug		3-5	All
	BM 61978	Camshaft bearing anchor plug seal		3-5	All
L-16	BM 43435	Camshaft bearing thrust button		1	All
L-17	BM 61614	Camshaft bearing thrust button spring		1	All
	BM 40006	Camshaft bearing thrust plate (on timing gear cover)		1	All
	BM 555	Camshaft bearing thrust plate rivet	1/8"x5/16"	2	All
	BM 60701	Camshaft bearing thrust washer		1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
CONNECTING ROD				
L-18	F 44704	Connecting rod complete-R.H.	3-4	All
L-19	F 44705	Connecting rod complete-L.H.	3-4	All
	BM 44710	Connecting rod shim-thin	36-48	All
	BM 44711	Connecting rod shim-medium	36-48	All
	BM 44712	Connecting rod shim-thick	24-32	All
L-20	BM 44713	Connecting rod bolt	12-16	All
L-21	BM 44714	Connecting rod bolt nut	12-16	All
PISTON				
L-22	F 47097	Piston	6-8	All
	BM 43460	Ring pin	12-16	All
L-23	F 37929	Piston Pin-(Furnished in .002"-.005-.010" oversize)	6-8	All
	F 33332	Piston pin bushing	6-8	All
L-25	BM 60063	Piston pin lock ring	12-16	All
L-24	F 43452	Piston ring compression	12-16	All
L-24	F 43456	Piston ring oil	12-16	All
VIBRATION DAMPENER				
L-26	BM 44610	Vibration dampener assembly	1	All
L-27	BM 44611	Fan belt pulley	1	All
L-29	BM 44786	Hub	1	All
	BM 37024	Facing	2	All
	BM 37025	Cover plate	1	All
	BZ 908	Cover plate screw	5/16"-18x7/8"	6
L-28	BM 40286	Dampener spacer	1	All
	BM 71199	Dampener key	Special *A Woodruff	1
VALVES				
L-30	BM 152646	Valve tappet	12-16	All
L-31	BM 45444	Valve tappet guide	12-16	All
L-32	BM 61512	Valve tappet adjusting screw	12-16	All
	BM 45359	Valve tappet adjusting screw nut	12-16	All
	BM 60681	Valve tappet clamp	6	All
	BM 908	Valve tappet clamp bolt	5/16"-18x7/8"	6
L-33	F 150087	Inlet valve	6	Six cylinder engine
	F 150089	Inlet valve	8	Eight cylinder engine
L-35	F 15009i	Inlet valve guide	6-8	All
L-34	BM 150092	Exhaust valve guide	6-8	All
	F :50088	Exhaust valve	6	Six cylinder engine
	F 150090	Exhaust valve	8	Eight cylinder engine All
L-36	BM 45586	Valve spring	12-16	All
L-37	BM 150093	Valve spring seat	12-16	All
	BM 150626	Valve spring seat retainer	12-16	All
L-38	BM 45587	Valve spring dampener	12-16	Six cylinder engine
	BM 152647	Valve spring cover assembly	* 2	Eight cylinder engine
L-39	BM 44620	Valve chamber cover	2	Six cylinder engine
	BM 44629	Valve chamber cover plate	* 2	Eight cylinder engine
	F 152649	Valve chamber cover gasket	2	Six cylinder engine
	F 44622	Valve chamber cover gasket	2	Eight cylinder engine
L-40	BM 44623	Valve chamber cover screw	2	Six cylinder engine
	BM 44624	Valve chamber screw-long	2	Eight cylinder engine
	BM 70204	Valve chamber cover screw	4	Six cylinder engine
	BM 40429	Valve chamber cover screw gasket	2	All
	BM 44625	Breather tube	2	All
	BM 33154	Breather tube support	2	All
	BM 44626	Breather tube support gasket	2	All
	BM 44627	Breather tube clip	2	All
	BM 2704	Breather tube clip screw	1/4"-20x3/4"	

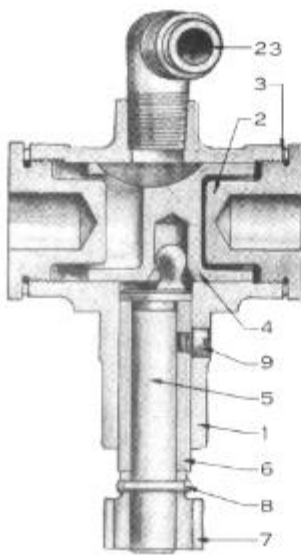


OIL PUMP

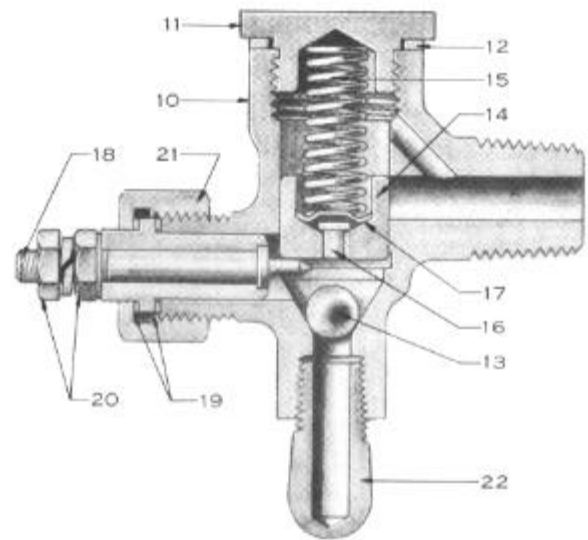

OIL CHECK VALVE

Illustration M

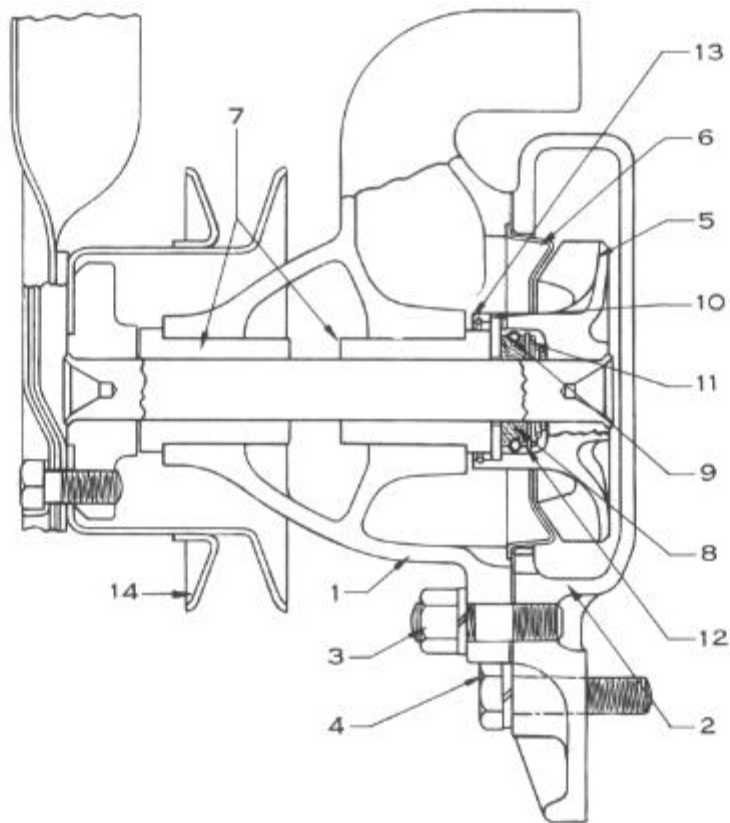WATER PUMP
Illustration P

ILLUS. NO	PART NO	NAME		PER CAR	MODEL
OIL PAN					
L-41	C 152690	Oil pan assembly	*	1	Six cylinder engine
	C 152692	Oil pan assembly	*	1	Eight cylinder engine
L-42	BM 38023	Oil return pipe assembly		1	Six cylinder engine
	BM 36406	Oil return pipe assembly		1	Eight cylinder engine
L-43	BM 152694	Suction pipe	*	1	Six cylinder engine
	BM 152695	Suction pipe	*	1	Eight cylinder engine
	BM 44749	Suction pipe flange		1	Six cylinder engine
	BM 44750	Suction pipe flange		1	Eight cylinder engine
	BM 44751	Suction pipe soldering plate		1	All
	F 44734	Oil pan gasket		2	Six cylinder engine
	F 44735	Oil pan gasket		2	Eight cylinder engine
	BM 219	Oil pan bolt	5/16"-18x3/4"	23-29	All
	BZ 12275	Oil pan bolt (at suction pipe)	5/16"-18x1"	1	All
	BZ 70177	Oil pan bolt washer	.317"x5/8x1/32"	1	All
L-45	BM 44754	Oil pan tray assembly		1	All
	BM 44756	Oil pan tray assembly		1	Six cylinder engine
	BM 46791	Oil pan tray screen assy		1	Eight cylinder engine
L-44	BM 5710	Oil pan drain plug	1/2 Extension Head	1	All
OIL PUMP AND CHECK VALVE					
				1	All
L-46	BM 44686	Oil pump complete		1	All
M-1	BM 44687	Body		1	All
M-2	BM 44688	Body plug			All
M-3	BM 44689	Body plug gasket			All
M-4	BM 44690	Plunger		1	All
M-5	BM 44692	Shaft			
M-8	BM 44693	Shaft bushing		1	All
M-7	BM 43723	Gear		2	All
M-8	BM 71195	Gear pin		2	All
M-9	BM 40293	Shaft bushing retaining screw		1	All
	BM 33179	Oil pump body gasket		1	All
	BM 71067	Oil pump body bolt		1	All
	BM 45200	Oil check valve assembly		1	All
M-10	BM 40296	Body		1	All
M-11	BM 19960	Body plug		1	All
M-12	BM 6791	Body plug gasket		1	All
M-13	BM 37270	Ball		2	All
M-14	BM 45201	Plunger		1	All
M-15	BM 37787	Plunger spring		1	All
M-16	BM 45203	Plunger pin		1	All
M-17	BM 45202	Plunger pin retainer		1	All
M-18	BM 37776	Pressure indicator contact pin assembly		1	All
M-19	BM 37777	Pressure indicator contact pin gasket		1	All
M-20	BM 71115	Pressure pin terminal nut	10-32x1/8"	1	All
M-21	BM 37791	Pressure pin contact pin nut		1	All
	BM 44912	Oil pump to check valve pipe assembly		1	Six cylinder engine
	BM 44914	Oil pump to check valve pipe assembly		1	Eight cylinder engine
	BM 36393	Oil pump to check valve pipe union (pipe end)		2	All
M-22	BM 11829	Oil pump to check valve pipe union elbow-valve end		2	All
	BM 44916	Oil pump to cylinder pipe assembly		1	Six cylinder engine
	BM 153459	Oil pump to cylinder pipe assembly	*	1	Eight cylinder engine
	BM 17976	Oil pump to cylinder pipe union (pump end)		1	All
	BM 11829	Oil pump to cylinder pipe union elbow-(cylinder end)		1	All
L-47	BM 44920	Oil pump suction pipe assembly		1	Six cylinder engine
	BM 153461	Oil pump suction pipe assembly	*	1	Eight cylinder engine
M-23	BM 71092	Oil pump suction pipe union elbow		1	All
WATER PUMP AND FAN					
	BM 150213	Water pump assembly		1	70,71,78
	BM 154599	Water pump assembly	*	1	73 Bs,Cpe.
	BM 150214	Water pump assembly		1	72,74,75,76,77
	BM 150627	Water pump assembly		1	73 exc.Bs.Cpe.

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
WATER PUMP AND FAN (Cont'd)				
P-1	BM 150215	Water pump body assembly	1	70,71,73 Bs.Cpe.,78
	BM 150217	Water pump body assembly	1	72 thru 77 exc.Bs.Cpe.
	BZ 2346	Water pump body plug	1	All
	BM 152546	Water pump body Zerk fitting	*	All
	BM 150219	Water pump body gasket	1	All
P-2	BM 150220	Impeller housing assembly	1	All
	BM 150222	Impeller housing gasket	1	All
	BM 227	Impeller housing stud	3	All
P-3	BM 110	Impeller housing stud nut	3	All
P-4	BM 9824	Impeller housing to cyl. bolt	2	All
P-5	BM 150224	Impeller	1	All
P-6	BM 150225	Impeller cup	1	All
	BM 150226	Shaft and pulley hub assembly	1	All exc.73
	BM 151528	Shaft and pulley hub assembly	21	73
P-7	BM 150228	Shaft bushing	1	All
P-8	BM 150230	Shaft oil seal	1	All
P-9	BM 150231	Shaft oil seal tension spring	1	All
P-10	BM 150232	Shaft oil seal thrust washer	1	All
P-11	BM 150233	Shaft seal compression spring	1	All
P-12	BM 150234	Shaft compression spring washer	1	All
P-13	BM 150235	Shaft seal retaining spring	1	All
P-14	BM 150236	Pulley assembly	1	All
	BM 150241	Pulley extension		73
	BM 908	Pulley extension bolt	4	73
	BZ 150724	Pulley extension bolt lock	2	73
	BM 45925	Fan blade	2	All
	BM 45926	Fan blade cushion	1	All
	BM 219	Fan blade bolt	4	All exc.73
	BT 395	Fan blade bolt	4	73
	BM 46086	Fan blade bolt lock	2	All
	F 150242	Fan belt	1	All
	F 150243	Outlet hose	1	All
	BM 71614	Outlet hose clamp (water jacket cover end)	1	All
	F 70327	Outlet hose clamp (water pump end)	1	All
	F 150244	By-Pass hose	1	72 thru 77 exc.Bs.Cpe.
	F 71255	By-Pass hose clamp	2	72 thru 77 exc.Bs.Cpe.

TIMING GEARS AND COVERS

F	150565	Camshaft gear	1	All
BM	4934	Camshaft gear bolt	2	All
BM	150566	Crankshaft gear	1	All
BM	11799	Crankshaft gear key	1	All
BM	151580	Timing gear cover assembly	1	All
BM	219	Timing gear cover bolt	12	All
BZ	122	Timing gear cover bolt nut	3	All
F	40150	Timing gear cover gasket	1	All
BM	40151	Timing gear cover oil seal	1	All
BM	40006	Camshaft thrust plate	1	All
BM	555	Camshaft thrust plate rivet	2	All

CARBURETOR AND AIR CLEANER

X Serviced by Carter Carburetor Corporation, St. Louis, Mo.

For parts list see page 83

XX Serviced by A.C. Spark Plug Company, Flint, Michigan

X	152995	Carburetor assembly	*	1	70,71,73 Bs.Cpe.,78
X	152997	Carburetor assembly	*	1	72 thru 77 exc.Bs.Cpe.
BM	71233	Carburetor to manifold stud-plain		1	70,71,73 Bs.Cpe.,78
BM	150404	Carburetor to manifold stud-drilled		1	70,71,73 Bs.Cpe.,78
BM	152989	Carburetor to manifold stud-plain	*	3	72 thru 77 exc.Bs.Cpe.
BM	152990	Carburetor to manifold stud-drilled	*	1	72 thru 77 exc.Bs.Cpe.
BM	6189	Carburetor to manifold stud nut		2	70,71,73 Bs.Cpe.,78
BM	611	Carburetor to manifold stud nut		4	72 thru 77 exc.Bs.Cpe.

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
CARBURETOR AND AIR CLEANER (Cont'd.)				
F 40710		Carburetor to manifold gasket	1	70,71,73 Bs.Cpe.,78
F 152991		Carburetor to manifold gasket	*	72 thru 77 exc.Bs.Cpe.
BM 71298		Carburetor heat box to manifold screw	2	72 thru 77 exc.Bs.Cpe.
XX 153137		Carburetor air clearer-standard	*	70,71,73 Bs.Cpe.,78
XX 153138		Carburetor air cleaner-standard } Without electric hand	*	72 thru 77 exc.Bs.Cpe.
XX 153139		Carburetor air cleaner-standard } With electric hand	*	70,71,73 Bs.Cpe.,78
XX 153140		Carburetor air cleaner-standard }	*	72 thru 77 exc.Bs.Cpe.
BM 153141		Carburetor air cleaner	*	70,71,73 Bs.Cpe.,78
BM 153142		Carburetor air cleaner	*	72 thru 77 exc.Bs.Cpe.
BM 154736		Carburetor air cleaner brace-after car Nos.70942,72707,7803	*	70,71,78,73 Bs.Cpe.
BM 153143		Carburetor air cleaner brace	*	72,73 exc.Bs.Cpe.
BM 153144		Carburetor air cleaner brace	*	74 thru 77
BX 3820		Carburetor air cleaner brace screw	*	70,71,78,73 Bs.Cpe.
BO 71364		Carburetor air cleaner brace screw	1	72 thru 77 exc.Bs.Cpe.
BM 48820		Electric hand pipe hole plug	1	All

FUEL PUMP


X Serviced by A.C.Spark Plug Company, Flint, Michigan
For parts list see page 86.

X 153270	Fuel pump assembly-standard	L.H.D.	*	1	70,71,72,73,78
X 153270	Fuel pump assembly-standard	R.H.D.	*	1	74,75,76,77
X 154184	Fuel pump assembly-standard	R.H.D.	*	1	All
X 153353	Combination fuel and vacuum pump assembly	L.H.D.	*	1	70,71,72,73,78
X 153353	Combination fuel and vacuum pump assembly	R.H.D.	*	1	74,75,76,77
X 154185	Combination fuel and vacuum pump assembly	R.H.D.	*	1	All
BM 153274	Fuel pump oil baffle	Used	*	1	All
BM 153273	Fuel pump oil baffle spacer	with	*	1	All
BM 153275	Fuel pump to cylinder gasket	standard	*	1	All
BM 154192	Fuel pump to cylinder bolt insulating sleeve	fuel	*	2	All
PM 154193	Fuel pump to cylinder bolt insulator washer	pump	*	2	All

The following parts are used with the combination fuel and vacuum pump and various combinations of clutch vacuum control and Electric Hand.


BM 153276	Fuel pump spacer	*	1	All
BM 154462	Fuel pump oil baffle assembly	*	1	All
BM 154438	Fuel pump to manifold pipe assembly (either or both vacuum clutch and Electric Hand),.	*	1	70,71,73 Bs.Cpe.,78
BM 154436	Fuel pump to manifold pipe assembly (neither vacuum clutch nor Electric Hand)	*	1	70,71,73 BS.Cpe.,78
BM 154440	Fuel pump to manifold pipe assembly (either vacuum clutch or Electric Hand)	*	1	72,73 exc.Bs.Cpe
BM 154442	Fuel pump to manifold pipe assembly (both vacuum clutch or Electric Hand)	*	1	72,73 exc.Bs.Cpe.
BM 154444	Fuel pump to manifold pipe assembly (neither vacuum clutch nor Electric hand)	*	1	72, 73 exc.Bs.Cpe.
BM 154190	Fuel pump to manifold pipe assembly	*	1	74,75,76,77
BM 17976	Pipe union-pump end		1	All
BM 17976	Pipe union-in fitting (both vacuum clutch and Electric Hand)		1	70,71,73 Bs.Cpe ,78
BM 36393	Pipe union-in fitting (either vacuum clutch or Electric Hand; or neither)		1	70,71,73 Bs.Cpe.,78
BM 17976	Pipe union-in fitting (either vacuum clutch or Electric Hand or neither)		1	72,73 exc.Bs.Cpe.
BM 36393	Pipe union-in fitting (both vacuum clutch and Electric Hand)		1	72 thru 77 exc.Bs.Cpe.
BM 11828	Pipe union nut	5/6"	1	All
BM 11829	Pipe union elbow	1/8" Pipe x 1/2"-20	1	74,75,76,77
BO 71733	Fuel pump to cylinder bolt	5/6"-18x-3/4"	2	All
BM 71638	Fuel pump to cylinder plain washer		2	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
FUEL PUMP (Cont'd.)				
	BM 45479	Fuel pump flexible connection	1	All
	BM 153776	Fuel pump to carburetor pipe assembly	* 1	70,71,78,73 Bs.Cpe.
	BM 153778	Fuel pump to carburetor pipe assembly	* 1	72,73 exc.Bs.Cpe.
	BM 153780	Fuel pump to carburetor pipe assembly L.H.D.	* 1	74,75,76,77
	BM 154186	Fuel pump to carburetor pipe assembly R.H.D.	* 1	74,75,76,77
	BM 17976	Fuel pump to carburetor pipe union 1/8"Pipe x1/2"-20	2	All
	BM 11828	Fuel pump to carburetor pipe union nut 5/18"	2	All
	HA 153993	Combination fuel and vacuum pump kit	* 1	70,71,72,73,78
	HA 153994	Combination fuel and vacuum pump kit	* 1	74,75,76,77
THROTTLE CONTROL				
	HZ 152907	Accelerator Pedal Complete L.H.D.	* 1	All
	BZ 152009	Accelerator Pedal Complete R.H.D.	1	All
	BZ 41207	Accelerator pedal anti rattle spring	1	All
	BZ 38209	Accelerator pedal anchor bracket	1	All
	BZ 786	Accelerator pedal anchor bracket rivet 3/16"x3/8"	3	All
	BO 71113	Accelerator pedal anchor bracket clevis pin - 1/4"x2"	1	All
	BZ 152968	Accelerator pedal to bellcrank link L.H.D.	* 1	All
	BZ 152012	Accelerator pedal to bellcrank link R.H.D.	1	All
	BZ 45979	Accelerator pedal toe plate bumper (without clutch vacuum control)	1	All
	BT 71522	Pedal to bellcrank link clevis pin 1/4"x7/8"	1	All
	BZ 38206	Pedal to bellcrank link silencing spring	1	All
	BZ 45164	Pedal to bellcrank link rubber sleeve	1	All
S-31	BZ 152969	Pedal link bellcrank	* 1	All
	BZ 38208	Pedal link bellcrank bracket	1	All
	BZ 786	Pedal link bellcrank bracket rivet L.H.D.	2	All
	BO 18447	Pedal link bellcrank bracket screw 10-32x5/8"	2	All
	BZ 6998	Pedal link bellcrank clevis pin 1/4"x5/8"	1	All
S-32	BZ 152970	Pedal link bellcrank to cross shaft rod L.H.D.	* 1	All
	BZ 152988	Pedal link bellcrank to cross shaft rod R.H.D.	* 1	All
S-33	BZ 154925	Cross shaft assembly L.H.D.	* 1	All
	BZ 152972	Cross shaft assy.-short-without vacuum clutch R.H.D.	* 1	All
	BZ 154927	Cross shaft assy.-long-with vacuum clutch R.H.D.	* 1	All
	BO 18447	Cross shaft bracket screw 10-32x5/8"	4	All
	BO 71073	Cross shaft bracket screw nut 10-32x1/8"	4	All
	8Z 152980	Cross shaft anti-rattle spring	* 2	All
	BZ 152982	Cross shaft to manifold or carburetor bellcrank rod assembly	* 1	70,71,72,73,78
	BZ 152985	Cross shaft to carburetor bellcrank rod assembly	* 1	74,75,76,77
	BZ 45175	Cross shaft to bellcrank rod ball joint	1	All
	BO 71073	Cross shaft to bellcrank rod clevis nut (ball joint end)-10-32x1/8"	1	All
	BZ 5825	Cross shaft to bellcrank rod clevis pin 3/16"x11/16"	1	All
	BZ 5771	Cross shaft to bellcrank rod clevis	1	All
	BO 71073	Cross shaft to bellcrank rod clevis nut 10-32x1/8"	1	All
	BZ 45169	Throttle control manifold bellcrank	1	70,71,78,73 Bs.Cpe.
	BM 41133	Throttle control manifold bellcrank spring	1	70,71,78,73 Bs.Cpe.
	BZ 43220	Throttle control manifold bellcrank stud	1	70,71,78,73 Bs.Cpe.
	BZ 262	Throttle control manifold bellcrank stud washer	1	70,71,78,73 Bs.Cpe.
	BZ 150606	Manifold bellcrank to carburetor rod assembly	1	70,71,78,73 Bs.Cpe.
	BO 71073	Manifold bellcrank to carburetor rod nut 10-32x1/8"	2	70,71,78,73 Bs.Cpe.
S-34	BZ 152987	Throttle control return spring	* 1	All
	BZ 154737	Throttle control return spring-at carburetor	* 1	72,73 exc.Bs.Cpe.
	BO 63371	Throttle control return spring clip (on dash) without clutch vacuum cont	L.H.D. 1	All
	BO 71648	Throttle control return spring clip screw L.H.D.	1	All
CLUTCH				
	PT 45140	Clutch assembly	1	70,71,72,73
	BT 45141	Clutch assembly	1	74,75,76,77,78
R-1	F 45142	Clutch driving plate assy	1	70,71,72,73
	F 45143	Clutch driving plate assy	1	74,75,76,77,78

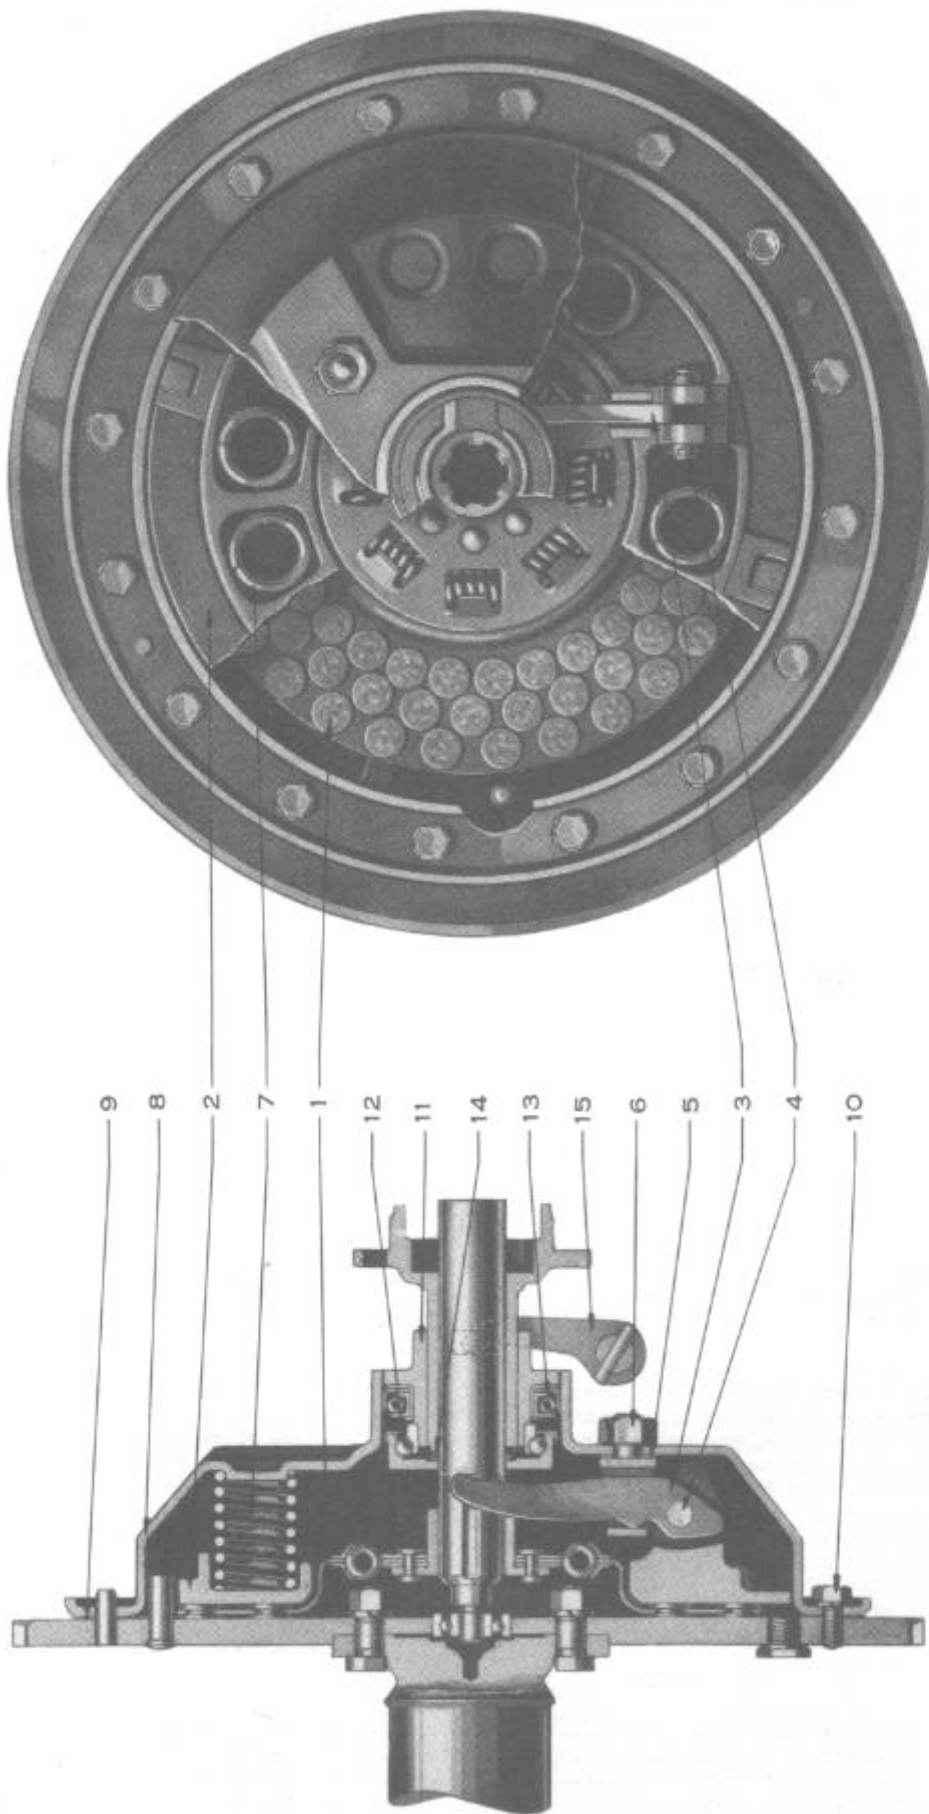




CLUTCH
Illustration R

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
CLUTCH (Cont'd.)				
R-2	BT 45152	Clutch pressure plate	1	70,71,72,73
	BT 45153	Clutch pressure plate	1	74,75,76,77,78
R-3	BT 40038	Clutch throw out finger	3	All
R-4	BT 47633	Clutch throw out finger pin	3	All
R-5	BT 40042	Clutch throw out finger retainer	3	All
	BT 71157	Clutch throw out finger retainer washer	3	All
	BO 70867	Clutch throw out finger retainer lock washer..	3	All
R-6	BT 70194	Clutch throw out finger ret. nut	3	All
R-7	BT 45148	Clutch engaging spring	9	70,71,72,73
	BT 45154	Clutch engaging spring-inner	6	70,71,72,73
	BT 45149	Clutch engaging spring	12	74,75,76,77,78
R-8	BT 40045	Clutch cover	1	70,71,72,73
	BT 42628	Clutch cover	1	74,75,76,77,78
R-9	F 40046	Clutch cover gasket	1	70,71,72,73
	F 42632	Clutch cover gasket	1	74,75,76,77,78
R-10	BT 100745	Clutch cover bolt	18	70,71,72,73
	BZ 70831	Clutch cover bolt	18	74,75,76,77,78
R-11	BT 42630	Clutch collar assy	1	All
R-12	BT 41258	Clutch throw out bearing	1	All
R-13	BT 40047	Clutch throw out bearing oil seal	1	All
R-14	BT 42587	Clutch throw out bearing grease retainer	1	All
R-15	BT 40055	Clutch shifter yoke	1	All
	BZ 71174	Clutch shifter yoke taper pin	2	All
	BT 42970	Clutch shifter yoke shaft	1	All
	BT 40308	Clutch shifter yoke shaft bushing	4	All
	BT 152642	Clutch shifter shaft coupling lever	L.H.D. *	1 All
	BT 152643	Clutch shifter shaft coupling lever	R.H.D. *	1 All
	BT 2354	Clutch shifter shaft coupling lever taper pin	1	All
	BZ 33980	Clutch shifter shaft coupling lever return spring	1	All
	BT 43964	Yoke shaft coupling lever bushing (rubber)	1	All
	BT 48891	Clutch shifter shaft transmission lock operating lever-low and reverse	L.H.D. *	1 All
	BT 2354	Clutch shifter shaft transmission lock operating lever taper pin	L.H.D. *	1 All
CLUTCH CONTROL				
	BZ 152561	Cross shaft and bracket assy	L.H.D. *	1 All
	BZ 152562	Cross shaft and bracket assy	R.H.D. *	1 All
	BZ 152563	Cross shaft bracket	L.H.D. *	1 All
S-35	BZ 152564	Cross shaft bracket	R.H.D. *	1 All
	BM 219	Cross shaft bracket bolt	5/18"-18x3/4"	2 All
S-38	BZ 152565	Cross shaft and lever assy	L.H.D. *	1 All
	BZ 152566	Cross shaft and lever assy	R.H.D. *	1 All
	BZ 152570	Cross shaft coupling lever	L.H.D. *	1 All
	BZ 152571	Cross shaft coupling lever	R.H.D. *	1 All
	BZ 152572	Cross shaft lever pad	Rubber *	2 All
	BZ 42938	Cross shaft felt	1	All
	BZ 45053	Cross shaft felt retainer	1	All
	BZ 45054	Cross shaft felt retainer spring	1	All
	BZ 18227	Cross shaft felt retainer spring washer	3/4"	1 All
	BZ 45235	Control link assembly	*	1 All
	BZ 45236	Control link	1	All
	BZ 71290	Control link clevis	1	All
	BT 71030	Control link clevis nut	5/16"-24x3/18"	1 All
	BZ 8683	Control link clevis pin	5/16"x1-1/32"	1 All
	BZ 71256	Control link clevis pin (clutch pedal)	5/16"x1-1/16"	1 All
CLUTCH VACUUM CONTROL				
S-1	BM 153216	Vacuum control cylinder, valve & pendulum assy	*	1 All
	BZ 154103	Vacuum control cylinder-less valve	*	1 All
S-2	BZ 12310	Control cylinder to bracket bolt	3/8"-24x1-3/8"	1 All
S-3	BZ 12415	Control cylinder to bracket bolt nut-	3/8"-24x21/64"	1 All
	BZ 71719	Control cylinder to brkt. bolt companion nut-	3/8"-24	1 All
S-4	BZ 150590	Control piston rod clevis	1	All
S-5	BZ 62	Control piston rod clevis lock nut.	3/8"-24x21/84"	1 All

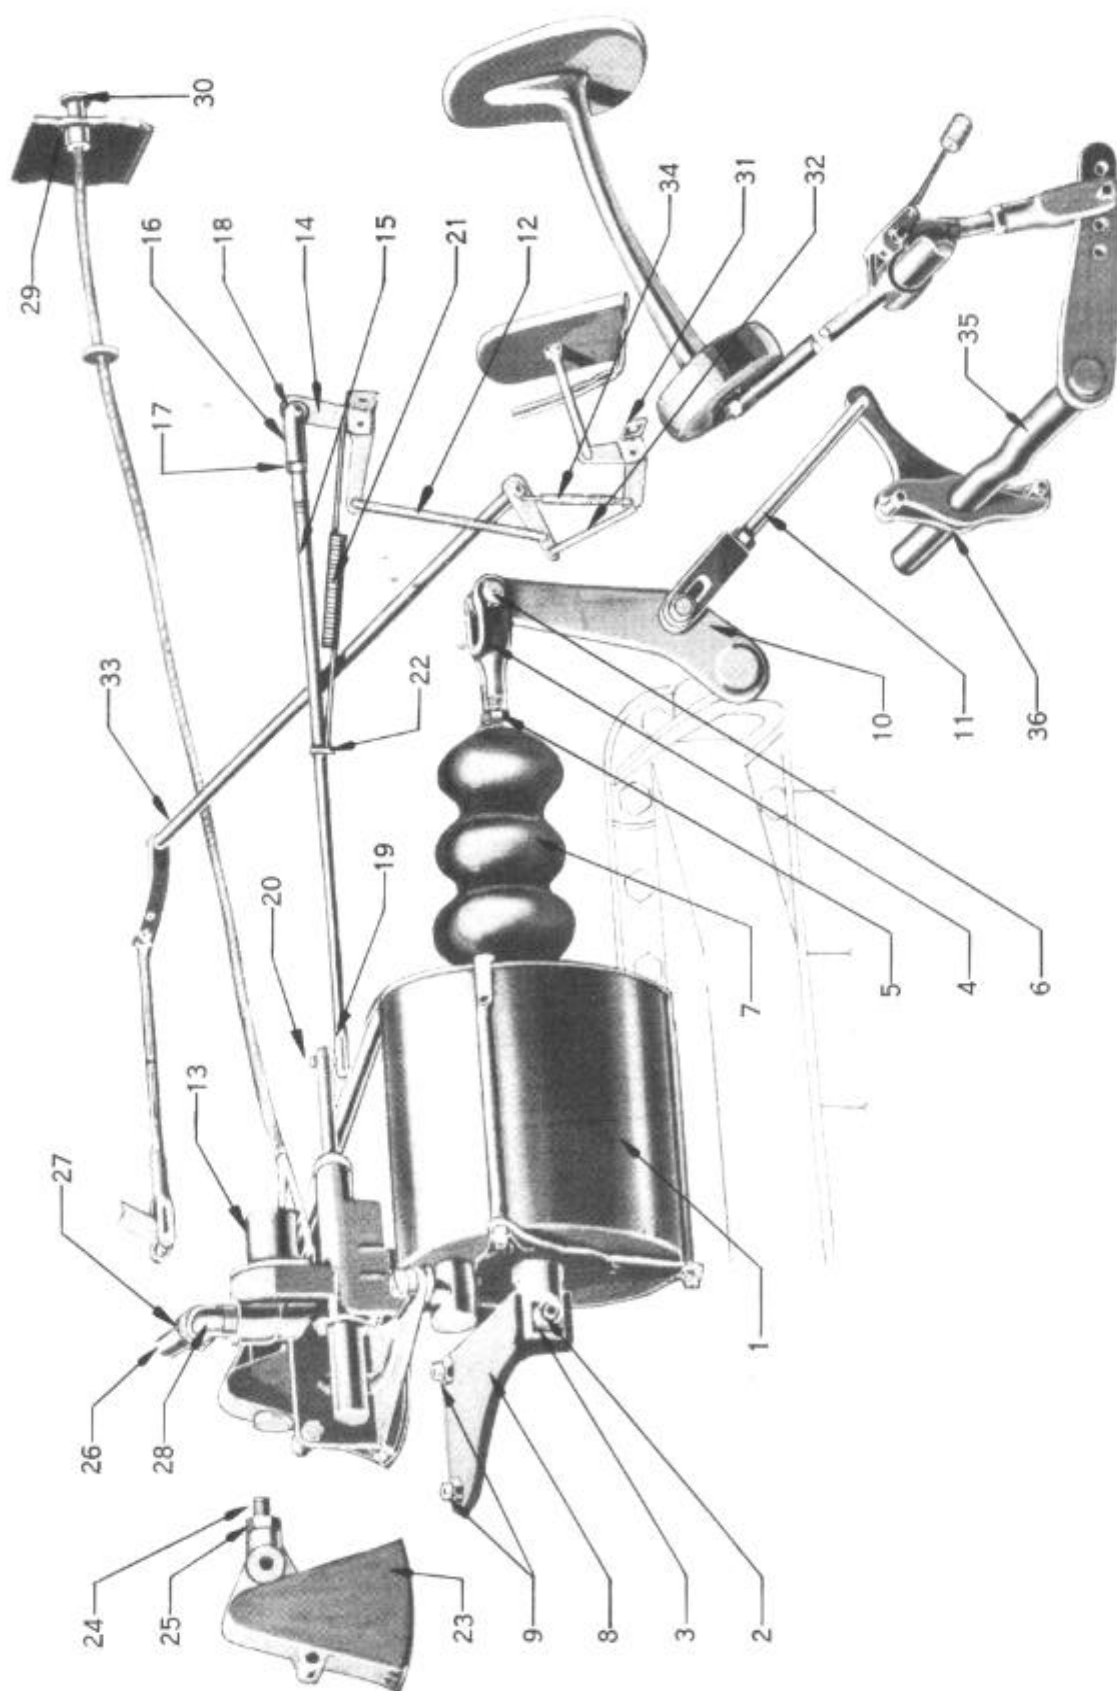

CLUTCH VACUUM CONTROL

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
CLUTCH VACUUM CONTROL (Cont'd.)				
S-6	BT 71506	Control piston rod clevis pin	5/16"x1-1/32"	1 All
S-7	BZ 151521	Control piston rod guard	Rubber	1 All
	BZ 151422	Cylinder mounting bracket assy		1 Six cylinder models
S-8	BZ 150587	Cylinder mounting bracket assy		1 Eight cylinder models
	BM 6189	Cylinder mounting bracket stud nut	3/8"-16x21/64"	2 Six cylinder models
S-9	BM 9665	Cylinder mounting brkt. stud nut	7/8"-14x3/8"	2 Eight cylinder models
S-10	BZ 150591	Vacuum control bellcrank assy		1 All
S-11	HZ 153218	Bellcrank to coupling lever rod	*	1 All
	BO 12481	Bellcrank to coupling lever rod nut	5/6"-14x7/64"	2 All
	HZ 71256	Bellcrank to coupling lever rod play link clevis pin	5/16"x1-1/16"	1 All
	BZ 40436	Bellcrank to coupling lever rod play link clevis pin spring		1 All
	BZ 40436	Bellcrank to coupling lever rod silencing spring		1 All
	BZ 43473	Bellcrank bracket assy		1 Six cylinder models
	HZ 43031	Bellcrank bracket assy		1 Eight cylinder models
S-12	BZ 152970	Vacuum control lever rod (to accelerator shaft)	*	1
	BZ 154067	Control and accelerator valve assembly	*	1 All
S-13	BZ 154076	Control valve solenoid and housing assembly	*	1 All
	BT 154088	Control valve solenoid plunger stop washer	*	1 All
	HZ 154082	Control valve solenoid housing gasket	*	1 All
	BO 71665	Control valve solenoid housing screw	8-32x5/16"	2 All
	BT 154087	Control valve solenoid plunger		1 All
	BT 48877	Control valve solenoid plunger disc		1 All
	BT 48715	Control valve solenoid plunger spring		1 All
S-14	BZ 153219	Control valve bellcrank	*	1 All
	8Z 153246	Control valve bellcrank bracket	*	1 All
	BO 18459	Control valve bellcrank brkt. screw	10-32x1/2"	2 All
	HZ 6998	Control valve bellcrank clevis pin	1/4"x5/8"	1 All
S-15	BZ 153247	Control valve rod assy	*	1 All
S-16	BZ 5771	Control valve rod clevis		1 All
S-17	BO 71073	Control valve rod nut	10-32x1/8"	1 All
S-18	BZ 5825	Control valve rod clevis pin	3/16"x11/16"	1 All
S-19	BZ 45175	Control valve rod ball joint		1 All
S-20	BO 71073	Control valve rod ball joint nut	10-32x1/8"	1 All
S-21	HZ 152987	Control valve rod pull back spring	*	1 All
S-22	BZ 63371	Control valve rod pull back spring clip		1 All
S-23	HZ 154090	Vacuum control pendulum valve assembly	*	1 All
	BZ 44024	Pendulum housing cover plate		1 All
	HZ 151828	Pendulum housing expansion plug		1 All
	BT 151997	Pendulum plunger spring		1 All
S-24	BT 151998	Pendulum plunger adjusting screw		1 All
S-25	BZ 12334	Pendulum plunger adjusting screw lock nut		1 All
	BZ 154096	Pendulum to valve tube union (valve)	*	1 All
	PT 48429	Pendulum to valve tube union elbow (pendulum)		1 All
	BZ 153718	Vacuum control vacuum pipe assembly	*	1 70,71,78.73 Bs.Cpe.
	BZ 153720	Vacuum control vacuum pipe assembly	*	1 72,73 exc.Bs.Cpe.
S-26	BZ 153722	Vacuum control vacuum pipe assembly	*	1 74,75,76,77
S-27	HZ 71167	Vacuum pipe flared tube nut	1/2"	2 All
S-28	BM 71092	Vacuum pipe elbow-intake manifold	3/8"-3/4"-16	1 All
S-29	BZ 153249	Instrument panel switch	*	1 All
	BZ 153201	Switch mounting collar	*	1 All
S-30	HZ 153203	Switch knob	*	1 All
	BZ 153204	Switch knob retainer spring	*	1 All
	BZ 153205	Switch knob set screw	*	1 All
	BZ 153259	Governor switch assembly	*	1 All
	BZ 154042	Governor switch square drive shaft	*	1 All
	BZ 154043	Governor circuit breaker	*	1 All
	BZ 154044	Governor circuit breaker gasket	*	1 All
	BZ 71741	Governor circuit breaker screw	6-3x1/2"	3 All
	BO 154534	Clip-governor switch wire to transmission cover	*	1 All
	BZ 153264	Governor switch adapter	*	1 All
	BT 154588	Governor switch adapter drive shaft	*	1 All
	BO 154296	Governor switch adapter zerk fitting		1 All
	BZ 153265	Shift rail switch	*	1 All

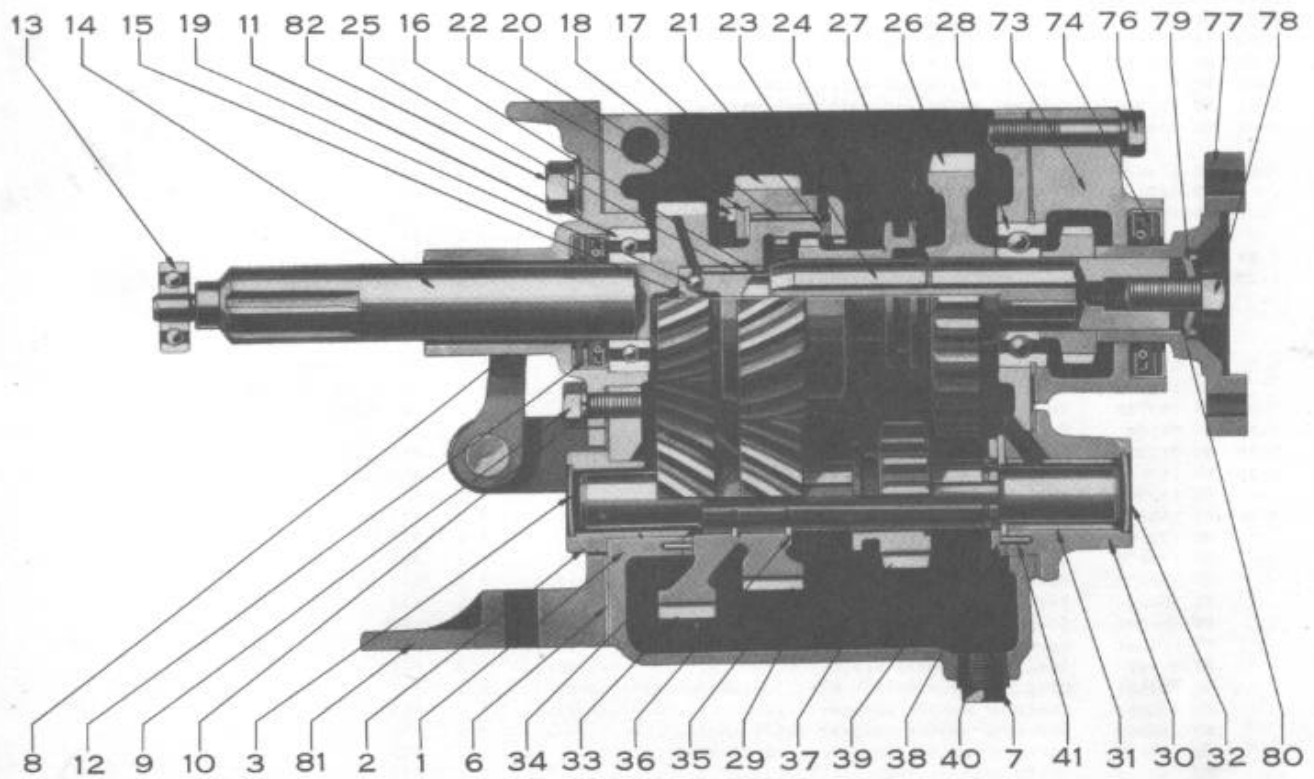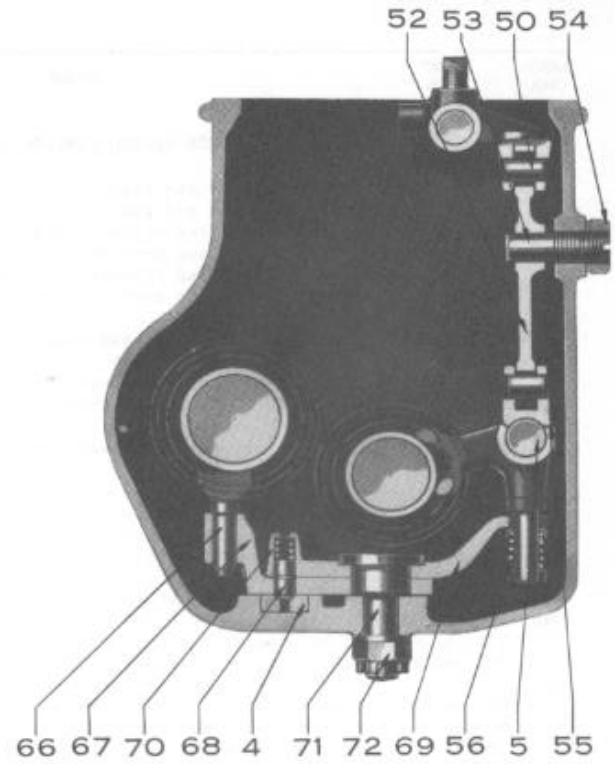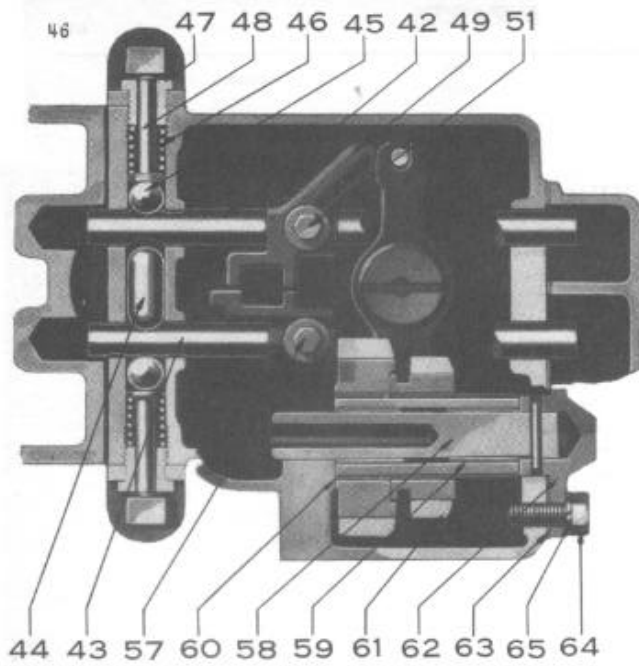

TRANSMISSION
Illustration T

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
CLUTCH VACUUM CONTROL (Cont'd.)				
	BZ 71485	Shift rail switch screw	10-32x1/4"	2 All
	BZ 153209	Shift rail switch gasket	*	1 All
	BT 154473	Clutch vacuum control complete-service kit	*	1 70.71,78, 73 Bs.Cpe.
	BT 154474	Clutch vacuum control complete-service kit	*	1 72,73 exc.Bs.Cpe.
	BT 154475	Clutch vacuum control complete-service kit	*	1 74.75.76,7'7

TRANSMISSION

NOTE: Transmission assemblies do not include bell housing or low and reverse interlock strap. Do include interlock plunger and bracket.

NOTE: Second type transmission has a retainer between the countershaft drive gear and countershaft intermediate gear, making necessary new part numbers for transmission case assembly, countershaft, countershaft front bushing and countershaft drive gear.

	C 153300	Transmission assembly-4-1/9 to 1	*	1 All
	C 153301	Transmission assembly-4-5/9 to 1	*	1 All
T-1	C 154758	Transmission assembly-5-1/8 to 1	*	1 70-78
	C 150138	Transmission case assembly-first type with 150148 bshg.		1 All
	C 154549	Transmission case assy.-second type with 154553 bshg.*		1 All
	BT 47255	Case stud-for electric hand power unit		1 All
	BT 47203	Cross shift bellcrank stud-for electric hand		1 All
T-2	BT 150148	Countershaft bushing-front-first type, straight		1 All
	BT 154553	Countershaft bushing-front-second type, beveled, used with 154551 countershaft	*	1 All
T-3	BM 14112	Countershaft bushing expansion plug		1 All
T-4	BT 47642	Reverse gear shift lever locator seat		1 All
T-5	BT 45598	Low and reverse shifter fork shaft		1 All
	BT 71294	Low and reverse shifter fork shaft set screw	1/4"-20x3/8"	1 All
T-6	BT 40079	Transmission case gasket		1
T-7	BZ 2346	Filler and drain plug	3/8"Extension Head	2 All
T-8	BT 42114	Main drive gear bearing retainer		1 All
	BT 40082	Main drive gear bearing retainer shim-thin		AR All
	BT 40083	Main drive gear bearing retainer shim-thick		AR All
T-9	BZ 219	Main drive gear bearing retainer screw	5/16"-18x3/4"	3 All
	BZ 71126	Main drive gear bearing ret. screw lockwasher	5/16"	3 All
T-10	F 401	Main drive gear bearing		1 All
T-11	BT 40084	Main drive gear bearing oil seal		1 All
T-12	F 71161	Main drive gear pilot bearing		1 All
T-13	BT 47291	Main drive gear assembly		1 All
T-14	BT 44165	Main shaft thrust ball seat		1 All
T-15	BT 44170	Main shaft needle roller retaining ring		1 All
T-16	BT 48800	Main shaft intermediate gear assembly		1 All
T-17	BT 45018	Main shaft intermediate gear bushing		1 All
T-18	BT 17919	Main shaft thrust ball		7 All
T-19	BT 48802	Main shaft intermediate gear thrust washer-front		2 All
T-20	PT 40093	Main shaft intermediate gear thrust washer-rear		1 All
T-21	BT 48803	Main shaft intermediate gear thrust washer-retainer		1 All
T-22	BT 150142	Main shaft assembly		1 All
T-23	BT 45626	Main shaft plug		1 All
	BT 150209	Main shaft second and high shift sleeve		1 All
T-24	BT 44169	Main shaft needle roller		26 All
T-25	BT 150144	Main shaft low and reverse gear		1 All
T-28	BT 47300	Main shaft low and reverse gear retainer		2 All
T-27	F 42108	Main shaft bearing		1 All
T-28	BT 40061	Main shaft bearing snap ring		1 All
	BT 150146	Countershaft-first type		1 All
T-29	BT 154551	Countershaft-second type, with groove for drive gear retainer	*	1 All
T-30	BT 150161	Countershaft cap assy		1 All
T-31	BT 150149	Countershaft bushing-rear		1 All
T-32	BT 71165	Countershaft cap expansion plug	1-1/8"	1 All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
TRANSMISSION (Cont'd.)				
	BT 40105	Countershaft cap shim-thin	AR	All
	BT 40106	Countershaft cap shim-thick	AR	All
	BT 219	Countershaft cap screw	2	All
	BZ 71126	Countershaft cap screw lockwasher	2	All
	9T 40107	Countershaft cap gasket	1	All
	BT 150163	Countershaft drive gear-first type	1	All
T-33	BT 154554	Countershaft drive Rear-second type with counterbore for retainer	* 1	All
T-34	BT 150164	Countershaft drive gear thrust washer assy	1	All
T-35	BT 47302	Countershaft intermediate gear	1	All
T-36	BT 47305	Countershaft intermediate gear retainer	1	All
NOTE: Two BT 47305 retainer used with second type drive gear BT 154554				
T-37	BT 150166	Countershaft low and reverse gear	1	All
T-38	BT 40112	Countershaft thrust washer	1	All
T-39	BT 47305	Countershaft thrust washer retainer	1	All
T-40	BT 44175	Countershaft thrust washer spacer	1	All
T-41	BT 10965	Countershaft thrust washer spacer pin	2	All
T-42	BT 150095	Low and reverse shift rail	1	All
T-43	BT 150097	Second and high shift rail	1	All
T-44	BT 40122	Shift rail interlock	1	All
T--45	BT 58	Lock ball	1/2" 2	All
T-46	BT 47641	Lock ball spring	2	All
T-47	BT 48673	Lock ball spring cap	2	All
T-48	BT 48674	Lock plunger	2	All
	BZ 48855	Interlock kit-(low and reverse-2nd and high)	1	All
	BZ 48675	Shift rail lock rod	2	All
	BT 5825	Shift rail lock rod clevis pin	3/16"x11/16" 2	All
	BT 48676	Shift rail lock rod sleeve	2	All
	BT 41151	Shift rail lock rod spring	2	All
	BO 71389	Shift rail lock rod spring washer	21/64"x3/4"x1/16" 2	All
	BM 71443	Shift rail lock rod nut	1/4"-28x7/32" 4	All
	BO 252	Shift rail lock rod washer	17/64"x9/16"x1/16" 4	All
	BT 48677	Shift rail lock rod link	2	All
	AT 48678	Shift rail lock rod link guide	2	All
	BT 48679	Shift rail lock rod link shim	AR	All
	AT 48680	Shift rail lock rod link shim assembly	AR	All
T-49	BT 152696	Low and reverse shifter	1	All
T-50	BT 7163	Low and reverse shifter assembly pin.	.314"x9/16" 1	All
T-51	BT 40993	Low and reverse shifter lock screw	1	All
T-52	BT 40126	Low and reverse shifter intermediate lever	1	All
T-53	BT 40127	Low and reverse shifter intermediate lever stud	1	All
T-54	AT 12167	Low and reverse shifter intermediate lever stud nut	7/16"-14x1/4" 1	All
T--55	BT 150204	Low and reverse shifter fork assembly	1	All
T-56	BT 44178	Low and reverse shifter fork spring	1	All
	BT 44179	Low and reverse shifter fork spring seat	2	All
	BT 152698	Second and high shifter fork	* 1	All
T--57	BT 40993	Second and high shifter fork lock screw	1	All
T-58	BT 151184	Reverse gear shaft-stationary	1	All
	BT 151788	Reverse gear-(stationary)& shaft-(Rotating)assy	1	All
T-59	BT 46444	Reverse gear shaft-(rotating)bushing	2	All
T-60	BT 44187	Reversing gear-(stationary)-retainer	2	All
	BT 150197	Reverse gear-sliding	1	All
	FT 150198	Reverse gear shaft cap	1	All
	BZ 44190	Reverse gear shaft cap gasket	1	All
	BZ 219	Reverse gear shaft cap screw	5/16"-18x3/4" 2	All
	BZ 71126	Reverse gear shaft cap screw lockwasher	5/16" 2	All
	BT 150199	Reverse gear shifter	1	All
	BT 44195	Reverse gear shifter lever	1	All
	BT 44196	Reverse gear shifter lever locator pin	1	All
	BT 47642	Reverse gear shifter lever locator seat	1	All
	BT 151400	Reverse gear shifter pick-up lever	1	All
	BT 44196	Reverse gear shifter pick-up lever plunger	1	All
	BT 47624	Reverse pick-up lever plunger spring	1	All
	BT 150202	Reverse gear shifter lever fulcrum	1	All
	BT 3488	Reverse gear shifter lever fulcrum nut-	7/16"-20x29/64" 1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

TRANSMISSION (Cont'd.)


T-73	BT 44204	Speedometer gear housing			1	All	
T-74	BT 40133	Speedometer gear housing oil seal			1	All	
	BT 44206	Speedometer gear housing gasket			1	All	
T-76	BZ 70862	Speedometer gear housing screw-long.	5/16"-18x1-7/8"		1	All	
	BT 219	Speedometer gear housing screw-short	5/16"-18x3/4"		2	All	
	BZ 71126	Speedometer gear housing screw lockwasher	5/16"		3	All	
	BT 38067	Speedometer pinion sleeve			1	All	
	BT 153451	Speedometer gear-4-1/9 and 4-5/9 to 1	}	Used with	*	1	All
	BT 153452	Speedometer pinion-4-1/9 to 1		clutch	*	1	All
	BT 153454	Speedometer pinion-4-5/9 to 1		vacuum control*		1	All
	BT 40662	Speedometer gear-4-1/9 to 1	}	Used without		1	All
	BT 43114	Speedometer gear-4-5/9 to 1		clutch		1	All
	BT 40663	Speedometer pinion-4-1/9 to 1		vacuum		1	All
	BT 43116	Speedometer pinion-4-5/9 to 1		control		1	All
	BT 153455	Speedometer gear-3-8/9 to 1			*	1	All
	BT 153456	Speedometer pinion-3-8/9 to 1			*	1	All
	BT 153455	Speedometer gear-3-5/9 to 1			*	1	All
	BT 153458	Speedometer pinion-3-5/9 to 1			*	1	All
	PT 154769	Speedometer gear-5-1/8 to 1			*	1	All
	BT 154770	Speedometer pinion-5-1/8			*	1	All
T-77	BT 150208	Companion flange				1	All
T-78	BO 18236	Companion flange screw	7/16"-20x1"			1	All
T-79	BT 40136	Companion flange screw washer				1	All
T-80	BT 40532	Companion flange screw washer seal				1	All
T-81	BT 41042	Companion flange screw gasket				1	All
	BT 47332	Clutch housing assembly				1	All
T-82	BT 40308	Shifter yoke shaft bushing				4	All
	BZ 71081	Clutch housing to trans. case bolt	3/8"-16x1"			6	All
	BZ 71076	Clutch housing to trans. case bolt lockwasher-shkprf				6	All
	BT 71171	Clutch housing to cyl. plate bolt-pilot	3/8"-24x1-13/16"			1	All
	BT 18430	Cl. hsg. to cyl. plate bolt	3/8"-24x2-1/8" L.H.D.			1	All
	BT 71159	Cl. hsg. to cyl. plate bolt	3/8"-16x2-5/8" R.H.D.			1	All
	BX 12415	Cl. hsg. to cyl. plate bolt nut.	3/8"-24x21/64" L.H.D.			2	All
	BM 6189	Cl. hsg. to cyl. plate bolt nut.	3/8"-16x21/64" R.H.D.			1	All
	BT 71160	Cl. hsg. to cyl. bolt-short	7/16"-14x1-3/4"			1	All
	BT 71159	Cl. hsg. to cyl. bolt-long....	3/8"-16x2-5/8"			1	All
	BZ 47648	Clutch housing Zerk				1	All
	BZ 14864	Clutch housing expansion plug				1	All
	BZ 45019	Transmission bumper-side				2	All
	BZ 45020	Transmission bumper-side-retainer				2	All
	BZ 45021	Transmission bumper-side-bracket				1	All
	BZ 152689	Transmission bumper-side-bolt			*	2	All
	BZ 232	Transmission-bumper-side bolt nut	7/16"-20x3/B"			4	All

TRANSMISSION CONTROL-CONVENTIONAL

C 153046	Transmission control assembly	*	1	All
BT 40222	Cover assembly		1	All
BT 40224	Fulcrum pin		1	All
C 153048	Control lever assembly	*	1	All
BT 43553	Control lever knob		1	All
BT 40233	Control lever fulcrum oil seal		1	All
BT 40234	Control lever fulcrum washer		1	All
BT 40235	Control lever fulcrum spring		1	All
BZ 219	Cover screw 5/16"-18x3/4"		4	All
BT 40226	Cover gasket		1	All

ELECTRIC HAND TRANSMISSION CONTROL

BT 153998	Transmission cover assembly		1	All
BT 151787	Transmission cover fulcrum		1	All
BT 35443	Transmission cover fulcrum screw lock		1	All

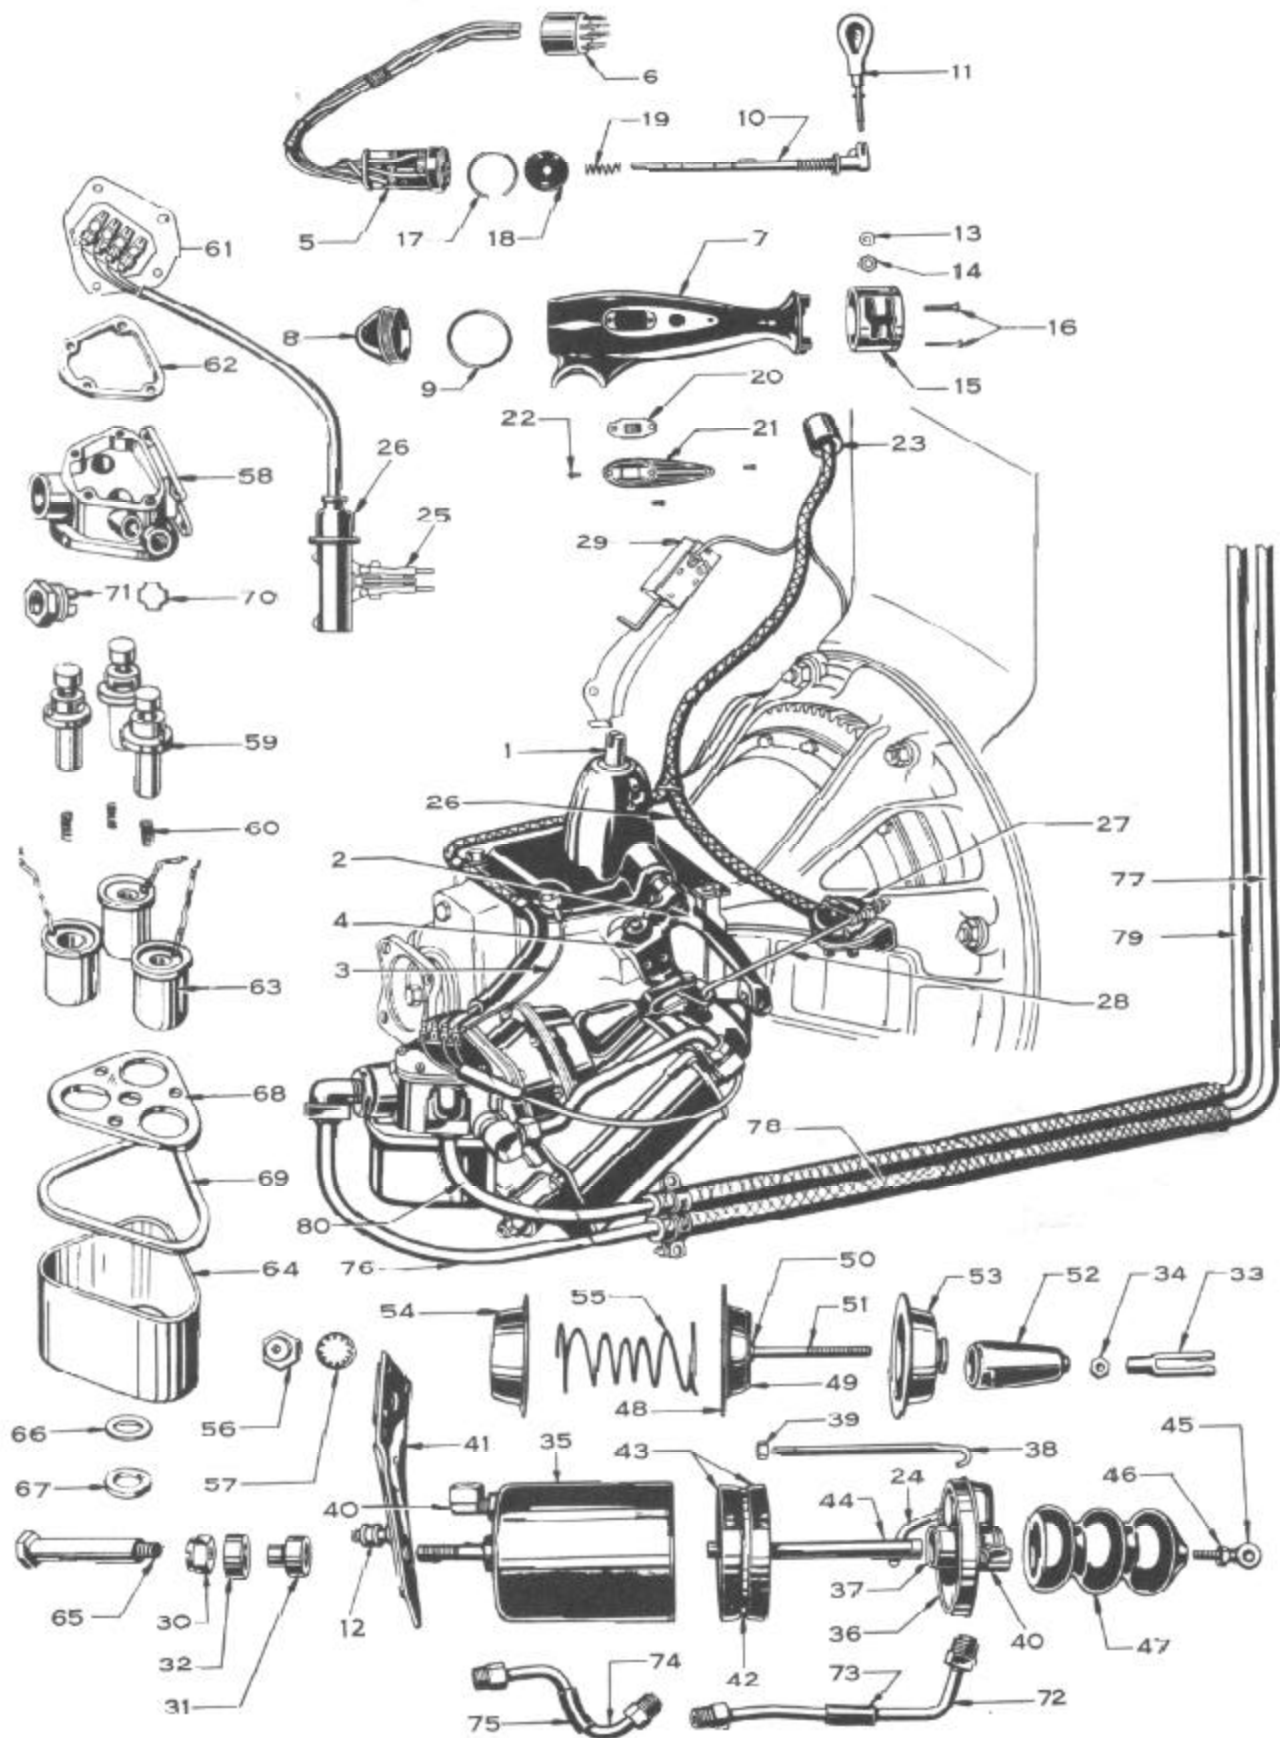


ELECTRIC HAND
Illustration U

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
ELECTRIC HAND TRANSMISSION CONTROL (Cont'd.)				
U-1	BT 47198	Control lever-lower-assembly	1	All
	BT 47200	Control lever fulcrum oil seat	1	All
	BT 47191	Control lever fulcrum spring	1	All
	BT 40234	Control lever fulcrum washer	1	All
U-2	BT 153089	Control shaft assembly	1	All
	BT 47181	Control shaft lever-inner	1	All
	BT 47202	Control shaft lever-inner-lockscrew	1	All
	BT 47189	Control shaft lever seal	1	All
	BT 47190	Control shaft seal retainer	1	All
	BZ 12275	Transmission cover screw	4	All
	BT 40226	Transmission cover gasket	1	All
	BT 47315	Control lever-upper-assembly	1	All
	BT 43553	Control lever-upper knob	1	All
	BT 150767	Control lever-lower-cap assembly-taupe	1	72 thru 77 exc.Bs.Cpe.
	BT 153277	Control lever-lower-cap assembly-black	1	All 70,71,73 Bs.Cpe.,78
U-4	BT 47183	Cross shift bellcrank assembly	1	All
	BT 47185	Cross shift bellcrank bushing	1	All
	BT 47186	Cross shift bellcrank bushing seal	1	All
	BT 47187	Cross shift bellcrank bushing seal retainer	1	All
	BT 47203	Cross shift bellcrank bushing stud (in trans. case)	1	All
	C 153052	Jacket tube, selector switch and wires assy.-(less bracket)	*	1 All
	BT 153448	Selector switch and upper harness assembly	9 wires *	1 All
U-5	BT 153986	Selector switch base and upper harness assy	9 wires *	1 All
	BT 153971	Upper harness	9 wires *	1 All
U-6	BT 153973	Connector assembly-male half	*	1 All
U-7	BT 153950	Selector switch housing	*	1 All
U-8	BT 151488	Selector switch cap	*	1 All
U-9	BT 151489	Selector switch cap washer	*	1 All
	BT 153951	Selector switch shaft and lever assembly		1 All
U-10	BT 153952	Selector switch shaft assembly		1 All
	BT 153955	Selector switch shaft return spring		1 All
	BT 153956	Selector switch shaft return spring retainer		1 All
U-14	BO 71073	Selector switch shaft lever nut	10-32x1/8"	1 All
U-13	BO 71743	Selector switch shaft lever washer		1 All
U-11	BT 153964	Selector switch lever assembly	*	1 All
U-15	BT 153963	Selector switch segment ("H" plate)	*	1 All
U-16	BT 151499	Selector switch segment screw		2 All
U-17	BT 48518	Selector switch base lock ring		1 All
U-18	BT 153968	Selector switch rotor assembly	*	1 All
U-19	BT 153970	Selector switch rotor retaining spring	*	1 All
U-20	BT 48524	Selector switch cut-out switch		1 All
U-21	BT 151498	Cut-out switch cover plate		1 All
U-22	BT 151497	Cut-out switch cover plate screw		3 All
	BT 48527	Cut-out switch lead wire		1 All
	BT 47324	Selector wire loom		1 All
	BT 151179	Selector switch to jacket tube bolt		1 All
	BT 151180	Selector switch to jacket tube bolt nut		1 All
	BZ 122	Selector switch to jacket tube bolt nut-	5/16"-18x5/18"	1 All
	BT 153973	Selector wires connector assembly-male	*	1 All
	BT 153979	Connector terminal plate-male	*	1 All
U-23	BT 153974	Selector wires connector assembly-female	*	1 All
	BT 153976	Connector terminal plate-female	*	1 All
	BT 153977	Connector terminal cap		2 All
	BT 47326	Selector wires connector clip-split-at lower end of jacket tube		2 All
	BO 9159	Selector wires connector clip bolt	1/4"-20x5/8"	1 All
	BZ 70874	Selector wires connector clip bolt nut	1/4"-20x1/4"	1 All
	BT 153979	Switches and wires (lower harness) assembly	*	1 All
	BT 153981	Lower harness assembly	*	1 All
	BT 48475	Lower harness wires terminal		11 All
	BT 48701	Interlock switch assembly		1 All
U-27	BT 48078	Connector assembly-female half		1 All
	BO 40711	Switch wires clip (cylinder water jacket cover screw)	L.H.D.	1 All
	BO 18447	Interlock switch to clutch housing bolt		2 All
	BO 71073	Interlock switch to clutch housing bolt nut		2 All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
ELECTRIC HAND TRANSMISSION CONTROL (Cont'd.)				
U-28	BT 47314	Interlock switch rod	1	All
	BT 48702	Interlock switch rod tapped sleeve	1	All
	BT 47946	Interlock switch rod special nut	1	All
	HZ 71260	Interlock switch rod washer	1	All
U-29	BT 150257	Circuit breaker (clutch switch	1	All
	BT 71384	Circuit breaker switch to cylinder support bolt 5/16"-18x5/8"	1	All
	BT 150716	Circuit breaker operating clip	1	All
	BT 47331	Circuit breaker operating clip insert	1	All
	BM 9182	Circuit breaker operating clip bolt	1	All
	BM 272	Circuit breaker operating clip nut	1	All
	BT 150718	Circuit breaker operating rod	1	All
	BZ 5771	Circuit breaker operating rod clevis	1	All
	BO 71073	Circuit breaker operating rod nut	1	All
	BT 150719	Circuit breaker operating rod sleeve	1	All
	C 154200	Power unit assembly	*	All
U-30	BT 3488	Power unit to bracket stud nut 7/16"-20x29/64"	1	All
U-31	BT 150258	Power unit to bracket rubber spacer-inner	1	All
U-32	BT 150259	Power unit to bracket rubber washer-outer	1	All
	BT 71521	Power unit to bracket plain washer 1/2"x1-1/4"x5/64"	1	All
	BT 150224	Power unit mounting bracket	1	All
	BM 110	Power unit mounting bracket stud nut- 3/8"-16x3/8"	1	All
	BT 152225	Power unit mounting bracket grommet	1	All
U-33	BZ 5774	Power unit cross-shift rod clevis	1	All
U-34	BM 71443	Power unit cross-shift rod clevis nut 1/4"-28x7/32"	1	All
	BT 71522	Power unit cross-shift rod clevis pin.. 1/4"x7/8"	1	All
	BT 71506	Power unit shift rod clevis pin 5/18"x1-1/32"	1	All
	BT 152242	Power unit cylinder complete	1	All
U-35	BT 152243	Power unit cylinder assembly	1	All
	BT 152248	Power cyl. end plate and neutral switch & wiring assy	1	All
U-36	BT 152249	Power unit cyl. & plate assy.-includes felt & seal	1	All
	BT 152251	Power cylinder end plate	1	All
	BT 48413	Power cylinder end plate felt washer	1	All
	BT 152252	Power cylinder end plate felt washer retainer	1	All
U-37	BT 48411	Cylinder end plate piston seal-inner	1	All
	BT 48412	Cylinder end plate piston seal lock	1	All
	BT 152253	Power cylinder end plate to cylinder gasket	1	All
U-38	BT 48428	Power unit cylinder end plate stay bolt	1	All
U-39	BT 71443	Power unit cyl. end plate stay bolt nut- 1/4"-28x7/32"	1	All
U-40	BT 48429	Power unit cylinder flared tube elbow	3	All
U-41	BT 152245	Power unit cylinder mounting bracket assembly	3	All
	BT 152254	Power unit cylinder piston assembly	2	All
	BT 152255	Cylinder piston plate-outer	1	All
U-42	BT 152256	Cylinder piston plate-center	1	All
U-43	BT 152257	Cylinder piston packing	2	All
	BT 152258	Cylinder piston packing ring	1	All
	BT 152259	Cylinder piston felt assembly	2	All
	BT 152261	Cylinder piston felt retainer	2	All
U-44	BT 152262	Cylinder piston rod	2	All
	BT 48428	Cylinder piston rod nut	2	All
U-45	BT 48427	Cylinder piston rod end	1	All
U-46	BT 71030	Cylinder piston rod end lock nut 5/16"-24x3/16"	1	All
U-47	BT 48256	Cylinder piston rod guard	1	All
	BT 152264	Neutral switch and wires assembly	1	All
U-25	BT 152265	Neutral switch assembly	1	All
	BT 152345	Neutral switch insulator	1	All
	BT 152266	Neutral switch to end plate gasket	1	All
	BT 152267	Neutral switch terminal cover	1	All
	BT 152266	Neutral switch terminal cover gasket	1	All
	BT 71677	Neutral switch terminal cover screw 6-32x1"	2	All
	BT 152268	Neutral switch terminal cover guard	1	All
	BT 152269	Neutral switch to selector valve wire	1	All
	BT 152270	Neutral switch operating lever assembly	1	All
	BT 152272	Neutral switch operating lever bracket gasket	1	All
	BT 7527	Neutral switch operating lever brkt. screw 8-32x3/8"	2	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
ELECTRIC HAND TRANSMISSION CONTROL (Cont'd.)				
U-24	BT 152273	Neutral switch operating lever	1	All
	BT 152274	Neutral switch operating lever return spring	1	All
	BT 152275	Neutral switch operating lever straight pin	1	All
	BT 1.52276	Neutral switch operating lever washer	1	All
	BT 152277	Neutral switch operating pick up lever	1	All
	BT 152278	Neutral switch pick up lever spring	1	All
	BT 152280	Power unit diaphragm cylinder assembly	1	All
	BT 152281	Diaphragm assembly	1	All
U-48	BT 152282	Diaphragm	1	All
U-49	BT 152283	Diaphragm Plate	1	All
	BT 152284	Diaphragm Flanged plate	1	All
U-50	ST 48436	Diaphragm Washer	1	All
U-51	PT 48437	Diaphragm Rod	1	All
	BO 71443	Diaphragm rod nut	1	All
		1/4"-28x7/32"		
U-52	BT 48706	Diaphragm rod guard	1	All
U-53	BT 152285	Diaphragm housing assembly-rod end	1	All
U-34	8T 152287	Diaphragm housing assembly-pipe end	1	All
	BT 1634	Diaphragm housing bolt	6	All
	BO 71152	Diaphragm housing bolt nut	6	All
		6-32x3/8"		
		6-32x7/64"		
U-55	BT 152290	Diaphragm return spring	1	All
U-56	BT 48445	Diaphragm mounting plug	1	All
	BT 48446	Diaphragm mounting plug gasket	1	All
U-57	FIX 70532	Diaphragm mounting plug shakeproof washer	1	All
		5/8"		
	BT 152292	Selector valve assembly	1	All
U-58	BT 48709	Selector valve body assembly	1	All
	BT 48456	Selector valve body expansion plug	1	All
U-59	BT 48711	Selector valve plunger and disc assembly	3	All
	BT 48876	Selector valve plunger assembly	3	All
	PT 48877	Selector valve plunger disc-rubber	3	All
U-60	BT 48715	Selector valve plunger spring	3	All
U-61	BT 153996	Selector valve cover plate assembly	*	All
U-62	BT 48239	Selector valve cover plate gasket	1	All
	BT 7527	Selector valve cover plate screw	4	All
	BO 70326	Selector valve cover plate lock washer	4	All
		8-32x3/8"		
U-63	BT 48729	Selector valve solenoid assembly	3	All
U-64	BT 48736	Selector valve solenoid cover	1	All
U-65	BT 48737	Selector valve solenoid cover stud	1	All
U-66	BT 48738	Selector valve solenoid cover gasket	1	All
U-67	BT 48739	Selector valve solenoid washer	1	All
U-68	BT 48740	Selector valve solenoid retainer	1	All
U-69	BT 48741	Selector valve solenoid retainer gasket	1	All
	BM 7527	Selector valve solenoid retainer screw	3	All
		8-32x3/8"		
U-70	BT 48541	Selector valve check valve	1	All
U-71	BT 48542	Selector valve check valve nut	1	All
	BT 48450	Selector valve to bracket gasket	1	All
	BT 71599	Selector valve to bracket bolt	4	All
		10-32x5/8"		
	BO 71073	Selector valve to bracket bolt nut	4	All
		10-32x1/8"		
U-72	BT 152299	Selector valve to cylinder tube complete (piston rod end)	1	All
U-74	BT 152296	Selector valve to cylinder tube complete (stud end)	1	All
U-73-75	BT 48887	Rubber tube connection	2	All
	BT 48466	Selector valve to cylinder tube elbow	2	All
U-76	BT 153741	Power unit vacuum pipe assembly-short	L.H.D. *	All
	BT 154463	Power unit vacuum pipe assembly-short	R.H.D. *	All
U-77	BT 153727	Power unit vacuum pipe assembly-long	*	70,71,78,73 Bs.Cpe.
	BT 153729	Power unit vacuum pipe assembly-long	*	72,73 exc.Bs.Cpe.
	BT 153731	Power unit vacuum pipe assembly-long	*	74 thru 77
U-78	BT 153733	Power unit vacuum hose	*	All
	BT 153734	Power unit vacuum hose reinforcing spring	*	All
U-79	BT 153735	Power unit intake pipe-long	*	70,71,72,73,78
	BT 153736	Power unit intake pipe-long	*	74 thru 77
U--80	BT 153743	Power unit intake pipe assembly-short	*	All
	BT 48334	Power unit vacuum and intake pipe-short-nut		All
	BT 71167	Power unit vacuum pipe-long-nut,	1/2" Flared	All
	BT 48335	Power unit intake pipe-short-union elbow		All

ILLUS. NO	PART NO	NAME		PER CAR	MODEL
ELECTRIC HAND TRANSMISSION CONTROL (Cont'd.)					
	BT 153739	Power unit intake pipe hose	*	1	All
	BT 71556	Vacuum and intake clamp		4	All
	BT 48603	Power unit intake pipe-long-clip		1	All
	BT 71108	Power unit intake pipe-long-clip nut	5/16"-24x17/64"	1	All
	BT 3820	Power unit intake pipe-long-clip bolt	5/16"-18x1/2"	1	All
	BT 12115	Power unit intake pipe-long-clip bolt nut	5/16"-18x17/64"	1	All
	BT 153740	Vacuum and intake hose clip-double	L.H.D. *	1	All
	BT 40919	Switch wires clip (clutch housing-right side)	R.H.D. *	1	All
	BT 47897	Switch wires clip (clutch housing-left side)	R.H.D. *	1	All
	BT 154465	Vacuum and intake hose clip	R.H.D. *	1	All
	BT 153053	Electric hand complete-service kit	L.H.D. *	1	70,71,72,73,78
	BT 154484	Electric hand complete-service kit	L.H.D. *	1	74,75,78,77
	BT 154711	Electric hand complete-service kit	R.H.D. *	1	70,71,72,73,78
	BT 154712	Electric hand complete-service kit	R.H.D. *	1	74,75,76,77

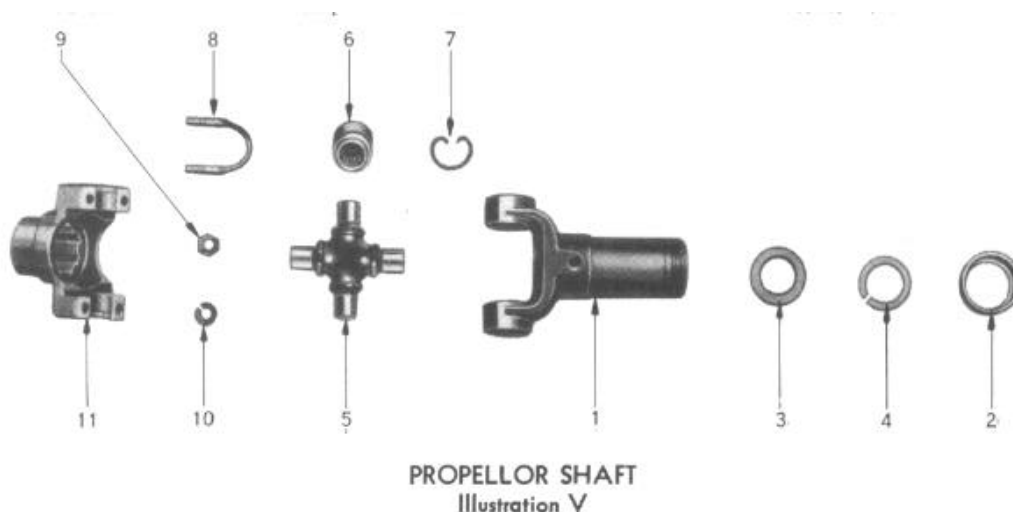
**PROPELLER SHAFT**

C 152742	Propeller and universal joint assy.	} with first type frame	*	1	70,71,72,73,74,75
C 152748	Propeller shaft		*	1	70,71,72,73,74,75
C 152754	Shaft and rear joint assembly		*	1	70,71,72,73,74,75
C 154331	Propeller shaft and universal joints assy. with		*	1	70,71,72,73,74,75
C 154333	Propeller shaft second *			1	70,71,72,73,74,75
C 154335	Shaft and rear joint assembly type frame		*	1	70,71,72,73,74,75

NOTE: Second type propeller shaft is slightly longer than first type Effective with car Nos. 70194-714959-721597-73152-74880-75480. Second type shaft cannot be used with first type frame. See note on page 27

C 152744	Propeller shaft and universal joint assy	*	1	76,77,78
C 152750	Propeller shaft	*	1	76,77,78
C 152756	Shaft and rear joint assembly	*	1	76,77,78
BZ 150182	Front universal joint assembly		1	70,71,72,73,74,75
BZ	Front universal joint assembly		1	76,77,78
V-1 150183	Propeller shaft sleeve yoke		1	70,71,12,73,74,75
BZ	Propeller shaft sleeve yoke		1	76,77,78
150186	Sleeve yoke expansion plug		1	All
V-2 BZ	Sleeve yoke dust cap		1	70,71,72,73,74,75
V-3 150187	Sleeve yoke dust washer		1	70,71,72,73,74,75
V-4 BZ 43511	Sleeve yoke dust washer retainer		1	70,71,72,73,74,75
V-2 BZ 51271	Sleeve yoke dust cap		1	76,77,78
V-3 BZ 43512	Sleeve yoke dust washer		1	76,77,78
V-4 BZ 51275	Sleeve yoke dust washer retainer		1	76,77,78
V-5 BZ 46490	Journal assembly		2	All
BZ 46491				
BZ 46492				
BZ 150194				

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
PROPELLER SHAFT (Cont'd.)				
	BZ 43517	Journal gasket	8	All
	BZ 43518	Journal gasket retainer	8	All
V-6	BZ 43809	Journal bearing assembly	8	All
V-7	BZ 43521	Journal bearing race snap ring	8	All
V-8	BZ 150723	Propeller shaft U-bolt .	4	All
V-9	HZ 611	Propeller shaft U-bolt nut	8	All
V-10	BZ 150724	Propeller shaft U-bolt lock	4	All
	BZ 9773	Propeller shaft filler plug	1	All
	BZ 150098	Rear axle companion flange	1	All
V-11	BZ 150208	Transmission companion flange	1	All
STEERING GEAR L.H.D.				
	C 153323	Steering gear assembly	L.H.D. *	1 All
	C 153324	Steering gear assembly	R.H.D. *	1 All
	BZ 44263	Steering gear to frame bolt		3 All
	BZ 62	Steering gear to frame bolt nut	3/8"-24x21/64"	3 All
	9Z 153428	Steering gear housing assembly	L.H.D. *	1 All
	BZ 153429	Steering gear housing assembly	R.H.D. *	1 All
W-1	BZ 38587	Housing grease plug	*	1 All
W-2	BZ 153437	Cross shaft housing	*	1 All
W-3	BZ 153438	Cross shaft housing cover gasket	*	1 All
W-4	BZ 395	Cross shaft housing cover bolt	5/16"-18x5/8"	4 All
	BZ 71126	Cross shaft housing cover bolt lockwasher - 5/16 external tooth		4 All
W-5	BZ 153439	Cross shaft thrust washer	*	1 All
W-6	HZ 153440	Cross shaft adjusting screw	*	1 All
W-7	BZ 153441	Cross shaft adjusting screw lock plate	*	1 All
W-8	BZ 153442	Cross shaft adjusting screw lock nut	*	1 All
W-9	BZ 153432	Cross shaft and roller tooth assembly	L.H.D. *	1 All
	BZ 153433	Cross shaft and roller tooth assembly	R.H.D. *	1 All
	BZ 153325	Cross shaft pitman arm	L.H.D. *	1 All
	HZ 153326	Cross shaft pitman arm	R.H.D. *	1 All
	BZ 22641	Cross shaft nut		1 All
	8Z 33659	Cross shaft lock washer		1 All
W-10	BZ 45246	Cross shaft oil seal	Cork	1 All
W-11	BZ 45247	Cross shaft oil seal retainer		1 All
W-12	BZ 45248	Cross shaft oil seal retainer spring		1 All
W-13	BZ 46049	Worm housing cover		1 All
W-14	395	Worm housing cover bolt	5/16"-18x5/8"	4 All
W-15	BZ 46050	Worm housing cover shim-thin		1 All
W-15	BZ 46051	Worm housing cover shim-thick		5 All
W-16	BZ 151739	Grease retainer tube assembly		1 All
W-17	BZ 48845	Worm bearing assembly		2 All
W-18	BZ 46900	Worm bearing adjustable ring-lower		1 All
W-19	BZ 40777	Worm bearing ring-upper		1 All
	C 153444	Main column tube and worm assembly	L.H.D. *	1 All
	C 153464	Main column tube and worm assembly	R.H.D. *	1 All
W-20	C 153445	Main column tube	*	1 All
W-21	C 153328	Jacket tube assy. (without electric hand)	*	1 All
	C 153331	Jacket tube assy. (with electric hand)	*	1 All
	HZ 153334	Jacket tube bushing	*	1 All
	BZ 153335	Jacket tube oil hole cover	*	1 All
W-22	BZ 153336	Jacket tube clamp assembly		1 All
W-23	BZ 71526	Jacket tube clamp bolt	5/16"-24x2-1/8"	1 All
W-24	BZ 12481	Jacket tube clamp bolt nut	5/16"-24x17/64"	1 All
	C 153320	Steering wheel-(black)	*	1 70,71,78,73 Bs.Cpe.
	C 153321	Steering wheel (tenite)	*	1 72 thru 77 exc.Bs.Cpe.
	HA 153662	Steering wheel kit (tenite)	*	1 70,71,78,73 Bs.Cpe.
	HA 153346	Steering wheel hub trim ring	*	1 70,71,78,73 Bs.Cpe.
W-25	BX 71713	Steering wheel nut	5/8"-18x15/32"	1 All
W-26	BZ 153338	Horn button-black	*	1 70,71,78,73 Bs.Cpe.
	BZ 153339	Horn button-tenite	*	1 72 thru 77 exc.Bs.Cpe.
W-27	BZ 153351	Horn button contact spring	*	1 ALI
W-28	BZ 153340	Horn button contact cup and spring assembly	*	1 All

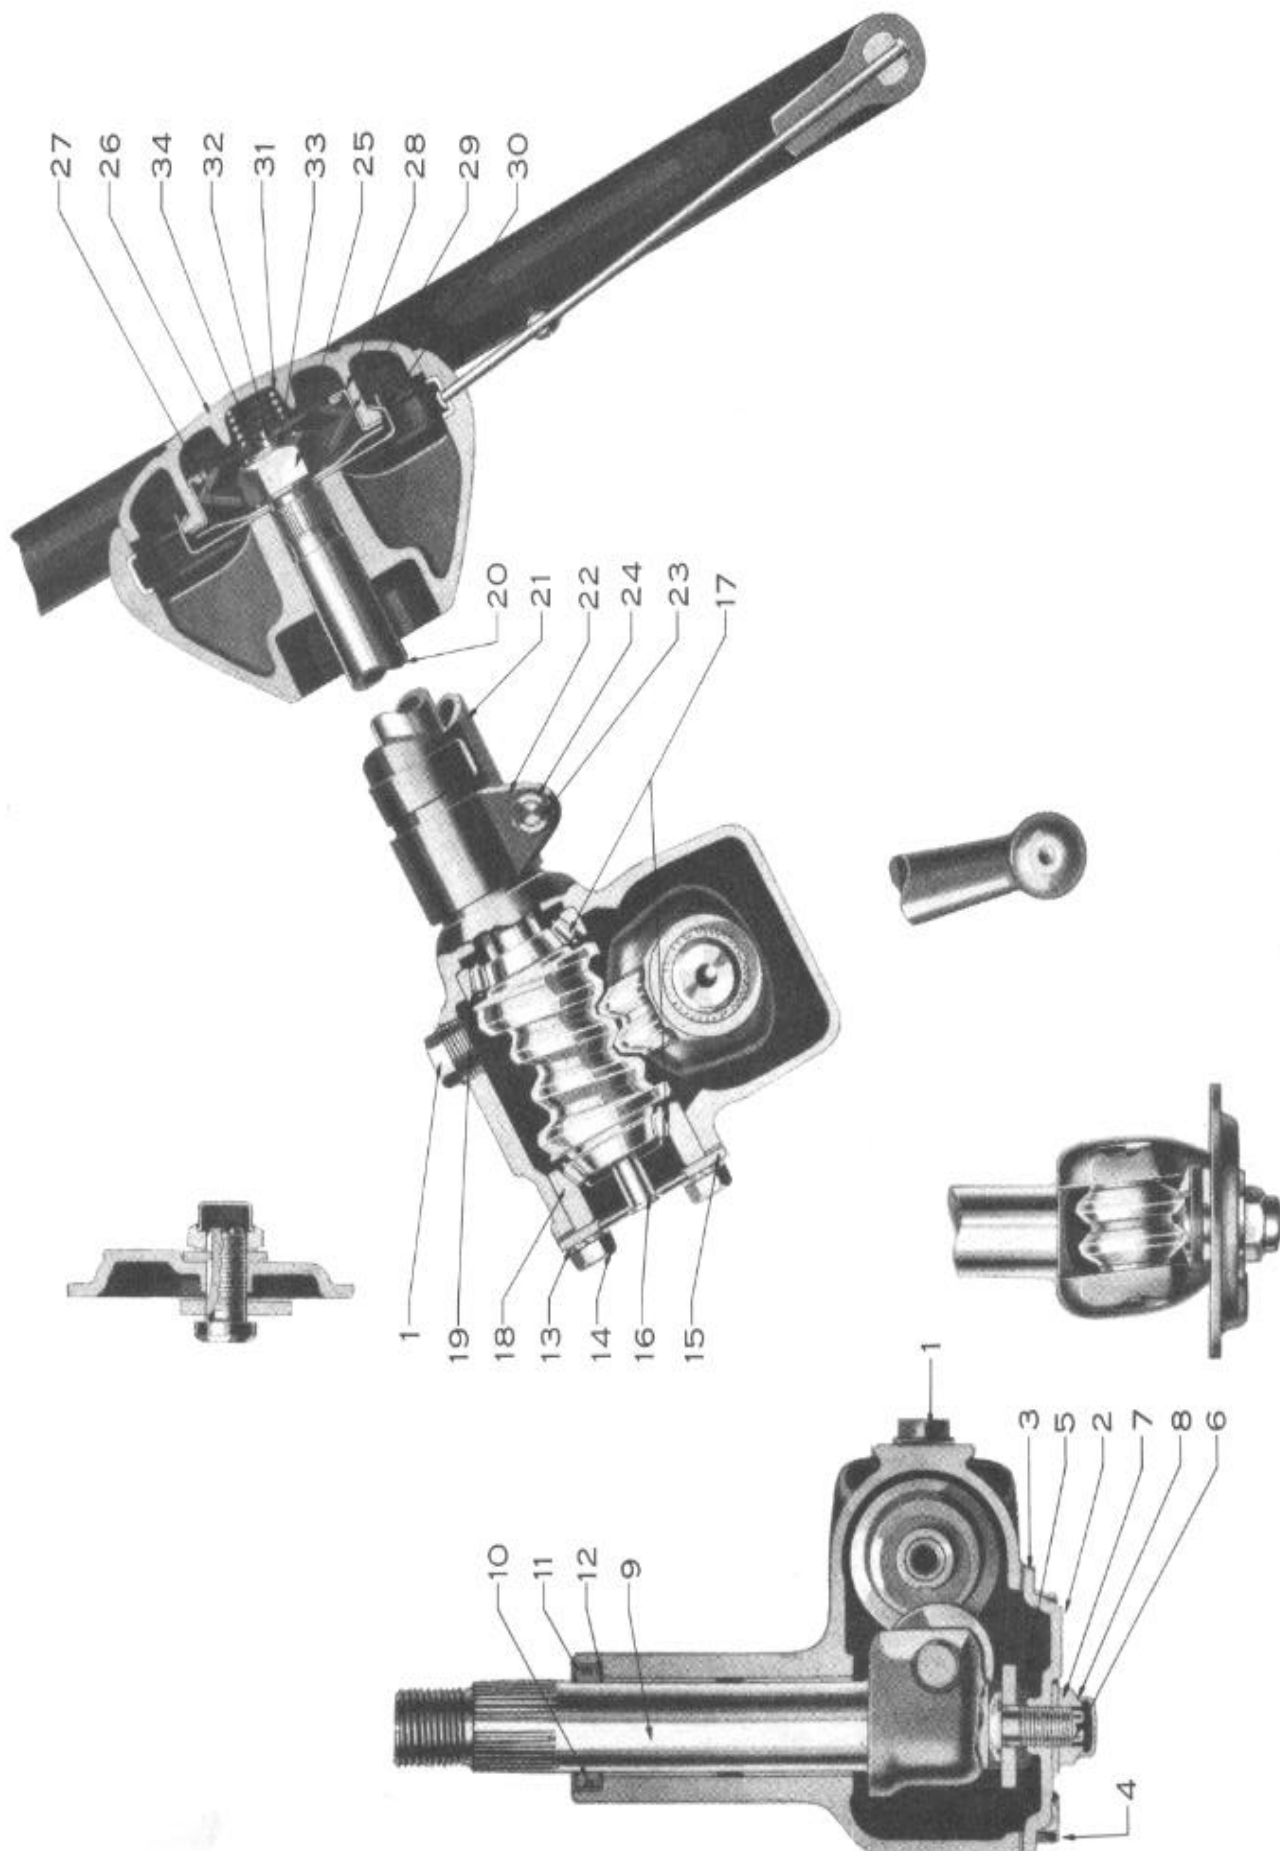

STEERING GEAR
Illustration W

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

STEERING GEAR (Cont'd.)

W-29	BZ 153343	Horn button contact cup silencer (rubber)	*	1	All
W-30	BZ 153344	Horn button retainer	*	1	All
W-31	BZ 153345	Horn button tension spring	*	1	All
	BZ 153347	Horn button wire assembly	*	1	All
W-32	BZ 40790	Horn button wire terminal-upper		1	All
W-33	BZ 154238	Horn button wire terminal-lower washer	*	1	All
	BZ 71286	Horn button wire terminal-lower	*	1	All
W-34	BZ 153349	Wire terminal insulating washer fiber	*	1	All
	BZ 153350	Wire terminal insulating washer seat	*	1	All

DRAG LINK


C 152760	Drag link assembly		*	1	70,71,72,78
C 152763	Drag link assembly		*	1	71 thru 77
C 152761	Drag link and plugs assy.		*	1	70,71,72,78
C 152764	Drag link and plugs assy.	L.H.D.	*	1	73 thru 77
BZ 152772	Dust cover-inner		*	1	All
BZ 152773	Dust cover-outer		*	1	All
C 152766	Drag link assembly		*	1	70,71,72,78
C 152769	Drag link assembly		*	1	73 thru 77
C 152767	Drag link and plugs assembly	R.H.D.	*	1	70,71,72,78
C 152770	Drag link and plugs assembly		*	1	73 thru 77
C 152774	Dust cover-inner		*	1	All
C 152775	Dust cover-outer		*	1	All
BZ 40909	Drag link plug-front			1	All
BZ 60533	Drag link plug-rear			1	All
BZ 40688	Drag link spring-front			1	All
BZ 42899	Drag link spring-rear			1	All
BZ 40910	Drag link spring-front			1	All
BZ 151706	Drag link ball-seat-front			1	All
BZ 71660	Ball seat shim-	1/32"	AR		All
BZ 71661	Ball seat shim-	1/16"	AR		All
BZ 71662	Ball seat shim-	1/8"	AR		All
BZ 152773	Dust cover-outer		*	1	All
BZ 152772	Dust cover-inner		*	1	All
BZ 70310	Dust cover bolt			1	All
BZ 3987	Dust cover bolt nut	3/16"-24x1/8"		1	All
BZ 152776	Drag link boot assembly-front		*	1	All
BZ 40416	Drag link boot lace			1	All
BZ 45928	Grease fitting-front	67-1/2°		1	All
BZ 45353	Grease fitting-rear	Straight		1	All

GASOLINE TANK AND PIPES


C 153005	Gasoline tank assembly		*	1	Bro.-Sed.-U Co.
C 153007	Gasoline tank assembly		*	1	70-78 exc. U Co. and Sed.
C 153006	Gasoline tank assembly		*	1	All Cpes.-Cv.Cpe.-Cv.Bro.
BZ 153008	Filler neck assembly		*	1	Bro.-Sed.-U Co.
BZ 153009	Filler neck assembly		*	1	All Cpes.-Cv.Cpe.-Cv.Bro.
BZ 153012	Filler neck		*	1	70-78 exc. U Co. and Sed.
BZ 153013	Filler neck extension assembly		*	1	70-78 exc. U Co. and Sed.
BZ 48179	Filler neck extension sleeve gasket			1	70-78 exc. U Co. and Sed.
BZ 71081	Filler neck extension sleeve bolt	3/8"-16x1"		1	70-78 exc. U Co. and Sed.
BZ 48180	Filler neck extension sleeve bolt gasket			1	70-78 exc. U Co. and Sed.
BZ 44959	Filler neck to body cushion			1	71 thru 78, 70 U Co.
BO 45344	Filler neck to body grommet			1	All
BO 114519	Filler neck to body grommet			1	U Cpe.
BZ 153031	Tank to seat tray pad		*	1-2	All
BZ 26877	Drain plug boss			1	All
BM 71100	Drain plug	3/8" Socket type		1	All
BZ 120	Tank return connection plug	1/8" extension head		1	All
F 150128	Tank cap assembly			1	All
BZ 37667	Tank cap gasket			1	All
HA 150638	Locking cap complete			1	All
BZ 150130	Tank gauge assembly			1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
GASOLINE TANK AND PIPES (Cont'd.)				
	BZ 71490	Tank gauge fastening screw	10-24x3/8"	6 All
	BO 70863	Tank gauge terminal screw	8-32x1/4"	1 All
	BZ 150131	Tank gauge gasket		1 All
	BZ 153027	Tank outlet unit (suction pipe)	*	1 All
	BZ 47090	Tank outlet unit gasket		1 All
	BZ 71490	Tank outlet unit screw	10-24x3/8"	2 All
	BZ 71442	Tank outlet unit screw gasket		2 All
	BZ 153559	Tank outlet unit screen	*	2 All
	BZ 150136	Tank to strap silencer		2 All
	BZ 153017	Tank strap	*	2 All
	BZ 71067	Tank strap bolt-rear	5/16"-18x2-3/8"	2 All
	BO 122	Tank strap bolt-nut-rear	5/16"-18x5/16"	2 All
	BM 219	Tank strap bolt-front	5/16"-18x3/4"	2 All
	BZ 122	Tank strap bolt nut-front	5/16"-18x5/16"	2 All
	BZ 153782	Tank to fuel pump pipe assembly	*	1 70,71,72,73
	BZ 153784	Tank to fuel pump pipe assembly	L.H.D. *	74,75
	BZ 153782	Tank to fuel pump pipe assembly	R.H.D. *	74,75
	BZ 153786	Tank to fuel pump pipe assembly	L.H.D. *	76,77
	BZ 154466	Tank to fuel pump pipe assembly	R.H.D.	76,77
	BZ 154466	Tank to fuel pump pipe assembly	*	1 78
	BM 11828	Union nut	5/16"	2 All
	BZ 43126	Tank to fuel pump pipe sleeve-rubber		1 All
	BZ 41016	Tank to fuel pump pipe loom		1 All
	BO 18197	Tank to fuel pump pipe clip		5 All
	BZ 41030	Tank to fuel pump pipe clip		1 All
	BZ 153712	Tank to fuel pump pipe clip	R.H.D.	2 All
	BZ 71295	Tank to fuel pump pipe clip screw	5/16"x5/8"	3 All
	BZ 170041	Tank to fuel pump pipe clip screw	14x1/2"	3 All
MUFFLER AND EXHAUST PIPE				
	F 153056	Muffler assembly	*	1 70,71,72,78
	F 153057	Muffler assembly	*	1 73 thru 77
	BZ 153058	Muffler clamp-front	*	1 All
	BZ 153059	Muffler clamp-rear	*	1 All 70,71,72,78
	BZ 153063	Muffler clamp-rear	*	1 73 thru 77
	BZ 12275	Muffler clamp bolt	5/16"-18x1"	2 All
	BZ 12115	Muffler clamp bolt nut	5/16"-18x17/64"	2 All
	C 153073	Tail pipe	*	1 70,71,72
	C 153074	Tail pipe	*	1 73,74,75
	C 153075	Tail pipe	*	1 76,77
	C 154617	Tail pipe assembly	*	1 78
	BZ 154619	Tail pipe spacer ring (for front clamp)	*	1 78
	BZ 153064	Tail pipe clamp-front	*	1 70,71,72
	BZ 153065	Tail pipe clamp-front	*	1 73,74,75
	BZ 153066	Tail pipe clamp-front	*	1 76,77,78
	BZ 153067	Tail pipe clamp-front-support assembly		1 All
	BZ 153069	Tail pipe clamp-front support fabric	*	1 All
	BX 3197	Tail pipe clamp-front-support fabric rivet-	5/16"x7/8"	2 All
	BM 219	Tail pipe clamp-front-support frame bolt	5/16"-18x3/4"	2 All
	BZ 12115	Tail pipe clamp-frt.-support frame bolt nut	5/16"-18x17/64"	2 All
	BZ 154581	Tail pipe clamp-front-to support fabric-short	*	1 All
	BZ 170031	Tail pipe clamp-front-to support fabric bolt	5/16"-18x1-1/4"	1 All
	BZ 12275	Tail pipe clamp bolt	5/16"-18x1"	2 All
	BZ 12115	Tail pipe clamp bolt nut	5/16"-18x17/64"	2 All
	BZ 153070	Tail pipe bracket-rear	*	1 All
	BZ 12275	Tail pipe bracket-rear-to fabric bolt	5/16"-18x1"	1 All
	BZ 12115	Tail pipe brkt.-rear-to fabric bolt nut	5/16"-18x17/64"	1 All
	BZ 154582	Tail pipe bracket-rear-fabric	*	1 All
	BZ 12275	Tail pipe bracket-rear-fabric frame bolt	5/16"-18x1"	2 All
	BZ 12115	Tail pipe brkt.-rear-fabric frame bolt nut	5/16"-18x17/64"	2 All
	BZ 153059	Tail pipe bracket-rear-clamp	*	1 70,71,72,78
	BZ 153063	Tail pipe bracket-rear-clamp	*	1 73 thru 77
	HA 48647	Tail pipe extension	Service	1 All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
MUFFLER AND EXHAUST PIPE (Cont'd.)				
C	153076	Exhaust pipe assembly	* 1	70,71,72
C	153078	Exhaust pipe assembly	* 1	73
C	153080	Exhaust pipe assembly	* 1	74,75,76,77,78
BZ	42245	Exhaust pipe flange	1	All
BZ	42246	Exhaust pipe flange gasket	1	All
BT	18430	Exhaust pipe flange clamp bolt	1	All
BZ	62	Exhaust pipe flange clamp bolt nut	1	All
BZ	2404	Exhaust pipe flange bolt	2	All
BO	71058	Exhaust pipe flange bolt nut	2	All
8Z	40413	Exhaust pipe flange bolt nut lock	2	All
BZ	153083	Exhaust pipe bracket support	* 1	All
BZ	153084	Exhaust pipe cover-front	* 1	70,71,72,73,78
BZ	153085	Exhaust pipe cover-rear	* 1	70,71,72,73,78
BZ	153086	Exhaust pipe cover-front	* 1	74,75,76,77
BZ	153087	Exhaust pipe cover-rear	* 1	74,75,76,77
BZ	2397	Exhaust pipe cover-strap	2	All
BZ	153358	Exhaust pipe heat deflector	* 1	All
BO	18447	Exhaust pipe heat deflector screw	2	All
BO	71073	Exhaust pipe heat deflector screw nut	2	All
BZ	153354	Muffler heat deflector assembly	* 1	All
BZ	153356	Muffler heat deflector strap	* 1	All
BM	219	Muffler heat deflector strap bolt	2	All
BZ	122	Muffler heat deflector strap bolt nut	2	All
RADIATOR				
A	153749	Radiator assembly	* 1	70,78
A	152548	Radiator assembly	* 1	71,72
A	152549	Radiator assembly	* 1	73
A	152550	Radiator	* 1	74,75,76,77
CORE				
C	152551	Core assembly	* 1	70,71,72,78
C	152552	Core assembly	* 1	73
C	152553	Core assembly	* 1	74,75,76,77
BO	71684	Radiator to frame bolt	2	70,71,72,73,78
BO	71685	Radiator to frame bolt	2	74,75,76,77
BZ	70627	Radiator to frame bolt nut	2	All
BZ	152558	Radiator mounting shim	* 2	All (use 2 plus AR on 70,71,72,78)
BZ	152559	Radiator mounting shim-steel	* AR	All
BZ	152554	Filler cap	* 1	All
BM	18118	Drain cock	* 1	All
F	152555	Inlet hose	* 1	All
F	71614	Inlet hose clamp	2	All
F	150550	Outlet hose	1	All exc.73
F	150551	Outlet hose	2	73
BZ	151568	Outlet hose reinforcement spring	1	70,71,78
BZ	152557	Outlet hose connecting pipe	* 1	73
F	71615	Outlet hose clamp	2-4	All
SHELL AND GRILL				
Y-1	A 120408	Radiator shell assembly-specify color	* 1	70,71,72,78
X-1	A 120410	Radiator shell assembly-specify color	* 1	73 thru 77
	BM 70242	Radiator shell to core bolt	4	All
	BZ 70874	Radiator shell to core bolt nut	4	All
	BO 71224	Radiator shell rubber grommet (for horn wires)	2	All
Y-2	BO 121515	Radiator crest	* 1	70,78 exc.Sed.
X-2	BO 121287	Radiator crest assembly	* 1	71,72,78 Sed.
Y-3	BO 121117	Radiator crest and mounting assembly	* 1	73 thru 77
	BO 121285	Radiator crest mounting	* 1	71,72,78 Sed.
	BO 71708	Radiator crest screw-front	1	71,72,78 Sed.
	BO 71715	Radiator crest screw-rear	1	71,72,78 Sed.
	BO 71727	Radiator crest screw lock screw	1	71,72,78 Sed.

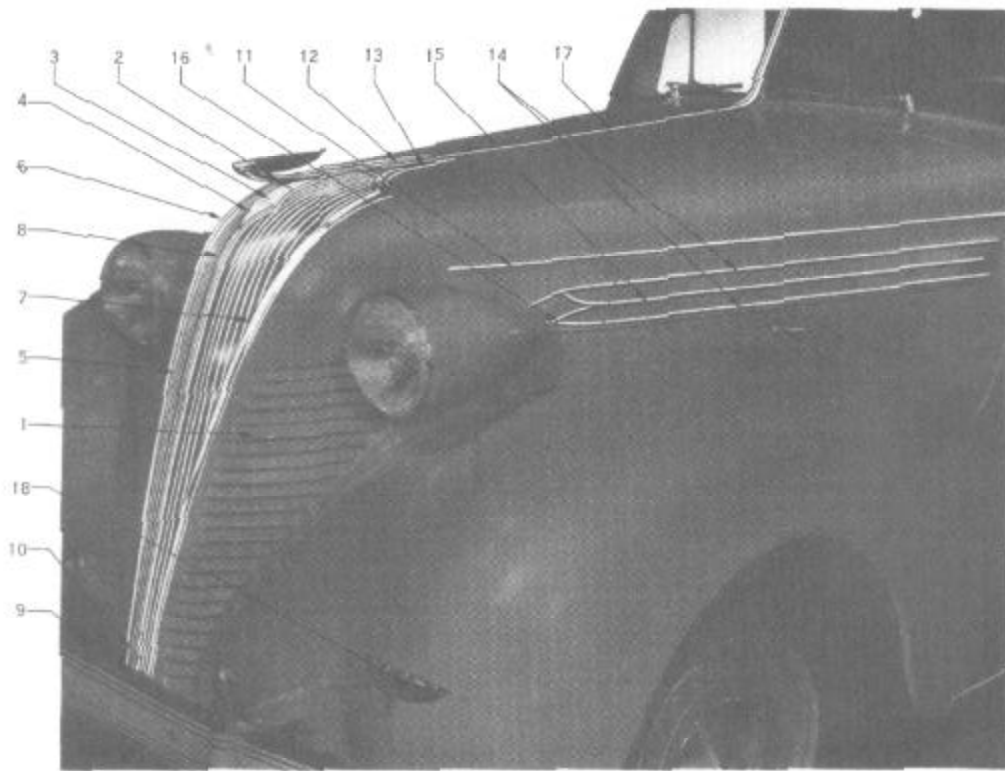

RADIATOR—Hudson
Illustration X

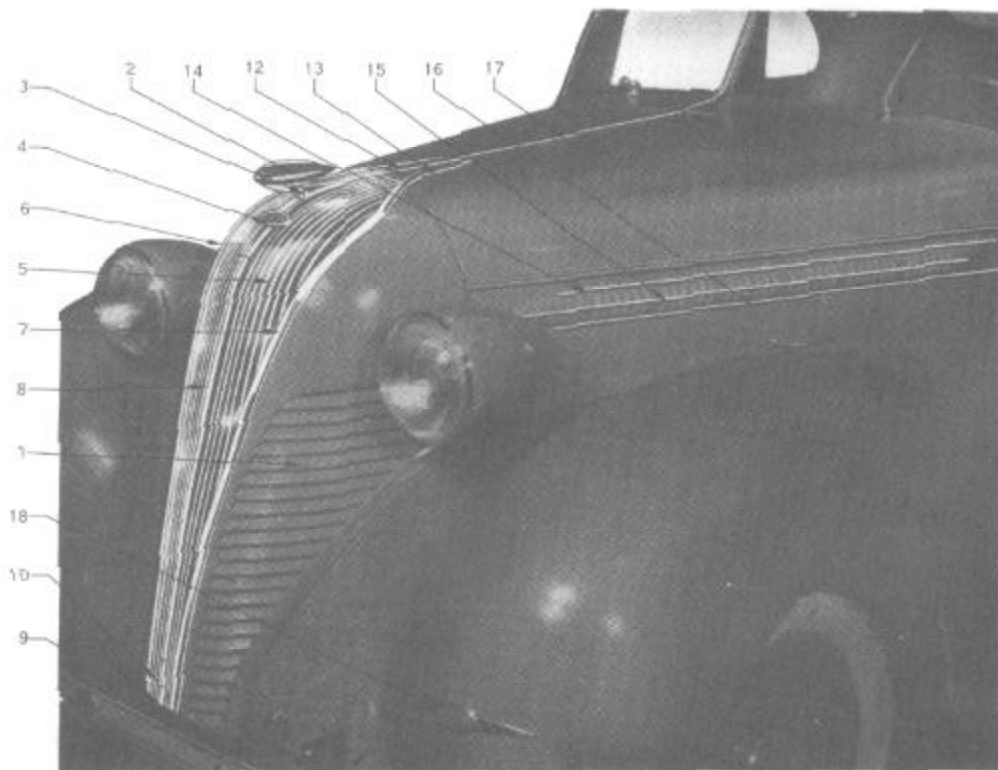

RADIATOR—Terraplane
Illustration Y

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
SHELL AND GRILL (Cont'd.)				
	BO 121291	Radiator Crest screw wrench	*	1 All
	BO 71726	Radiator crest mounting screw 10-32x5/8"	1	All
	BO 71727	Radiator crest mounting screw lock screw #2x1/4" Drive	1	All
Y-4	BO 121284	Radiator ornament (name plate)	*	1 70,71,72,78
	BO 124078	Radiator ornament assy. (includes name plate)	*	1 73
X-3	BO 124079	Radiator ornament assembly (includes name plate)	*	1 74,75,76,77
	BO 71726	Radiator ornament screw 10-32x5/8"	1	70,71,72,78
	BO 70855	Radiator ornament screw 10-32x3/8"	1	73,74,75,76,77
	BO 121513	Radiator ornament screw nut	1	70,71,72,78
	BO 71727	Radiator ornament screw lock screw #2x1/4" Drive	1	70,71,72,78
	BZ 112919	Radiator name plate	1	73
X-4	BZ 112921	Radiator name plate	1	74,75,76,77
	A 120411	Radiator grill	*	1 70-78 Panel-Cab-Cab Pu,71 Bs.Cpe.
Y-5	A 120400	Radiator grill	*	1 70 U Co-U Cpe-Sta.,71,72,78 Sed.
X-5	A 120401	Radiator grill	*	1 73,74,75,76,77
Y-6	C 120658	Radiator grill side moulding-R.H	*	1 70,71,72,78
Y-7	C 120659	Radiator grill side moulding-L.H	*	1 70,71,72,78
X-6	C 120660	Radiator grill side moulding-R.H	*	1 73,74,75,76,77
X-7	C 120661	Radiator grill side moulding-L.H	*	1 73,74,75,78,77
Y-8	C 120654	Radiator grill moulding-upper center	*	1 70,71,72,78
Y-9	C 120656	Radiator grill moulding-lower center	*	1 70,71,72,78
X-8	C 120655	Radiator grill moulding-upper center	*	1 73,74,75,76,77
X-9	C 120657	Radiator grill moulding-lower center	*	1 73,74,75,76,77
	BZ 121510	Radiator grill moulding bolt-long	*	4 All
	BZ 121511	Radiator grill moulding bolt-short	*	19 All
	BZ 121512	Radiator grill moulding bolt spacer	*	4 All
	BZ 121513	Radiator grill moulding bolt sleeve nut	*	6 All
	BO 71073	Radiator grill moulding bolt nut 10-32x1/8"	17	All
Y-10	BZ 121527	Starting crank hole cover assembly	*	1 70,71,72,78
X-10	BZ 121528	Starting crank hole cover assembly	*	1 73,74,75,76,77
	BZ 120681	Radiator stay rod assembly	*	2 70,71,72,78
	BZ 120683	Radiator stay rod assembly	*	2 73,74,75,76,77
	BO 71443	Radiator stay rod nut 1/4"-28x7/32"	4	All
	BO 71642	Radiator stay rod to shell bolt 1/4"-20x7/8"	2	All
	BZ 70874	Radiator stay rod to shell bolt nut 1/4"-20x1/4"	2	All
	BZ 100516	Radiator stay rod clamp	1	All
	BO 71443	Radiator stay rod clamp 1/4"-28x7/32"	2	All
	BZ 100517	Radiator stay rod clamp plate	1	All
	A 120123	Radiator lower tank shield assembly	*	1 70,71,72,78
	A 120124	Radiator lower tank shield assembly	1	73
	A 120694	Radiator upper tank shield assembly	1	74,75,76,77
	A 120418	Radiator upper tank shield assembly	1	All
	BO 70872	Radiator lower tank shield to fender bolt 1/4"-20x3/4"	AR	All
	BZ 70874	Radiator lower tank shield to fender bolt nut 1/4"-20x1/4"	AR	All
BONNET				
	A 120429	Bonnet complete	*	1 70,71,72,78
	A 120436	Top and side panel complete-R.H	*	1 70,71,72,78
	A 120437	Top and side panel complete-L.H	*	1 70,71,72,78
	A 120438	Top panel assembly-R.H	*	1 70,71,72,78
	A 120439	Top panel assembly-L.	*	1 70,71,72,78
	A 124242	Bonnet complete	*	1 73 Bs.Cpe.
	A 124240	Top and side panel complete-R.H	*	1 73 Bs.Cpe.
	A 124241	Top and side panel complete-L.H	*	1 73 Bs.Cpe.
	A 124236	Top panel assembly-R.H.	*	1 73 Bs.Cpe.
	A 124237	Top panel assembly-L.H	*	1 73 Bs.Cpe.
	A 120440	Bonnet complete	*	1 73 exc.Bs.Cpe.,74,75,78,77
	A 120450	Top and side panels complete-R.H.	*	1 73 exc.Bs.Cpe.,74,75,76,77
	A 120451	Top and side panels complete-L.H.	*	1 73 exc.Bs.Cpe.,74,75,78,77
X-11	C 121526	Top panel belt moulding	*	2 73 exc.Bs.Cpe.,74,75,76,77
	C 114449	Top panel belt moulding clip	*	20 73 exc.Bs.Cpe.,74,75,76,77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
BONNET (Cont'd.)				
	A 124541	Bonnet complete	* 1	73 exc.Bs.Cpe.,74,75,76,77
	A 124544	Top and side panels complete-R.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
	124545	Top & Side panels complete-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
	124512	Top panel belt moulding-R.H.	* 1	73 exc.Bs.Cpe.,74,75,78,77
	124513	Top panel belt moulding-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
	124514	Top panel belt mldg.retainer-R.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
	124515	Top panel belt mldg.retainer-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
	170048	Top panel belt mldg.retainer screw	* 20	73 exc.Bs.Cpe.,74,75,76,77
	170056	Top panel belt mldg.retainer screw nut	* AR	73 exc.Bs.Cpe.,74,75,78,77
	A 120448	Top panel assembly-R.H. (less moulding)	* 1	73 exc.Bs.Cpe.,74,75,78,77
	A 120449	Top panel assembly-L.H. (less moulding)	* 1	73 exc.Bs.Cpe.,74,75,78,77
X-Y-12	BZ 120650	Top panel ornament-R.H	* 1	All
X-Y-13	BZ 120651	Top panel ornament-L.H	* 1	All
	A 120432	Side panel-R.H	* 1	70,71,72,78
	A 120433	Side panel-L.H	* 1	70,71,72,78
	A 120444	Side panel-R.H	* 1	73,74,75,76,77
	A 120445	Side panel-L.H	* 1	73,74,75,76,77
Y-14	BZ 120461	Side panel moulding-top	* 2	70,71,72,78
Y-15	BZ 120463	Side panel moulding-center	* 2	70,71,72,78
Y-16	BZ 120462	Side panel moulding-bottom	* 2	70,71,72,78
X-14	BZ 120464	Side panel moulding-top and bottom	* 4	73,74,75,78,77
X-15	BZ 120465	Side panel moulding-center	* 2	73,74,75,76,77
	BZ 119150	Side panel moulding clip	44	70,71,72,78
	BZ 114449	Side panel moulding clip	46	73,74,75,76,77
	BZ 121524	Side panel ornament-R.H	* 1	73,74,75,76,77
X-16	BZ 121525	Side panel ornament-L.H	* 1	73,74,75,76,77
	BZ 12790	Side panel ornament nut	12	73,74,75,76,77
Y-17	A 120458	Bonnet hinge-female	* 1	70,71,72,78
X-17	A 120459	Bonnet hinge-female	* 1	73,74,75,76,77
	BZ 120454	Bonnet hinge rod-side	* 2	70,71,72,78
	BZ 120455	Bonnet hinge rod-side	* 2	73,74,75,76,77
	BZ 122968	Bonnet hinge clip-rear	* 1	All
	BZ 121517	Bonnet hinge clip-spacer-rear	* 1	All
	BO 71602	Bonnet hinge clip screw	2	All
	BZ 116427	Bonnet hinge anchor plate assembly-front	1	All
	BO 71334	Bonnet hinge anchor plate screw	2	All
	BZ 70795	Bonnet hinge anchor plate nut	2	All
	BZ 116449	Bonnet hinge clamp bolt	2	All
	BO 71443	Bonnet hinge clamp nut	2	All
		1/4"-28x7/32"		
	BZ 121380	Bonnet latch assembly-R.H	* 1	70,71,72,78
	BZ 121381	Bonnet latch assembly-L.H	* 1	70,71,72,78
	BZ 121382	Bonnet latch assembly-R.H	* 1	73,74,75,76,77
	BZ 121383	Bonnet latch assembly-L.H	* 1	73,74,75,76,77
	BZ 118814	Bonnet latch rod bracket	4	All
	BZ 71610	Bonnet latch rod bracket rivet	8	All
		3/16"x7/32"		
	BZ 121384	Bonnet latch bracket-front-R.H	* 1	All
	BZ 121385	Bonnet latch bracket-front-L.H	* 1	All
	BZ 18453	Bonnet latch brkt.to core bolt	2	All
		1/4"-20x11/16"		
	BZ 121386	Bonnet latch bracket-rear-R.H	* 1	70,71,72,78
	BZ 121387	Bonnet latch bracket-rear-L.H	* 1	70,71,72,78
	BZ 121388	Bonnet latch bracket-rear-R.H	* 1	73,74,75,76,77
	BZ 121389	Bonnet latch bracket-rear-L.	* 1	73,74,75,76,77
	BZ 18465	Bonnet latch bracket-rear-bolt	4	70,71,72,78
	BZ 18453	Bonnet latch bracket-rear-bolt	4	73,74,75,76,77
	BZ 70874	Bonnet latch brkt.-rear-bolt nut	4	All
		1/4"-20x1/4"		
	BZ 116815	Bonnet handle	2	All
	BZ 71483	Bonnet handle nut	2	All
	BZ 95300	Bonnet corner cover	4	70,71,72,78
	BZ 95300	Bonnet corner cover-front	2	73,74,75,76,77
	BZ 120486	Bonnet corner cover-rear-R.H	* 1	73,74,75,76,77
	BZ 120467	Bonnet corner cover-rear-L.H	* 1	73,74,75,76,77
	BZ 71810	Bonnet corner cover-rear-rivet	4	73,74,75,76,77
	BZ 95918	Bonnet to cowl shim	2	70,71,72,78
	BZ 122759	Bonnet to cowl shim	* 2	73,74,75,76,77

ILLUS. NO	PART NO	NAME		PER CAR	MODEL	
BONNET (Cont'd.)						
BO 70733	Bonnet to cowl shim drive screw		#8x7/16"	AR	All	
BZ 120652	Bonnet to radiator shim-upper		*	2	All	
BZ 120653	Bonnet to radiator shim-lower		*	2	All	
BZ 18353	Bonnet to radiator shim rivet		9/64"x5/18"	14	All	
FRONT FENDERS						
A 120476	Front fender assembly-R.H.	}	Without well	*	1	70,71,72,78
A 120477	Front fender assembly-L.H.			*	1	70,71,72,78
A 120478	Front fender assembly-R.H.			*	1	73 exc.Bs.Cpe.,74,75,76,77
A 120479	Front fender assembly-L.H.			*	1	73 exc.Bs.Cpe.,74,75,78,77
A 124222	Front fender assembly-R.H.			*	1	73 Bs.Cpe.
A 124223	Front fender assembly-L.H.			*	1	73 Bs.Cpe.
A 121230	Front fender assembly-R.H.	}	With well	*	1	70,71,72,78
A 121231	Front fender assembly-L.H.			*	1	70,71,72,78
A 121232	Front fender assembly-R.H.			*	1	73 exc.Bs.Cpe.,74,75,78,77
A 121233	Front fender assembly-L.H.			*	1	73 exc.Bs.Cpe.,74,75,76,77
A 124226	Front fender assembly-R.H.			*	1	73 Bs.Cpe.
A 124227	Front fender assembly-L.H.			*	1	73 Bs.Cpe.
C 121238	Fender well assembly-R.H.			*	1	All
C 121239	Fender well assembly-L.H.			*	1	All
BZ 121680	Fender well support-R.H.			*	1	70,71,72,78
BZ 121881	Fender well support-L.H.			*	1	70,71,72,78
BZ 121682	Fender well support-R.H.			*	1	73,74,75,78,77
BZ 121683	Fender well support-L.H.			*	1	73,74,75,78,77
BZ 123515	Fender well support spacer			*	1	73,74:75,78,77
BZ 121688	Fender well support tapping plate			*	1	All
BZ 70091	Fender well support tapping plate screw				2	All
BZ 394	Fender well support to frame bolt		3/8"-16x1-1/4"		3	All
BO 70295	Fender well support to well rivet		1/4"x9/16"		4	All
BZ 121678	Fender well to apron support-R.H.			*	1	All
BZ 121679	Fender well to apron support-L.H.			*	1	All
BZ 152939	Front fender support assembly-R.H.			*	1	All
BZ 152940	Front fender support assembly-L.H.			*	1	All
BO 70295	Fender support to well rivet		1/4"x9/16"		4	All
BZ 545	Fender support to frame rivet		5/18"x1"		8	All
BZ 120048	Fender support tie rod			*	1	All
BZ 71463	Fender support tie rod nut		3/8"-16x21/64"		4	All
BZ 120191	Frt. fender apron support assy.	}	Without well	*	2	All
BZ 71607	Apron support to side dust shield bolt			3/8"-16x7/8"	2	All
BZ 70798	Apron support to apron bolt			12-28x3/4"	4	All
BZ 70795	Apron support to apron bolt nut			12-28x3/16"	4	All
A 120040	Front fender side dust shield assy.-rear-R.H.			*	1	70,71,72,78
A 120041	Front fender side dust shield assy.-rear-L.H.			*	1	70,71,72,78
A 120042	Front fender side dust shield assy.-rear-R.H.			*	1	73,74,75,78,77
A 120043	Front fender side dust shield assy.-rear-L.H.			*	1	74,75,78,77
A 120085	Front fender side dust shield assy.-rear-R.H.			*	1	73
BZ 70872	Side dust shield-rear-to fender bolt		1/4"-20x3/4"		8	All
BZ 70872	Side dust shield-rear-to frame bolt.		1/4"-20x3/4"		3-6	All
BZ 70874	Side dust shield-rear-to frame bolt nut-		1/4"-20x1/4"		3-6	All
BZ 71295	Side dust shield to frame screw		5/18"x5/8"		1-2	All
BZ 121765	Side dust shield to frame shim			*	2	70,71,72,73
BZ 121767	Side dust shield to frame shim			*	2	74,75,78,77
BZ 2490	Side dust shield to fender support bolt				4	All
BO 70674	Side dust shield to fender support bolt nut		5/16"-18x5/18"		4	All
BZ 120044	Side dust shield to fender support brace-R.H.			*	1	70,71,72,78
BZ 120045	Side dust shield to fender support brace-L.H.			*	1	70,71,72,78
BZ 120046	Side dust shield to fender support brace-R.H.			*	1	73,74,75,76,77
BZ 120047	Side dust shield to fender support brace-L.H.			*	1	73,74,75,76,77
BZ 121131	Battery tray assy.	}	Welded to side dust shield	*	1	70,71,72,78
BZ 121132	Battery tray assy.			*	1	73
BZ 121133	Battery tray assy,			*	1	74,75,78,77

IL- LUS. NO	PART NO	NAME	PER CAR	MODEL
FRONT FENDERS (Cont'd.)				
BZ 70892	Battery	tray to frame bolt	5/16"-18x3/4"	3 All
BO 70674	Battery	tray to frame bolt nut	5/16"-18x5/16"	3 All
BZ 152869	Battery	tray bracket (on frame)	*	1 All
BX 3197	Battery	tray bracket rivet	5/16"x7/8"	1 All
BZ 121140	Battery	tray cover assembly	*	1 70,71,72,78
BZ 121141	Battery	tray cover assembly	*	1 73,74,75,76,77
BO 170026	Battery	tray cover wing bolt	*	3 All
BZ 121763	Battery	tray cover to radiator shim	*	1-2 All
BX 18353	Battery	tray cover to radiator shim rivet-	9/64"x5/16"	3-6 All
BZ 70883	Fender	to running board bolt	5/16"-18x7/8"	10 All
BO 70674	Fender	to running board bolt nut	5/18"-18x5/16"	10 All
BZ 70883	Fender	to cowl panel bolt	5/18"-18x7/8"	3-10 All
BO 70674	Fender	to cowl panel bolt nut	5/16"-18x5/16"	3-10 All
BO 121764	Fender	to cowl panel shim	*	2 70,71,72,73
BO 121766	Fender	to cowl panel shim	*	2 74,75,76,77,78 Sed.
BZ 120176	Fender	to pillar dash bracket brace	*	2 All
BZ 71683	Fender	to pillar dash brkt.brace bolt-	5/16"-24x7/8"	6 All
BO 12481	Fender	to pillar dash brkt.brace nut-	5/16"-24x17/64"	6 All
BZ 120472	Fender	to bumper bar support bracket-R.H.	*	1 All
BZ 120473	Fender	to bumper bar support bracket-L.H.	*	1 All
BX 12310	Bracket	to bumper bar bolt	3/8"-24x1-3/8"	2 All
BX 12415	Bracket	to bumper bar bolt nut	3/8"-24x21/64"	2 All
BZ 120474	Fender	to bracket brace	*	2 All
BZ 1061	Fender	to bracket brace bolt	3/8"-24x1-1/8"	2 All
BZ 12415	Fender	to bracket brace bolt nut	3/8"-24x21/64"	2 All
BZ 120470	Fender	frame cross member corner bracket--R.H.	*	1 All
BZ 120471	Fender	frame cross member corner bracket-L.H.	*	1 All
BZ 70692	Corner brkt.	to cross member bolt	5/16"-18x3/4"	2 All
BZ 70674	Corner brkt.	to cross member bolt nut-	5/16"-18x5/16"	2 All
BZ 120469	Fender	frame cross member	*	1 All
BZ 1062	Fender	frame cross member bolt	3/8"-24x7/8"	2 All
BX 12415	Fender	frame cross member bolt nut	3/8"-24x21/64"	2 All
BZ 120662	Fender	to radiator shell welt	*	2 All
BO 18353	Fender	to radiator shell welt rivet	9/64"x5/16"	16 All
BO 70733	Fender	to radiator shell screw	6"x7/16"	4 All
BZ 121170	Front fender bumper	grommet-R.H.	*	1 All
BZ 121171	Front fender bumper	grommet-L.H.	*	1 All
BZ 116142	Front fender	stone guard	*	2 All
BZ 120644	Front fender	stone guard support-upper	*	2 All
BZ 3506	Stone guard	upper support bolt	1/4"-20x1-1/4"	4 All
BZ 70874	Stone guard	upper support bolt nut	1/4"-20x1/4"	4 All
BZ 120640	Stone guard	support-lower-R.H.	*	1 All
BZ 120641	Stone guard	support-lower-L.H.	*	1 All
HA 122614	Front fender	ornaments	Service kit	* 1 70,71,72,78
BZ 121522	Front fender	ornament	*	2 70,71,72,78
BZ 121523	Front fender	ornament	*	2 73,74,75,76,77
BZ 71260	Front fender	ornament washer		6 All
BO 71073	Front fender	ornament nut	10-32x1/8"	6 All

REAR FENDERS

A 120024	Rear fender	assembly-R.H.	Without holes for lamp	L.H.D.	*	1	70 U Co-U Cpe.,71,73 Bs.Cpe.,78 Sed.
A 120023	Rear fender	assembly-L.H.		R.H.D.	*	1	70 U Co.,71,73 Bs.Cpe.,78 Sed.
A 123803	Rear fender	assembly-L.H.		R.H.D.	*	1	70 U Cpe.
A 121798	Rear fender	assembly-R.H.	With holes for lamp		*	1	70-78 panel
A 121799	Rear fender	assembly-L.H.			*	1	70-78 panel
A 120026	Rear fender	assembly-R.H.			*	1	70-78 Cab Pu
A 120027	Rear fender	assembly-L.H.			*	1	70-78 Cab Pu
A 124620	Rear fender	assembly-R.H.			*	1	Station
A 124621	Rear fender	assembly-L.H.			*	1	Station
A 120022	Rear fender	assembly-R.H.		L.H.D.	*	1	72,73 exc.Bs.Cpe.,74 thru 77
A 120022	Rear fender	assembly-R.H.		R.H.D.	*	1	70 U Co-U Cpe.,71 thru 77,78 Sed.
A 120025	Rear fender	assembly-L.H.		L.H.D.	*	1	70 U Co.,71 thru 77,78 Sed.
A 120025	Rear fender	assembly-L.H.		R.H.D.	*	1	72,73 exc.Bs.Cpe.,74 thru 77
A 123802	Rear fender	assembly-L.H.		L.H.D.	*	1	70 U Cpe.

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
REAR FENDERS (Cont'd.)				
BZ 116142	Rear fender stone guard		2	70 U Co-U Cpe.,71 thru 77,78 Sed.
BZ 120644	Stone guard support-upper		*	2
BM 3506	Stone guard upper support bolt	1/4"-20x1-1/4"	4	70 U Co-U Cpe.,71 thru 77,78 Sed.
BZ 70874	Stone guard upper support bolt nut..	1/4"-20x1/4"	4	70 U Co-U Cpe.,71 thru 77,78 Sed.
BZ 120642	Stone guard support-lower-R.H		*	1
BZ 120643	Stone guard support-lower-L.H		*	1
BZ 120193	Rear fender apron support assembly		*	2
BT 71081	Apron support attaching bolt	3/8"-16x1"	2	All
BZ 70796	Apron support to apron bolt	12-28x3/4"	4	All
BZ 70795	Apron support to apron bolt nut	12-28x3/16"	4	All
BZ 121176	Rear fender welt		*	1
				70 U Co-U Cpe.-Panel-Station 71 thru 77,78 Sed.-Panel
BT 71061	Rear fender to body bolt-rear	3/8"-16x1"	4	70 U Co-U Cpe.,71 thru 77,78 Sed.
BZ 71607	Rear fender to body bolt	3/8"-16x7/8"	AR	70 U Co-U Cpe.-Cab Pu,71 thru 77, 78 Sed.
BZ 70883	Rear fender to running board bolt	5/16"-18x7/8"	6	All
BZ 70674	Rear fender to running board bolt nut	5/16"-18x5/16"	6	All
BZ 70872	Rear fender to underbody ext.holt	1/4"-20x3/4"	2	All
B7 70874	Rear fender to underbody ext.holt nut	1/4"-20x1/4"	2	All
BO 71674	Rear fender to body lag screw	1/4"-20x1-1/2"	AR	Station-Panel
BO 12194	Rear fender to body carriage bolt	5/16"-18x1-3/4"	8	Station
BZ 70674	Rear fender to body carriage bolt nut	5/16"-18x5/16"	8	Station
BZ 106300	Rear fender rear attaching hole plug		4	70-78 Cab Pu
HA 122616	Rear fender finish plate (wheel shield)complete less ornament-R.H.		*	1
HA 122617	Rear fender finish plate (wheel shield)complete less ornament-L.H.		*	1
BO 121537	Finish plate welt		*	2
BO 117464	Finish plate lower clip bumper		4	All
BO 117466	Finish plate clamp lever-R.H.		1	All
BO 117467	Finish plate clamp lever-L.H.		1	All
BO 71623	Finish plate clamp lever screw	10-32x1/2"	2	All
BO 121534	Finish plate clamp rod		*	2
BO 117471	Finish plate clamp rod spring		2	All
BO 12120	Finish plate clamp rod spring nut	1/4"-20x1/4"	2	All
HA 122615	Finish plate ornament complete-service kit		*	2
HA 122618	Finish plate ornament complete-service kit		*	2
BO 121174	Finish plate ornament		2	70,71,72,78
BO 121175	Finish plate ornament		*	2
BO 71073	Finish plate ornament nut	10-32x1/8"	8	73,74,75,76,77
BO 71260	Finish plate ornament screw washer	13/64"x1/2"x1/32"	8	All
SPLASH GUARDS				
A 41183	Flywheel guard assembly		1	70,71,72,73,78
A 42635	Flywheel guard assembly		1	74,75,76,77
BM 41121	Flywheel guard gasket		2	All
BZ 42838	Flywheel guard to cylinder plate webbing-long		2	74,75,76,77
BZ 42639	Flywheel guard to cylinder plate webbing--short		2	74,75,76,77
BO 9159	Flywheel guard to clutch housing screw-1/4"-20x5/8"		2	All
A 153090	Engine guard-front		1	70,71,72,78
A 153112	Engine guard assembly-front		*	1
A J53092	Engine guard-front		*	1
A 153113	Engine guard assembly-front-R.H.		*	74,75,76,77
A 153114	Engine guard assembly-front-R.H.		*	70,78
A 153115	Engine guard assembly-front-R.H.		*	71,72
A 153116	Engine guard assembly-front-R.H.		*	73
A 153117	Engine guard assembly-front-R.H.		*	74,75,76,77
A 153118	Engine guard assembly-rear-R.H.		*	70,78
A 153119	Engine guard assembly-rear-R.H.		*	71,72,73
A 153120	Engine guard assembly-rear-R.H.		*	74,75,76,77
A 153121	Engine guard assembly-L.H.		*	70,78
A 153122	Engine guard assembly-L.H.		*	71,72
A 153123	Engine guard assembly-L.H.		*	73
A 153106	Engine guard-rear		*	74,75,76,77
			1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
SPLASH GUARDS (Cont'd.)				
	BO 170041	Engine guard screw	14x1/2" Self tapping *	AR All
	BO 71707	Engine guard screw	10x5/8" Self tapping	AR All
	BO 18447	Engine guard screw	10-32x5/8"	AR All
	BO 71073	Engine guard screw nut	10-32x1/2"	AR All
A	120080	Rear splash guard-with holes for license lamp	*	1 70 U Co-U Cpe,71 thru 77,78 Sed.
A	123423	Rear splash guard-without holes	*	1 70 U Cpe.after car No. 702280
BZ	70872	Rear splash guard to fender bolt	1/4"-20x3/4"	6 70 U Co-U Cpe,71 thru 77,78 Sed.
BZ	70874	Rear splash guard to fender bolt nut	1/4"-20x1/4"	6 70 U Co-U Cpe,71 thru 77,78 Sed.
BO	70097	Rear splash guard to rear panel bolt	1/4"-20x7/8"	7 70 U Co-U Cpe,71 thru 77,78 Sed.
BZ	70874	Rear splash guard to rear panel bolt nut	1/4"-20x1/4"	7 70 U Co-U Cpe,71 thru 77,78 Sed.
BZ	121172	Rear splash guard bumper grommet-R.H.	*	1 70 U Co-U Cpe,71 thru 77,78 Sed.
BZ	121173	Rear splash guard bumper grommet-L.H.	*	1 70 U Co-U Cpe,71 thru 77,78 Sed.
RUNNING BOARDS				
C	120300	Running board assembly-R.H.	*	1 70,71,72
C	120301	Running board assembly-L.H.	*	1 70,71,72
C	120306	Running board assembly-R.11	*	1 73 exc.Bs.Cpe.,74,75
C	120307	Running board assembly-L.H.	*	1 73 exc.Bs.Cpe.,74,75
C	124228	Running board assembly-R.H.	*	1 73 Bs.Cpe.
C	124229	Running board assembly-L.H.	*	1 73 Bs.Cpe.
C	120308	Running board assembly-R.H.	*	1 76,77
C	120309	Running board assembly-L.H.	*	1 76,77
C	123980	Running board assembly-R.H.	*	1 78
C	123981	Running board assembly-L.H.	*	1 78
C	120370	Running board moulding-R.H.	*	1 73,74,75
C	120371	Running board moulding-L.H.	*	1 73,74,75
C	120372	Running board moulding-R.H.	*	1 76,77
C	120373	Running board moulding-L.H.	*	1 76,77
BZ	120374	Running board moulding clip-long	AR	73,74,75,76,77
BO	119021	Running board moulding clip-short	8	73,74,75,76,77
BO	123078	Running board to frame bracket spacer-rubber	*	2 All
BZ	71683	Running board attaching bolt-used with 123078 spacer	5/16"-24x7/8"	4 All
BZ	71264	Running board attaching bolt	5/16"-24x3/4"	4 All
BZ	70883	Running board attaching bolt-rear	5/16"-18x7/8"	2 All
BZ	70674	Running board attaching bolt-rear-nut	5/16"-18x5/16"	2 All
BZ	70872	Running board to underbody bolt	1/4"-20x3/4"	AR All
BZ	70874	Running board to underbody bolt nut	1/4"-20x1/4"	AR All
BZ	123988	Running board to fender welt	*	2 78
BO	18353	Running board to fender welt rivet	9/64"x5/18" Split	8 78
TOOLS				
NOTE: Tool box complete does not include transmission control lever for Electric Hand cars.				
C	153360	Tool box complete	*	1 70-78 U Co-U Cpe-Panel-Sed.71,72
C	153362	Tool box complete	*	1 Cab-Cab Pu-Station
C	153364	Tool box complete	*	1 73
C	153366	Tool box complete	*	1 74,75
C	153368	Tool box complete	*	1 76,77
BZ	40692	Spark plug wrench	1	All
BZ	22597	Monkey wrench	1	All
BZ	28333	End wrench	1	All
BZ	40852	Hammer	1	All
BZ	40853	Pliers	1	All
BZ	40854	Screw driver	1	All
BZ	151578	Starting crank and wheel bolt wrench	1	All
BZ	153400	Starting crank extension	*	1 70,71,72,78
BZ	153401	Starting crank extension	*	1 73
BZ	153402	Starting crank extension	*	1 74,75
BZ	153403	Starting crank extension	*	1 76,77

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
TOOLS (Cont'd.)				
BZ 151431	Jack (does not include handle)	For 151431 Jack	1	All exc.Cab-Cab Pu-Station
BZ 151819	Jack base assembly		1	All exc.Cab-Cab Pu-Station
BZ 154497	Jack screw		1	All exc.Cab-Cab Pu-Station
BZ 151432	Jack handle		1	All exc.Cab-Cab Pu-Station
BZ 40693	Jack		1	Cab-Cab Pu-Station
BZ 46172	Jack handle adapter		1	Cab-Cab Pu-Station
BZ 48396	Jack handle lock ring		1	Cab-Cab Pu-Station

FRONT FLOOR MATS AND PADS

BO 121020	Front floor mat and pad assembly	L.H.D.	*	1	70,71,78,73 Bs.Cpe.
BO 121021	Front floor mat and pad assembly	R.H.D.	*	1	70,71,78,73 Bs.Cpe.
BO 121022	Front floor mat and pad assembly	L.H.D.	*	1	72,73 exc.Bs.Cpe.,74,75,78,77
BO 121023	Front floor mat and pad assembly	R.H.D.	*	1	72,73 exc.Bs.Cpe.,74,75,78,77
BO 121040	Front floor mat trim clip		*	6	All
BO 121783	Steering gear hole cover		*	1	All
BO 121876	Steering column hole cover	fiber	*	1	All
BO 100829	Transmission opening cover pad			1	All
BO 121590	Dash lining pad-R.H.		*	1	All
BO 121591	Dash lining pad-L.H.		*	1	All
BO 18359	Dash lining pad clinch button			4	All
BO 70697	Dash lining pad clinch button washer			4	All
BO 121488	Dash silencer and trimboard assy.	L.H.D.	*	1	70,71,73 Bs.Cpe.,78
BO 121495	Dash silencer and trimboard assy.	R.H.D.	*	1	70,71,73 Bs.Cpe.,78
BO 121489	Dash silencer and trimboard assy.	L.H.D.	*	1	72,73 exc.Bs.Cpe.,74,75,78,77
BO 121490	Damp silencer and trimboard assy.	R.H.D.	*	1	72,73 exc.Bs.Cpe.,74,75,76,77
BO 117548	Dash silencer grommet			1	All

WIRING

BO 154387	Instrument panel wires and loom assy.	L.H.D.	*	1	70,71,72,73,74,75,78
BO 154389	Instrument panel wires and loom assy.	L.H.D.	*	1	76,77
BO 154384	Generator wires and loom assy.-used with relay		*	1	70,71,73 Bs.Cpe.,78 exc.Sed.
BO 154385	Generator wires and loom assy.-Used with charge reg.		*	1	70,71,72,73,78
BO 154386	Generator wires and loom assembly		*	1	74,75,76,77
BM 153465	Ignition cable tube assy.-(does not include wires)		*	1	70,71,72,73,78
BM 153466	Ignition cable tube assy.-(does not include wires)		*	1	74,75,78,77
F 153627	Battery to starter switch cable assembly		*	1	All
BZ 45728	Battery to starter cable terminal-battery negative			1	All
BZ 12843	Battery to starter cable bolt (battery end)			1	All
BZ 12844	Battery to starter cable bolt nut	5/16"-18x1/4"		1	All
BO 71441	Battery to starter cable terminal-starter end			1	All
BZ 41101	Battery to starter cable terminal sleeve			1	All
F 153829	Battery to ground connection-positive		*	1	70,71,72,78
F 153630	Battery to ground connection-positive			1	73,74,75,76,77
BZ 12843	Ground connection clamp bolt-battery			1	All
BZ 12844	Ground connection clamp bolt nut	5/18"-18x1/4"		1	All
BZ 45938	Ground connection acid seal felt			1	All
BZ 40674	Clutch housing to ground connection			1	All
BZ 219	Clutch housing to ground connection bolt-ground end				
	5/16"-18x3/4"			1	All
BZ 122	Clutch housing to ground connection bolt nut ground			1	All
	end 5/18"-18x5/16"			1	70,71,72,73,78
BM 150833	Coil to distributor wire assembly-high tension			1	74,75,76,77
BM 153714	Coil to distributor wire assembly		*	1	All
BO 70228	Coil to distributor wire terminal-distributor			1	All
BZ 36566	Coil to distributor wire terminal-(coil)			1	All
BM 5157	Coil to distributor wire terminal insulator (coil)			1	All
BM 38917	No. 1 spark plug to distributor wire assy.			1	Six cylinder engine
BM 42647	No. 1 spark plug to distributor wire assy.			1	Eight cylinder engine
BM 38922	No. 2 spark plug to distributor wire assy.			1	Six cylinder engine
BM 42649	No. 2 spark plug to distributor wire assy.			1	Eight cylinder engine
BM 38915	No. 3 spark plug to distributor wire assy.			1	Six cylinder engine
BM 42651	No. 3 spark plug to distributor wire assy.			1	Eight cylinder engine
BM 38914	No. 4 spark plug to distributor wire assy.			1	Six cylinder engine

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
WIRING (Cont'd.)				
BM	42653	No. 4 spark plug to distributor wire assy	1	Eight cylinder engine
BM	40848	No. 5 spark plug to distributor wire assy	1	Six cylinder engine
BM	42655	No. 5 spark plug to distributor wire assy	1	Eight cylinder engine
BM	38913	No. 6 spark plug to distributor wire assy	1	Six cylinder engine
BM	42657	No. 6 spark plug to distributor wire easy	1	Eight cylinder engine
BM	42657	No. 7 spark plug to distributor wire assy	* 1	Eight cylinder engine
BM	38914	No. 8 spark plug to distributor wire easy	* 1	Eight cylinder engine
F	46439	Ignition wires-boxed	1	Six cylinder engine
F	43538	Ignition wires-boxed	1	Eight cylinder engine
BM	32012	High tension wire insulator	7-9	All
BM	71144	Spark plug to distributor wire terminal-plug	6-8	All
BM	70228	Spark plug to distributor wire terminal-distributor	6-8	All
BZ	MS 3007	No. 16 armored cable-white	* AR	All
BZ	MS 3008	No. 16 armored cable-green	AR	All
BZ	MS 3009	7 MM high tension	* AR	All
BZ	MS 3018	No. 10 braid covered cable	AR	All
BZ	MS 3012	No. 16 braid covered cable	AR	All
BZ	MS 3011	No. 14 braid covered cable	AR	All
BZ	MS 3017	Triple cable-armored (2 No. 12, 1-No. 16)	* AR	All
BZ	MS 3005	No. 0 cable	AR	All
BO	18165	Wire terminal (small spade type)	AR	All
BO	18166	Wire terminal (small spade closed type)	AR	All
BO	71735	Wire terminal (small plug type)	39/64 long AR	All
BO	71119	Wire terminal (closed type)	AR	All
BO	71120	Wire terminal (closed type)	AR	All
BO	71286	Wire terminal (small plug type)	17/32" long AR	All
BO	71736	Wire terminal (small plug type)	17/32" long AR	All
BO	70228	Wire terminal (clip type for high tension wire)	AR	All
BO	71144	Wire terminal (for spark plug)	AR	All
BO	96566	Wire terminal	AR	All
BO	19044	Wire terminal sleeve (rubber) rubber	AR	All
BO	31548	Wire terminal sleeve	AR	All
BO	153626	Loom (dash to instrument panel wire)	3/4"x17" 1	All
HO	153624	Loom (generator wires)	3/8"x19-1/2" 1	70,71,72,73,78
BO	153625	Loom (generator wires)	3/8"x28" 1	74,75,76,77
BO	153949	Loom (stop lamp wires at switch)	5/16"x12" 1	70,71,72,73
BZ	154483	Battery to starter cable clip	* 1	All
BM	219	Battery to starter cable clip bolt	1	All
BZ	122	Battery to starter cable clip bolt nut	1	All
BZ	153622	Wires connector assembly-single	AR	All
BZ	153623	Wires connector assembly-double	AR	All
HEADLAMPS				
BO	120970	Headlamp complete-R.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	120971	Headlamp complete-L.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	120982	Headlamp complete-R.H.	* 1	73 exe.Bs.Cpe.,74,75,76,77
BO	120983	Headlamp complete-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	122630	Headlamp housing assembly-R.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	122631	Headlamp housing assembly-L.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	122632	Headlamp housing assembly-R.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	122633	Headlamp housing assembly-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	120972	Headlamp complete-R.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	120973	Headlamp complete-L.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	120984	Headlamp complete-R.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	120985	Headlamp complete-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	121000	Headlamp housing assembly-R.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	121001	Headlamp housing assembly-L.H.	* 1	70,71,72,73 Bs.Cpe.,78
BO	121002	Headlamp housing assembly-R.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	121003	Headlamp housing assembly-L.H.	* 1	73 exc.Bs.Cpe.,74,75,76,77
BO	121018	Headlamp reflector assembly	* 2	All
BO	124658	Headlamp reflector retainer-upper	2	All
BO	124659	Headlamp reflector guide retainer-lower	1	All
BO	109285	Headlamp reflector spring	* 4	All
BO	120998	Headlamp lens	* 2	70,71,72,78

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

HEADLAMPS (Cont'd.)

BO 124082	Headlamp lens		*	2	73-74-75-76-77
BO 117943	Headlamp lens locking screw			2	All
BO 119189	Headlamp lens gasket			2	All
BO 71636	Headlamp bulb	32-32 C.P.		2	All
BO 71550	Headlamp parking bulb	1.5 C.P.		2	All
BO 121008	Headlamp socket and wires assembly-R.H		*	1	All
BO 121009	Headlamp socket and wires assembly-L.H		*	1	All
BO 71552	Headlamp wires grommet	1/2" Rubber		1	All
BX 70125	Headlamp mounting stud nut	1/2"-20x7/16"		2	All
BZ 70905	Headlamp mounting stud lockwasher	1/2" Plain		2	All
BO 120964	Headlamp bracket-R.H.		*	1	All
BO 120965	Headlamp bracket-L.H.		*	1	All
BO 120968	Headlamp bracket pad		*	2	All
BZ 71728	Headlamp bracket bolt	3/8"-16x7/8"		4	All

FENDER LAMPS

HA 122192	Fender lamps complete-Service Kit	Chrome	*	1	All
HA 124004	Fender lamps complete-Service Kit	Prime or Lacquer	*	1	All
BO 122156	Fender lamp assembly-R.H	Chrome	*	1	All
BO 122157	Fender lamp assembly-L.H	Chrome	*	1	All
BO 124002	Fender lamp assembly-R.H	Prime or Lacquer	*	1	All
BO 124003	Fender lamp assembly-L.H	Prime or Lacquer	*	1	All
BO 122155	Fender lamp lens		*	2	All
BO 124619	Fender lamp lens retainer			2	All
BO 124618	Fender lamp lens cork gasket			2	All
BO 109807	Fender lamp socket spring			2	All
BO 122158	Fender lamp wire and terminal assembly-R.H		*	1	All
BO 122159	Fender lamp wire and terminal assembly-L.H		*	1	All
BO 71286	Fender lamp wire terminal			2	All
BO 109809	Fender lamp wire terminal insulator			2	All
BO 71739	Fender lamp attaching bolt	1/4"-20x1-1/8"		4	All
BO 122190	Fender lamp bracket pad		*	2	All
BO 122154	Fender lamp fender reinforcement		*	4	All

TAIL AND STOP LAMP

BO 121544	Tail and stop lamp assembly	Black enamel	L.H.D. R.H.D	*	1-2	70 U Co, 70 U Cpe, to car #702280, 71,72,73 Bs.Cpe, 78 Sed.
BO 120777	Tail and stop lamp assembly			*	1	70-78 Station-Panel-Cab-Cab Pu
BO 120798	Tail and stop lamp assembly			*	1	70-78 Station-Panel-Cab-Cab Pu
BO 121546	Tail and stop lamp assembly			*	2	73 exc.Bs.Cpe., 74,75,78,77
BO 121545	Tail and stop lamp assembly	Prime or lacquer		*	1-2	70 U Co, 70 U Cpe. to car #702280, 71,72,73 Bs.Cpe, 78 Sed.
BO 121547	Tail and stop lamp assembly			*	2	73 exc.Bs.Cpe., 74,75,76,77
BO 121670	Tail lamp housing			*	1-2	70 U Co, 70 U Cpe., to car #702280, 71 thru 77,78 Sed.
BO 121671	Tail lamp door ring assembly			*	1-2	70 U Co, 70 U Cpe., to car #702280, 71 thru 77,78 Sed.
BO 71417	Tail lamp door ring screw		8-32x3/8"		2-4	70 U Co, 70 U Cpe., to car #702280, 71 thru 77,78 Sed.
BO 121674	Tail lamp base, rim and lens assembly			*	1-2	70 U Co, 70 U Cpe., to car #702280, 71,72,73 Bs.Cpe, 78 Sed.
BO 121675	Tail lamp base rim and lens assembly			*	2	73 exc.Bs.Cpe., 74,75,76,77
BO 121668	Tail lamp lens			*	1-2	70 U Co, 70 U Cpe., to car #702280, 71,72,73 Bs.Cpe.
BO 121669	Tail lamp lens assembly			*	2	73 exc.Bs.Cpe., 74,75,76,77
BO 121672	Tail lamp wire and terminal assembly			*	1-2	70 U Co, 70 U Cpe. to car #702280, 71 thru 77,78 Sed.
BO 71286	Tail lamp wire terminal				2	All
BO 121673	Tail lamp mounting stud				2-4	70 U Co, 70 U Cpe., to car #702280, 71 thru 77,78 Sed.
BZ 70874	Tail lamp mounting stud nut		1/4"-20x1/4"		2-4	70 U Co, 70 U Cpe., to car #702280, 71 thru 77,78 Sed.
BO 121168	Tail lamp fender reinforcement-R.H.			*	1	70 U Co-U Cpe., 71 thru 77,78 Sed.

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
TAIL AND STOP LAMP (Cont'd.)				
BO 121169	Tail lamp fender reinforcement-L.H		* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121775	Tail lamp pad		* 1-2	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121647	Tail lamp housing	For	* 1	70-78 Station-Panel-Cab-Cab Pu
BO 121648	Tail lamp door and lens assy.	120777	* 1	70-78 Station-Panel-Cab-Cab Pu
BO 121649	Tail lamp and wires & terminal assy. - 10" long	ind L.H.D.	* 1	70-78 Station-Panel-Cab-Cab Pu
BO 121639	Tail lamp wires & terminal assy. - 40" long	120798 R.H.D.	* 1	70-78 Station-Panel-Cab-Cab Pu
BO 121666	Tail lamp license lens		* 1	70-78 Station-Panel-Cab-Cab Pu
BO 121667	Tail lamp license lens gasket		* 1	70-78 Station-Panel-Cab-Cab Pu
BO 123425	Tail and stop lamp assembly		* 1	70 U Cpe. after car #702280
BO 123553	Tail lamp body assembly		* 1	70 U Cpe. after car *702280
BO 121648	Tail lamp door and lens assembly		* 1	70 U Cpe. after car *702280
BO 123554	Tail lamp wires and terminal assembly		* 1	70 U Cpe. after car *702280
BO 121666	Tail lamp license lens		* 1	70 U Cpe. after car *702280
BO 121667	Tail lamp license lens gasket		* 1	70 U Cpe. after car *702280
BO 123552	Tail lamp bracket		* 1	70 U Cpe. after car *702280
BO 9159	Tail lamp to bracket bolt	1/4"-20x5/8"	* 2	70 U Cpe. after car *702280
BZ 70872	Tail lamp bracket to fender bolt	1/4"-20x3/4"	* 2	70 U Cpe. after car *702280
REAR LICENSE PLATE LAMP				
NOTE: License plate lamp discontinued on Utility Coupe after car No. 702280				
BO 121548	License plate lamp assembly	Black enamel	* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121549	License plate lamp assembly	Prime or Lacquer	* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BZ 70874	License plate lamp stud nut	1/4"-20x1/4"	2	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121646	License plate lamp base and wires assembly		* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 71286	License plate lamp base wire terminal-For	#14 & #16 Wire	1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121640	License plate lamp lens		1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 123924	License plate lamp lens housing	Black enamel	* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121641	License plate lamp lens housing	Prime or Lacquer	* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121643	License plate lamp lens gasket assembly		* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121644	License plate lamp lens gasket retainer		* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
BO 121645	License plate lamp bulb retainer gasket		* 1	70 U Co-U Cpe.,71 thru 77,78 Sed.
REAR LICENSE PLATE BRACKET				
BO 120775	License plate bracket assembly-without trunk		* 1	70 U Co.,71 thru 77,78 Sed.
BO 120776	License plate bracket assembly-with trunk		* 1	70 U Co.,71 thru 77,78 Sed.
BO 120775	License plate bracket assembly		* 1	70 U Cpe. to car #702280
BO 70899	License plate bracket to panel bolt		2	70 U Co.,70 U Cpe.to car #702280,71 thru 77,78 Sed.
BZ 70874	License plate bracket to panel nut		2	70 U Co.,70 U Cpe.to car #702280,71 thru 77,78 Sed.
BO 120774	License plate clamp		* 1	70 U Co.,70 U Cpe. to car #702280,71 thru 77,78 Sed.
BO 70899	License plate clamp bolt			70 U Co.,70 U Cpe. to car #702280,71 thru 77,78 Sed.
BZ 70874	License plate clamp nut		1	70 U Co.,70 U Cpe. to car *702280,71 thru 77,78 Sed,
BZ 112774	License plate bracket assembly		1	70 U Cpe. after car *702280
BZ 120778	Tail lamp and license plate bracket assy	L.H.D. *	1	70-78 Cab-Cab Pu
BZ 123396	Tail lamp and license plate bracket assy.	R.H.D. *	1	70-78 Cab-Cab Pu
BZ 70883	Tail lamp and license plate bracket bolt-	5/16"-18x7/8"	1-2	70-78 Cab-Cab Pu
BZ 70674	Tail lamp and license plate brkt.bolt nut			
		5/16"-18x5/16"	1-2	70-78 Cab-Cab Pu
BZ 121227	Tail lamp support brkt.and license plate arm assembly	L.H.D. *	1	70-78 Panel
BZ 121226	Tail lamp support bracket and license plate arm assembly	R.H.D. *	1	70-78 Panel

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
DISTRIBUTOR				
	X Serviced by Electric Auto Lite Corporation, Toledo, Ohio. For parts list see page 93.			
X 153180	Distributor complete		* 1	70,71,73 Bs.Cpe.,78
X 153181	Distributor complete		* 1	72,73 exc.Bs.Cpe.
X 153182	Distributor complete		* 1	74,75,76,77
X 40596	Distributor drive gear		1	All
BO 100782	Distributor cap hole plug	Rubber	1	70,71,72,73,78
BT 395	Distributor bolt	5/16"-18x5/8"	1	All
BM 42349	Distributor gasket		1	All
BM 43323	Distributor resistor		1	70,71,73 Bs.Cpe.,78
GENERATOR AND CONTROL				
	X Serviced by Electric Auto Lite Corporation, Toledo, Ohio. For parts list see page 87			
X 153186	Generator assembly-used without radio		* 1	70,71,73 Bs.Cpe.,78 exc.Sed.
X 153187	Generator assembly-high rate-with radio		* 1	70,71,73 Bs.Cpe.
X 153187	Generator assy.-high rate-with or without radio		* 1	72,73 exc.Bs.Cpe.,74,75,76,77,78 Sed.
BO 908	Generator to bracket bolt	5/16"-18x7/8"	1	All
BM 2490	Generator to bracket bolt-long	5/16"-18x1-1/8"	1	All
BO 122	Generator to bracket bolt nut	5/16"-18x5/16"	2	All
PM 153192	Generator support bracket		1	All
BZ 119	Generator support bracket bolt	3/8"-16x7/8"	2	All
BM 45095	Generator adjusting bracket		1	All
BZ 110	Generator adjusting bracket stud not	3/8"-16x3/8"	1	All
BM 154293	Generator "F" terminal post nut	For high Rate	* 1	All
BM 71266	Generator "G" terminal post screw	Gen. 10-32x5/16"	1	All Discontinued Feb. 9, 1937
BO 71121	Generator "A" terminal post nut	14-24x1/2"	1	All
X 150722	Relay assembly-used without radio		1	70,71,73 Bs.Cpe.,78 exc.Sed.
X 153194	Charge regulator assy.-used with high rate		* 1	All
BT 71707	Relay and charge reg.to dash screw-	10x5/8" Sheet Metal	2	All
HA 153193	Charge regulator complete-Service kit		* 1	70,71,73 Bs.Cpe.,78 exc.Sed.
IGNITION COIL				
	X Serviced by Electric Auto Lite Corporation, Toledo,			
X 153196	Coil complete-includes lock		* 1	70,71,72,73,78
X 153197	Coil complete-includes lock		* 1	74,75,76,77
BT 71707	Coil brkt. to dash screw	10x5/8" Sheet Metal	2	All
BO 71073	Coil terminal nut	10-32x1/8"	1	All
BO 47630	Coil lock cylinder and keys assembly		1	All
BO 152043	Coil lock cylinder-blank		1	All
BO 45986	Coil lock key		2	All
BO 70157	Coil lock case brkt.mounting bolt	1/4"-20x1/2"	2	All
BO 70109	Coil lock case brkt.mounting bolt lock washer		2	All
		1/4"		
STARTING MOTOR				
	X Serviced by Electric Auto Lite Corporation, Toledo, Ohio, For parts list see page 91.			
X 45101	Starting motor assembly		1	All
BM 40609	Starting motor mounting stud		2	All
BZ 110	Starting motor mounting stud nut	3/8"-16x3/8"	4	All
X 45997	Starting motor switch assembly		1	All
BZ 71073	Starting motor switch terminal nut	10-32x1/8"	1	All
BO 12481	Starting motor terminal post nut	5/16"-24x17/64"	1	All
BATTERY				
	X Serviced direct by National Battery Company, St. Paul, Minn.			
X 48150	Battery assembly		1	70,71,72,73,78
X 150763	Battery assembly		1	74,75,76,77
BZ 153282	Battery drip pan assembly		* 1	70,71,72,73,78

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
BATTERY (Cont'd.)				
BZ	153283	Battery drip pan assembly	*	1 74,75,76,77
BZ	153284	Battery drip pan drain tube	rubber *	1 All
BZ	153285	Battery clamp bolt	5/16"-24x8-3/8" *	2 All
BZ	153286	Battery clamp bolt insulator	*	2 All
BO	12481	Battery clamp bolt nut	5/16"-24x17/64" *	2 All
HA	46945	Battery charger		All
SWITCHES				
BZ	153208	Lighting switch assembly	*	1 All
BO	153201	Lighting switch mounting nut	*	1 All
BO	153202	Lighting switch knob assembly	*	1 All
BO	153204	Lighting switch knob retaining spring	*	1 All
BZ	153205	Lighting switch knob set screw	*	1 All
BO	70863	Lighting switch terminal screw-short	8-32x1/4" *	4 All
BO	71417	Lighting switch terminal screw-long	8-32x3/8" *	1 All
BO	153212	Headlight dimmer switch	*	1 All
BZ	70157	Headlight dimmer switch attaching screw	1/4"-20x1/2" *	2 All
BZ	153213	Stop lamp switch assembly	*	1 All
BM	71490	Stop lamp switch attaching screw	10-24x3/8" *	2 All
BO	121275	Service light switch	*	1 72,73 exc.Bs.Cpe,74,75,76,77,78Sed.
BO	71665	Service light switch attaching screw	8-32x5/16" *	1 72,73 exc.Bs.Cpe,74,75,76,77,78Sed.
BO	153200	Starter button switch assembly	*	1 All
BO	153201	Starter button switch mounting collar	*	1 All
BO	153202	Starter button switch knob assembly	*	1 All
BO	153204	Starter button switch knob retaining spring	*	1 All
BO	153205	Starter button switch knob set screw	*	1 All
BO	153206	Startix complete-service kit	*	1 All
HORN				
Single unit vibrator type				
BO	153303	Horn assembly	*	1 70,71,'78
BO	12790	Horn terminal nut	8-32x1/8" *	2 70,71,78
BO	153304	Horn bracket assembly	*	1 70,71,78
BM	70872	Horn bracket to dash bolt	1/4"-20x3/4" *	2 70,71,78
BZ	70676	Horn bracket to dash bolt nut	1/4"-20x1/4" *	2 70,71,78
BO	153310	Horn bracket to dash bolt plate	*	1 70,71,78
BO	71443	Horn to bracket screw nut	1/4"-28x7/32" *	2 70,71,78
HORNS				
Dash mounted Electric Air type				
BO	153311	Horn and bracket assembly-R.H	high pitch *	1 72,73,74.75,76,77
BO	153312	Horn and bracket assembly-L.H	low pitch *	1 72,73,74,75,76,77
BO	153315	Horn bracket assembly		2 72,73,74.75,76,77
BO	70872	Horn bracket to dash bolt	1/4"-20x3/4" *	4 72,73,74,75,76,77
BZ	70676	Horn bracket to dash bolt nut	1/4"-20x1/4" *	4 72,73,74,75,76,77
BO	153310	Horn bracket to dash bolt plate	*	1 72,73,74.75.76.77
BO	71443	Horn to bracket screw nut	1/4"-28x7/32" *	4 72,73,74.75,76,77
BO	71665	Horn terminal screw	8-32x5/16" *	4 72,73,74,75,76,77
BO	152739	Horn terminal screw straddle clip	*	4 72,73,74,75,76.77
BO	153319	Horn relay	*	1 72,73,74.75.76.77
HA	153945	Twin horns complete-Kit	*	1 72,73,74,75,76,77
NOTE: Horn parts not listed above serviced by United Motors Service				
HORNS				
Fender mounted-Electric Air type				
BO	153588	Horn and bracket assembly	high pitch *	1 All
BO	153589	Horn and bracket assembly-L.H	low pitch *	1 All
BO	153594	Horn trumpet assembly		2 All
BO	153592	Horn power unit assembly-R.H	*	1 All
BO	153593	Horn power unit assembly-L.H	*	1 All
BO	154749	Horn power unit cover	*	2 All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------


HORNS (Cont'd.)
Fender mounted-Electric Air type

BO 153595	Horn bracket assembly-R.H		*	1	All
BO 15359e	Horn bracket assembly-L.H		*	1	All
BO 153597	Horn bracket pad		*	2	All
BO 153598	Horn bracket reinforcement		*	2	All
BO 71732	Horn to bracket bolt	1/4"-28x3/4"		4	All
BO 153599	Horn to bracket bolt plate		*	2	All
BO 71731	Horn bracket to fender bolt	5/16"-18x7/8"		4	All
BO 70674	Horn bracket to fender bolt rut	5/16"-18x5/16"		4	All
BO 153319	Horn relay		*	1	All
HA 153946	Twin horn complete-kit		*	1	All

NOTE: Horn parts not listed above serviced by United Moors Service

WINDSHIELD CLEANER

BO 121655	Windshield cleaner blade		*	2	All exc.Convertibles
BO 122531	Windshield cleaner blade		*	2	Convertibles
HA 122528	Windshield cleaner blade-moulded type	Carton of 21			All exc.Convertibles
BO 121652	Windshield cleaner control assembly		*	1	All
BO 118224	Windshield cleaner control gasket			1	All
BO 121653	Windshield cleaner control spacer		*	1	All
BX 70867	Windshield cleaner control lockwasher	7/16"Shakeproof		1	All
BO 117016	Windshield cleaner control nut			1	All
BO 117495	Windshield cleaner tubing-used with std. fuel pump			1	All
BO 122533	Windshield cleaner tubing-used with combination fuel and vacuum pump		*	1	All
BO 121656	Windshield cleaner arm and spring assembly		*	2	All except Convertibles
130 117025	Windshield cleaner arm acorn nut			2	All

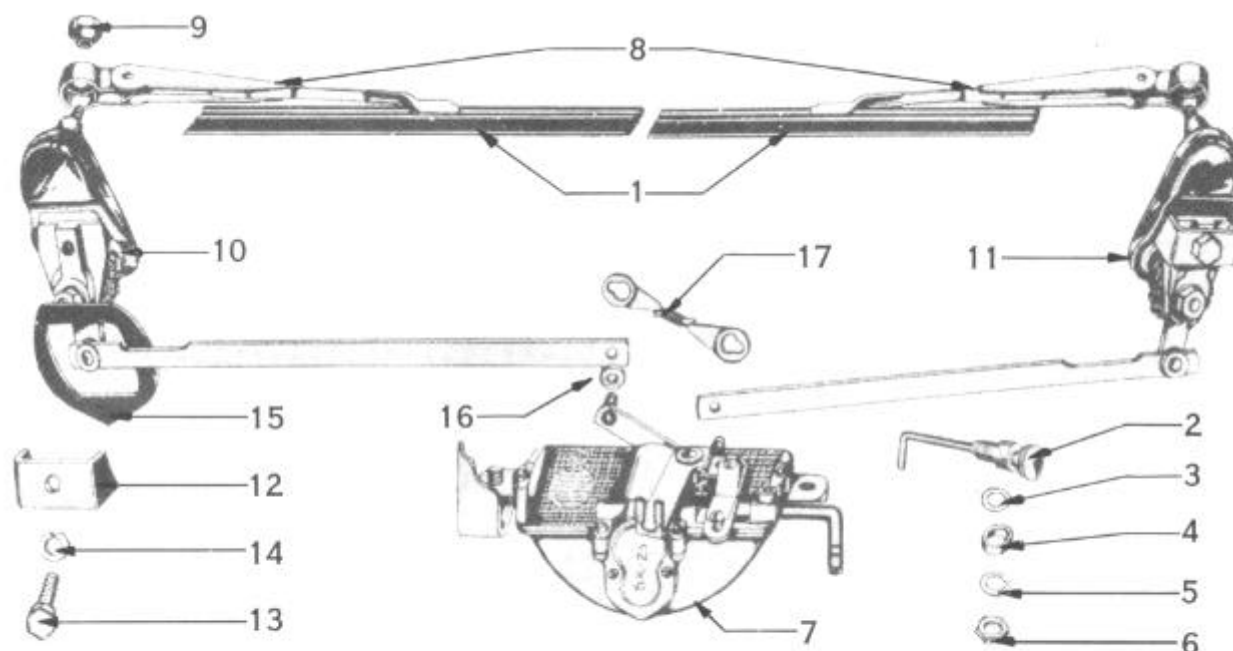

WINDSHIELD CLEANER

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
--------------	------------	------	------------	-------

WINDSHIELD CLEANER (Cont'd.)

The following windshield cleaner parts are not supplied by the Hudson Motor Car Company, but may be obtained from Trico Products Corporation, Buffalo, N.Y; or their authorized dealers.

Part numbers shown are Trico numbers.

SK-25	Motor assembly	1	All models
R -76235-J	Motor paddle assembly	1	All models
76235-J	Motor shaft with lever	1	All models
SP-1075	Motor renewal parts set	1	All models
8897-17	Motor kicker	1	All models
76570-81C	Wiper arm	2	All models except Convertibles
76570-31C	Wiper arm	2	Convertibles
78702-C	Chain housing and linkage-driver side	1	All models
76703-C	Chain housing and linkage-passenger side	1	All models
76705-J	Clamping bracket	1	All models
634-28J	Clamping bracket hex. head screw	2	All models
2328-28J	Clamping bracket lock washer	2	All models
78708	Rubber gasket	2	All models
75896	Felt washer for motor lever	2	All models
76125-J	Spring & link for motor lever	1	All models

INSTRUMENTS AND MOUNTING

BO 121810	Instrument panel radio opening cover	Walnut *	1	70,71,72,78
BO 121811	Instrument panel radio opening cover	Tenite *	1	73,78,76
BO 12790	Radio opening cover stud nut	8-32x1/8"	2	70,71,72,78
BO 71718	Radio opening cover stud speed nut	10-32	2	73,78,78
BO 117289	Radio opening cover stud cup washer		2	70,71,72,78
BO 121617	Radio dial bezel	used with radio *	1	All
BO 121520	Instrument panel moulding	*	1	72,73,78,75,76,77
BO 121519	Instrument panel moulding clip	*	7	72,73,74,75,76,77
BZ 70872	Instrument cluster mounting bolt	1/8"-20x3/8"	4	All
X 121598	Speedometer head assembly Black face	*	1	All
X 128686	Speedometer head assembly Brown face	*	1	73 exc.Bs Cpe.,74,75,78,77
BO 122969	Speedometer head gasket	*	1	All
BO 70863	Speedometer head attaching screw	8-32x1/8"	4	All
BO 128530	Speedometer flexible shaft to dash panel clip	*	1	All

X Serviced by Stewart Warner Corporation, Chicago, Ill

BO 121031	Speedometer glass dial	For	*	1	All
BO 121033	Speedometer glass dial ret.	instruments	*	1	All
BO 121035	Speedometer glass dial bezel	with black	*	1	All
BO 121030	Gasoline gauge assembly	background	*	1	All
BO 121038	Gasoline gauge glass dial *		*	1	All
BO 121037	Temperature gauge glass dial	Superseded	*	1	All
BO 121036	Oil gauge glass dial	on Hudson	*	1	All
BO 121039	Generator gauge glass dial	exc.73 Bs.	*	1	All
BO 122172	Gauge glass dial retainer	Cpe., by	*	4	All
BO 122173	Gauge glass dial bezel	brown	*	4	All
BO 122175	Oil gauge "NO" indicator assy.	background	*	1	All
BO 122176	Generator gauge "NOT" indicator assy.		*	1	All
BO 124670	Speedometer glass dial	For	*	1	73 exc.Bs.Cpe.,78,75,76,77
BO 128672	Speedometer glass dial retainer	instruments	*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128673	Speedometer glass dial bezel	with brown	*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128674	Gasoline gauge assembly	background	*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128677	Gasoline gauge dial glass		*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128676	Temperature gauge dial glass	Second	*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128675	Oil gauge dial glass	type on	*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 128678	Generator gauge dial glass	Hudson	*	1	73 exc.Bs.Cpe.,78,75,76,77
BO 128879	Gauge glass dial retainer	exc. 73 Bs.	*	4	73 exc.Bs.Cpe.,78,75,76,77
BO 128680	Gauge glass dial bezel	cpe.	*	4	73 exc.Bs.Cpe.,78,75,78,77
BO 128685	Oil gauge "NO" indicator assy.		*	1	73 exc.Bs.Cpe.,78,75,76,77
BO 128686	Gen.gauge "NOT" indicator assy.		*	1	73 exc.Bs.Cpe.,78,75,78,77
BO 121034	Speedometer glass dial cushion		*	1	All
BO 122174	Gauge glass dial cushion		*	4	All
BO 121030	Water temperature gauge assembly		*	1	All

ILLUS. NO	PART NO	NAME	PER CAR	MODEL
		INSTRUMENTS AND MOUNTING (Cont'd.)		
	BO 71073	Gasoline and temperature gauge terminal nut- 10-32x1/8"	4	All
	BZ 70563	Gasoline and temperature gauge terminal lockwasher #10	4	All
		NOTE: When replacing a gauge glass or bezel, it is advisable to use a new retainer.		
	BO 153672	Oil light socket and wires assembly *	1	All
	BO 18166	Oil light wires terminal	2	All
	BO 31548	Oil light wires sleeve	2	All
	BO 153674	Generator light socket and wires assembly *	1	All
	BO 18166	Generator light wires terminal	2	All
	BO 31548	Generator light wires sleeve	2	All
	BO 153676	Generator light wires terminal washer *	4-5	All
	BO 153677	Generator light wires insulating washer *	4-5	All
	BO 153678	Generator light wires terminal spring *	4-5	All
	BO 153670	Instrument lamp socket and wires assembly *	1	All
	BO 18166	Instrument lamp wires terminal	1	All
	BO 117318	Service light socket and wires assembly L.H.D. *	1	72,73 exc.Bs.Cpe.,74 thru 77,78Sed.
	BO 18165	Service light wires terminal	1	72,73 exc.Bs.Cpe.,74 thru 77,78Sed.
	BO 117316	Service light bracket assembly	1	72,73 exc.Bs.Cpe.,74 thru 77,78Sed.
	BO 71555	Service light bracket screw No. 6x3/8"	2	72,73 exc.Bs.Cpe.,74 thru 77,78Sed.
	BO 70417	Service light bracket screw washer	2	72,73 exc.Bs.Cpe.,74 thru 77,78Sed.
	BO 153200	Starter button switch assembly *	1	All
	BO 153201	Starter button switch mounting collar *	1	All
	BO 31548	Starter button switch terminal sleeve	1	All
	BO 153202	Starter button knob assembly *	1	All
	BO 153204	Starter button knob retainer *	1	All
	BO 153205	Starter button knob set screw *	1	All
	BO 121010	Carburetor choke wire and tube assembly L.H.D. *	1	70,71,73 Bs.Cpe.,78
	BO 121012	Carburetor choke wire and knob *	1	70,71,73 Bs.Cpe.,78
	BZ 70122	Carburetor choke wire panel nut.. 3/8"-24x5/32"	1	70,71,73 Bs.Cpe.,78
	BO 70121	Carburetor choke wire panel nut washer 3/8"	1	70,71,73 Bs.Cpe.,78
	BO 122922	Carburetor choke wire clip *	1	70,71,73 Bs.Cpe.,78
	BO 153249	Clutch vacuum control switch *	1	All with vacuum control
	BO 153201	Clutch vacuum control switch mounting collar *	1	All with vacuum control
	BO 153202	Clutch vacuum control switch knob assembly *	1	All with vacuum control
	BO 153204	Clutch vacuum control switch knob retainer *	1	All with vacuum control
	BO 153205	Clutch vacuum control switch knob set screw *	1	All with vacuum control
	BO 120885	Locker box assembly R.H.D. *	1	All
	BO 70455	Locker box to instrument panel screw 8-32x3/4"	5	All
	BO 12316	Locker box to instrument panel screw finish washer - #10	5	All
	BO 71672	Locker box to instrument panel screw speed nut- 8-32	5	All
	BO 112099	Locker box dash bracket	1	All
	BZ 70796	Locker box to dash bracket bolt 12-28x3/4"	1	All
	BO 112197	Locker box to dash bracket bolt tapping plate	1	All
	BO 121064	Locker box door assembly-R.H. R.H.D. *	1	70 Station,71 exc.Bs.Cpe.,72,78Sed.
	BO 121065	Locker box door assembly-R.H. L.H.D. *	1	70 Station,71 exc.Bs.Cpe.,72,78Sed.
	BO 123746	Locker box door assembly-R.H. L.H.D. *	1	70 exc.Sta.,71-73 Bs.Cpe.,78exc.Sed.
	BO 123747	Locker box door assembly-L.H. L.H.D. *	1	70 exc.Sta.,71-73 Bs.Cpe.,78exc.Sed.
	BO 121068	Locker box door assembly-R.H. } First type R.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
	BO 121069	Locker box door assembly-R.H. } three tone L.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
			1	
	BO 121064	Locker box door assy.-R.H. } Second type two R.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
	BO 121065	Locker box door assy.-L.H. } tone walnut R.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
	BO 124590	Locker box door assy.-R.H. } Third type R.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
	BO 124591	Locker box door assy.-R.H. } walnut pearl L.H.D. *	1	73 exc.Bs.Cpe.,74,75,76,77
	BO 121118	Locker box door bumper *	4	All
	BO 121119	Locker box door spacer Rubber *	2	All
	BO 121074	Locker box door hinge assembly-less spring *	1	All
	BO 170003	Locker box door hinge rivet 3/16"x5/18" *	2	All


ILLUS. NO	PART NO	NAME			PER CAR	MODEL	
INSTRUMENTS AND MOUNTING (Cont'd.)							
BO 121078	Locker box door	hinge spring-R.H.		*	1	All	
BO 121079	Locker box door	hinge spring-R.H.		*	1	All	
BO 18470	Locker box door	hinge to inst.panel screw-	10-32x5/8"		3	All	
BO 12316	Locker box door	hinge to inst.panel	finish washer		3	All	
BO 71073	Locker box door	hinge to inst.panel nut-	10-32x1/8"		3	All	
BO 71430	Locker box door	hinge to door screw-	10-32x9/16"		3	All	
BO 121075	Locker box door	clip nut		*	1	All	
BO 121076	Locker box door	striker plate		*	2	All	
BO 121077	Locker box door	retaining clip	} For stationary door	*	1	All	
BO 71654	Locker box door	retaining clip screw			1	All	
BO 124080	Locker box door	knob catch		*	1	All	
BO 121504	Locker box door	knob-to car	Nos.70209-715394	*	1	70,71	
BO 123370	Locker box door	knob-after car	Nos.70209-	*	1	70,71,73 Bs.Cpe.,78 exc.Sed.	
BO 71706	Locker box door	knob screw	6-32x5/16"	J		70,71,73 Bs.Cpe.,78	
BO 121497	Locker box door	lock cylinder and keys assembly		*	1	'72,73 exc.Bs.Cpe,74,75,76,77,78Sed.	
BO 121503	Lock cylinder and keys			*	1	72,73 exc.Bs.Cpe,74,75,76,77,78Sed.	
BO 124403	Lock cylinder		Blank	*	1	72,73 exc.Bs.Cpe,74,75,76,77,78Sed.	
BO 109079	Lock key				2	72,73 exc.Bs.Cpe,74,75,76,77,78Sed.	
BO 71706	Locker box door	lock screw	8-32x5/16"		1	72,73 exc.Bs.Cpe,74,75,78,77,78Sed.	
BO 121601	Clock opening cover	plate	Walnut-plain	*	2	70 Station,71 exc.Bs.Cpe.,78 Sed.	
BO 121602	Clock opening cover	plate	Walnut-with stripe	*	2	72	
BO 121600	Clock opening cover	plate	Painted	*	2	70 exc.Sta.,71-73 Bs.Cpe,78exc.Sed.	
BO 121603	Clock opening cover	plate-first type	Tenite	*	1-2	73 exc.Bs.Cpe.,74,75,76,77	
BO 122880	Clock opening cover	plate-second type -	Three tone walnut	*	1-2	73 exc.Bs.Cpe.,74,75,76,77	
BO 121602	Clock opening cover	plate-third type-Two tone	walnut	*	1-2	73 exc.Bs.Cpe.,74,75,76,77	
BO 124585	Clock opening cover	plate fourth	Walnut pearl	*	1-2	73 exc.Bs.Cpe.,74,75,76,77	
BO 12790	Clock opening cover	plate nut	8-32x1/8"		4	All	
BO 71718	Clock opening cover	plate spring nut-For tenite cover			4	73,74,75,76,77	
HA 121608	Locker box door	clock and bezel assy	L.H.D.	*	1	70,71,72,76	
HA 121609	Locker box door	clock bezel		*	1	70,71,72,78	
HA 121607	Locker box door	clock and bezel assy.	} First type Tenite	L.H.D.	*	1	73,74,75,76,77
HA 121606	Locker box door	clock and bezel			*	1	73,74,75,76,77
HA 123134	Locker box door	clock and bezel assy.	} Second type	L.H.D.	*	1	73,74,75,76,77
HA 123135	Locker box door	clock and bezel assy.			*	1	73,74,75,76,77
HA 121608	Locker box door	clock and bezel assy.	} Third type	L.H.D.	*	1	73,74,75,76,77
HA 121609	Locker box door	clock bezel			*	1	73,74,75,76,77
HA 124595	Locker box door	clock and bezel assy.	} Fourth Type	L.H.D.	*	1	
HA 124598	Locker box door	clock bezel *				1	
HA 121605	Locker box door	electric clock	Walnut pearl	L.H.D.	*	1	70,71,72,78
HA 121605	Locker box door	electric clock-First type, black face		L.H.D.	*	1	73,74,75,76,77
HA 124681	Locker box door	electric clock--Second type,brown face		L.H.D.	*	1	73,74,75,76,77
BO 170004	Electric clock	fuse	2 amp.	*	1	All	
BO 38909	Electric clock	wire clip			1	All	
BO 18165	Electric clock	wire terminal			3	All	
BO 31548	Electric clock	wire terminal sleeve			3	All	
BO 121621	Instrument panel	ash tray assembly	Drawer only	*	1	70,71,72,78	
BO 121624	Instrument panel	ash tray assembly	Drawer only	*	1	73,74,75,76,77	
BO 121627	Instrument panel	ash tray knob		*	1	All	
BO 71716	Instrument panel	ash tray knob screw			1	All	
BO 121626	Instrument panel	ash receiver guide		*	1	All	
BO 71716	Instrument panel	ash receiver screw	10-32x3/8"		12	All	
BO 71073	Instrument panel	ash rec. screw nut	10-32x1/8"		2	All	
BO 121505	Instrument panel	cigar lighter assy.-less wire		*	1	75,76,77	
BO 121506	Cigar lighter	base assembly		*	1	75,76,77	
BO 121514	Cigar lighter	base clamp		*	1	75,76,77	
BO 121518	Cigar lighter	heating element and knob assembly		*	1	75,76,77	
BO 122924	Cigar lighter	heating element		*	1	75,76,77	

ILLUS. NO	PART NO	NAME		PER CAR	MODEL
INSTRUMENTS AND MOUNTING (Cont'd.)					
BO 121508	Cigar lighter knob		*	1	75,76,77
BO 121801	Instrument panel windshield defroster grill			2	All
BO 12790	Instrument panel windshield defroster grill nut			4	All
INSTRUMENTS AND MOUNTING-R.H.D.					
BO 117318	Service light socket and wires assy.-with switch on left side of inst. panel-To car Nos. 723781-731989-741764-75970-76187-771257		*	1	72,73 exc.Bs.Cpe.,74 thru 77
BO 154590	Service light socket and wires assy.-with switch on right side of inst.panel-After above car numbers		*	1	72,73 exc.Bs.Cpe.,74 thru 77,78 Sed.
BO 121011	Carburetor choke wire and tube assembly		*	1	70,71,73 Bs.Cpe.,78
BO 121066	Locker box door assembly-R.H		*		70 Sta.,71 exc.Bs.Cpe.,72,78 Sed.
BO 121067	Locker box door assembly-R.H		*	1	70 Sta., 71 exc.Bs.Cpe.,72,78 Sed.
BO 123748	Locker box door assembly-R.H		*	1	70 exc.Sta.,71-73 Bs.Cpe,78exc.Sed.
BO 123749	Locker box door assembly-L.H			1	70 exc.Sta.,71-73 Bs.Cpe,78exc.Sed.
BO 121070	Locker box door assy.-R.H.	} First type three tone walnut	*	1	73 exc.Bs.Cpe.,74,75,76,77
BO 121071	Locker box door assy.-L.H.		*	1	73 exc.Bs.Cpe.,74,75,76,77
BO 121066	Locker box door assy.-R.H.	} Second type two tone walnut	*	1	73 exc.Bs.Cpe.,74,75,76,77
BO 121067	Locker box door assy.,-R.H.		*	1	73 exc.Bs.Cpe.,74,75,76,77
HO 124592	Locker box door assy.-R.H.	} Third type walnut pearl	*	1	73 exe.Bs.Cpe.,74,75,76,77
BO 124593	Locker box door assy.-R.H.		*	1	73 exc.Bs.Cpe.,74,75,76,77
HA 123932	Locker box door clock and bezel assembly		*	1	70,71,72,78
HA 123933	Locker box door clock and bezel assy.- Three tone walnut		*	1	73,74,75,76,78
				1	
HA 123937	Locker box door clock and bezel assy.-Two tone walnut		*	1	73,74,75,76,78
HA 124594	Locker box door clock and bezel assy.-Walnut pearl		*	1	73,74,75,76,78
HA 123930	Locker box door electric clock		*	1	70,71,72,78
HA 123930	Locker box door electric clock	Black face	*	1	73,74,75,76,77
HA 124682	Locker box door electric clock	Brown face	*		73,74,75,76,77

HEATER-HOT WATER TYPE

STANDARD DELUXE CUSTOM

HA 152621	Heater complete	1		
HA 152622	Heater complete		1	
HA 152623	Heater complete			1
BO 153801	Core	1		
BO 153802	Core assembly		1	
BO 153803	Core assembly			1
BO 153804	Door assembly	1		
BO 153805	Door assembly-upper		1	
BO 153806	Door assembly-lower		1	
BO 153807	Door assembly-upper			1
BO 153808	Door assembly-lower			1
BO 151448	Fan assembly	1		
BO 153809	Propeller fan assembly		1	
BO 153810	Propeller fan assembly			1
BO 153811	Motor	1		
BO 153812	Motor		1	1
BO 153813	Blower wheel and set screw assembly		1	1
BO 153816	Defroster knob		1	1
BO 153814	Control Rheostat	1	1	1
BO 71641	Rheostat bulb	1	1	1
BO 153815	Hose connection assembly	1	1	1
HA 152624	Heater windshield defroster,		1	1
BO 123559	Defroster hose assembly-less nozzles		1	1
BO 123560	Defroster nozzle-R.H		1	1
BO 123561	Defroster nozzle-R.H		1	1

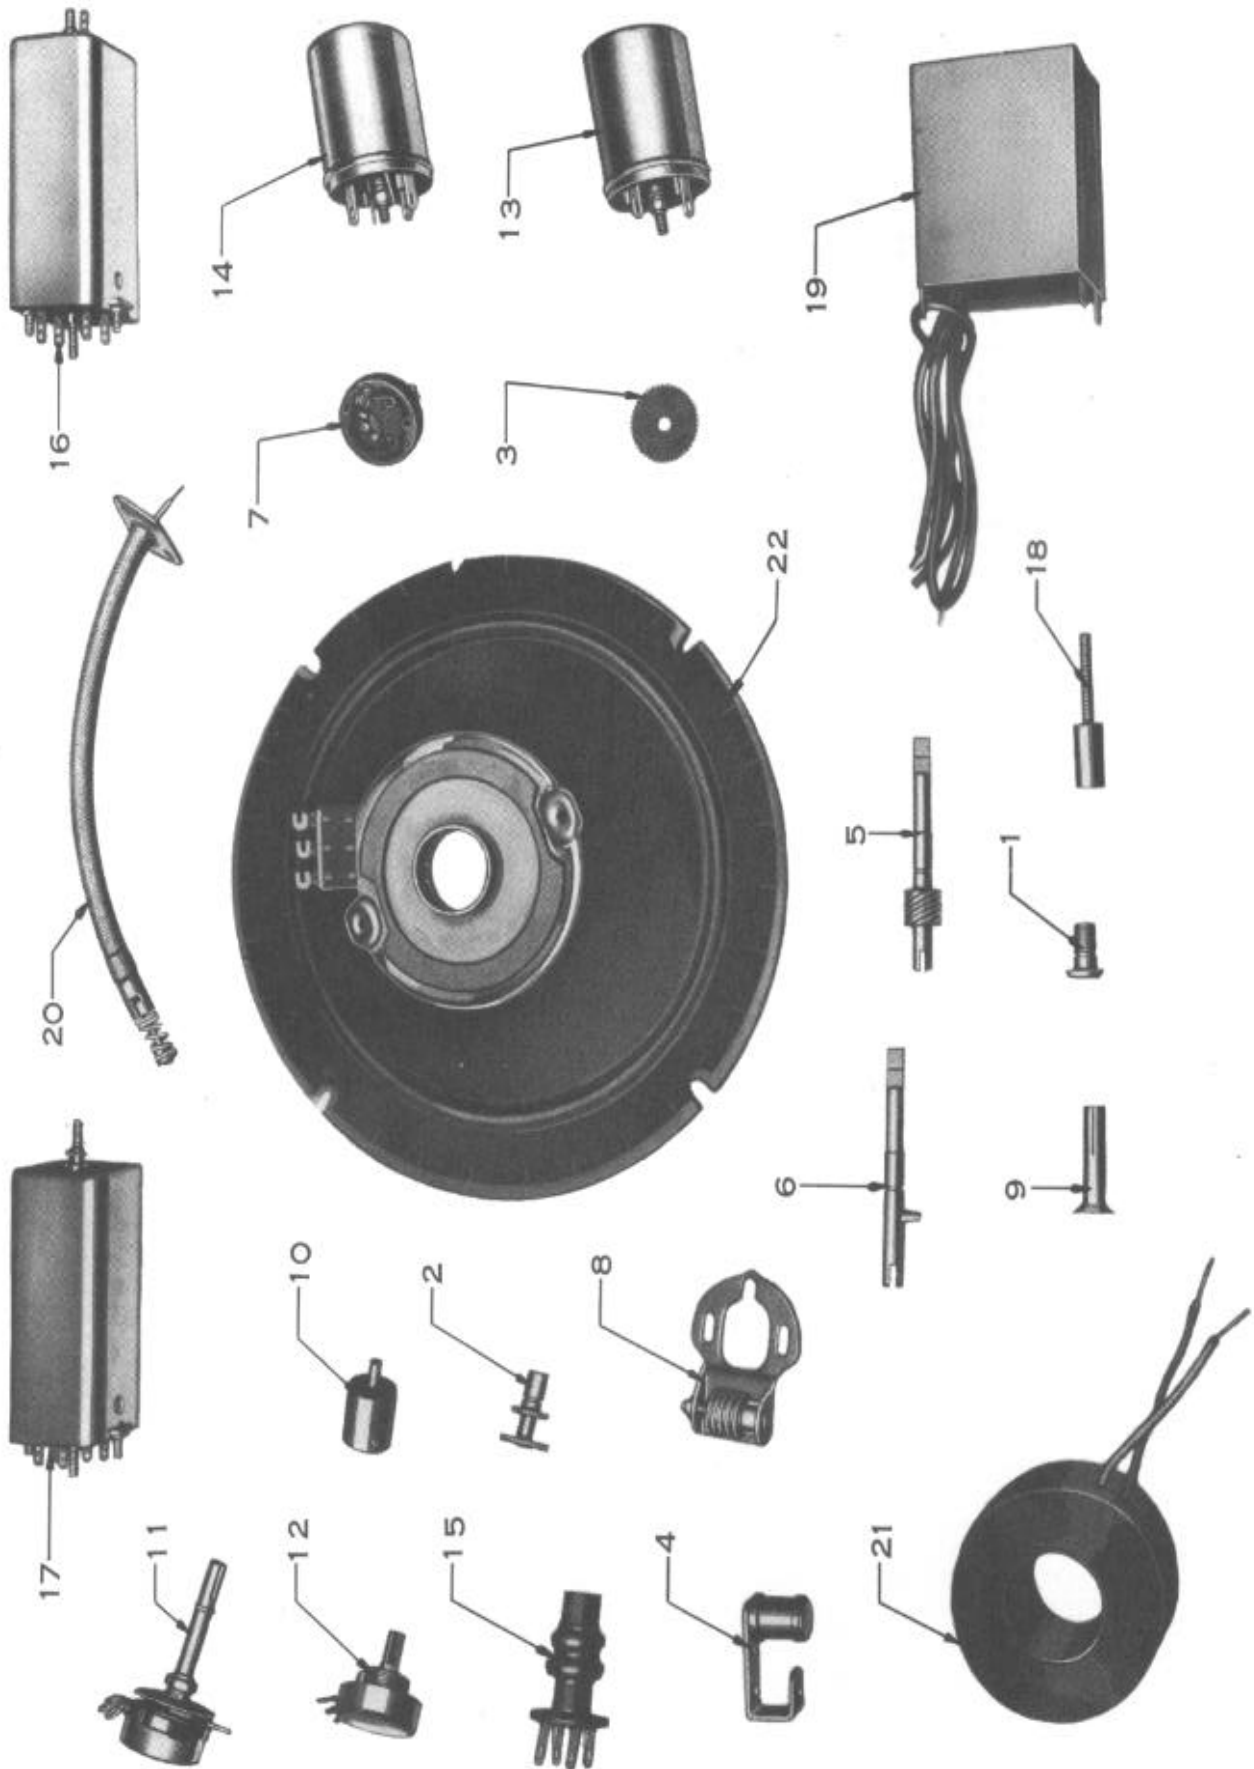

RADIO PARTS
Illustration Z

ILLUS. NO	PART NO	NAME	DB-37	SA-37
RADIO				
		DB-37 Hudson-R.C.A. Victor. Six tube double unit		
		SA-37 Hudson-R.C.A. Victor. Five tube single unit		
	HA 153716	Radio complete-Service kit	L.H.D. *	1
	HA 153717	Radio complete-Service kit	L.H.D. *	
	HA 154972	Radio complete-Service kit	R.H.D.	
	BO 153291	Radio assembly		
	BO 153281	Radio assembly		
		With station selector dial scale		
			1	1
	HA 154978	Radio complete-Service kit	L.H.D. *	1
	HA 154979	Radio complete-Service kit	L.H.D. *	
	HA 154987	Radio complete-Service kit	R.H.D. *	
	BO 154982	Radio assembly	*	
	BO 154981	Radio assembly	*	1
		With brown station selector dial scale		
			1	
			1	
			1	
			*	
			*	
	BO 152137	Radio attaching bolt	*	2
	BO 151413	Radio mounting spacer	*	1
RADIO CONTROL				
	BO 153292	Control assy.-less cables and knobs (black scale).	*	1
	BO 154984	Control assy.-less cables and knobs (brown scale)	*	1
	BO 153845	Control box body	*	1
	BO 153849	Control box	*	1
Z-1	BO 153293	Control box mounting collar (threaded bushing)	*	2
	BO 153850	Tuning dial crystal	*	1
	BO 153851	Tuning dial scale (black ribbon-brown ribbon)	*	1
	BO 154986	Tuning dial scale (brown ribbon)	*	1
Z-2	BO 153853	Intermediate gears and shaft assembly for dial scale	*	1
	BO 153856	Retainer spring for intermediate shaft and gear	*	1
	BO 153866	Dial sprocket-less gear	*	1
Z-3	BO 153852	Gear for dial sprocket	*	1
	BO 153855	Knurled nut for dial sprocket adjustment-less set screw	*	1
	BO 153859	Set screw for dial sprocket adj.nut	8-32x1/4" *	1
	BO 153868	Felt washer for dial sprocket shaft	*	1
Z-4	BO 153858	Bracket and roller assembly for dial scale	*	1.
	BO 153865	Tension spring for bracket and roller assembly	*	1
Z-5	BO 153860	Tuning control shaft complete with worm gear	*	1
Z-6	BO 153863	Volume control shaft complete with switch operating pin	*	
			1	1
	BO 153857	Retainer spring for tuning or volume control shaft	*	2
	BO 153278	Tuning or volume control knob assembly	*	2
	BO 153204	Control knob retaining spring	*	2
	BO 153205	Control knob set screw	6-32x7/32" *	2
Z-7	BO 153867	On-off operating switch	*	1
	BO 153864	Dial lamp socket and lead	*	1
	BO 71641	Control dial lamp		1
	BO 153861	Tuning control flexible shaft	16-3/4" long *	1
	BO 153882	Volume control flexible shaft	20-3/4" long *	1
	BO 154542	Control cable clamp	*	2
	BO 71848	Control cable clamp bolt	10-32x3/8" *	2
	BO 71073	Control cable clamp bolt nut	10-32x1/8" *	2
	BO 152127	"A lead complete with female connector-connector switch to receiver		1
			1	1
	BO 153854	"A lead and bracket complete with male connector switch to fuse connector	*	1
			1	1
	BO 152128	"A lead complete with female fuse connector-connects control box to lightning switch		1
			1	1
	BO 153844	"A lead female connector body	*	1
	BO 152135	Fuse female connector body	*	1
	BO 152125	Fuse connector insulator		1
	BO 71406	Fuse	15 amperes	1
	BO 151724	Spring for "A lead connector, fuse connector or lamp socket		3
			3	3
	BO 151725	Ins .washer for "A lead conn., fuse conn. or lamp socket.		3
	BO 151726	Ferrule for "A lead conn., fuse conn. or lamp socket		3
	BO 154976	"A lead clamp-on back of control head		1
	BO 18137	"A lead clamp screw	6-32x5/16"	1

ILLUS. NO	PART NO	NAME		DB-37	SA-37
RADIO-CAPACITORS FOR CHASSIS					
	BO 154638	Capacitor-Adjustable	*	1	1
	BO 153819	Capacitor-Adjustable	*	1	
	BO 153820	Capacitor-47 mmfd	*	1	
	BO 153821	Capacitor-82 mmfd	*	1	
	BO 153822	Capacitor-115 mmfd	*	1	1
	BO 152067	Capacitor-115 mmfd		4	4
	BO 153823	Capacitor-265 mmfd	*	1	
	BO 153824	Capacitor-330 mmfd	*	3	1
	BO 153825	Capacitor-390 mmfd	*	1	1
	BO 153826	Capacitor-750 mmfd	*	1	1
	BO 153827	Capacitor-1000 mmfd	*	1	1
	BO 153899	Capacitor-1000 mmfd	*		1
	BO 153828	Capacitor-1100 mmfd	*	1	1
	BO 154637	Capacitor-305 mmfd	*		1
	BO 151320	Capacitor-.007 mfd		2	
	BO 153900	Capacitor-.005 mfd	*		1
	BO 152072	Capacitor-.01 mfd		4	3
	BO 153901	Capacitor-.1 mfd	*		1
	BO 151324	Capacitor-.035 mfd		1	
	BO 152073	Capacitor-.05 mfd		2	
	BO 151326	Capacitor-.1 mfd		1	
	BO 153829	Capacitor-.25 mfd	*	1	2
	BO 152074	Capacitor-.25 mfd		2	
	BO 153902	Capacitor-.25 mfd	*		1
	BO 151329	Capacitor-.5 mfd		1	1
	BO 152075	Capacitor-.5 mfd		1	1
	BO 152076	Capacitor-8.0 mfd		1	
	BO 152077	Capacitor Pack-2 sections of .01 mfd		1	1
	BO 152078	Capacitor Pack-one 8 mfd.-two 10 mfd		1	
	BO 153903	Capacitor Pack-two 8 mfd	*		1
RADIO-RESISTORS FOR CHASSIS					
	BO 152091	Resistor-56 ohm-carbon type		2	2
	BO 153837	Resistor-270 ohms-insulated	*	1	
	BO 152093	Resistor-680 ohms-insulated		1	
	BO 152094	Resistor-1200 ohms-insulated		1	
	BO 153838	Resistor-4700 ohms-carbon type	*	1	
	BO 152096	Resistor-6800 ohms-insulated		1	
	BO 152097	Resistor-10,000 ohms-insulated		1	
	BO 152098	Resistor-39,000 ohms-insulated		1	
	BO 153839	Resistor-39,000 ohms-carbon type	*	1	
	BO 153907	Resistor-150 ohms-insulated	*		1
	BO 153908	Resistor-560 ohms-carbon type			1
	BO 152095	Resistor-5600 ohms-carbon type			1
	BO 153909	Resistor-12000 ohms-carbon type	*		1
	BO 151352	Resistor-47,000 ohms-carbon type		1	1
	BO 152100	Resistor-56,000 ohms-insulated		1	1
	BO 153840	Resistor-68,000 ohms-insulated	*	1	1
	BO 152102	Resistor-100,000 ohms-carbon type		1	
	BO 152103	Resistor-220,000 ohms-insulated		1	2
	BO 152104	Resistor-470,000 ohms-insulated		1	1
	BO 152105	Resistor-470,000 ohms-carbon type		2	2
	BO 153841	Resistor-1 Megohm-insulated	*	2	1
	BO 152106	Resistor-1.5 Megohm-insulated			1
RADIO-CHASSIS PARTS					
	BO 153833	Three gang variable tuning condensor	*	1	1
	BO 53834	Large gear on tuning condenser shaft	*	1	1
Z-8	BO 153835	Worm gear, screw and locknut for variable condenser	*	1	1
Z-9	BO 152089	Volume control shaft guide		1	1
Z-10	BO 152085	Tuning flexible shaft coupling		1	1
	BO 154639	Tuning flexible shaft coupling			1
	BO 152113	Variable tuning condenser mounting stud assembly		1	1
Z-11	BO 152119	Volume control		1	
	BO 153912	Volume control	*		1


ILLUS. NO	PART NO	NAME	DB-37	SA-37
RADIO-CHASSIS PARTS (Cont'd.)				
Z-12	BO 152148	Tone control	1	
	BO 151397	Tone control knob	1	
	BO 152145	Tone control knob set screw	1	
	BO 152079	Choke coil	1	1
Z-13	BO 153830	Antenna coil with shield	1	1
Z-14	BO 153831	Radio frequency coil with shield	1	
	BO 153904	Radio frequency coil-less shield		1
Z-15	BO 153832	Oscillator coil-less shield,	1	1
	BO 151360	Retaining ring for R.F. or oscillator coil	2	2
	BO 151363	Oscillator coil shield	1	1
Z-16	BO 153843	First I.F. transformer (1 solder connection on top)	1	1
Z-17	BO 152115	Second I.F. transformer (no solder connection on top)	1	1
Z-18	BO 152084	Adjustable core for I.F. transformer	1	1
	BO 153842	Retaining spring for core	2	2
	BO 152116	Audio transformer pack-includes driver and output transformer	1	2
Z-19	BO 153911	Output transformer		1
	BO 152117	Vibrator power transformer	1	1
	BO 152118	Vibrator complete	1	1
	BO 152111	Vibrator socket	1	1
	BO 152086	Antenna filter	1	1
	BO 153836	Filter reactor-iron core	1	
	BO 153906	Filter reactor-iron core		1
	BO 153872	Housing complete with top and bottom covers	1	
	BO 153916	Housing complete with top and bottom covers		1
	BO 153869	Housing top cover with escutcheon	1	
	BO 153914	Housing top cover with escutcheon		1
	BO 153870	Housing bottom cover	1	
	BO 153915	Housing bottom cover		1
	BO 153871	Plug fastener for top cover	1	1
	BO 152146	No. 8 self tapping hex head screw for receiver hag	1	1
	BO 152108	Socket-8 contact for 6 C 5, 6 K 7 or 6 A B	2	2
	BO 152109	Socket-6 contact for 6 D 6, 85 or 42	2	2
	BO 152110	Socket-7 contact for 6 A 7 or 6 B 7	1	1
	BO 152112	Socket-7 contact for 6 A 6 output tube	1	
	BO 154638	Socket mounting plate assembly-for 6 A 8 tube		1
	BO 152107	Tube shield	2	2
	BO 153817	Grid contact cap for metal tubes	2	2
	BO 153818	Grid contact cap for glass tubes	3	2
	BO 152144	"A lead complete with male connector (chassis end)	1	1
Z-20	BO 152143	Antenna cable lead-chassis end with section of corn	1	1
	BO 152136	Antenna connector body	1	1
	BO 152138	Connector cap for antenna or "A" lead	2	2
	BO 151726	Antenna connector ferrule and bushing	1	1
	BO 151724	Antenna connector spring,	1	1
	BO 151725	Antenna connector insulating washer	1	1

RADIO-SPEAKER


	BO 152147	3 Contact socket and brkt, assy. for speaker cable	1	
	BO 153873	Speaker cable complete with male connector	1	
	BO 152152	3 Contact male connector for speaker cable	1	
	BO 153877	Speaker complete with housing, cable and plug-less mounting stud	1	
	BO 153876	Speaker-housing complete	1	
	BO 153878	Speaker unit complete-less housing and cable	1	
	BO 152156	Speaker mounting stud assembly	1	
Z-21	BO 153874	Speaker field coil	1	
Z-22	BO 153875	Speaker cone-with gaskets and dust screen	1	
	BO 153921	Speaker complete		1
	BO 153918	Speaker terminal board		1
	BO 153919	Speaker field coil		1
	BO 15392	Speaker cone-with gaskets and dust screen		1
	BO 153917	Speaker grille cloth and screen		1

ILLUS. NO	PART NO	NAME		DB-37	SA-37
RADIO-ANTENNA					
HA 153992	Antenna complete-Service Kit		*	1	1
BO 154973	Antenna complete-Service Kit	R.H.D.	*	1	1
BM 71266	Antenna cable connection bolt	10-32x5/16"		1	1
BO 71073	Antenna cable connection bolt nut	10-32x1/8"		1	1
BO 153294	Antenna support assembly-front		*	2	2
BO 153297	Antenna support assembly-rear		*	2	2
BX 71099	Antenna support bracket-bolt	5/16"-24x5/8"		6	6
BO 12481	Antenna support bracket-bolt nut..	5/16"-24x17/64"		6	6
BO 154292	Antenna cable clip-to cross member		*	3	3
BO 18447	Antenna lead-in shield clip bolt	10-32x5/8"		1	1
BO 71073	Antenna lead-in shield clip bolt nut	10-32x1/8"		1	1
BO 48757	Antenna insulator			12	12
BO 48758	Antenna clip			8	8
BO 152031	Antenna anchor clip			12	12
BO 18166	Antenna cable terminal			3	3
RADIO-MISCELLANEOUS					
BO 151402	Gasoline gauge capacitor	25 mfd		1	1
BO 152021	Temperature gauge capacitor	25 mfd		1	1
BO 152022	Generator capacitor	5 mfd		1	1
BO 151399	Distributor suppressor			1	1
BO 152240	Ignition coil capacitor (Connects to electrolock)			1	1
BO 71485	Generator capacitor bolt	10-32x1/4"		1	1
BO 32012	Distributor suppressor insulator	rubber		1	1

ILLUS. NO	PART NO	NAME	348S	377S
CARBURETOR				
The following parts are not supplied by the Hudson Motor Car Co., but should be ordered from Carter Carburetor Corporation, St. Louis, Mo, or their authorized dealers. Part numbers shown are Carter symbols				
348S		Carburetor assy.-Single type(used on 70,71,78,73 Bs.Cpe.)	1	
377S		Carburetor assy.-Dual type(used on 72.73 exc.Bs.Cpe., 74,75,78,77		1
1-155S		Body flange assembly	*	1
1A-17		Flange gasket-graphited asbestos	1-1/4" SAE	1
1A-37		Flange gasket	1" SAE *	1
2-89		Throttle valve		1
2-90		Throttle valve	1	
3-267S		Throttle shaft and lever assembly	1	
3-272S		Throttle shaft and lever assembly	*	1
4A-54		Throttle shaft dog	1	
6-189S		Air horn and cover plate assembly	*	1
6-190S		Air horn and climatic control assembly	*	1
8-198S		Air horn assembly	*	1
7-80S		Choker valve assembly		1
7-91S		Choker valve assembly	*	1
10A-215		Manifold stove, connection and tubing assy.(72-73)		1
10A-22S		Manifold stove, connection and tubing assy.(74 thru 77)		1
11-135		Low speed jet	1	
11-149S		Low speed jet and gasket assembly	*	1
11B-25		Check valve passage plug	1	
11B-27		Nozzle and idle passage plug	1	1
11B-65		Anti-percolating plug	1	
11B-66S		Anti-percolating plug and gasket assembly	1	
11B-92		Dash pot cylinder plug	*	1
11B-94S		Ball check passage plug and gasket assembly	*	1
11B-96S		Nozzle passage plug and gasket assembly	*	1
11B-97		Nozzle retainer plug	*	1
11B-98		Pump jet passage plug	*	1
12-190		Nozzle	1	
12-199		Nozzle	*	1
13-34		Choker shaft stub	1	
14-137S		Choker assembly with clamp and screw	1	
14-190		Choker trip lever		1
14-192S		Choker piston lever and shaft assembly		1
20-22		Needle seat gasket	1	1
20-26		Metering rod jet gasket	1	1
20-29		Pump cylinder bushing gasket-upper	1	
20-34		Nozzle gasket	1	
20-36		Anti percolator plug gasket	1	
20-43		Hot air passage gasket		1
20-50		Dash pot cylinder gasket	1	
20-54		Metering rod jet gasket		1
20-55		Idle passage gasket		1
20-60		Nozzle gasket		1
20-61		Ball check plug gasket	*	1
21-45S		Float and lever assembly	1	
21-64S		Float and lever assembly	*	1
24-15		Float lever pin	1	
24-24		Float lever pin		1
25-33S		Needle and seat assembly	1	
25-59S		Needle and seat assembly		1
30-17		Ball check strainer	1	1
30-29		Piston plate strainer	*	1
30A-39		Idle adjustment screw	1	
30A-41		Idle adjustment screw		1
36-11		Adjustment screw lock spring		1
39-11		Valve attaching screw	1	1
48-35		Pump jet	1	
48-52		Pump jet	*	1
49-85		Pump plunger shaft	1	
49-100		Pump plunger shaft		1
49A-18S		Anti percolator valve assembly		1
53-39		Dash pot cylinder	1	
53-40		Dash pot cylinder	*	1

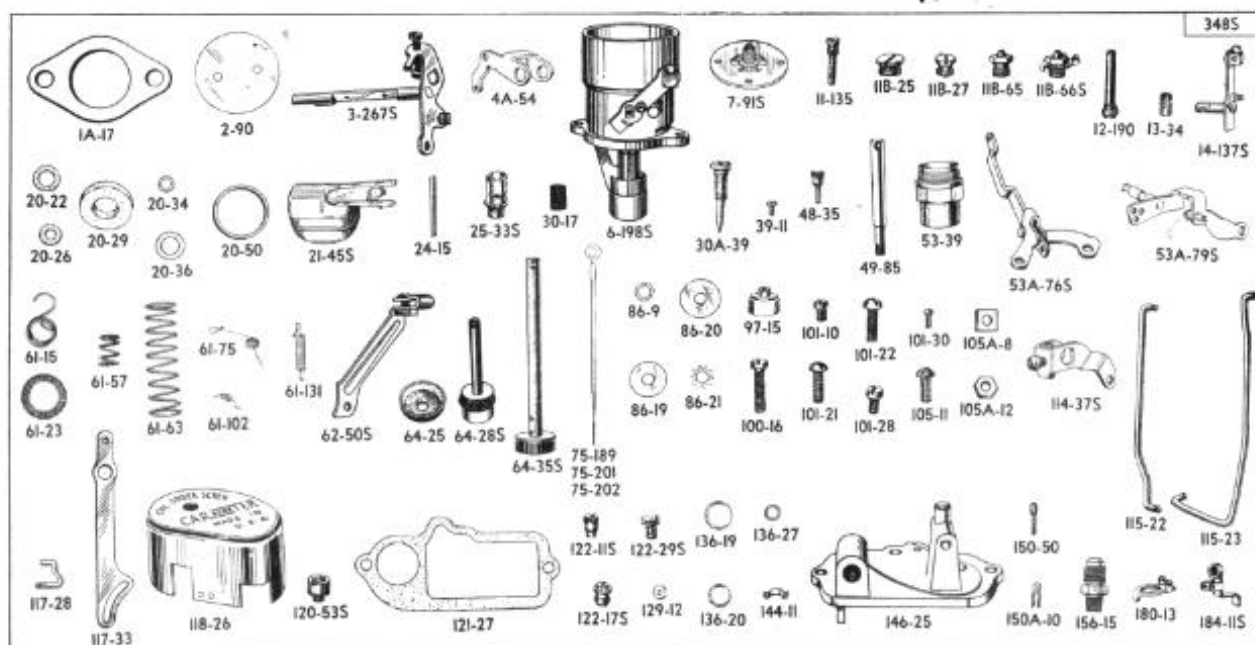

CARBURETOR—Single

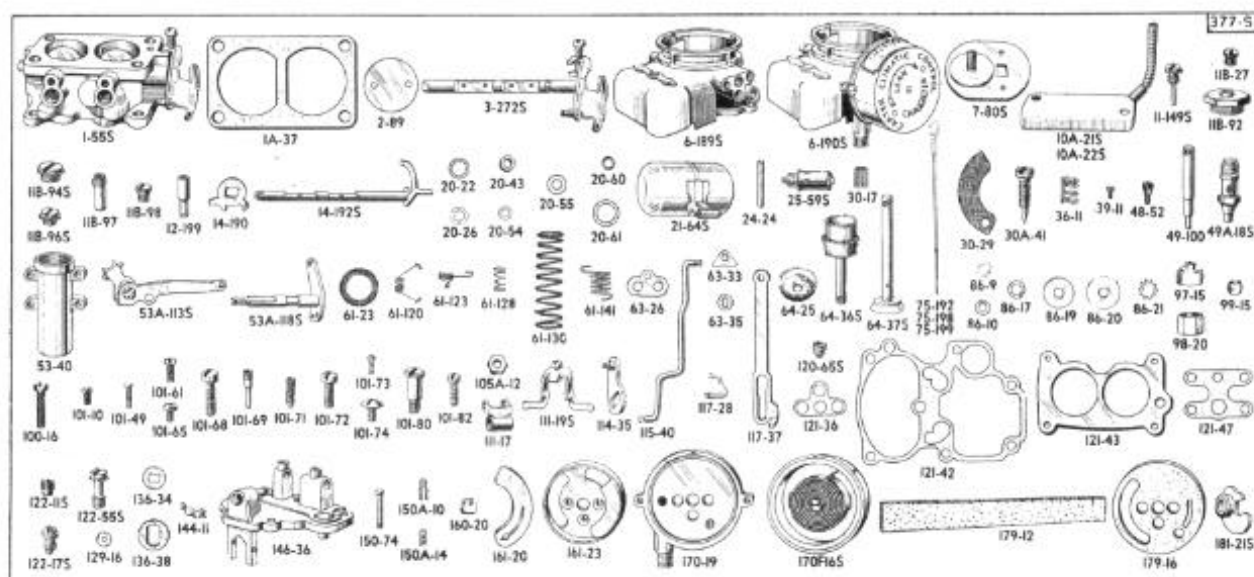

CARBURETOR—Dual

ILLUS. NO	PART NO	NAME	348S	377S
CARBURETOR (Cont'd.)				
53A-76S		Dash pot arm and bracket assembly	1	
53A-79S		Pump arm, spring and countershaft assembly	1	
53A-113S		Dash pot arm, pin and screw assembly	*	1
53A-118S		Pump arm and countershaft assembly	*	1
61-15		Choker spring	1	
61-23		Plunger leather spring	1	1
61-57		Adjustment screw spring	1	
61-63		Pump spring	1	
61-75		Metering rod spring	1	
61-102		Rocker arm spring	1	
61-120		Metering rod spring		1
61-123		Connector link spring		1
61-128		Connector rod spring		1
61-130		Pump spring		1
61-131		Throttle shaft dog spring	1	
61-141		Dash pot arm spring	*	1
62-50S		Tube clamp assembly	1	
63-26		Metering rod disc retainer		1
63-33		Thermostat housing retainer		1
63-35		Spring retainer	*	1
64-25		Plunger leather	1	1
64-28S		Pump plunger and rod assembly	1	
64-35S		Dash pot plunger and rod assembly	1	
64-36S		Pump plunger and rod assembly		1
64-37S		Dash pot plunger and rod assembly		1
75-189		Metering rod-standard-.066"-.052"	*	
75-192		Metering rod-standard-.062"-.056"-.049"		1
75-198		Metering rod-1 size lean-.063"-.057"-.050"	*	1
75-201		Metering rod-1 size lean-.068"-.067"-.054"	*	
86-9		Dust cover attaching screw lock washer	1	
86-9		Bowl cover attaching screw lock washer		1
86-10		Dash pot attaching screw lock washer		1
86-17		Air horn attaching screw lock washer		1
86-19		Plunger washer-inner	1	1
86-20		Plunger washer-outer	1	1
86-21		Plunger shaft lock washer	1	1
97-15		Plunger cup	1	1
98-10		Compression coupling nut		1
99-10		Compression coupling cone		1
100-16		Throttle lever adjusting screw	1	1
101-10		Wire clamp screw	1	
101-10		Metering rod arm clamp screw		1
101-21		Air horn attaching screw	1	
101-22		Dust cover attaching screw	1	
101-28		Throttle shaft arm clamp screw	1	
101-30		Choke valve screw	1	
101-49		Piston housing attaching screw		1
101-61		Bowl cover attaching screw		1
101-65		Thermostat housing attaching screw		1
101-69		Body flange attaching screw		1
101-69		Throttle centering screw		1
101-71		Fast idle adjustment screw		1
101-72		Air horn attaching screw		1
101-73		Throttle valve attaching screw		1
101-74		Throttle shaft arm attaching screw		1
101-80		Dash pot arm attaching screw	*	1
101-82		Dash pot cylinder attaching screw	*	1
105-11.		Tube clamp screw	1	
105A-8		Tube clamp nut	1	
105A-12		Plunger shaft hex nut	1	1
111-17		Metering rod arm	*	1
111-195		Anti percolator arm and screw assembly	*	1
114-35		Throttle shaft arm		1
114-37S		Throttle shaft arm and screw assembly	*	
115-22		Dash pot connector rod	1	
115-23		Throttle connector rod	1	
115-40		Throttle connector rod (Sup. by 115-42)	*	
115-42		Throttle connector rod	*	1
117-28		Connector link	1	1

ILLUS. NO	PART NO	NAME	348S	377S
CARBURETOR (Cont'd.)				
117-33		Choker link	1	
117-37		Fast idle connector link (Sup. by 117-47)		1
117-47		Fast idle connector link	*	1
118-26		Dust cover	1	
120-53S		Metering rod jet and gasket assembly	1	
120-85S		Metering rod jet and gasket assembly	*	1
121-27		Bowl cover gasket	1	
121-36		Piston plate housing gasket		1
121-42		Body gasket		1
121-43		Body flange gasket		1
121-47		Dash pot cylinder gasket	*	1
122-11S		Discharge ball check assembly	1	1
122-17S		Intake ball check assembly	1	1
122-29S		Disk check assembly	1	
122-55S		Blank relief check assembly		1
129-12		Metering rod disc	1	
129-16		Metering rod disc		1
138-19		Plug washer	1	
136-20		Plug washer	1	
138-27		Plug washer	1	
138-34		Choker shaft washer		1
136-38		Throttle shaft washer		1
144-11		Throttle lever screw spring	1	1
146-25		Bowl cover	1	
146-36		Bowl cover		1
150-50		Anti percolator bracket pin	1	
150-74		Metering rod apm lcb	*	1
150A-10		Pin Spring	1	1
150A-14		Pin spring		1
156-15		Gas line nipple	1	
160-20		Choke piston		1
161-20		Port plate		1
161-23		Piston plate		1
170-19		Piston plate housing		1
170E-16S		Thermostatic coil and housing assembly	*	1
179-12		Cork insulator strip		1
179-16		Cork insulator disk	*	1
180-13		Anti percolating bracket	1	
181-21S		Fast idle cam and collar assembly		1
184-11S		Anti percolating cap and rocker arm assembly	1	

FUEL PUMP

The following parts are not supplied by the Hudson Motor Car Co., but should be ordered from the A.C. Spark Plug Co. Flint Mich., or their authorized dealers.
Part numbers shown are A.C. symbols.

STANDARD**COMBINATION FUEL AND
VACUUM PUMP**


1523289	Fuel pump assembly	1	
1523290	Combination fuel and vacuum pump assembly		1
855282	Valve plug gasket	2	2
855279	Valve (fuel and vacuum)	2	4
856270	Valve spring (fuel)	2	2
1521952	Valve spring (vacuum)		2
854004	Glass bowl	1	1
854003	Bowl gasket	1	1
854009	Screen (fuel)	1	1
858221	Screen (vacuum)		1
1523299	Diaphragm assembly	1	
1523297	Diaphragm assembly (fuel)		1
1522080	Diaphragm assembly (vacuum)		1
1522073	Diaphragm spring (fuel)	1	1
856358	Diaphragm spring (vacuum)		1
1523033	Rocker arm spring	1	1
855493	Top cover screw	10	10
855084	Top cover screw lockwasher	10	10
858229	Bottom cover gasket (vacuum)		1
132108	Bottom cover screw (vacuum)		

ILLUS. NO	PART NO	NAME	GCJ-4803A	GCJ-4804A
--------------	------------	------	-----------	-----------

GENERATOR


The following parts are not supplied by the Hudson Motor Car Co., but should be ordered from the Electric Auto Lite Co., Toledo, Ohio or their authorized dealers. Part numbers shown are Electric Auto Lite symbols.

GCJ-4803A	Generator assy.-with radio	} Used on 70.71, 78, 73 Bs.Cpe. Gen.assy.(high rate) used on 72,73,exc.Bs.Cpe. 74-75 76-77-78 Sed.,with or without radio	1	
GCJ-4804A	Generator assy.-without radio			1
GCJ-4803A	Gen.assy.(high rate) used on 72,73,exc.Bs.Cpe. 74-75 76-77-78 Sed.,with or without radio		1	
GCJ-33	Grounding cup			1
GCJ-2001A	Frame and field assembly		1	
GCJ-2001B	Frame and field assembly			1
GAA-30	Terminal post bottom insulation		1	1
GAA-31	Insulating bushing		1	1
GAA-32	Terminal post top insulation		1	1
GAL-29	Pole piece		2	2
GAL-44	Field connection insulation		1	1
GBF-54	Insulating bushing		1	1
GBW-33	Terminal post insulator		1	1
GBW-34	Insulating washer		1	1
GBW-40	Lead assembly		1	1
GAA-27	Terminal post		1	1
X-847	Terminal		1	1
GCJ-1005	Field coil assembly complete		1	1
GCJ-1007	Field coil assembly-left		1	1
X-976	Terminal		1	1
GCJ-1008	Field coil assembly-right		1	1
GCE-27	Terminal post			1
GBW-58	Terminal post		1	1
GK-38	Pole piece screw		2	2
MN-21	Dowel pin		2	2
8X-177	Hex nut-#14-24		1	1
X-193	Lock washer-#14		1	1
X-196	Lock washer-#10		1	1
8X-349	Plain washer-#10		1	1
8X-361	Plain washer-1/4"		1	1
8X-1377	Hex. nut-#10-32		1	1
GK-20	Frame screw		2	2
8X-177	Hex. nut-#14-24		1	1
12X-193	Lock washer-#14		1	1
12X-196	Lock washer-#10		3	2
X-199	Lock washer-1/4"		2	2
8X-321	Round head screw-#10-32x5/16"		1	1
8X-349	Plain washer-#10		1	1
8X-361	Plain washer-1/4"		1	1
X-966	Terminal		1	1
X-999	Terminal		2	1
8X-1377	Hex.Nut-#10-32		1	1
			2	2
GCJ-2002A	Commutator end plate assembly		1	1
GAR-73	Oil wick		1	1
GAR-98	Wick cover		1	1
GBW-30A	Commutator end cap cover		1	1
GBW-31	Gasket		1	1
GBW-32	Oil guard		1	1
GCJ-51	Third brush plate retaining spring		1	1
GCJ-1002C	Commutator end plate part assembly		1	1
GBF-79	Absorbent bronze bearing		1	1
GBW-45	Brush spring		2	2
GCJ-26	Brush arm		2	2
GCJ-1012	Brush-main		2	2
GCJ-1013	Brush-third		1	1
GCJ-1014	Third brush plate assembly		1	1
GBW-45	Brush spring		1	1
GCJ-26	Brush arm		1	1
X-195	Lock washer-#8		5	5
8X-305	Round head screw-#8-32x1/4"		1	1
8X-311	Round head screw-#10-32x3/8"		1	1

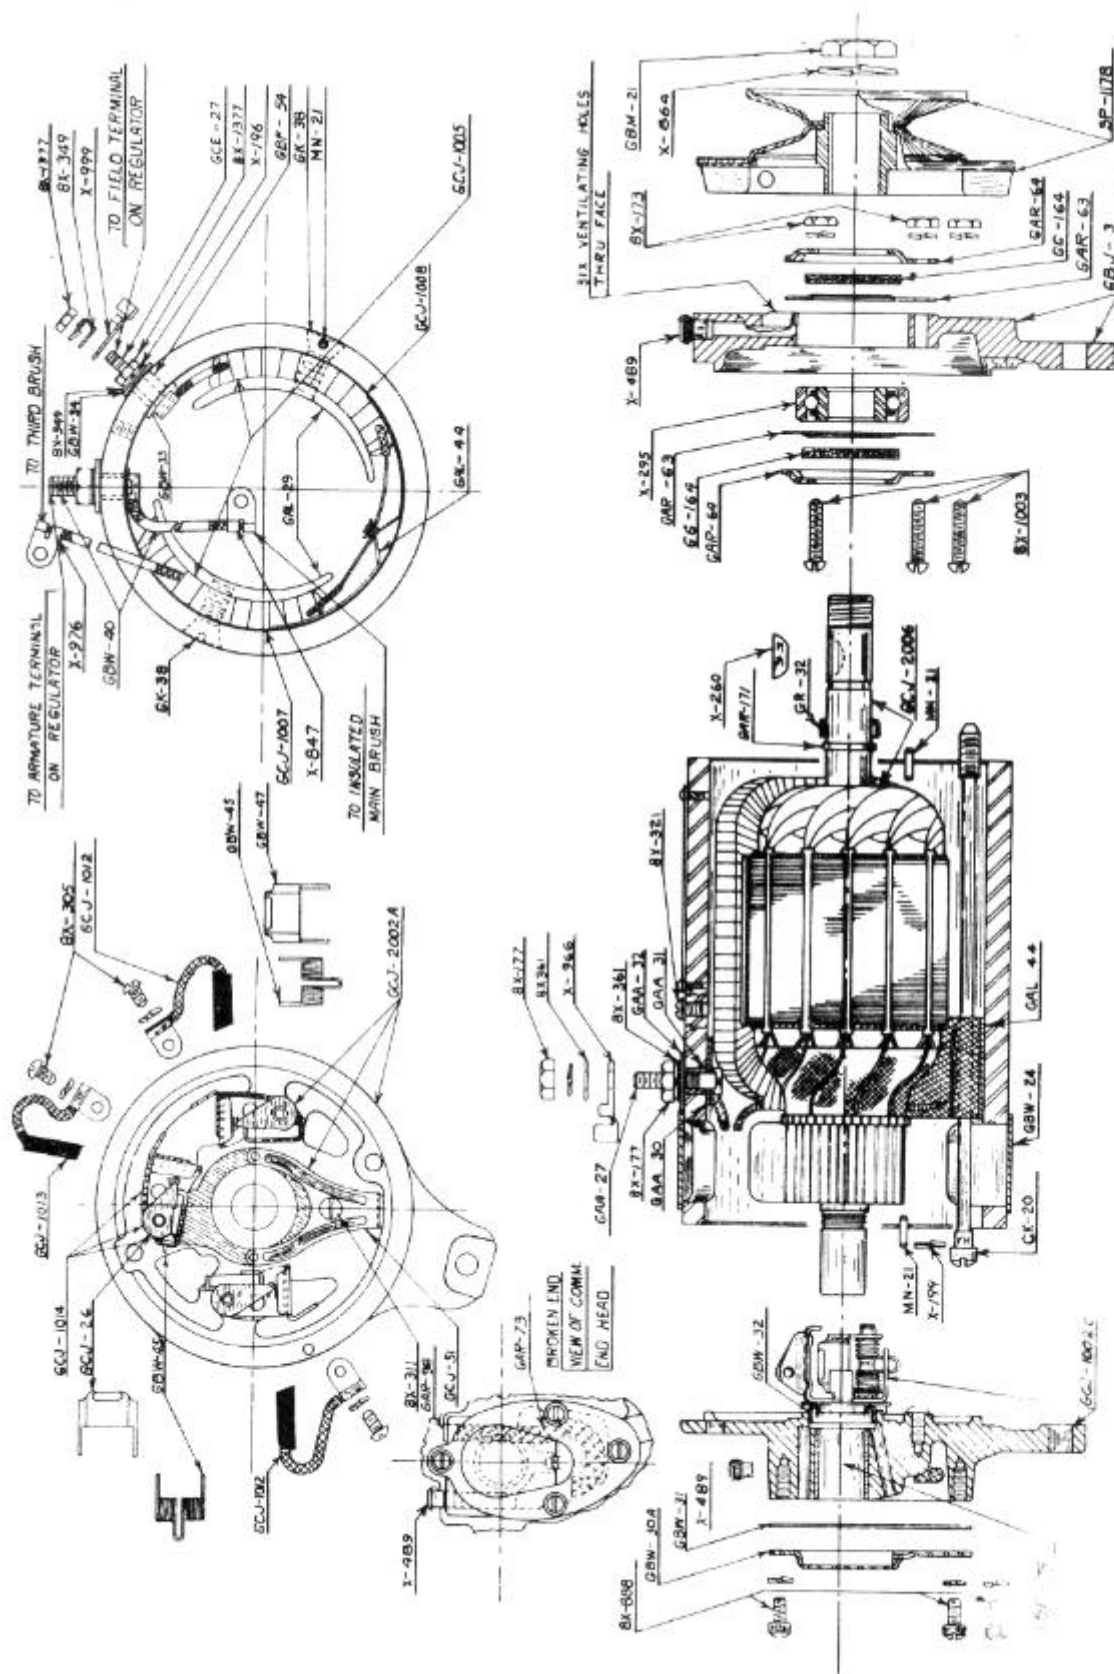

GENERATOR

ILLUS. NO	PART NO	NAME	GCJ-4803A	GCJ-4804
		GENERATOR (Cont'd.)		
	X-489	Oiler-1/4" press in type	1	1
	8X-188	Fillester head screw-#8-32x5/16"	4	4
	X-195	Lock washer-#8	2	2
	8X-305	Round head screw-#8-32x1/4"	2	2
	GCJ-2012S	Brush set-for service	1	1
	GCJ-2006	Armature assembly	1	1
	GBM-21	Armature shaft nut	1	1
	GAR-171	Snap ring	1	1
	GR-32	Felt washer retainer	1	1
	SP-1178	Drive pulley	1	1
	X-260	Woodruff key-#5	1	1
	X-864	Lock washer-.669	1	1
	GBJ-1003	Drive end head assembly	1	1
	GAR-63	Felt guard	2	2
	GAR-64	Bearing retainer	2	2
	GBJ-3	Drive end head	1	1
	GG-164	Felt washer	2	2
	8X-173	Hex. nut-#10-32	3	3
	X-196	Lock washer-#10	3	3
	X-295	Ball bearing-S.A.E. #203	1	1
	X-489	Oiler-1/4" press in type	1	1
	8X-1003	Round head screw-#10-32x7/8"	3	3
	GBW-24	Head band	1	1
	8X-715	Round head screw-#10-32x1-1/4"	1	1
	8X-794	Square nut-#10-32	1	1

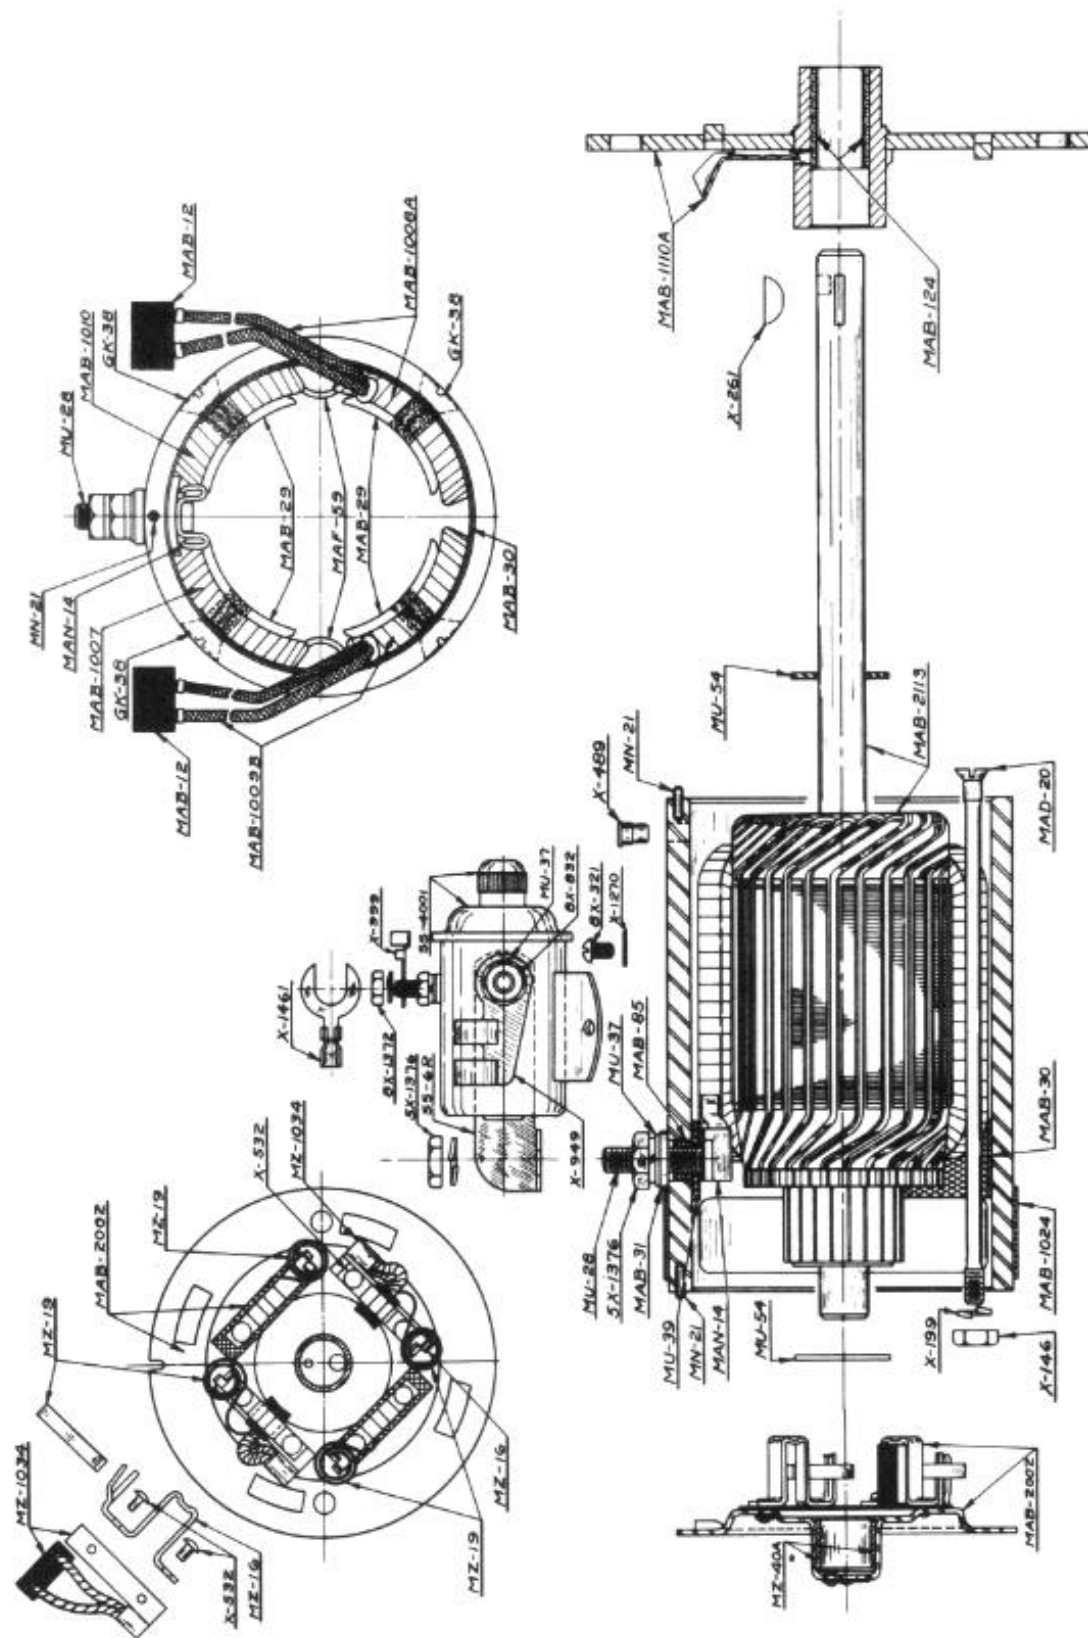


STARTING MOTOR

ILLUS. NO	PART NO	NAME	PER CAR
--------------	------------	------	------------


STARTING MOTOR

NOTE: The following parts are not supplied by the Hudson Motor Car Co., but are included for your convenience in ordering from The Electric Auto Lite Company, Toledo, Ohio, or their authorized dealers. Part numbers shown are Electric Auto Lite symbols.

MAB-4075	Starting Motor	assembly-All models	1
MAB-2123	Frame	& field assembly	1
6K-38	Pole	piece screw	4
MAB-29	Pole	piece	4
MAB-30	Field	connection insulation	1
MAB-31	Insulating	washer	1
MAB-85	Insulating	bushing	1
MAB-1007	Field coil-U.L		1
MAB-1008A	Field coil & brush assembly-L.R		1
MAB-12	Brush		1
MAB-1009B	Field coil and brush assembly-L.L		1
MAB-12	Brush		1
MAB-1010	Field coil-U.R		1
MAF-59	Field coil connector		2
MAN-14	Terminal		1
MN-21	Dowel Pin		2
MU-28	Terminal post		1
MU-37	5/16 Plain washer		1
MU-39	Insulating washer		1
X-1014	5/16 Lock washer		1
5X-1376	5/16-24 Hex nut		1
MAD-20	Frame screw		2
X-146	1/4-20 Hex nut		2
X-199	1/4 Lock washer		2
X-489	1/4 Oiler-press in type		1
X-1014	5/16 Lock washer		1
5X-1376	5/16-24 Hex nut		1
MAB-2002	Comm.	end plate assembly	1
HZ-16	Brush holder		2
MZ-19	Brush spring		4
MZ-40A	Absorbent bronze brg		1
MZ-1034	Brush assembly-grounded		2
X-532	1/8x1/4 Oval hd.	tubular rivet	4
MAB-2113	Armature assembly		1
MU-54	Thrust washer		2
X-261	*6 Woodruff key		1
SS-4001	Solenoid starting switch		1
MU-37	5/16 Plain washer		1
SS-6R	Connector		1
12X-196	*10 lock washer		1
BX-832	5/16-24 Hex nut		2
12X-1014	5/16 Lock washer		2
8X-1372	#10-32 Hex nut		1
8X-321	#10-32x5/16 Rd. Hd. screw		2
X-949	Terminal		1
X-999	Terminal		1
X-1270	#10 Shakeproof washer		2
X-1461	Terminal		1
EBA-5	Bendix drive assembly		1
MAB-1024	Head band assembly		1
MAR-1110A	Drive end head assembly		1
MAB-124	Absorbent bronze brg		1
X-715	#10-32x1-1/4 Rd.hd. screw		1
8X-794	*10-32 Square nut		1

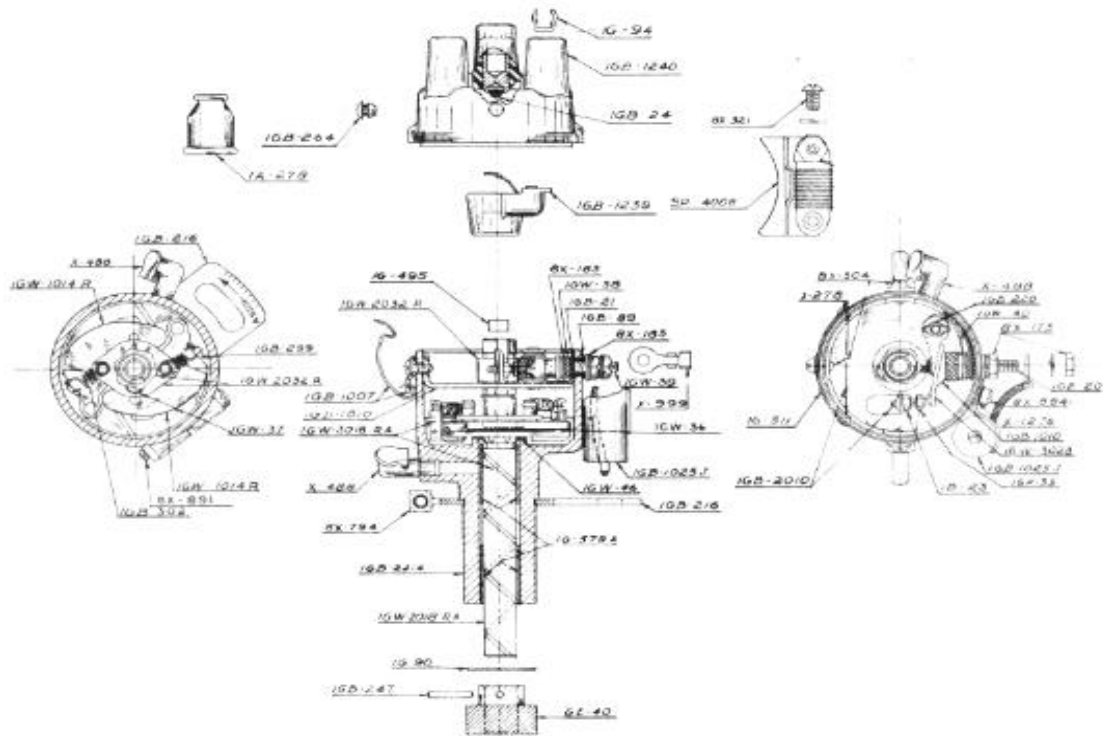

DISTRIBUTOR—Six Cylinder

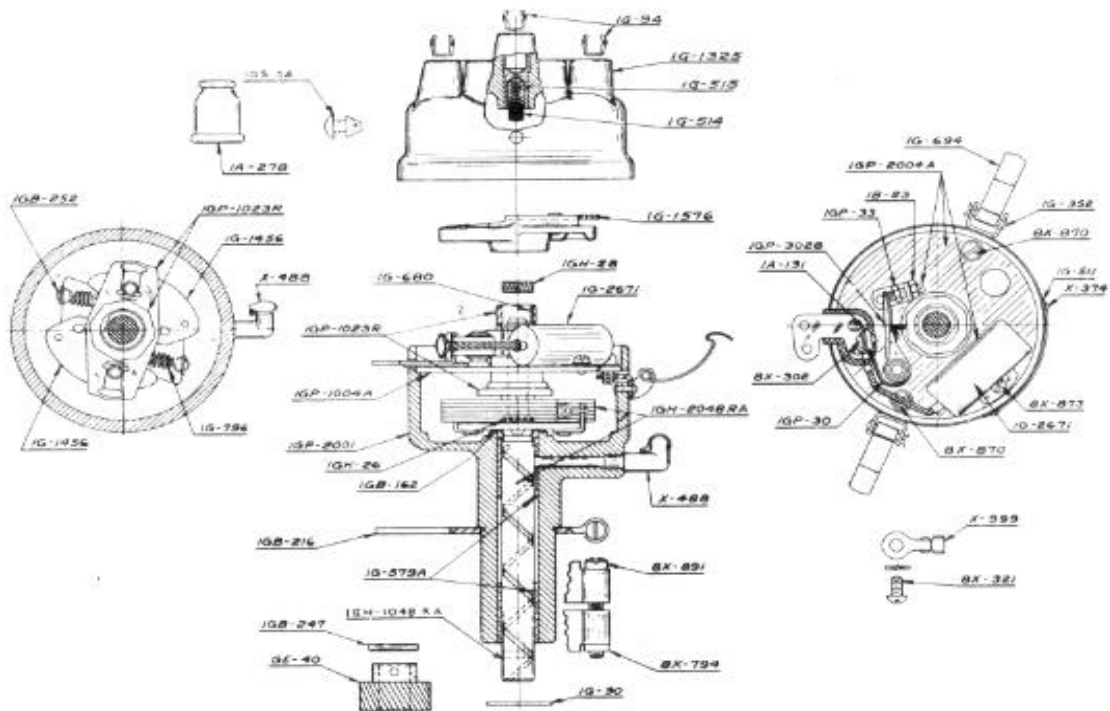

DISTRIBUTOR—Eight Cylinder

ILLUS. NO	PART NO	NAME	IGW-4012A	IGW-4013A	IGW-4013A
DISTRIBUTOR					
NOTE: The following parts are not supplied by the Hudson Motor Car Company. They are included for your convenience in ordering from The Electric Auto Lite Company, Toledo, Ohio; or their authorized dealers. Part numbers shown are Electric Auto Lite symbols.					
IGW-4012A		Distributor complete-Used on 70-71-78-73 Bs.Cpe	1		
IGW-4013A		Distributor complete-Used on 72-73 except Bs.Cpe		1	
IGP-4008A		Distributor complete-Used on Hudson Eight			1
GE-40		Distributor gear-follower	1	1	1
IA-278		Secondary terminal rubber cap	7	7	9
IG-90		Thrust washer	1	1	1
IG-94		High tension wire terminal	7	7	9
IG-495		Cam sleeve felt wick	1	1	
IGH-28		Cam sleeve felt wick			1
IGB-21		Terminal post insulation	1	1	
IGB-89		Insulating bushing	1	1	
IGB-216		Advance control arm	1	1	1
IGB-220		Lock spring	1	1	
IG-680		Lock spring ring			1
IGB-247		Distributor drive rivet	1	1	1
IGB-264		Rubber plug	1	1	
IGS-32		Rubber plug			1
IGB-1007		Distributor cap spring and hinge assemble	2	2	
IGB-1025J		Condenser assembly	1	1	
IGB-1239		Rotor	1	1	
IG-1576		Rotor			1
IGB-162		Thrust washer			1
IGB-1240		Distributor cap assembly	1	1	
IG-1325		Distributor cap assembly			1
IGB-24		Contact plunger	1	1	
IG-514		Contact spring plunger			1
IG-515		Contact spring			1
IGB-2010		Breaker plate assembly	1	1	
IG2-2004A		Breaker plate assembly			1
IB-23		Breaker point lock nut	1	1	
IG-2671		Condenser assembly			1
IA-131		Breaker arm spring clip			1
IGP-33		Breaker point screw	1	1	
IGB-1010		Breaker plate part assembly	1	1	
IGP-1004A		Breaker plate part assembly			1
IB-23		Breaker point lock nut			1
IGP-33		Breaker point screw			1
IGP-3028		Breaker arm assembly			1
IGP-30		Breaker arm spring			1
X-194		Lock washer-#6			1
8X-302		Round head screw-#6-32x1/4"			1
8X-873		Fillister head screw-#8-32x3/16"			1
X-1012		Lock washer-#6			1
IGW-3028		Breaker arm assembly	1	1	
IGB-2214		Distributor base assembly	1	1	
IGP-2001		Distributor base assembly			1
IG-511		Name plate	1	1	1
IG-579A		Absorbent bronze bearing	2	2	2
X-278		Tubular rivet-3/32"x3/16"	2	2	
X-374		Split rivet-3/32"x1/4"			2
X-488		Oiler-1/4" press in elbow	1	1	1
IG-352		Hinge pin			2
IG-694		Distributor cap spring			2
IGW-38		Insulating bushing	1	1	
IGW-39		Terminal post-#10-32	1	1	
IGW-46		Thrust washer	1	1	
IGW-3018RA		Drive shaft and governor assembly	1	1	
IGH-2048RA		Drive shaft and governor assembly			1
IGB-306		Weight spring	1	1	
IG-796		Weight spring			
IGB-302		Weight spring	1	1	
IGB-252		Weight spring			1
IGW-1014R		Weight assembly	2	2	

ILLUS. NO	PART NO	NAME	IGW-4012A	IGW-4013A	IGW-4008A
DISTRIBUTOR (Cont'd.)					
IG-1456		Weight assembly			1
IGW-2018RA		Drive shaft assembly	1	1	
IGH-1048RA		Drive shaft assembly			1
IGW-2032R		Cam and stop plate	1	1	
IGW-36		Washer-.125" thick	1	1	
IGW-37		Lock spring ring	1	1	
IGK-26		Washer-.020" thick			1
IGP-1023R		Cam and stop plate			1
SP-4008		Resistance unit assembly	1		
8X-196		Lock washer-#10	1		
8X-321		Round head screw-10-32x5/16"	1		
8X-173		Hex nut-#10-32	2	2	
8X-183		Brass washer-#10	2	2	
8X-195		Lock washer-#8	3	3	
X-196		Lock washer-#10	3	2	3
8X-304		Round head screw-#8-32x5/16"	3	3	
8X-321		Round head screw-#10-32x5/16"	1		1
8X-794		Square nut-#10-32	1	1	1
8X-884		Fillister head screw-#8-32x3/16"	1	1	
8X-891		Fillister head screw-410-32x1-1/2"	1	1	1
8X-870		Fillister head screw-#10-32x5/16"			2
X-999		Terminal	1	1	1
X-1276		Shakeproof washer--#8	1	1	

[illegible]

SPRING CHART

Spring Assembly	Rebound Leaf	Main Leaf Service Kit	Main Leaf No. 1	Leaf No. 2	Leaf No. 3	Leaf No. 4	Center Bolt	Clip No. 1	Clip No. 2	Clip No. 3	Clip No. 4	Number of Leaves	Extra Leaf Service Kit
Front													
F 153750	C 154789	C 154952			C 154792	C 154796	BZ 151883	BZ 154774	BZ 154777	BZ 154777	BZ 154774	8	C 154958
F 152751	C 154814	C 154953			C 154818	C 154820	BZ 154893	BZ 154774	BZ 154778	HZ 154778	BZ 154774	9	C 154959
F 153752	C 154814	C 154953			C 154818	C 154820	BZ 154893	BZ 154774	BZ 154778	BZ 154778	BZ 154774	9	C 154959
F 153753	C 154788	C 154952			C 154792	C 154795	BZ 151883	BZ 154774	BZ 154777	BZ 154777	BZ 154774	8	C 154958
F 153754	C 154813	C 154953			C 154817	C 154793	BZ 151885	BZ 154774	BZ 154780	BZ 154780	BZ 154774	11	C 154960
C 153758			C 154845	C 154843	C 154828	C 154830	BZ 43623	HZ 151790	BZ 154779	BZ 154779	BZ 151790	10	C 154961
Rear													
F 153760	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	C 154961
F 153761	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	HZ 154782	BZ 154775	9	C 154961
F 153764	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	C 154961
C 153765	C 154851		C 154868	C 154870	C 154866	C 154867	BZ 154894	BZ 151804	BZ 154782	HZ 154784	BZ 154776	9	C 154961
C 153766			C 154868	C 154869	C 154871	C 154872	BZ 154890	BZ 48319	RE 154911	BZ 154912	BZ 18319	15	C 154961
C 153767			C 154868	C 154269	C 154871	C 154872	BZ 154890	BZ 48319	BZ 154911	BZ 154912	BZ 48319	15	C 154961
F 154500	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	
F 154501	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	HZ 151790	BZ 154780	BZ 154782	BZ 154775	9	
F 154503	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	HZ 154782	BZ 154775	9	
F 154504	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	
C 154505	C 154851		C 154868	C 154870	C 154866	C 154867	BZ 154894	BZ 151804	BZ 154782	BZ 154784	BZ 154776	9	
C 154506			C 154868	C 154869	C 154871	C 154872	BZ 154890	BZ 48319	BZ 154911	BZ 154912	BZ 48319	15	
C 154507			C 154868	C 154969	C 154871	C 154872	BZ 154890	BZ 48319	BZ 154911	BS 154912	BZ 48319	15	
C 154508	C 154851		C 154868	C 154870	C 154866	C 154867	BZ 154894	BZ 151804	BZ 154782	BZ 154784	BZ 154776	9	
F 154519	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154991	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	C 154961
F 154520	C 154851		C 154864	C 154852	C 154853	C 154855	BZ 154891	BZ 151790	BZ 154780	BZ 154782	BZ 154775	9	C 154961

NOTE: Main Leaf Service Kit consists of No. 1 leaf, two No. 2 wrapper leaves and the spacer plate, assembled together.

Number of leaves shown is exclusive of rebound leaf.

Rebound clips 48319, 154911 and 154912 are bolt and rivet type. Balance of clips are the two piece service type.

CANADIAN SUPPLEMENT

TO THE

HUDSON
TERRAPLANE

1937

PARTS BOOK

HUDSON MOTORS OF CANADA, LIMITED
TILBURY, ONTARIO, CANADA

CANADIAN PARTS

Parts for Canadian built cars are for the most part identical with those for cars built in the United States.

Parts shown in the following list are exceptions. These parts are either non-interchangeable with those produced in the United States, or were not used continuously on a particular model, in which case the serial number of the first car using the new part is given. Dealers order Canadian parts from their Distributor.

Canadian Distributors order parts from the factory at Tilbury, Ontario.

United States Distributors order parts from the factory at Detroit, Michigan.

When parts are ordered for a particular car, the car serial number should be given.

CHASSIS MODELS

Built in Canada

Terraplane Deluxe — Six Cylinder — 117" Wheelbase
Numbered 71 C 101 and upward

Super Terraplane — Six Cylinder — 117" Wheelbase
Numbered 72 C 101 and upward

Hudson Six — Six Cylinder — 122" Wheelbase
Numbered 73 C 101 and upward

Hudson Deluxe — Eight Cylinder — 122" Wheelbase
Numbered 74 C 101 and upward

ILLUS. NO.	PART NO.	NAME		71	72	73	74
FRONT AXLE							
C	152708	Front axle assembly	*	1	1	1	
C	152712	Front axle assembly	*				1
		Same as assemblies No 152700 and 152708 except are less brakes and brake backing plates					
BX	154199	Front axle to frame arm caster angle spacer	*	10	10	14	14
		Usage increased from 8 to 10 and 8 to 14 beginning with car Nos 71-C-284 72-C-145; 73-C-146; 74-C-133					
BX	154488	Relief valve assembly		1	1	1	1
BX	154489	Expansion plug-tapped		1	1	1	1
		Car Nos.71C-821,72C-228,73C-197.74C-220 and up.					
REAR AXLE							
C	152680	Rear axle assy with brakes	*	1	1	1	
C	152681	Rear axle assy with brakes	*				1
C	152682	Rear axle assy less brakes	*	1	1	1	
C	152683	Rear axle assy less brakes	*				1
		Up to car Nos 71-C-283; 72-C-144; 73-C-145; 74-C-132					
C	154380	Rear axle assy with brakes	*	1	1	1	
C	154381	Rear axle assy with brakes	*				1
C	154382	Rear axle assy less brakes	*	1	1	1	
C	154383	Rear axle assy less brakes	*				1
		Car Nos 71-C-284; 72-C-145; 73-C-146; 74-C-133 and up					
DIFFERENTIAL AND CARRIER							
C	151531	Differential carrier & gear set assy	4-1/9	1	1	1	1
F	151532	Drive gear and pinion-matched and wired	to 1	1	1	1	1
F	48506	Drive gear		1	1	1	1
F	151533	Drive pinion		1	1	1	1
BM	46508	Drive pinion nut		1	1	1	1
BM	151534	Drive pinion washer		1	1	1	1
BX	151536	Differential carrier and drive pinion assy		1	1	1	1
BX	46539	Differential carrier assy.-consists of part Nos. 48541, 70093, 71448		1	1	1	1
BX	46541	Differential carrier and cap assy		1	1	1	1
BX	48544	Searing cap screw		4	4	4	4
BX	46545	Searing cap screw lock wire		2	2	2	2
BX	151535	Differential complete		1	1	1	1
BX	46526	Differential assy.-less drive gear, etc		1	1	1	1
BX	46527	Differential case		1	1	1	1
BX	46528	Differential gear		2	2	2	2
BX	46529	Differential gear thrust washer		2	2	2	2
BX	46530	Differential pinion ass		2	2	2	2
BX	48531	Differential pinion		2	2	2	2
9X	46532	Differential pinion bushing		2	2	2	2
BX	46533	Differential pinion thrust washer		2	2	2	2
8X	46534	Differential pinion shaft		1	1	1	1
BX	48535	Differential pinion shaft locating screw		1	1	1	1
BX	70098	Differential pinion shaft locating screw washer		1	1	1	1
BX	46536	Differential bearing adjusting nut		2	2	2	2
BX	48537	Differential bearing adjusting nut lock		2	2	2	2
BX	46538	Differential bearing adjusting nut lock screw		2	2	2	2
BX	70089	Drive pinion bearing assy.-front		1	1	1	1
9X	70094	Drive pinion hearing cone-front		1	1	1	1
BX	70093	Drive pinion bearing cup-front		1	1	1	1
BX	46546	Drive pinion bearing-front shim (.004)-			As required		
BX	46547	Drive pinion bearing-front shim (.005)			As required		
BX	46548	Drive pinion bearing-front-shim (.015)			As required		
BX	46549	Drive pinion bearing-front-shim (.015)			As required		
BX	46550	Drive pinion bearing-front-shim (.030)			As required		

ILLUS. NO.	PART NO.	NAME	71	72	73	74
DIFFERENTIAL AND CARRIER (Cont'd.)						
9X 46551	Drive pinion bearing spacer		1	1	1	1
BX 71446	Drive pinion bearing assy-rear		1	1	1	1
BX 71447	Drive pinion bearing cone-rear		1	1	1	1
BX 71448	Drive pinion bearing cup-rear		1	1	1	1
9X 48552	Drive pinion bearing-rear-shim-(.004)			As required		1
BX 48553	Drive pinion bearing-rear-shim-(.005)			As required		
9X 48554	Drive pinion bearing-rear-shim-(.0125)			As required		
BX 48555	Drive pinion bearing-rear-shim-(.015)			As required		
BX 46558	Drive pinion bearing-rear-shim-(.030)			As required		
BX 46557	Drive pinion oil seal		1	1	1	1
NOTE: For parts not listed see Rear Axle Section page 9.						
DRIVE SHAFT						
F 150084	Drive shaft assy		2	2	2	2
BX 48524	Drive shaft thrust spacer		1	1	1	1
WHEELS						
C 154470	Wheel assembly (steel)	*	5	5	5	5
BZ 70126	Brake drum dust shield screw		12	12	12	12
HA 153280	Wheel disc finish ring	*	4	4	4	4
	Up to car Nos.71-C--213;72-C-124,73-C-122,74-C-120					
HA 154472	Wheel disc finish ring *		4	4	4	4
	Car Nos. 71-C-214,72-C-125,73-C-123,74-C-121,& up					
SPRINGS-REAR						
Light scale						
F 153761	Rear spring assy.-Sedan	*	2	2	2	2
F 153760	Rear spring assy.-Brougham	*	2	2	2	2
	Up to car Nos. 71-C-283,72-C-144,73-C-145,74-C-132					
F 154501	Rear spring assy.-Sedan	*	2	2	2	2
F 154500	Rear spring assy.-Brougham	*	2	2	2	2
F 154503	Rear spring assy.-3 and 4 Pass.Coupe	*	2	2	2	2
F 154504	Rear spring assy.-3 and 4 Pass. Coupe	*	2	2	2	2
	Car Nos.71-C-284,72-C-145,73-C-148,74-C-133 and up					
SPRINGS-HEAVY SCALE						
Optional Equipment						
F 153755	Front spring assy	*	2	2		
F 153756	Front spring assy	*			2	
F 153757	Front spring assy	*				2
F 154510	Rear spring assy.-Brougham	*	2	2	2	2
F 154511	Rear spring assy.-Sedan	*	2	2	2	2
F 154512	Rear spring assy.-3 and 4 Pass. Coupe	*	2	2		
F 154513	Rear spring assy.-3 and 4 Pass. Coupe	*			2	2
SHOCK ABSORBER						
BZ 152943	Front shock absorber assy	*	2	2	2	2
BZ 152944	Rear shock absorber assy	*	2	2	2	2
	Used with light scale springs.					
BZ 154434	Front shock absorber assy	*	2	2	2	2
BZ 154435	Rear shock absorber assy	*	2	2	2	2
	Used with heavy scale springs					

ILLUS. NO.	PART NO.	NAME		71	72	73	74
FRAME				1			
C	152808	Frame assy.	}	*	1	1	
C	152810	Frame assy.		*	1		1
C	152811	Frame assy.		*	1		1
BZ	152923	Front spring front bracket assy.-R.H		*	1	1	1
BZ	152924	Front spring front bracket assy.-L.H		*	1	1	1
		Up to car Nos.71-C-283,72-C-144,73-C-145,74-C-132		1			
				1			
C	154308	Frame assy.	}	*	1	1	
C	154310	Frame assy.		*			1
C	154311	Frame assy.		*	1		1
BZ	154328	Frame rear spring front bracket		*	1	2	2
BZ	154329	Frame rear spring front brkt.Reinf.car No.71-C-284, 72-C-145,73-C-148,74-C-133 and up		*	1	2	2
					1	1	1
EXHAUST MANIFOLD							
C	153152	Exhaust manifold assy		*			
C	153153	Exhaust manifold assy		*	1	1	
C	153154	Exhaust manifold assy		*			1
BM	153161	Exhaust damper		*	1	1	1
BM	153182	Exhaust damper gasket		*	1	1	1
BM	153163	Exhaust damper retainer		*	1	1	1
BM	71218	Exhaust damper retainer stud			2	2	2
BM	70177	Exhaust damper retainer stud washer			2	2	2
BM	71108	Exhaust damper retainer stud nut			2	2	2
TRANSMISSION				1			
				1	1	1	1
		NOTE: Parts 153210 and 154027 do not include bellhousing or low and reverse interlock strap. Do include interlock plunger and bracket.		1	1	1	1
					1	1	1
				1	1	1	1
C	153210	Transmission assy.	}	1	1	1	1
C	153416	Transmission and clutch hsg.assy.		1	1	1	1
C	153418	Transmission,clutch hsg.& control assy.		1	1	1	1
					1	1	1
C	154027	Transmission assy.	}		1	1	1
C	154029	Trans.and clutch hsg.assy.			1	1	1
C	154033	Trans.,clutch hsg.and control assy.			1	1	1
					1	1	1
BT	150790	Countershaft drive and intermediate gear cluster			1	1	1
BT	154626	Countershaft *			1	1	1
					1	1	1
		Canadian Transmission Assemblies were used on car Nos. 71-C-202,72-C-123,73-C-120,74-C-119 and up. Balance of transmission parts same as first type U.S.					
TRANSMISSION CONTROL- CONVENTIONAL							
C	153047	Transmission control assy *			1	1	1
BT	48386	Cover assy			1	1	1
BT	48388	Fulcrum pin			1	1	1
PROPELLER SHAFT AND UNIVERSAL JOINTS							
C	152743	Propeller shaft and universal joint assy *			1	1	1
C	152749	Propeller shaft *			1	1	1
C	152755	Shaft and rear joint assy *			1	1	1
		Up to car Nos,71-C-283,72-C-144,73-C-145,74-C-132					
C	154332	Propeller shaft and universal joint assy *			1	1	1
C	154334	Propeller shaft *			1	1	1
C	154336	Shaft & rear joint assy *			1	1	1
		Car Nos.71-C-284,72-C-145,73-C-146,74-C-133 & up					

ILLUS. NO.	PART NO.	NAME		71	72	73	74
FENDERS-REAR							
	3Z 118313	Rear fender welt		1	1	1	1
TOOLS							
	BZ 153380	Tool kit complete	}	*	1		1
	BZ 153384	Tool kit complete		*		1	
	3Z 153385	Tool kit complete		*			1
	3Z 153404	Starting crank extension		*	1		
	3Z 153405	Starting crank extension		*		1	
	3Z 153406	Starting crank extension		*			1
	3Z 40851	Monkey wrench		1	1	1	1
	3Z 151433	Jack		1	1	1	1
	3Z 151434	Jack handle		1	1	1	1
	3Z 46188	Starting crank		1	1	1	1
HEADLAMPS							
	30 120966	Headlamp complete-right	}	*	1	1	
	30 120967	Headlamp complete-left		*	1	1	
	30 120994	Headlamp complete-right	}	*	1	1	
	30 120995	Headlamp complete-left		*	1	1	
	BO 122634	Housing assy.-right	}	*	1	1	
	BO 122835	Housing assy.-left		*	1	1	
	BO 121004	Housing assy.-right	}	*	1	1	
	30 121005	Housing assy.-left		*	1	1	
	BO 121099	Reflector assy		*	2	2	
	BO 109285	Reflector spring			4	4	
	BO 121228	Door locking lug		*	2	2	
	30 121097	Headlamp lens		*	2	2	
	BO 121098	Headlamp lens gasket		*	2	2	
	BO 99075	Headlamp lens retaining screw			2	2	
	BO 121016	Headlamp socket and wire assembly-right		*	1	1	
	BO 121017	Headlamp socket and wire assembly-left		*	1	1	
	BO 121229	Headlamp housing band		*	2	2	
Exceptions using U.S.Headlamp assemblies No.120972-3 were:- 71-C-101-2-4-15 72-C-103							
INSTRUMENTS AND MOUNTING							
	121596	Speedometer Head assembly		*	1	1	
INTERIOR FITTINGS							
	BO 108067	Domelamp assy.	}		1	1	
	BO 108068	Reflector and socket assy.			1	1	
	BO 108852	Reflector			1	1	
	BO 122636	Domelamp assy.	}	*		1	
	BO 122637	Reflector and socket assy.				1	
	BO 122638	Reflector				1	
	BO 150709	Switch				1	
	BO 122639	Switch escutcheon plate				1	

**HUDSON
TERRAPLANE**

**GROUP
PARTS BOOK**

1937

BODY SECTION


1937 BODY MODELS

<u>Abbreviation</u>	<u>Name</u>	<u>Chassis Models</u>
Bro.	Brougham	71-72-73-74-75
Sed.	Sedan	71-72-73-74-75-76-77-78
3-Cpe.	Three-Passenger Coupe	71-72-73-74-75
4-Cpe.	Four-Passenger Coupe	71-72-73-74-75
Cv.Cpe.	Convertible Coupe	71-72-73-74-75
Cv.Bro.	Convertible Brougham	71-72-73-74-75
Bs.Cpe.	Business Coupe	71-73
U.Co.	Utility Coach	70
U.Cpe.	Utility Coupe	70
Station	Station Wagon	70
Panel	Panel Delivery	70-78
Cab	Chassis with Cab	70-78
Cab Pu.	Cab Pick-up	70-78


ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
BODY BOLTS AND SHIMS				
BO 71720	Body hold-down bolt	3/8"-24x1-1/8"	7	All models
BO 71722	Body hold-down bolt	3/8"-24x1-1/2"	AR	All models
BO 117359	Body hold-down bolt	3/8"-24 taper head	AR	All models
BO 170005	Body hold-down bolt (self tapping)	3/8"x7/8"	* 6	All models
BO 170024	Body hold-down bolt (self tapping oversize for 170005)	7/16"x7/8"	* AR	All models
BX 1061	Body hold-down bolt	3/8"x7/8"	AR	All models
BO 71434	Body hold-down bolt	3/8"-24x2"	AR	U Cpe.-Station-Cab-Cab Pu.Cv. Cpe.Cv.Bro.
BZ 71470	Body hold-down bolt	3/8"-24x4-1/2"	4	Panel-Station
BO 71579	Body hold-down bolt	3/8"-24x5"	2	Panel
BO 170024	Body hold-down bolt	7/16"x7/8"	AR	All models
BX 12415	Body hold-down bolt nut	3/8"-24x21/64"	AR	All models
BO 117437	Body hold-down bolt nut retainer assembly		AR	All models
BO 100788	Body hold-down bolt shim	1-1/2" square	AR	All models
BO 101798	Body hold-down bolt spacer	5/16" thick	2	Station-Panel-Cab Pu.
BO 100582	Body hold-down bolt washer	1-7/16" square x1/8"	AR	All models
BO 124258	Rear body pillar body bolt spacer-thin		* AR	Cv.Cpe.-Cv.Bro.
BO 124259	Rear body pillar body bolt spacer-thick		* AR	Cv.Cpe.-Cv.Bro.
BZ 70872	Cab-back to underbody panel bolt.	1/4"-20x3/4"	2	70-78 Cab-Cab Pu.
BO 170027	Cab back to floor sheet metal screw	14x7/8"	* 8	70-78 Cab-Cab Pu.
BO 70157	Cab back to floor bolt	1/4"-20x1/2"	2	70-78 Cab-Cab Pu.
BZ 70874	Cab back to floor bolt nut	14x7/8"	2	70-78 Cab-Cab Pu.
FRONT END				
C 120787	Front end assembly	L.H.D.	* 1	71 Bro.-Sed.-3 Cpe.-4 Cpe.,78 Sed.
C 120785	Front end assembly	L.H.D.	* 1	72 Bro.-Sed.-3 Cpe.-4 Cpe.
C 122805	Front end assembly	L.H.D.	* 1	71 Cv.Cpe.-Cv.Bro.
C 122807	Front end assembly	L.H.D.	* 1	72 Cv.Cpe.-Cv.Bro.
C 120789	Front end assembly	L.H.D.	* 1	70 exc.Station,78 exc.Sed.,71 Rs. Cpe.
C 122803	Front end assembly	L.H.D.	* 1	70 station
C 124053	Front end assembly	L.H.D.	* 1	73 Bs.Cpe.
C 120783	Front end assembly	L.H.D.	* 1	73-74-75 Bro.-Sed.-3 Cpe.-4 Cpe., 76-77 Sed.
C 122809	Front end assembly	L.H.D.	* 1	73-74-75-Cv.Cpe.-Cv.Bro.
C 120786	Front end assembly	R.H.D.	* 1	71 Bro.-Sed.-3 Cpe.-4 Cpe.,78 Sed.
C 120784	Front end assembly	R.H.D.	* 1	72 Bro.-Sed.-3 Cpe.-4 Cpe.
C 122804	Front end assembly	R.H.D.	* 1	71 Cv.Cpe.-Cv.Bro.
C 122806	Front end assembly	R.H.D.	* 1	72 Cv.Cpe.-Cv.Bro.
C 120788	Front end assembly	R.H.D.	* 1	70 exc.Station 78 exc.Sed.,71 Bs. Cpe.
C 122802	Front end assembly	R.H.D.	* 1	70 Station
C 124052	Front end assembly	R.H.D.	* 1	73 Bs.Cpe.
C 120782	Front end assembly	R.H.D.	* 1	73-74-75 Bro.-Sed.-3 Cpe.-4 Cpe., 76-77 Sed.
C 122808	Front end assembly	R.H.D.	* 1	73-74-75 Cv.Cpe.-Cv.Bro.
A 120958	Instrument panel assembly	L.H.D.	* 1	71 exc.Bs.Cpe.,78 Sed.
A 120808	Instrument panel assembly (Prime or lacquer)	L.H.D.	* 1	70 exc.Station, 78 exc.Sed., 71-73 Bs.Cpe.
A 122699	Instrument panel assembly	L.H.D.	* 1	70 Station
A 120804	Instrument panel assembly	L.H.D.	* 1	72
A 120806	Instrument panel assembly (3 tone walnut) first type	L.H.D.	* 1	73 exc.Bs.Cpe.,74, 75, 76, 77
A 120804	Instrument panel assembly (2 tone walnut) second type	L.H.D.	* 1	73 exc.Bs.Cpe.,74, 75, 76, 77
A 124601	Instrument panel assembly (Walnut pearl) third type	L.H.D.	* 1	73 exc.Bs.Cpe.,74, 75, 76, 77
A 120957	Instrument panel assembly	R.H.D.	* 1	71 exc.Bs.Cpe.,78 Sed.
A 120807	Instrument panel assembly(Prime or lacquer)	R.H.D.	* 1	70 exc.Station,78 exc.Sed., 71-73 Bs.Cpe.
A 122698	Instrument panel assembly	R.H.D.	* 1	70 Station
A 120803	Instrument panel assembly	R.H.D.	* 1	72
A 120805	Instrument panel assembly (3 tone walnut) first type	R.H.D.	* 1	73 exc.Bs.Cpe.,74, 75, 76, 77

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT END (Cont'd.)				
A	120803	Instrument panel assembly (2 tone walnut) second type	R.H.D. *	1 73 exc.Bs.Cpe., 74, 75, 76, 77
A	124600	Instrument panel assembly (3 tone walnut) third type	R.H.D. *	1 73 exc.Bs.Cpe., 74, 75, 76, 77
C	121520	Instrument panel moulding	*	1 72, 73 exc.Bs.Cpe., 74, 75, 76, 77
BO	121519	Instrument panel moulding clip	*	7 72, 73 exc.Bs.Cpe., 74, 75, 76, 77
BO	116289	Instrument panel to dash brace		1 All
BZ	71264	Instrument panel to dash brace bolt 5/16" 24x3/4"		2 All
BO	71625	instrument panel to dash brace bolt.. 1/4-20x7/8"		2 All
BZ	70874	Instrument panel to dash brace bolt nut 1/4"-20x1/4"		1 All
BO	116293	Instrument panel to dash brace bracket assy.		1 All
BO	12264	Instrument panel to dash brace rivet 1/4"x3/8"		3 All
PO	121599	Instrument panel to instrument cluster bracket	*	2 All models
BO	71646	Instrument panel to instrument cluster bracket screw		2 All models
BZ	70874	Instrument panel to instrument cluster brkt.screw nut		2 All models
BO	70452	Instrument panel to instrument cluster bracket finish washer		2 All models
BO	112099	Locker box dash bracket		1 All models
BO	12264	Locker box dash bracket to dash rivet		2 All models
CZ	70796	Locker box to dash bracket bolt. 12-28x3/4"		1 All models
BO	112197	Locker box to dash bracket bolt tapping plate		1 All models
BO	120678	Radiator stay rod dash bracket-R.H. *		1 All models
BO	120679	Radiator stay rod dash bracket-L.H. *		1 All models
BZ	18454	Radiator stay rod dash bracket rivet 3/16x7/16"		4 All models
BO	121786	Steering gear jacket tube bracket assembly	*	1 All models exc.Cab & Cab Pu.
C	123429	Steering gear jacket tube bracket *		1 Cab and Cab Pu.
BO	71714	Steering gear jacket tube bracket cap screw 5/16"-24x3/4"		2 All models
BO	121787	Steering gear jacket tube bracket spacer		1 All models exc.Cab-& Cab Pu.
BO	71601	Steering gear jacket tube bracket bolt 5/16"-18x1-3/4"		4 All models
BO	70674	Steering gear jacket tube bracket bolt nut 5/16"-18x5/16"		4 All models
BO	121116	Steering gear jacket tube bracket reinforcement. *		1 All models
BO	71654	Steering gear jacket tube bracket reinforcement to locker box door screw 10-32x13/18"		2 All models
C	120028	Dash panel assembly L.H.D. *		1 All models
C	120029	Dash panel assembly R.H.D. *		1 All models
BO	70243	Dash panel grommet 7/8" Rubber		2 All models
BZ	71552	Dash panel grommet 1/2" Rubber		3-4 All models
BO	112935	Dash hole cover plate		1 All models
BO	71302	Dash hole cover plate sheet metal screw 8x1/2"		2 All models
C	121488	Dash silencer and trimboard assembly L.H.D. *		1 70, 71, 78
C	121489	Dash silencer and trimboard assembly L.H.D. *		1 72, 73, 74, 75, 76
C	121490	Dash silencer and trimboard assembly R.H.D. *		1 72, 73, 74, 75, 77
C	121495	Dash silencer and trimboard assembly R.H.D. *		1 70, 71, 78
BO	120154	Toe board riser assembly-R.H. L.H.D. *		1 All models
BO	120155	Toe board riser assembly-L.H. L.H.D. *		1 All models
BO	120156	Toe board riser assembly-R.H. R.H.D. *		1 All models
BO	120157	Toe board riser assembly-L.H. R.H.D. *		1 All models
BO	170009	Rivet-toe board riser to floor panel *		1 All models
BO	18474	Rivet-toe board riser to dash panel and pillar brkt..		6 All models
BO	106300	Toe board riser hole Rubber		2 All models
BO	85747	Toe board riser wiring clip		1 All models
PO	122758	Toe board riser wiring clip *		1 All models
C	121870	Cowl side trim panel-R.H. *		1 70, 71, 73 Bs.Cpe., 78
C	121871	Cowl side trim panel-L.H. *		1 70, 71, 73 Bs.Cpe., 78
C	121872	Cowl side trim panel-R.H. *		1 72 thru 77 exc. 73 Bs.Cpe.
C	121873	Cowl side trim panel-L.8 *		1 72 thru 77 exc. 73 Bs.Cpe.
BO	71348	Cowl side trim panel screw #8x1/2"		2 All models
BO	12316	Cowl side trim panel screw finish washer #10 Ctsk.		2 All models
BO	123788	Control lever front pillar pocket assembly *		1 Bro.-Sed.-3 Cpe.-4 Cpe.
BO	123789	Control lever front pillar strap assembly *		1 U Co.-U Cpe.- when equipped with Electric Hand
BO	71400	Control lever strap lift-the-dot socket		1
BO	71399	Control lever strap		1
BO	71525	Control lever strap stud- #6 wood screw		1


ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
COWL VENTILATOR				
BO 120353	Cowl ventilator cover assembly		* 1	All models
BO 121266	Cover ornament Chrome		* 1	71 thru 77, 78 Sed.
BO 121267	Cover ornament Prime or Lacquer		* 1	70, 78 exc.Sed.
BO 87600	Cover hinge-R.H		1	All models
BO 87601	Cover hinge-L.H		1	All models
BZ 70665	Cover hinge to trough rivet	5/16"x5/8"	2	All models
BO 9159	Cover hinge to bracket bolt	1/4"-20x5/8"	4	All models
BO 121529	Screen		* 1	All models
BO 71302	Screen	8x1/2"	1	All models
BO 120399	Operating link-upper-and bracket assembly		* 1	All models
BO 120344	Operating link to deflector bracket		* 1	All models
BO 18454	Operating link to deflector bracket rivet	3/16"x7/16"	2	All models
BO 120345	Operating link-upper		* 1	All models
BO 120346	Operating link-lower		* 1	All models
BO 71386	Operating link rivet	1/4"x7/16"oval hd.	2	All models
BO 18465	Operating link bolt	1/4"-20x7/8"	1	All models
BZ 70874	Operating link bolt nut	1/4"-20x1/4"	1	All models
BO 120348	Ratchet		* 1	All models
BO 120347	Ratchet tension washer		* 1	All models
BO 71386	Ratchet rivet	1/4"x7/16" oval head	1	All models
BO 120349	Ratchet guide		* 1	All models
BO 18470	Ratchet guide bolt	10-32x5/8"	3	All models
BO 12316	Ratchet guide bolt finish washer	#10 Ctsk.	3	All models
BO 71073	Ratchet guide bolt nut	10-32x1/8"	3	All models
BO 120350	Operating knob		* 1	All models
BO 120343	Drain pipe rubber tube		* 1	All models
BO 116090	Weatherstrip		1	All models
WINDSHIELD				
BO 120693	Windshield glass weatherstrip		* 2	All exc.Cv.Cpe.-Cv.Bro.
BO 122625	Windshield glass weatherstrip		* 2	Cv.Cpe.-Cv.Bro.
C 120904	Windshield finish moulding-R.H		* 1	70, 78 exc.Sed., 71-73 Bs.Cpe.
C 120905	Windshield finish moulding-L.H		* 1	70, 78 exc.Sed., 71-73 Bs.Cpe.
C 120900	Windshield finish moulding-R.H		* 1	71-72 Bro.-Sed.-3 Cpe.4 Cpe.78Sed.
C 120901	Windshield finish moulding-L.H		* 1	71-72 Bro.-Sed.-3 Cpe.-4 Cape., 78 Sed.
C 122628	Windshield finish moulding-R.H		* 1	71-72 Cv.Cpe.-Cv.Bro.
C 122629	Windshield finish moulding-L.H		* 1	71-72 Cv.Cpe.,-Cv.Rro.
BO 120648	Windshield finish moulding lower joint cover		* 1	71, 72, 78 Sed.
C 120900	Windshield finish moulding-R.H.	First type, two tone walnut	* 1	73 thru 77 Bro.-Sed.-3 Cpe.4 Cape.
C 120901	Windshield finish moulding-L.H.		* 1	73 thru 77 Bro.-Sed.-3 Cpe.4 Cape.
C 122628	Windshield finish moulding-R.H.		* 1	73-74-75 Cv.Cpe.-Cv.Bro.
C 122629	Windshield finish moulding-L.H.		* 1	73-74-75 Cv.Cpe.,-Cv.Rro.
BO 120648	Windshield finish moulding lower joint cover		* 1	73 Bs.Cpe., 74, 75, 76, 77
C 124572	Windshield finish moulding-R.H.	Second type, walnut pearl	* 1	73 thru 77 Bro.-Sed.-3 Cpe.4 Cape.
C 124573	Windshield finish moulding-L.H.		* 1	73 thru 77 Bro.-Sed.-3 Cpe.4 Cape.
C 124574	Windshield finish moulding-R.H.		* 1	73-74-75 Cv.Cpe.,-Cv.Rro.
C 124575	Windshield finish moulding-L.H.		* 1	73-74-75 Cv.Cpe.-Cv.Bro.
C 124576	Windshield finish moulding lower joint cover		1	73 Bs.Cpe., 74, 75, 76, 77
BO 120647	Windshield finish moulding-center		* 1	All exc.Cv.Cpe.-Cv.Bro.
BO 120963	Windshield finish moulding-center		* 1	Cv.Cpe.,-Cv.Rro.
BO 118997	Windshield finish moulding lower joint cover		1	70, 78 exc.Sed.
BO 119156	Windshield finish moulding upper joint cover		1	Panel-Cab-Cab Pu.
BO 120647	Windshield center bar-inside		* 1	All exc.Cv.Cpe.-Cv.Bro.
BO 120963	Windshield center bar-inside		* 1	Cv.Cpe.,-Cv.Rro.
BO 120645	Windshield center bar-outside		* 1	Bro.-Sed.-3 Cpe.4 Cpe.-Bs.Cpe.
BO 120962	Windshield center bar-outside		* 1	Cv.Cpe.,-Cv.Rro.
BO 120646	Windshield center bar-outside		* 1	70, 78
BO 121276	Windshield center bar shim		* 1	All
BO 71538	Windshield center bar screw	#8-32x1-3/8	AR	All

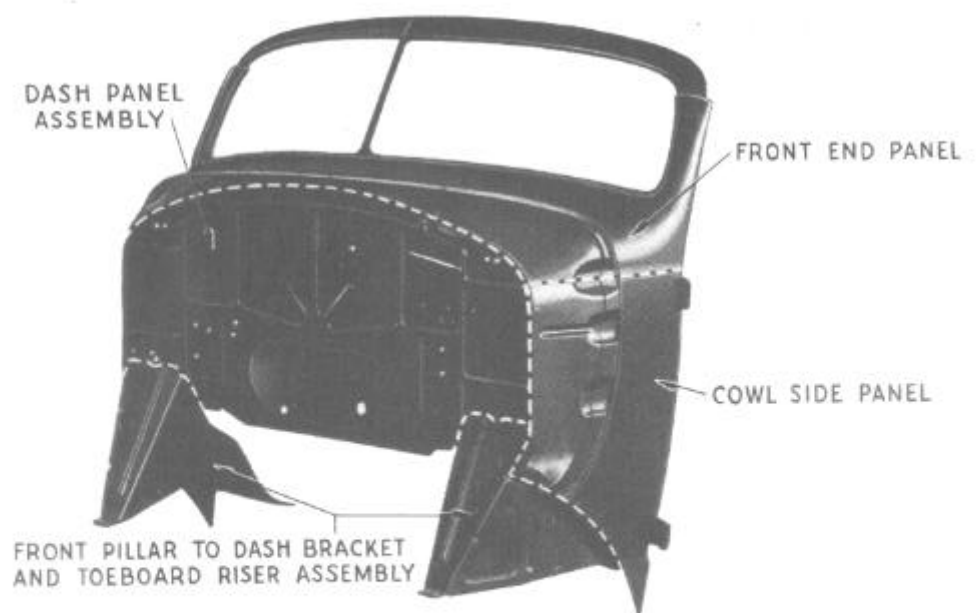


FRONT END
Illustration A

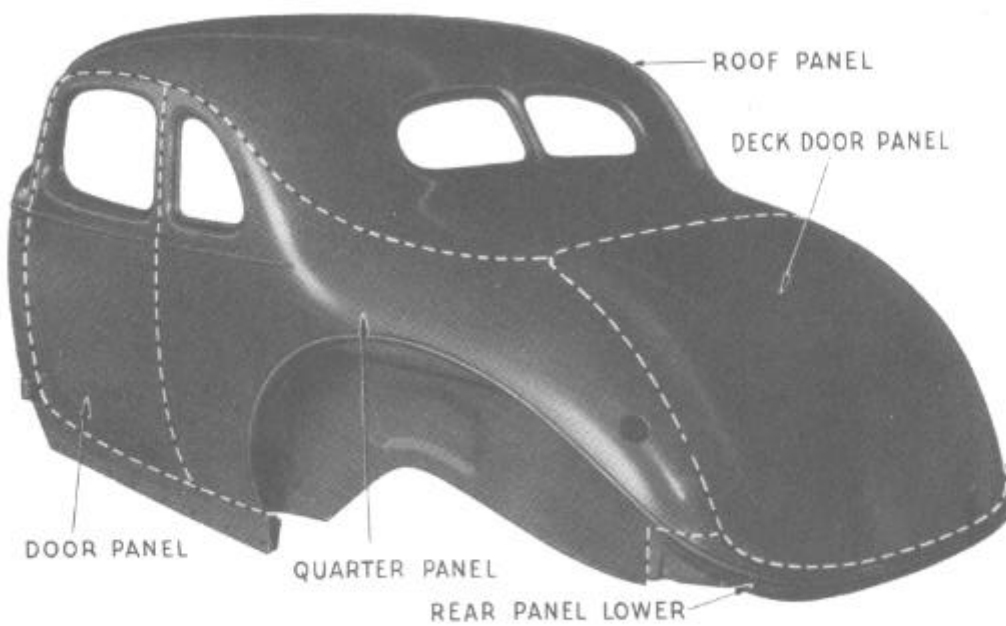

COUPE BODY
Illustration B

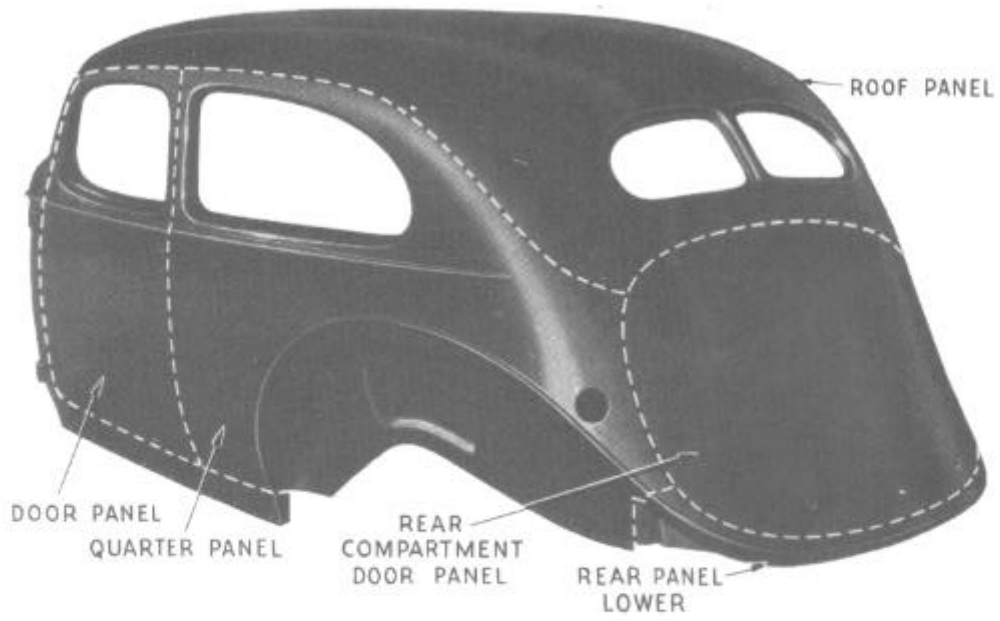

BROUGHAM BODY
Illustration C

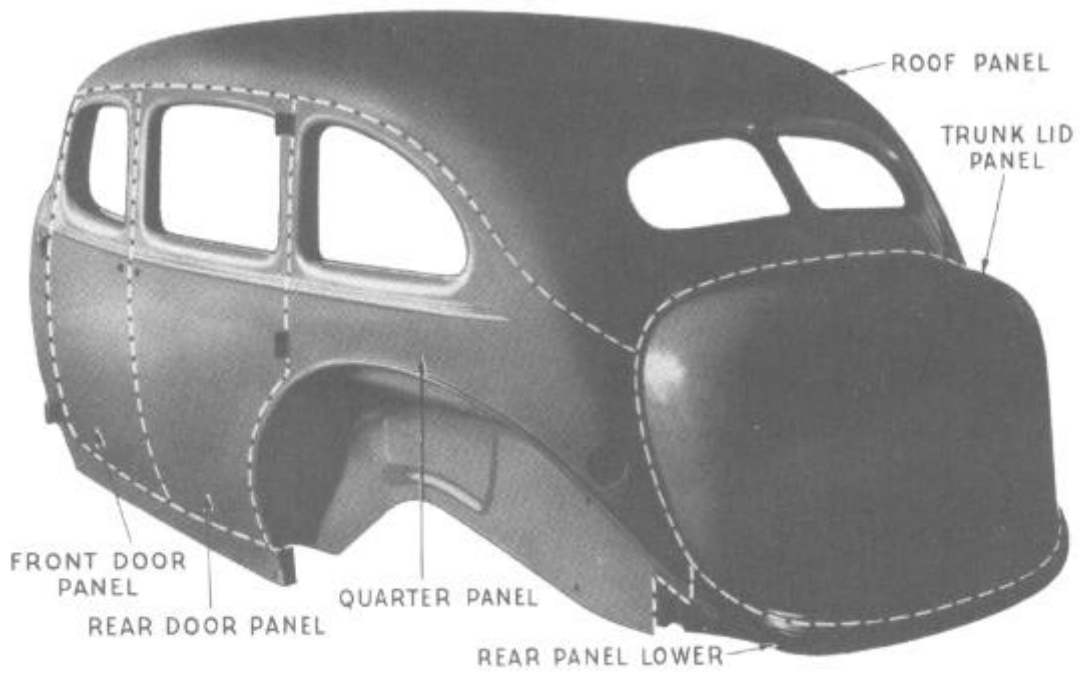

SEDAN BODY
Illustration D

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
WINDSHIELD (Cont'd)				
BO 71699	Windshield finish moulding screw	#8x1"	12	All
BO 71700	Windshield finish moulding screw	#8x1-1/4"	4	All
BO 71701	Windshield finish moulding screw washer	#28	16	All
BO 71449	Windshield finish moulding lower joint cover screw	8x1-1/4"	2	All
BO 70704	Windshield finish moulding upper joint cover screw	10-32x1-1/4"	2	Panel-Cab-Cab Pu.
PANELS-METAL				
C 120002	Cowl side panel-R.H	*	1	70, 71, 72, 78
C 120003	Cowl side panel-L.H	*	1	70, 71, 72, 78
C 120004	Cowl side panel-R.H	*	1	73, 74, 75, 76, 77
C 120005	Cowl side panel-L.H	*	1	73, 74, 75, 76, 77
C 120001	Front end panel	*	1	All models
C 120028	Dash panel assembly	L.H.D. *	1	All models
C 120029	Dash panel assembly	R.H.D. *	1	All models
C 116073	Rear panel-lower	*	1	Bro.-Sed.-U Co
C 120129	Rear panel-lower	*	1	All Cpes.-Cv.Cpe.-Cv.Bro.
C 120544	Rear panel-upper	*	1	Cv.Cpe.
C 120545	Rear panel-upper	*	1	Cv.Bro.
C 120050	Quarter panel-R.H	*	1	Bro.
C 120051	Quarter panel-L.H	*	1	Bro.
C 120052	Quarter panel-R.H	*	1	Sed.
C 120053	Quarter panel-L.H	*	1	Sed.
C 120850	Quarter panel-R.H	*	1	3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 120851	Quarter panel-L.H	*	1	3 Cpe.-4 Cpe.-Bs.Cpe.
C 123043	Quarter panel-L.H	*	1	U Cpe.
C 120854	Quarter panel-R.H	*	1	Cv.Cpe.
C 120855	Quarter panel-L.H	*	1	Cv.Cpe.
C 122602	Quarter panel-R.H	*	1	Cv.Bro.
C 122603	Quarter panel-L.H	*	1	Cv.Bro.
C 122974	Quarter panel-R.H	*	1	70 U Co.
C 122975	Quarter panel-L.H	*	1	70 U Co.
C 120030	Roof panel	*	1	71 thru 75 Bro.& Sed., 70 U Co.
C 120035	Roof panel	*	1	71 thru 75 Cpes., 70 U Cpe.
C 120031	Roof panel assembly	*	1	76-77-78 Sed.
C 120032	Roof panel	*	1	70-78 Panel-Cab-Cab Pu.
C 120419	Roof panel	*	1	70 Station
C 120362	Rear compartment door panel-outside (without trunk)	*	1	Bro.-Sed.-U Co.
C 120360	Rear compartment door panel-inside (without trunk)	*	1	Bro.-Sed.-U Co.
C 120375	Trunk lid panel assembly	*	1	Bro.-Sed.
C 120858	Deck door panel-outside	*	1	All Cpes., Cv.Cpe.-Cv.Bro.
C 120860	Deck door panel-inside	*	1	3 Cpe.-4 Cpe.-Cv.Cpe.-Cv.Bro.
C 123130	Deck door panel-inside	*	1	70 U Cpe.
C 120200	Front door outside panel-R.H	*	1	71 Bro., 70 U Co., 78 Sed.
C 120201	Front door outside panel-L.H	*	1	71 Bro., 70 U Co., 78 Sed.
C 120202	Front door outside panel-R.H	*	1	72-73-74-75 Bro., 76-77 Sed.
C 120203	Front door outside panel-L.H	*	1	72-73-74-75 Bro., 76-77 Sed.
C 120204	Front door outside panel-R.H	*	1	71 Sed., 70-78 Panel-Cab-Cab Pu.
C 120205	Front door outside panel-L.H	*	1	71 Sed., 70-78 Panel-Cab-Cab Pu.
C 120206	Front door outside panel-R.H	*	1	72-73-74-75 Sed.
C 120207	Front door outside panel-L.H	*	1	72-73-74-75 Sed.
C 120208	Front door outside panel-R.H	*	1	71 3 Cpe.-4 Cpe.-Bs.Cpe., 73 Bs. Cpe., 70 U Cpe.
C 120209	Front door outside panel-L.H	*	1	71 3 Cpe.-R Cpe.-Bs.Cpe., 73 Bs. Cpe., 70 U Cpe.
C 120210	Front door outside panel-R.H	*	1	72-73-74-75 3 Cpe.-4 Cpe.,
C 120211	Front door outside panel-L.H	*	1	72-73-74-75 3 Cpe.-4 Cpe.
C 122228	Front door outside panel-R.H	*	1	71 Cv.Cpe.-Cv.Bro.
C 122229	Front door outside panel assembly-L.H	*	1	71 Cv.Cpe.-Cv.Bro.
C 122232	Front door outside panel assembly-R.H	*	1	72-73-74-75 Cv.Cpe.-Cv.Bro.
C 122233	Front door outside panel assembly-L.H	*	1	72-73-74-75 Cv.Cpe.-Cv.Bro.
C 120130	Rear door outside panel-R.H	*		Sedan
C 120131	Rear door outside panel-L.H	*		Sedan

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
PILLARS				
C	120180	Body front pillar-R.H Part of front	*	1 All closed bodies
C	120181	Body front pillar-L.H. end assembly	*	1 All closed bodies
C	120092	Body center pillar assembly-R.H	*	1 Sedan
C	120093	Body center pillar assembly-L.H	*	1 Sedan
C	120102	Body lock pillar assembly-R.H	*	1 Bro.-U Co.-Cab-Cab Pu.-Panel
C	120103	Body lock pillar assembly-L.H	*	1 Bro.-U Co.-Cab-Cab Pu.Panel
C	123136	Body lock pillar assembly-R.H	*	1 Panel
C	123137	Body lock pillar assembly-L.H	*	1 Panel
C	120110	Body rear pillar assembly-R.H	*	1 Sedan
C	120111	Body rear pillar assembly-L.H	*	1 Sedan
C	120106	Body rear pillar assembly-R.H	*	1 3 Cpe.-4 Cpe.-Rs.Cpe-U Cpe.
C	120107	Body rear pillar assembly-L.H	*	1 3 Cpe.-4 Cpe.-Bro. Cpe.-U Cpe.
C	122536	Rear body pillar-R.H	*	1 Cv.Cpe.-Cv.Bro.
C	122537	Rear body pillar-L.H	*	1 Cv.Cpe.-Cv.Bro.
C	122548	Rear body pillar assembly-R.H	*	1 Cv.Bro.
C	122549	Rear body pillar assembly-L.H	*	1 Cv.Bro.
TRIM RAILS AND RETAINERS				
C	120814	Windshield header trim rail-R.H	*	1 All closed cars except Station
C	120815	Windshield header trim rail-L.H	*	1 All closed cars except Station
C	100788	Windshield header trim rail shim		4 All closed cars except Station
C	70058	Windshield header trim rail screw	10-32x1"	4 All closed cars except Station
C	120517	Windshield header trim rail screw washer	*	4 All closed cars except Station
C	122072	Quarter window trim rail assembly-R.H	*	1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
C	122073	Quarter window trim rail assembly-L.H	*	1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
C	120796	Front pillar trim stick	*	2 All models except Cv.Bro.
C	120790	Center pillar trim stick	*	2 71-72 Sedan
C	120790	Center pillar trim stick	*	1 73 thru 78 Sed.
C	120791	Center pillar trim stick	*	1 73 thru 78 Sed.
BO	18455	Center pillar trim stick bolt	1/4"-20x1-1/2"	8 Sedan
C	122119	Package compartment back panel trimstick	*	2 4 Cpe
C	117060	Body header trim retainer assembly-R.11		1 Bro.-U Co.
C	117061	Body header trim retainer assembly-L.H		1 Bro.-U Co.
C	117048	Body header trim retainer assembly-R.H		1 71 thru 75 Sed.
C	117049	Body header trim retainer assembly-L.H		1 71 thru 75 Sed.
C	117052	Body header trim retainer assembly-R.H		1 76-77-78 Sed.
C	117053	Body header trim retainer assembly-L.H		1 76-77-78 Sed.
C	117744	Body header trim retainer assembly-R.H		1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
C	117745	Body header trim retainer assembly-L.H		1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
C	121498	Body header trim retainer assembly-R.H	*	1 Cab-Cab Pu.
C	121499	Body header trim retainer assembly-L.H	*	1 Cab-Cab Pu.
C	124092	Body header trim retainer assembly-R.H	*	1 Panel
C	124093	Body header trim retainer assembly-L.H	*	1 Panel
C	120952	Front body pillar trim retainer assembly-R.H	*	1 All closed models
C	120953	Front body pillar trim retainer assembly-L.H	*	1 All closed models
C	123446	Front body pillar trim retainer assembly-R.H	*	1 Cv.Cpe.-Cv.Bro.
C	123447	Front body pillar trim retainer assembly-L.H	*	1 Cv.Cpe.-Cv.Bro.
C	120912	Rear body pillar trim retainer assembly-R.H	*	1 71-72-Bro., U Co-Panel-Cab-Cab Pu.
C	120913	Rear body pillar trim retainer assembly-L.H	*	1 71-72 Bro., U Co-Panel-Cab-Cab Pu.
C	120920	Rear body pillar trim retainer assembly-R.H	*	1 Sedan
C	120921	Rear body pillar trim retainer assembly-L.H	*	1 Sedan
C	122760	Rear body pillar trim retainer assembly-R.H	*	1 73-74 Bro.
C	122761	Rear body pillar trim retainer assembly-L.H	*	1 73-74 Bro.
C	122764	Rear body pillar trim retainer assembly-R.H	*	1 75 Bro.
C	122765	Rear body pillar trim retainer assembly-L.H	*	1 75 Bro.
C	120916	Rear body pillar trim retainer assembly-R.H	*	1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
C	120917	Rear body pillar trim retainer assembly-L.H	*	1 2 Cpe.-4 Cpe.-U Cpe.-Bs.Cpe.
BO	71420	Trim retainer sheet metal screw	No. 8 x 1/2"	AR All models
C	120924	Front door hinge pillar trim retainer assembly-R.H.	*	1 70-71-72 exc. Station & Conv., 73 Bs. Cpe., 78 All
C	120925	Front door hinge pillar trim retainer assembly-L.H.	*	1 70-71-72 exc. Station & Conv., 73 Bs. Cpe., 78 All
C	122768	Front door hinge pillar trim retainer assembly-R.H.	*	1 73-74-76-Bro.-Sed.-3 Cpe.-4 Cpe,
C	122769	Front door hinge pillar trim retainer assembly-L.H.	*	1 73-74-76 Bro.-Sed.-3 Cpe.-4 Cpe.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
TRIM RAILS AND RETAINERS (Cont'd.)				
C 122772		Front door hinge pillar trim retainer assembly-R.H.	*	1 75-77 Bro.-Sed.-3 Cpe.-4 Cpe.
C 122773		Front door hinge pillar trim retainer assembly-L.H.	*	1 75-77 Bro.-Sed.-3 Cpe.-4 Cpe.
C 123430		Door hinge pillar trim retainer assembly-R.H.	*	1 71 Cv.Cpe.-Cv.Bro.
C 123431		Door hinge pillar trim retainer assembly-L.H.	*	1 71 Cv.Cpe.-Cv.Bro.
C 123438		Door hinge pillar trim retainer assembly-R.H.	*	1 72-73-74-75 Cv.Cpe.-Cv.Bro.
C 123439		Door hinge pillar trim retainer assembly-L.H.	*	1 72-73-74-75-Cv.Cpe.-Cv.Bro.
C 120928		Front door lock pillar trim retainer assembly	*	1 70 exc.Station, 71-72 exc.Conv., 73 Bs.Cpe., 78 All
C 120929		Front door lock pillar trim retainer assembly	*	1 70 exc.Station, 71-72 exc.Conv. 73 Bs.Cpe., 78 All
C 122776		Front door lock pillar trim retainer assembly-R.H.	*	1 75-77-Bro-Sed.-3 Cpe.-4 Cpe.
C 122777		Front door lock pillar trim retainer assembly-L.H.	*	1 75-77-Bru.-Sed.-3 Cpe.-4 Cpe.
C 122780		Front door lock pillar trim retainer assembly-R.H.	*	1 75-77 Bro.-Sed.-3 Cpe.-4 Cpe.
C 122781		Front door lock pillar trim retainer assembly-L.H.	*	1 75-77 Bro.-Sed.-3 Cpe.-4 Cpe.
C 123434		Door lock pillar trim retainer assembly-R.H.	*	1 71 Cv.Cpe.-Cv.Bro.
C 123435		Door lock pillar trim retainer assembly-L.H.	*	1 71 Cv.Cpe.-Cv.Bro.
C 123442		Door lock pillar trim retainer assembly-R.H.	*	1 72-73-74-75 Cv.Cpe.-Cv.Bro.
C 123443		Door lock pillar trim retainer assembly-L.H.	*	1 72-73-74-75 Cv.Cpe.-Cv.Bro.
C 120932		Front door bottom trim retainer assembly-R.H.	*	1 70 U Co.-U Cpe., 71 thru 75 exc. Sed., 76-77-78 Sed.
C 120933		Front door bottom trim retainer assembly-L.H.	*	1 70 U Co.-U Cpe., 71 thru 75 exc. Sed., 76-77-78 Sed.
C 120936		Front door bottom trim retainer assembly-R.H.	*	1 70 Panel-Cab-Cab Pu., 71 thru 75 Sed.
C 120937		Front door bottom trim retainer assembly-L.H.	*	1 70 Panel-Cab-Cab Pu., 71 thru 75 Sed
C 120940		Rear door hinge pillar trim retainer assembly-R.H.	*	1 71-72-78 Sed.
C 120941		Rear door hinge pillar trim retainer assembly-L.H.	*	1 71-72-78 Sed.
C 122784		Rear door hinge pillar trim retainer assembly-R.H.	*	1 73-74-76 Sed.
C 122785		Rear door hinge pillar trim retainer assembly-L.H.	*	1 73-74-76 Sed.
C 122788		Rear door hinge pillar trim retainer assembly-R.H.	*	1 75-77 Sed.
C 122789		Rear door hinge pillar trim retainer assembly-L.H.	*	1 75-77 Sed.
C 120946		Rear door lock pillar trim retainer assembly-R.H.	*	1 71-72-78 Sed.
C 120947		Rear door lock pillar trim retainer assembly-L.H.	*	1 71-72-78 Sed.
C 122792		Rear door lock pillar trim retainer assembly-R.H.	*	1 73-74-76 Sed.
C 122793		Rear door lock pillar trim retainer assembly-L.H.	*	1 73-74-76 Sed.
C 122794		Rear door lock pillar trim retainer assembly-R.H.	*	1 75-77 Sed.
C 122795		Rear door lock pillar trim retainer assembly-L.H.	*	1 75-77 Sed.
BO 120944		Rear door bottom trim retainer assembly-R.H.	*	1 71 thru 78 Sed.
BO 120945		Rear door bottom trim retainer assembly-L.H.	*	1 71 thru 78 Sed.

BODY BELT MOULDINGS

C 121790	Front end panel belt moulding-R.H.	} First type narrow moulding	*	1	73 exc.Bs.Cpe., 74, 75, 76, 77
C 121791	Front end panel belt moulding-L.H.		*	1	73 exc.Bs.Cpe., 74, 75, 76, 77
C 121792	Front door outside belt moulding-R.H.		*	1	73-74-75 Sed.
C 121793	Front door outside belt moulding-L.H.		*	1	73-74-75 Sed.
C 121794	Front door outside belt moulding-R.H.		*	1	73-74-75 Bro.-3 Cpe.-4 Cpe.-Cv.Cpe Cv.Bro., 76-77 Sed.
C 121795	Front door outside belt moulding-L.H.		*	1	73-74-75 Bro.-3 Cpe.-4 Cpe.-Cv. Cpe.Cv.Bro., 76-77
C 117144	Rear door outside belt moulding			2	73 thru 77 Sed.
C 117145	Quarter panel belt moulding			2	73 thru 77 Sed.
C 117146	Quarter panel belt moulding			2	73-74-75 Bro.
C 117147	Quarter panel belt moulding			2	73-74-75 3 Cpe.-4 Cpe.
C 123083	Quarter panel belt moulding		*	2	73-74-75 Cv.Cpe.-Cv.Bro.
BO 119021	Body belt moulding clip		AR		73 exc.Bs.Cpe., 74, 75, 76, 77

NOTE: The following parts are for second type wide moulding

C 124626	Front end panel belt moulding-R.H.	*	1	73 exc.Bs.Cpe., 74, 75, 76, 77
C 124627	Front end panel belt moulding-L.H.	*	1	73 exc.Bs.Cpe., 74, 75, 76, 77
C 124628	Front door outside belt moulding-R.H.	*	1	73-74-75 Sed.
C 124629	Front door outside belt moulding-L.H.	*	1	73-74-75 Sed.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
BODY BELT MOULDINGS (Cont'd.				
C	124632	Front door outside belt moulding-R.H	* 1	73-74-75 Bro.-3 Cpe.-4 Cpe.-Cv. Cpe.-Cv.Bro., 76-77 Sed.
C	124633	Front door outside belt moulding-L.H	* 1	'73-74-75 Bro.-3 Cpe.-4 Cpe.-Cv. Cpe.-Cv.Bro., 76-77 Sed.
C	124634	Rear door outside belt moulding	* 1	73 thru 77 Sed.
C	124640	Quarter panel belt moulding-R.H	* 1	73 thru 77 Sed.
C	124641	Quarter panel belt moulding-L.H	* 1	73 thru 77 Sed.
C	124636	Quarter panel belt moulding-R.H	* 1	73-74-75 Bro.
C	124637	Quarter panel belt moulding-L.H	* 1	73-74-75 Bro.
C	124644	Quarter panel belt moulding-R.H	* 1	73-74-75 3 Cpe.-4 Cpe.
C	124645	Quarter panel belt moulding-L.H	* 1	73-74-75 3 Cpe.-4 Cpe.
C	124648	Quarter panel belt moulding-R.H	* 1	73-74-75 Cv.Cpe.-Cv.Bro.
C	124849	Quarter panel belt moulding-L.H	* 1	73-74-75 Cv.Cpe.-Cv.Bro.
BO	124625	Front end panel belt moulding retainer	* 2	73 exc.Bs.Cpe., 74, 75, 76, 77
C	124630	Front door outside belt moulding retainer	* 2	73-74-75 Sed.
C	124631	Front door outside belt moulding retainer	* 2	73-74-75 Bro.-3 Cpe.-4 Cpe.-Cv. Cpe.-Cv.Bro., 76-77 Sed.
C	124635	Rear door outside belt moulding retainer	* 2	73 thru 77 Sed.
C	124642	Quarter panel belt moulding retainer-R.H	* 1	73 thru 77 Sed.
C	124643	Quarter panel belt moulding retainer-L.H	* 1	73 thru 77 Sed.
C	124638	Quarter panel belt moulding retainer-R.H	* 1	73-74-75 Bro.
C	124839	Quarter panel belt moulding retainer-L.H	* 1	73-74-75 Bro.
C	124646	Quarter panel belt moulding retainer-R.H	* 1	73-74-75 3 Cpe.-4 Cpe.
C	124647	Quarter panel belt moulding retainer-L.H	* 1	73-74-75 3 Cpe.-4 Cpe.
C	124650	Quarter panel belt moulding retainer-R.H	* 1	73-74-75 Cv.Cpe.-Cv.Bro.
C	124651	Quarter panel belt moulding retainer-L.H	* 1	73-74-75 Cv.Cpe.-Cv.Bro.
BO	170048	Body belt moulding screw	#8x3/8" * AR	73 exc.Bs.Cpe.,74, 75, 76, 77


DOOR ASSEMBLIES

NOTE: When ordering doors complete with trim,
order by description, giving serial number of car.


C	120240	Front door assembly-R.H.-skeleton	* 1	71 Bro., 70 U Co., 78 Sed.
C	120241	Front door assembly-L.H.-skeleton	* 1	71 Bro., 70 U Co., 78 Sed.
C	120252	Front door assembly-R.H.-skeleton	* 1	71 Sed., 70-78 Cab-Cab Pu-Panel
C	120253	Front door assembly-L.H.-skeleton	* 1	71 Sed., 70-78 Cab-Cab 2u-Panel
C	120264	Front door assembly-R.H.-skeleton	* 1	71 3 Cpe.-4 Cpe., 71-73 Bs.Cpe., 70 U Cpe.
C	120265	Front door assembly-L.H.-skeleton	* 1	71 3 Cpe.-4 Cpe. 71-73 Bs.Cpe. 70 U Cpe.
C	122596	Front door assembly-R.H.-skeleton	* 1	71 Cv.Cpe.,-Cv.Bro.
C	122597	Front door assembly-L.H.-skeleton	* 1	71 Cv.Cpe.,-Cv.Bro.
C	120246	Front door assembly-R.H.-skeleton	* 1	72-73-74-75 Bro., 76-77 Sed.
C	120247	Front door assembly-L.H.-skeleton	* 1	72-73-74-75 Bro., 76-77 Sed.
C	120258	Front door assembly-R.H.-skeleton	* 1	72-73-74-75 Sed.
C	120259	Front door assembly-L.H.-skeleton	* 1	72-73-74-75 Sed.
C	120270	Front door assembly-R.H.-skeleton	* 1	72-73-74-75 3 Cpe.-4 Cpe.
C	?20271	Front door assembly-L.H.-skeleton	* 1	72-73-74-75 3 Cpe.-4 Cpe.
C	122598	Front door assembly-R.H.-skeleton	* 1	72-73-74-75 Cv.Cpe.-Cv.Bro.
C	122599	Front door assembly-L.H.-skeleton	* 1	72-73-74-75 Cv.Cpe.-Cv.Bro.
C	120278	Rear door assembly-R.H.-skeleton	* 1	71-72-73-74-75 Sed.
C	120279	Rear door assembly-L.H.-skeleton	* 1	71-72-73-74-75 Sed.
C	123742	Rear door assembly-R.H.-skeleton	* 1	76-77-78 Sed.
C	123743	Rear door assembly-L.H.-skeleton	* 1	76-77-78 Sed.

DOOR LOCKS AND HANDLES

E-F-1	BO 120286	Door lock assembly-R.H.-front	* 1	All models except Station
	BO 120287	Door lock assembly-L.H.-front	* 1	All models except Station
	BO 120288	Door lock assembly-R.H.-rear	* 1	All sedans
	BO 120289	Door lock assembly-L.H.-rear	* 1	All sedans
	BO 124081	Door lock bolt spring	* 2-4	All models except Station
	BO 70091	Door lock to frame screw	1/4"-20x11/16"	2-4 All models except Station
	BO 18464	Door lock to frame screw	1/4"-20x5/8"	4-8 All models except Station

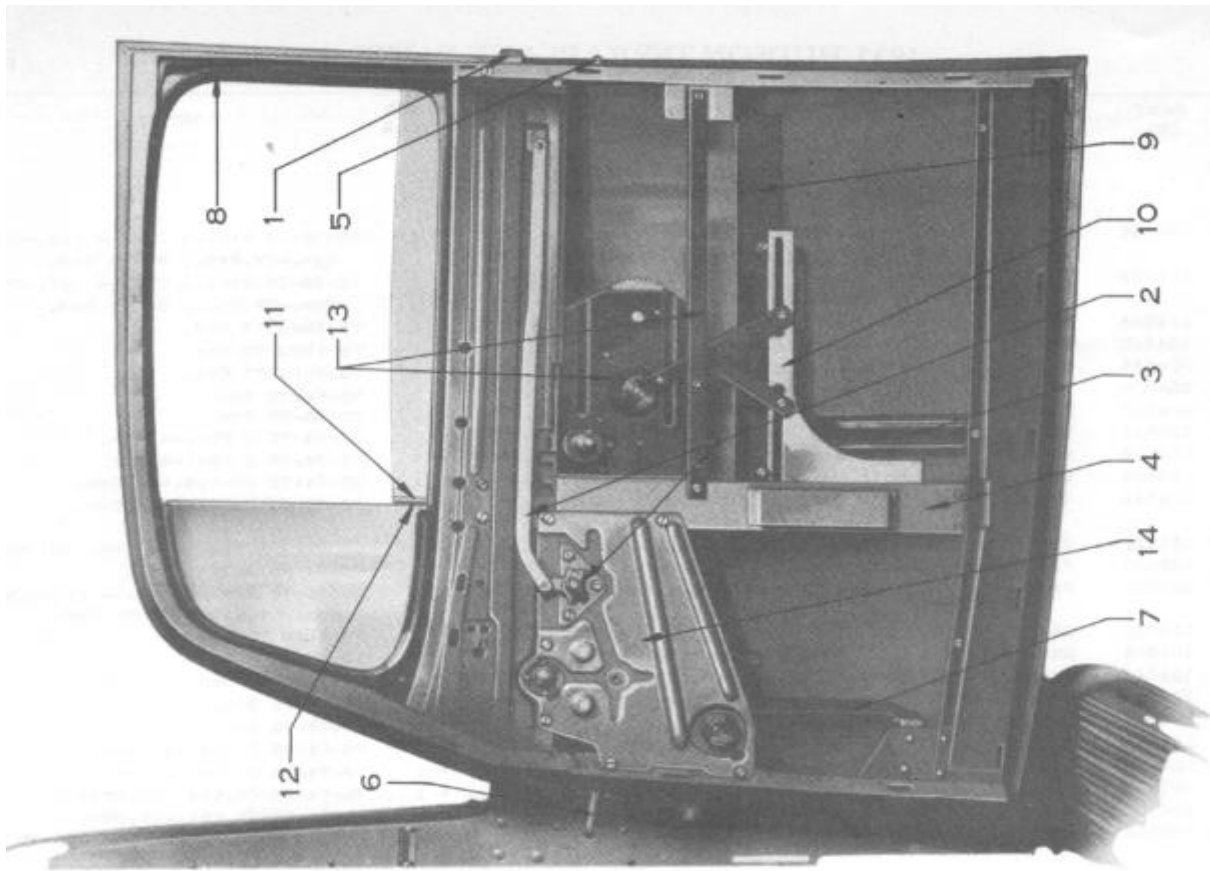

FRONT DOOR—Divided Type
Illustration F

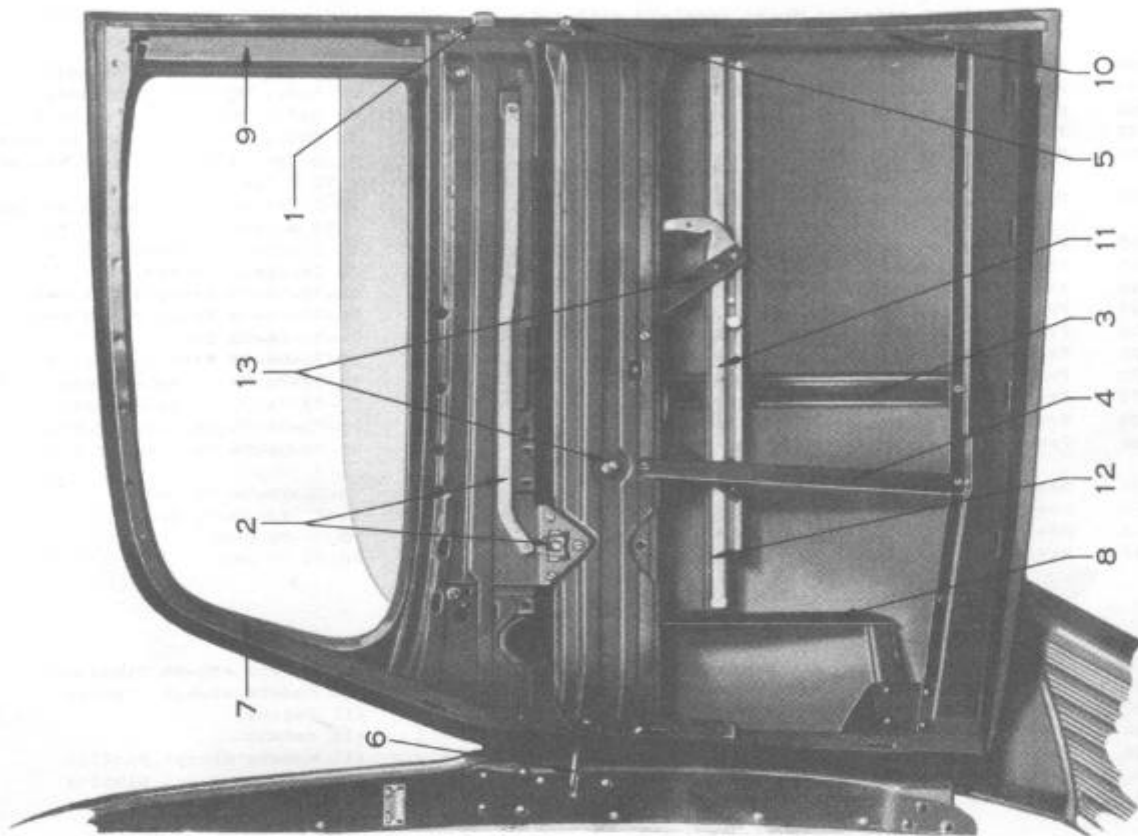

FRONT DOOR—71
Illustration E

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL		
E-F-2	DOOR LOCKS AND HANDLES (Cont'd.)					
	BO 120290	Front door lock remote control assembly-R.H	*	1	'71-74-75 Sed., '70-78 Panel-Cab-Cab Pu.	
	BO 120291	Front door lock remote control assembly-L.H	*	1	71-74-75 Sed., 70-78 Panel-Cab-Cab Pu.	
	BO 120878	Front door lock remote control assembly-R.H	*	1	72-73 Sed.	
	BO 120879	Front door lock remote control assembly-L.H	*	1	72-73 Sed.	
	BO 120496	Front door lock remote control assembly-R.H	*	1	71-74-75 except Sed., 76-77-78 Sed	
	BO 120497	Front door lock remote control assembly-L.H	*	1	71-74-75 except Sed.,76-77-78 Sed.	
	BO 120496	Front door lock remote control assembly-R.H	*	1	72-73-Cv.Cpe.-Cv.Bro.,70 U Co-U Cpe	
	BO 120497	Front door lock remote control assembly-L.H	*	1	72-73 Cv.Cpe-Cv.Bro.,70 U Co-U Cpe.	
	BO 120876	Front door lock remote control assembly-R.H	*	1	72-73 Bro.-3 Cpe.-4 Cpe.	
	80 120877	Front door lock remote control assembly-L.H	*	1	72-73 Bro.-3 Cpe.-4 Cpe.	
	BO 18464	Front door lock remote control attaching bolt	*	6	All models except Station	
	BO 120292	Rear door lock remote control assembly-R.H	*	1	All sedans	
	BO 120293	Rear door lock remote control assembly-L.H	*	1	All sedans	
	BO 18459	Rear door lock remote control attaching bolt	10-32x1/2"	6	All sedans	
	BO 71073	Rear door lock remote control attaching bolt nut	10-32x1/8"	6	All sedans	
	BO 122087	Door lock remote control spring washer		AR	All models except Station	
	BO 121836	Door inside handle	*	2-4	70 exc.Station, 71, 72, 78	
	BO 121840	Door inside handle	*	2-4	Hudson all models	
	BO 121838	Door inside handle escutcheon plate	*	2-4	70 except Station, 71-72-78	
	BO 121842	Door inside handle escutcheon plate	*	2-4	Hudson all models	
	BO 79709	Door inside handle escutcheon spring		2-4	All models except Station	
	BO 79308	Door inside handle pin		2-4	All models except Station	
	F 121830	Door outside handle and lock cylinder assembly	*	1	All models except Station	
	F 121831	Door outside handle (less cylinder)	*	1	All models except Station	
	BO 121845	Door outside handle cylinder and keys	*	1	All models	
	BO 121828	Door outside handle lock cylinder-blank	*	1	All models	
	BO 45988	Door lock key		2	All models	
	BO 121833	Door outside handle-front-L.H	*	1	All models except Station	
	BO 121834	Door outside handle-rear	*	2	All sedans	
	BO 70526	Door outside handle-to door screw	10-32x7/8"	4-8	All models except Station	
	BO 120579	Door handle escutcheon pad	Fiber	*	AR	All models except Station
	NOTE: For regulator handles, see WINDOW REGULATORS					
	DOOR HINGES					
	BO 120524	Front door hinge-upper-R.H.-door half	*	1	All models except station	
	BO 120525	Front door hinge-upper-L.H.-door half	*	1	All models except station	
	BO 120526	Front door hinge-upper-R.H.-body half	*	1	All models except station	
	BO 120527	Front door hinge-upper-L.H.-body half	*	1	All models except station	
	BO 120528	Front door hinge-lower-R.H.-door half	*	1	All models except station	
	BO 120529	Front door hinge-lower-L.H.-door half	*	1	All models except station	
	BO 120530	Front door hinge-lower-R.H.-body half	*	1	All models except station	
	BO 120531	Front door hinge-lower-L.H.-body	*	1	All models except station	
	BO 117512	Rear door hinge-upper-R.H.-door half		1	All sedans	
	BO 117513	Rear door hinge-upper-L.H.-door half		1	All sedans	
	BO 117514	Rear door hinge-upper-R.H.-body half		1	All sedans	
	BO 117515	Rear door hinge-upper-L.H.-body half		1	All sedans	
	BO 117518	Rear door hinge-lower-door half		2	All sedans	
	BO 117520	Rear door hinge-lower-body half		2	All sedans	
	BO 120532	Front door hinge pin	*	4	All models except station	
	BO 117524	Rear door hinge pin-upper		2	All sedans	
	BO 117525	Rear door hinge pin-lower		2	All sedans	
	BO 70870	Front door hinge rivet-door half	1/4"x11/16"Truss hd.	16	All models except station	
	BO 71307	Front door hinge rivet-body half	1/4"x3/4" Truss head	14	All models except station	
	BO 70870	Rear door hinge rivet-door half	1/4"x11/16"Truss head	6	All sedans	
	BO 70970	Rear door hinge rivet-door half lower	1/4"x5/8" Truss head	8	All sedans	
	BO 71307	Rear door hinge rivet-body half	1/4 x 3/4 Truss head	12	All sedans	

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
DOOR MISCELLANEOUS PARTS				
E-F-3	BO 120535	Front door panel strainer assembly	*	2 All models exc. Station
	BO 70890	Front door panel strainer upper finish washer #10Ctsk.	2	70-71-78 closed bodies exc. Station, 73 Bs.Cpe.
	BO 70323	Front door panel strainer bolt-upper 10-32x5/8"	2	All models exc. Station
	BO 18464	Front door panel strainer bolt-lower 1/4"-20x5/8"	2	All models exc. Station
	BZ 70874	Front door panel strainer bolt nut 1/4"-20x1/4"	2	All models exc. Station
E-4	BO 120299	Front door trimboard support	*	2 70-71-78 closed bodies exc. Station, 73 Bs.Cpe.
	BO 18447	Front door trimboard support lower bolt 10-32x5/8"	2	70-71-78 closed bodies exc. Station, 73 Bs.Cpe.
	BO 71073	Front door trimboard support lower nut 10-32x1/8"	2	71 thru 75 all models exc. Sed., 76-77-78 sed., 70 U Co-U Cpe.
	BO 121465	Front door bottom weatherstrip	*	2 71 thru '75 all models exc. Sed., 78-77 Sed., 70 U.Co-U. Cpe.
	BO 121466	Front door bottom weatherstrip	*	2 71 thru 75 Sedan, 70-78 Panel-Cab Cab Pu.
	BO 121467	Rear door bottom weatherstrip	*	2 All sedans
	BO 114850	Front door track assembly-R.H.	1	72 thru 77 exc.Cv.Bro.& Cv.Cpe.
	BO 114851	Front door track assembly-L.H.	1	72 thru 77 exc.Cv.Bro.& Cv.Cpe.
	BO 118874	Front door track assembly-R.H.	1	71 Cv.Cpe.& Cv.Bro.
	BO 118875	Front door track assembly-L.H.	1	71 Cv.Cpe.& Cv.Bro.
	BO 109428	Front door track assembly-L.H.	1	72-73-74-75 Cv.Cpe.& Cv.Bro.
	BO 109429	Front door track assembly-L.H.	1	72-73-74-75 Cv.Cpe.& Cv.Bro.
	BO 18484	Front door track support bolt 1/4"-20x5/8"	AR	71 Cv.Cpe.-Cv.Bro., 72 thru 77 All
	BO 114853	Front door track spring	2	72 thru 77 All models
	BO 114854	Front door track spring buffer	2	72 thru 77 All models
	80 70523	Front door track spring buffer rivet	16	72 thru 77 All models
F-4	BO 108796	Front door track reinforcement and trimboard support Assembly-L.H	1	71 Cv.Cpe.-Cv.Bro., 72 thru '77 All
	BO 108797	Front door track reinforcement and trimboard support Assembly-L.H	1	71 Cv.Cpe.-Cv.Bro., 72 thru 77 All
	BO 107214	Door bumper	4-8	All models exc. Cv.Cpe.
	BO 123695	Door bumper	*	4 Cv.Cpe.& Cv.Bro.
	BO 75152	Door bumper retainer	4-8	All models exc. Cv.Cpe.
	BO 70865	Door bumper retainer screw 1/4"-20x9/18"	4-8	All models exc. Cv.Cpe.
E-F-5	BO 94870	Door dovetail-male	2-4	All models exc. Station
	BO 94541	Door dovetail tapping plate	2-4	All models exc. Station
	BO 120510	Door dovetail plate retainer	*	2-4 All models exc. Station
	BO 70079	Door dovetail plate retainer rivet 9/64"x3/16" Tubular	4-8	All models exc. Station
	BO 70853	Door dovetail to plate screw 1/4"-28x9/18"	4-8	All models exc. Station
	BO 94831	Door dovetail pocket complete	2-4	All models
	90 94834	Door dovetail cushion	4-8	All models
	BO 94833	Door dovetail cushion retainer spring	2-4	All models
	BO 170023	Door dovetail pocket to pillar screw 1/4"-28x1/2"	*	4-8 All models
	BO 120514	Door lock striker plate	*	2-4 All models
	BO 98855	Door lock striker plate felt	*	2-4 All models
	BO 120515	Door lock striker plate tapping plate	*	2-4 All models
	BO 170023	Door lock striker plate screw 1/4"-28x1/2"	*	4-8 All models
	BO 18475	Door lock striker plate screw lockwasher 1/4"Ctsk.	4-8	All models
	BO 94115	Front door check strap bracket (on door)	2	All models except Station
	BO 94115	Lear door check strap bracket (on body)	2	All sedans
E-F-6	BO 119248	Front door check strap	2	All models
	BO 118616	Rear door check strap	2	All models
	BO 120518	Front door check guide and bumper assembly	*	2 All models
	BO 107170	Lear door check guide	2	All sedans
	BO 107179	Front door check strap bumper	2	All models
	BO 109091	Rear door check bumper	2	All sedans
	BZ 18389	Door check bumper rivet 9/64"x3/8"	4-8	All models
	BO 98089	Door check anti-rattle spring	2-4	All. models
	BZ 8998	Door check to bracket clevis pin 1/4"x5/8"	2-4	All models
	BO 18459	Door check guide attaching screw 10-32x1/2"	AR	All models
	BO 114660	Door anti-rattler	2	Cv.Cpe.-Cv.Bro.
	BO 71527	Door anti-rattler sheet metal screw #6x3/8 oval head	2	Cv.Cpe.-Cv.Bro.
	C 122104	Front door trim panel bottom moulding-L.H	*	1 75 3 Cpe.-4 Cpe.-Cv.Cv.Bro., 77 Sed.
	C 122105	Front door trim panel bottom moulding-L.H	*	1 75 3 Cpe.-4 Cpe.-Cv.Cpe.-Cv.Bro., 77 Sed.
	C 122106	Front door trim panel bottom moulding-L.H *	1	75 Sed.
	C 122107	Front door trim panel bottom moulding-L.H	*	1 75 Sed.
	C 122108	Lear door trim panel bottom moulding	*	2 75-77 Sed


ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
DOOR MISCELLANEOUS PARTS (Cont'd.)				
	BO 122710	Door opening weatherstrip-upper	* 2	71 thru 75 Bro.-3 Cpe.-4 Cpe.-Bs. Cpe.,70 U Co.& U Cpe.
	BO 122712	Door opening weatherstrip-upper	* 2	71 thru 75 Sed.
	BO 122714	Door opening weatherstrip-upper	* 2	76-77-78 Sed.
	BO 122718	Door opening weatherstrip-upper	* 2	Cab-Cab Pu.
	BO 122736	Door opening weatherstrip-upper	* 2	Panel-Station
	BO 123717	Door opening weatherstrip-upper	* 2	Cv.Cpe.-Cv.Bro.
	BO 122716	Door opening weatherstrip-lower front-R.H.	* 1	All closed models
	BO 122717	Door opening weatherstrip-lower front-L.H.	* 1	All closed models
	C 121478	Door opening weatherstrip retainer-lower-R.H.	* 1	All closed models
	C 121479	Door opening weatherstrip retainer-lower-L.H.	* 1	All closed models
	BO 123688	Door opening weatherstrip-lower-L.H.	* 1	All models
	BO 123889	Door opening weatherstrip-lower-L.H.	* 1	All models
	C 121476	Door opening weatherstrip retainer-upper-L.H.	* 1	Bro.-U Co.-U Cpe.,71-73 Bs.Cpe., 76-77-78 Sed.
	C 121477	Door opening weatherstrip retainer-upper-L.H.	* 1	Bro.-U Co.-U Cpe.,71-73 Bs.Cpe., 78-77-78 Sed.
	C 121472	Door opening weatherstrip retainer-upper-R.H.	* 1	71 thru 75 Sed.,70-78-Cab-Cab Pu.
	C 121473	Door opening weatherstrip retainer-upper-L.H.	* 1	71 thru 75 Sed.,70-78 Cab-Cab Pu.
	C 121474	Door opening weatherstrip retainer-upper-L.H.	* 1	3 Cpe.-4 Cpe.
	C 121475	Door opening weatherstrip retainer-upper-L.H.	* 1	3 Cpe.-4 Cpe.
	C 121462	Door opening weatherstrip retainer-upper-R.H.	* 1	70 Panel
	C 121463	Door opening weatherstrip retainer-upper-L.H.	* 1	70 Panel
	C 114654	Lear door opening weatherstrip retainer-L.H.	1	All sedan
	C 114655	Rear door opening weatherstrip retainer-L.H.	1	All sedan
	BO 70733	Door opening weatherstrip retainer drive screw #6x7/16"	AR	All models

**FRONT DOOR WINDOW-SLIDING TYPE
70-71-78**


	BO 114960	Front door hinge pillar glass run channel and bracket assembly-R.H.	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 114961	Front door hinge pillar glass run channel and bracket assembly-L.H.	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 18447	Front door hinge pillar glass run channel lower bolt	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 71073	Front door hinge pillar glass run channel lwr.bolt nut	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
E-7	C 112765	Front door hinge pillar glass run assembly-upper	2	71 Sed.,70-78 Panel-Cab-Cab Pu.
	C 112767	Front door hinge pillar glass run assembly-upper	2	71 Bro.& Cpes.,73 Bs.Cpe.,70 U Co. & U Cpe.,78 Sed.
E-8	BO 114971	Front door hinge pillar glass run-lower	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 71369	Front door hinge pillar glass sheet metal screw 4x3/8"	4	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 112755	Front door hinge pillar glass run cushion-short	4	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 18353	Front door hinge pillar glass run cushion-rivet 9/64"x5/16"	8	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 114968	Front door lock pillar glass run and channel assy.R.H.	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 114969	Front door lock pillar glass run and channel assy.L.H.	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
E-9	BO 112768	Front door lock pillar glass run-upper	2	71 Bro.& Sed.,70-78 Panel-Cab-Cab-Pu, 70 U Co.,78 Sed.
	BO 112769	Front door lock pillar glass run-upper	2	71 Cpes.,73 Bs.Cpe.,70 U Cpe.
	BO 70814	Front door lock pillar glass run-upper-screw 10-32x1/2"	2-4	All models except Station
E-10	BO 114970	Front door lock pillar glass run-lower	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 75261	Front door glass run clip	AR	All closed models
	BO 70042	Front door glass run clip rivet 9/64"x1/4"	AR	All closed models

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT DOOR WINDOW-SLIDING TYPE (Cont'd.)				
70-71-78				
	BO 109434	Door glass run channel-front-R.H.	1	Cv.Cpe.-Cv.Bro.
	BO 109435	Door glass run channel-front-L.H.	1	Cv.Cpe.-Cv.Bro.
	BO 70323	Door glass run channel bolt-upper 10-32x5/8" Spec. Head	2	Cv.Cpe.-Cv.Bro.
	BO 18447	Door glass run channel bolt-lower 10-32x5/8" Rd.Head	2	Cv.Cpe.-Cv.Bro.
	BO 71073	Door glass run channel bolt nut 10-32x1/8"	2	Cv.Cpe.-Cv.Bro.
	BO 122522	Door glass run channel assembly-rear-L.H.	*	1 Cv.Cpe.-Cv.Bro.
	BO 122523	Door glass run channel assembly-rear-L.H.	*	1 Cv.Cpe.-Cv.Bro.
	BO 18451	Door glass run channel bolt-rear 10-32x13/32"	6	Cv.Cpe.-Cv.Bro.
	90 120588	Front door glass rest channel assembly-R.H.	*	1 71 Bro.& Cpes.,73 Bs.Cpe.,70 U Co. & U Cpe.,78 Sed.
	BO 120589	Front door glass rest channel assembly-L.H.	*	1 71 Bro.& Cpes.,73 Bs.Cpe.,70 U Co. & U Cpe., 70 Sed.
E-11	BO 120590	Front door glass rest channel assembly-R.H.	*	1 71 Sed.,70-78 Panel-Cab-Cab Pu.
	BO 120591	Front door glass rest channel assembly-L.H.	*	1 71 Sed.,70-78 Panel-Cab-Cab Pu.
	BO 114992	Front door glass rest channel weatherseal-R.H.	1	71 Bro.& Cpes.,73 Bs.Cpe.,70 U Co. & U Cpe.,78 Sed.
	BO 114993	Front door glass rest channel weatherseal-L.H.	1	71 Bro.& Cpes.,73 Bs.Cpe.,70 U Co. & U Cpe.,78 Sed.
E-12	90 114994	Front door glass rest channel weatherseal-R.H.	1	71 Sed.,70-78 Panel-Cab-Cab Pu.
	90 114995	Front door glass rest channel weatherseal-L.H.	1	71 Sed.,70-78 Panel-Cab-Cab Pu.
	C 118664	Door glass rest channel assembly-R.H.	1	71 Cv.Cpe.-Cv.Bro.
	C 118665	Door glass rest channel assembly-L.H.	2	71 Cv.Cpe.-Cv.Bro.
	BO 118666	Door glass to rest channel weatherseal	1	71 Cv.Cpe.-Cv.Bro.
	C 118658	Door glass frame assembly-R.H.	1	71 Cv.Cpe.-Cv.Bro.
	C 118859	Door glass frame assembly-L.H.	2	71 Cv.Cpe.-Cv.Bro.
	BO 109223	Door window glass bumper-outer	2	All closed models exe.Station
	BO 96485	Door window glass bumper	2	Sedan-Cv.Cpe.-Cv.Bro.
	BO 120604	Front door window glass cushion	*	2 70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 70818	Front door window glass cushion sheet metal screw	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 70890	Front door window glass cushion screw finish washer	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 71872	Front door window glass cushion screw speed nut	2	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 122524	Door window glass stop-upper	*	2 Cv.Cpe.-Cv.Bro.
	BO 18464	Door window glass stop-upper-bolt 1/4-20x5/8"	2	Cv.Cpe.-Cv.Bro.
	BO 117491	Front door window belt weatherstrip-inner	2	71 Bro.-Cpes.,70 U Co.-U Cpe.,73 Bs.Cpe.
	BO 117492	Front door window belt weatherstrip-inner	2	71 Sed.,70-78 Cab-Cab Pu-panel
	BO 117387	Front door window belt weatherstrip-inner	2	71 Cv.Cpe.-Cv.Bro.
	BO 118792	Front door window belt weatherstrip-outer-L.H.	1	71 Cv.Cpe.,Cv.Bro.
	BO 118793	Front door window belt weatherstrip-outer-L.H.	1	71 Cv.Cpe.,Cv.Bro.
	BO 119112	Door window belt weatherstrip assembly-front-outer	2	72-73-74-75 Cv.Cpe.-Cv.Bro.
	BO 170032	Door window belt weatherstrip screw #6x3/8"	*	AR All models except Station
	BO 71302	Door window belt weatherstrip screw #8x1/2"	20	Cv.Cpe.-Cv.Bro.
FRONT DOOR WINDOW-DIVIDED TYPE				
72-73-74-75-76-77				
F-7	C 108025	Front door hinge pillar glass run channel assembly-R.H.	1	72 thru 77 closed models exc.Bs.Cpe.
	C 108026	Front door hinge pillar glass run channel assy.-L.H...	1	72 thru 77 closed models exc.Bs.Cpe.
	BO 18451	Front door hinge pillar glass run channel bolt-upper..	2	72 thru 77 closed models exc.Bs.Cpe.
	BO 18447	Front door hinge pillar glass run channel bolt-lower..	2	72 thru 77 closed models exc.Bs.Cpe.
	80 71073	Front door hinge pillar glass run channel bolt nut	2	72 thru 77 closed models exc.Bs.Cpe.
F-8	C 112689	Front door glass run assembly	2	72-73-74-75 Bro.,76-77 Sed.
	C 112685	Front door glass run assembly	2	72-73-74-75 Sed.
	C 112891	Front door glass run assembly	2	72-73-74-75 3 Cpe.-4 Cpe.
	BO 75261	Front door glass run clip	AR	All closed models
	BO 70042	Front door glass run clip rivet 9/64"x1/4"	AR	All closed models
	BO 71369	Front door glass run sheet metal screw #4x3/8"	AR	All closed models

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT DOOR WINDOW-DIVIDED TYPE (Cont'd.)				
72-73-74-75-76-77				
BO 109434	Door window glass run channel-front-R.H		1	Cv.Cpe.-Cv.Bro.
BO 109435	Door window glass run channel-front-L.H		1	Cv.Cpe.-Cv.Bro.
BO 70323	Door window glass run channel-bolt-upper	10-32x5/8"-Spec.Head	2	Cv.Cpe.-Cv.Bro.
BO 18447	Door window glass run channel bolt-lower	10-32x5/8" Rd.Head	2	Cv.Cpe.-Cv.Bro.
BO 71073	Door window glass run channel bolt nut	10-32x1/8"	2	Cv.Cpe.-Cv.Bro.
80 122522	Door window glass run channel assembly-rear-R.H		*	1
BO 122523	Door window glass run channel assembly-rear-L.H		*	1
BO 18451	Door window glass run channel bolt-rear	10-32x13/32"	6	Cv.Cpe.-Cv.Bro.
BO 109424	Door window glass run-center-R.H		1	72-73-74-75 Cv.Cpe.-Cv.Bro.
PO 109425	Door window glass run-center-L.H		1	72-73-74-75 Cv.Cpe.-Cv.Bro.
PO 1636	Door window glass run to wing cradle screw	8-32x1/2"	8	72-73-74-75 Cv.Cpe.-Cv.Bro.
BO 107814	Front door glass rest channel and brace assy.-R.H		1	72 thru 75 Bro.-3 Cpe.-4 Cpe., 76-77 Sed.
BO 107815	Front door glass rest channel and brace assy.-L.H		1	72 thru 75 Bro.-3 Cpe.-4 Cpe., 76-77 Sed.
BO 107816	Front door glass rest channel and brace assy.-R.H		1	72 thru 75 Sed.
BO 107817	Front door glass rest channel and brace assy.-L.H		1	72 thru 75 Sed.
BO 111172	Front door glass rest channel weatherseal		2	72 thru 75 Bro.-3 Cpe.-4 Cpe., 76-77 Sed.
BO 111173	Front door glass rest channel weatherseal		2	72 thru 75 Sed.
BO 109316	Door glass rest channel and brace assy.-R.H		1	72 thru 75 Cv.Cpe.-Cv.Bro.
BO 109317	Door glass rest channel and brace assy.-L.H		1	72 thru 75 Cv.Cpe.-Cv.Bro.
BO 109414	Door glass frame		2	72 thru 75 Cv.Cpe.-Cv.Bro.
BO 114643	Door glass rest channel weatherseal		2	72 thru 75 Cv.Cpe.-Cv.Bro.
BO 107836	Front door glass cantilever support assy.-R.H		1	72 thru 77 All models exc.73 Bs.Cpe.
BO 107837	Front door glass cantilever support assy.-L.H		1	72 thru 77 All models exc.73 Bs.Cpe.
BO 18464	Front door glass rest channel to support bolt	1/4-20x5/8"	4	.72 thru 77 all models exc.73 Bs.Cpe.
BO 109366	Front door glass weatherstrip channel assy.-R.H		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 109367	Front door glass weatherstrip channel assy.-L.H		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 108508	Front door glass weatherstrip		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 71377	Front door glass weatherstrip channel to rest channel screw		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 109142	Front door glass channel guide pad-outer		4	72 thru 77 all closed models exc. 73 Bs.Cps.
BO 109143	Front door glass channel guide pad-inner-R.H		2	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 109144	Front door glass channel guide pad-inner-L.H		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 70304	Front door glass channel guide pad screw 10-32x3/4"		1	72 thru 77 all closed models exc. 73 Bs.Cpe.
BO 70690	Front door glass channel guide pad screw countershaft washer		4	72 thru '77 all closed models exc. 73 Bs.Cpe.
BO 71073	Front door glass channel guide pad screw nut	10-32x1/8"	4	72 thru 77 all models
BO 109223	Front door glass bumper-outer		2	All closed models exc.Station
BO 96485	Door window glass bumper		2	All sedans,71 Cv.Cpe.& Cv.Bro.
BO 109431	Door glass stop-lower		2	72 thru 75 Cv.Cpe.& Cv.Bro.
BO 18464	Door glass stop-lower-to track bolt	1/4"-20x5/8"	4	72 thru 75 Cv.Cpe.& Cv.Bro.
BZ 70874	Door glass stop-lower to track bolt nut	1/4"-20x1/4"	4	72 thru 75 Cv.Cpe.& Cv.Bro.
BO 112524	Door glass stop-upper		2	Cv.Cpe.-Cv.Bro.
BO 18464	Door glass stop-upper-bolt	1/4"-20x5/8"	4	Cv.Cpe.-Cv.Bro.

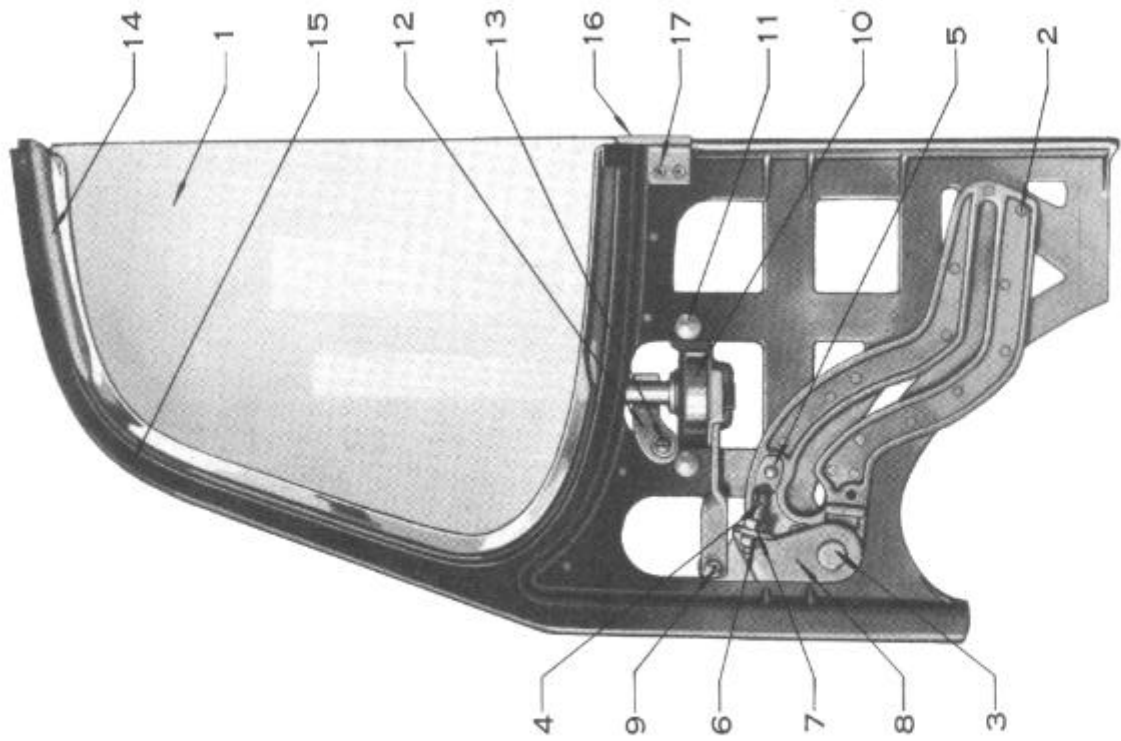

FRONT DOOR WING—Disappearing Type

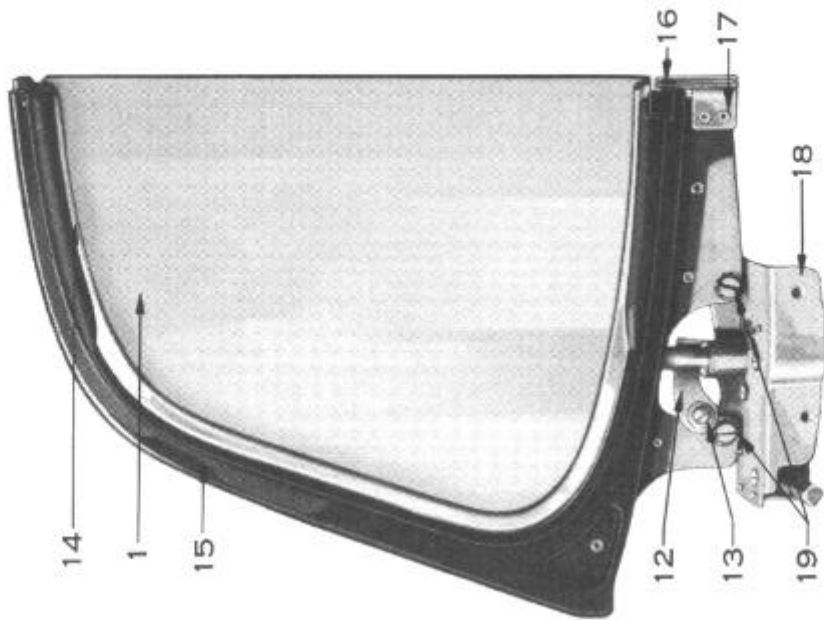

FRONT DOOR WING—Terraplane

Illustration G

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT DOOR WINDOW-DIVIDED TYPE (Cont'd.)				
	BO 117387	Front door window belt weatherstrip-inner	2	72 thru 75 Bro.-3 Cpe.-4 Cv. Cpe.-Cv.9ro.,76-77 Sed.
	BO 117386	Front door window belt weatherstrip-inner	2	'72 thru 75 Sed.
	BO 118796	Front door window belt weatherstrip-outer front	2	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 118794	Front door window belt weatherstrip-outer rear-R.h.	1	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 118795	Front door window belt weatherstrip-outer rear-L.H	1	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 170032	Front door window belt weatherstrip screw #6x3/8" *	AR	All models except Station
	BO 71302	Front door window belt weatherstrip screw #8x1/2"	20	Cv.Cpe.-Cv.Bro.
FRONT DOOR WING				
	BO 123028	Wing cradle complete-R.H.-with glass	Inc. regulator *	1 72-73 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 123029	Wing cradle complete-L.H.-with glass	Inc. regulator *	1 72-73 Bro.-Bed.-3 Cpe.-4 Cpe.
	BO 111752	Wing cradle complete-R.H.-with glass	1	74 thru 77 all closed models
	BO 111753	Wing cradle complete-L.H.-with glass	1	74 thru 77 all closed models
	BO 111763	Wing cradle complete-R.H.-with glass	1	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 111764	Wing cradle complete-L.H.-with glass	1	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 111754	Wing cradle complete-R.H.-with glass	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 111755	Wing cradle complete-L.H.-less glass	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 124536	Wing cradle and weatherstrip assembly-R.14	1	72-73-Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 124537	Wing cradle and weatherstrip assembly-L.H	1	72-73 Bro.-Sed.-3 Cpe.-4 Cpe.
G-1	BO 108522	Wing glass and frame assembly-R.H	1	72 thru 77 Bro.-Bed.-3 Cpe.-4 Cpe.
	BO 108523	Wing glass and frame assembly-L.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 109392	Wing glass and frame assembly-R.H	1	72 thru 75 Cv.Cpe.-Cv.Bro.
	BO 109393	Wing glass and frame assembly-L.H	1	72 thru 75 Cv.Cpe.-Cv.Bro.
	BO 109446	Wing cradle and channel assembly-R.H	1	72 thru 75 Cv.Cpe.-Cv.Bro.
	BO 109447	Wing cradle and channel assembly-L.H	1	'72 thru 75 Cv.Cpe.-Cv.Bro.
	BO 109430	Wing cradle channel and roller assembly	1	72 thru '75 Cv.Cpe.-Cv.Bro.
	BO 71418	Wing cradle channel and roller to cradle rivet 5/32"x5/8"	6	72 thru 75 Cv.Cpe.-Cv.Bro.
G-2	BO 108907	Wing pivot screw	2	72 thru 77 all models exc.Bs.Cpe.
	BO 108510	wing upper pivot shim-thin	AR	72 thru 77 all models exc.Bs.Cpe.
	BO 108511	wing upper pivot shim-thick	AR	72 thru 77 all models exc.Bs.Cpe.
	BO 108500	Wing operating cam-R.H	1	72-73 Cv.Cpe.& Cv.Bro.,74 thru 77 All
G-3	BO 108501	Wing operating cam-L.H	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 108516	Wing cam to cradle pin	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-4	BO 108513	Wing cam adjusting stud	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-5	BO 6536	Wing cam adjusting stud to cam rivet 3/16"x1/2"Ctsk.	2	72-73Cv.Cpe.&Cv.Bro,74 thru '77 All
G-6	BO 71398	Wing cam adjusting stud lock nut 1/4"-28x7/32"	4	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-7	BZ 70673	Wing cam adjusting stud lock washer 1/4" Plain	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-8	BO 108518	Wing operating lever-R.H	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 108519	Wing operating lever-L.H	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-9	BO 108517	Wing regulator stop-R.H.-upper	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 111022	Wing regulator stop-L.H.-upper	1	72-73Cv.Cpe.&Cv.8ro,74 thru 77 All
	BO 111023	Wing regulator stop to cam screw 10-32x5/16"	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 71533	Wing regulator stop to cam screw lockwasher- 3/16"Ctsk	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 70681	Wing brake assembly-R.H	2	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-10	BO 109245	Wing brake assembly-L.H	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 109246	Wing brake to cradle rivet 1/4"x7/16"	1	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
G-11	BO 71386	Wing cushion	4	72-73Cv.Cpe.&Cv.Bro,74 thru 77 All
	BO 108515	Wing cushion *	2	72-73Cv.Cpe.&Cv.Bro.74 thru 77 All
	BO 123514	Wing shaft friction spring-R.H	2	72-73 Bro.-Sed.-3 Cpe.-4 Cpe.
G-12	BO 109092	Wing shaft friction spring-L.H	1	72 thru 77 all except Bs.Cpe.
	BO 109093	Wing shaft friction spring screw 10-32x3/8"	1	72 thru 77 all except Bs.Cpe.
G-13	BM 70855	Wing weatherstrip-R.H	2	72 thru 77 all except Bs.Cpe.
G-14	BO 108174	Wing weatherstrip-L.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 108175	Wing weatherstrip-R.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 109426	Wing weatherstrip-L.H	1	72 thru 75 Cv.Cpe.& Cv.Bro.
	BO 109427	Wing weatherstrip retaining pin	1	72 thru 75 Cv.Cpe.& Cv.Bro.
G-15	BO 111884	Wing cradle weatherstrip-R.H.-outside	2	72 thru 77 all exc.Bs.Cpe.
	BO 112894	Wing cradle weatherstrip-L.H.-outside	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 112865	Wing weatherstrip former-R.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
G-16	BO 108502	Wing weatherstrip former-L.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 108503	Wing brake assembly-R.H	1	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
G-17	BO 71444	Wing weatherstrip former to cradle rivet-9/64"x9/32" Oval Head	4	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 71444	Wing cradle weatherstrip rivet 9/64"x9/32" Oval Head	4	72 thru 77 Bro.-Sed.-3 Cpe.-4 Cpe.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
REAR D00R WINDOW				
	BO 107172	Rear door hinge pillar glass run channel assy.-R.H	1	All sedans
	BO 107173	Rear door hinge pillar glass run channel assy.-L.H	1	All sedans
	BO 120284	Rear door lock pillar glass run channel assy.-R.H	* 1	All sedans
	BO 120285	Rear door lock pillar glass run channel assy.-L.H	* 1	All sedans
	BO 112687	Rear door window glass run assembly	2	All sedans
	BO 75261	Rear door window glass run clip	4	All sedans
	BO 70042	Rear door window glass run clip rivet 9/64x1/4 Oval Hd	4	All sedans
	BO 71369	Rear door window glass run sheet metal screw. 4x3/8"	8	All sedans
	BO 120198	Rear door glass rest channel and guide assy.-R.H	* 1	All sedans
	BO 120199	Rear door glass rest channel and guide assy.-L.H	* 1	All sedans
	BO 111174	Rear door glass rest channel weatherseal	2	All sedans
	BO 109223	Rear door glass bumper-outer	4	All sedans
	BO 96485	Rear door glass bumper	2	All sedans
	BO 117494	Rear door window belt weatherstrip-inner	2	All sedans
WINDOWS-QUARTER AND REAR				
	C 120892	Quarter window frame assembly-R.H	* 1	Bro.-U Co.
	C 120893	Quarter window frame assembly-L.H	* 1	Bro.-U Co.
	C 120822	Quarter window frame assembly.-R.H	* 1	Sedan
	C 120823	Quarter window frame assembly-L.H	* 1	Sedan
	BZ 70957	Quarter window frame bolt 1/4"-20x1-3/4"	AR	Bro.-Sed.-U Co.
	BZ 70874	Quarter window frame nut 1/4"-20x1/4"	2	Bro.-U Co.
	BO 86272	Quarter window frame countersunk washer	AR	Bro.-Sed.-U Co.
	BO 120829	Quarter window glass channel assembly-lower	* 2	Sedan
	BO 116915	Quarter window glass rest channel assembly	2	Bro.-U Co.
	BO 116926	Quarter window glass rest channel weatherseal	2	Bro.-U Co.
	BO 116920	Quarter window glass run	2	Bro.-U Co.
	BO 120848	Quarter window glass bumper	* 2	Bro.-U Co.
	BO 99542	Quarter window glass bumper-outer	4	Bro.-U Co.
	BO 117493	Quarter window belt weatherstrip assembly	2	Bro.
	BO 120840	Quarter window weatherstrip-inner	* 2	Sedan
	BO 120842	Quarter window weatherstrip-outer-R.H	* 1	sedan
	BO 120843	Quarter window weatherstrip-outer-L.H	* 1	Sedan
	BO 116452	Quarter window weatherstrip	2	Coupees
	BO 120847	Quarter window weatherstrip-outer-attaching plate	* 14	Sedan
	BO 71302	Quarter window weatherstrip attaching screw 8x1/2"	20	Sedan
	C 119912	Quarter window drain trough assembly-R.H	1	Bro.-U Co.
	C 119913	Quarter window drain trough assembly-L.H	1	Bro.-U Co.
	C 121888	Quarter window drain trough assembly-R.H	* 1	Sedan
	C 121889	Quarter window drain trough assembly-L.H	* 1	Sedan
	C 118594	Quarter window opening blind assembly-R.H	1	70 U Co.
E-13	C 118595	Quarter window opening blind assembly-L.H	1	70 U Co.
	BO 111057	Quarter window opening blind bracket	4	70 U Co.
	BO 71408	Quarter window opening blind bracket rivet 9/64x1/4"	4	70 U Co.
	BO 120700	Rear window weatherstrip	* 1	71 thru 77 closed models, 70 U Co.-U Cpe., 78 Sed.
F-13	BO 118841	Rear window weatherseal	1	70-78 Cab-Cab Pu.
WINDOW REGULATORS				
	20 112752	Front door window regulator assembly-R.H	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 112753	Front door window regulator assembly-L.H	1	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 111072	Front door window regulator assembly-R.H	1	72 thru 75 Bro.-2 Cpe.-4 Cpe, 76-77 Sed.
	BO 111073	Front door window regulator assembly-L.H	1	72 thru 75 Bro.-2 Cpe.-4 Cpe., 76-77 Sed.
	BO 111074	Front door window regulator assembly-R.H	1	72 thru 75 Sed.
	BO 111075	Front door window regulator assembly-L.H	1	72 thru 75 Sed.
	BO 109462	Front door window regulator assembly-R.H	1	71 thru 75 Cv.Cpe.-Cv.Bro.
	BO 109463	Front door window regulator assembly-L.H	1	71 thru 75 Cv.Cpe.-Cv.Bro.
	BM 70484	Front door window regulator attaching bolt	6	70-71-78 closed models exc.Station, 73 Bs.Cpe.
	BO 18464	Front door window regulator attaching bolt	AR	All models exc.Station
	BZ 70874	Front door window regulator attaching bolt nut	AR	All models exc.Station

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
WINDOW REGULATORS (Cont'd.)				
	BZ 71316	Front door window regulator spacing washer	2	72 thru 77 All models exc.Ps.Cpe
G-18	BO 120960	Front door wing regulator assembly-R.H	*	1 72-73 Bro.-Sed.-2 Cpe.-4 Cpe.
	BO 120961	Front door wing regulator assembly-L.H	*	1 72-73 Bro.-Sed.-3 Cpe.-4 Cpe.
F-14	BO 120196	Front door wing regulator assembly-R.H	*	1 72-73 Cv.Cpe.-Cv.Bro.,74 thru 77A11
	BO 120197	Front door wing regulator assembly-L.9	*	1 72-73 Cv.Cpe.-Cv Bro,74 thru 77 All
G-19	BO 18464	Front door wing regulator attaching bolt. 1/4"-20x5/8"	AR	72 thru 77 All models exc.Bs.Cpe.
	BO 120498	Rear door window regulator assembly-R.H	*	1 Sedan
	BO 120499	Rear door window regulator assembly-L.H	*	1 Sedan
	BO 70865	Rear door window regulator attaching bolt 1/4"-20x9/16 "	8	Sedan
	BO 112597	Quarter window regulator assembly-R.H	1	Pro.-U Co.
	BO 112598	Quarter window regulator assembly-L.9	1	Bro.-V Co.
	80 120839	Quarter window regulator assembly	2	Sedan
	80 117423	Quarter window regulator rubber spring	2	Sedan
	BO 124181	Quarter window regulator rubber spring retainer	2	Sedan
	BZ 18218	Quarter window regulator attaching screw 1/4"-20x5/8"	4	Sedan
	BO 86272	Quarter window regulator attaching screw washer	4	Sedan
	BO 71500	Quarter window regulator to channel screw 12-28x3/8"	4	Sedan
	BO 121837	Front door window regulator handle assembly	*	2 70-71-72-78 All exc. Station
	BO 121841	Front door window regulator handle assembly	*	2 73 thru 77 All
	BO 121843	Front door wing regulator handle assembly	*	2 72 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 121844	Front door wing regulator handle assembly	*	2 73 Bro.-Sed.-3 Cpe.-4 Cpe.
	BO 121837	Front door wing regulator handle assembly	*	2 72 Cv.Cpe.-Cv.Bro.
	BO 121839	Front door wing regulator handle assembly	*	2 73 Cv.Cpe.-Cv.Bro,71 thru 77 All
	BO 121837	Rear door window regulator handle assembly,	*	2 71-72-78 Sed.
	BO 121841	Rear door window regulator handle assembly	*	2 73 thru 77 Sedan
	BO 121837	Quarter window regulator handle assembly	*	2 71-72 Bro.
	80 121841	Quarter window regulator handle assembly	2	73-74-75 Bro.
	BO 121843	Quarter window regulator handle assembly	*	2 71-72-78 Sed.
	BO 121844	Quarter window regulator handle assembly	*	2 73 thru 77 Sed.
	BO 99192	Quarter window regulator handle	2	70 U Co.
	BO 121838	Regulator handle escutcheon	*	AR 70-71-72-78 All exc.Station
	BO 121842	Regulator handle escutcheon	*	AR 73 thru 77 All
	BC 79709	Regulator handle escutcheon spring	AR	All models
	BO 79308	Regulator handle pin	AR	All models
WINDOW FINISH MOULDINGS				
C	121300	Front door window finish moulding assembly-R.H	*	1 71 Bro.,78 Sed.
C	121301	Front door window finish moulding assembly-L.H	*	1 71 Bro.,78 Sed.
C	121302	Front door window finish moulding assembly-R.H	*	1 72 Bro.
C	121303	Front door window finish moulding assembly-L.H	*	1 72 Bro.
C	121312	Front door window finish moulding assembly-R.H	*	1 71 Sed.
C	121313	Front door window finish moulding assembly-L.H	*	1 71 Sed.
C	121314	Front door window finish moulding assembly-R.H	*	1 72 Sed.
C	121315	Front door window finish moulding assembly-L.H	*	1 72 Sed.
C	121326	Front door window finish moulding assembly-R.H	*	1 71 3 Cpe.-4 Cpe.
C	121327	Front door window finish moulding assembly-L.H	*	1 71 3 Cpe.-4 Cpe.
C	121328	Front door window finish moulding assembly-R.H	*	1 72 3 Cpe.-4 Cpe.
C	121329	Front door window finish moulding assembly-L.H	1	72 3 Cpe.-4 Cpe.
C	121324	Front door window finish moulding assembly-R.H	*	1 71-73 Bs.Cpe.,70 U Cpe.
C	121325	Front door window finish moulding assembly-L.H	*	1 71-73 Rs.Cpe.,70 U Cpe.
C	121306	Front door window finish moulding assembly-R.H	*	1 70 U Co.
C	121307	Front door window finish moulding assembly-L.H	*	1 70 U Co.
C	121318	Front door window finish moulding assembly-R.H	*	1 70-78 Panel-Cab-Cab Pu.
C	121319	Front door window finish moulding assembly-L.H	*	1 70-78 Panel-Cab-Cab Pu.
C	121304	Front door window finish moulding assy.-R.H.	*	1 73-74 Bro., 76 Sed.
C	121305	Front door window finish moulding assy.-L.H,	*	1 73-74 Bro., 76 Sed.
C	121308	Front door window finish moulding assy.-R.H.	*	1 75 Bro., 77 Sed.
C	121309	Front door window finish moulding assy.-L.H.	*	1 75 Pro., 77 Sed.
C	121316	Front door window finish moulding assy.-R.H.	*	1 73-74 Sed.
C	121317	Front door window finish moulding assy.-L.H.	*	1 73-74 Sed.
C	121320	Front door window finish moulding assy.-R.H.	*	1 75 Sed.
C	121321	Front door window finish moulding assy.-L.H.	1	75 Sed.


First
type
3 tone
walnut
finish

ILLUS NO.	PART NO.	NAME		PER CAR	MODEL
WINDOW FINISH MOULDINGS (Cont'd.)					
C 121330	Front door window finish moulding assy.-R.H.	First type 3 tone walnut finish	*	1	73-74 3 Cpe.-4 Cpe.
C 121331	Front door window finish moulding assy.-L.H.		*	1	73-74 3 Cpe.-4 Cpe.
C 121332	Front door window finish moulding assy.-R.H.		*	1	75 3 Cpe.-4 Cpe.
C 121333	Front door window finish moulding assy.-L.H.		*	1	75 3 Cpe.-4 Cpe.
C 123672	Front door window finish moulding assy.-R.H.	Second type 3 tone walnut finish	*	1	73-74 Bro.,76 Sed.
C 123673	Front door window finish moulding assy.-L.H.		*	1	73-74 Bro.,76 Sed.
C 123674	Front door window finish moulding assy.-R.H.		*	1	75 Bro.,77 Sed.
C 123675	Front door window finish moulding assy.-L.H.		*	1	75 Bro.,77 Sed.
C 123676	Front door window finish moulding assy.-R.H.		*	1	73-74 Sed.
C 123677	Front door window finish moulding assy.-L.H.		*	1	73-74 Sed.
C 123678	Front door window finish moulding assy.-R.H.		*	1	75 Sed.
C 123679	Front door window finish moulding assy.-L.H.		*	1	75 Sed.
C 123680	Front door window finish moulding assy.-R.H.		*	1	73-74 3 Cpe.-4 Cpe.
C 123681	Front door window finish moulding assy.-L.H.		*	1	73-74 3 Cpe.-4 Cpe.
C 123682	Front door window finish moulding assy.-R.H.		*	1	75 3 Cpe.-4 Cpe.
C 123683	Front door window finish moulding assy.-L.H.		*	1	75 3 Cpe.-4 Cpe.
C 124550	Front door window finish moulding assy.-R.H.	Third type walnut pearl finish	*	1	73-74 Bro., 76 Sed.
C 124551	Front door window finish moulding assy.-L.H.		*	1	73-74 9110.'76 Sed.
C 124552	Front door window finish moulding assy.-R.H.		*	1	75 Bro.,77 Sed.
C 124553	Front door window finish moulding assy.-L.H.		*	1	75 Bro.,77 Sed.
C 124554	Front door window finish moulding assy.-R.H.		*	1	'73-74 Sed.
C 124555	Front door window finish moulding assy.-L.H.		*	1	73-74 Sed.
C 124556	Front door window finish moulding assy.-R.H.		*	1	75 Sed.
C 124557	Front door window finish moulding assy.-L.H.		*	1	75 Sed.
C 124558	Front door window finish moulding assy.-R.H.		*	1	73-74 3 Cpe.-4 Cpe.
C 124559	Front door window finish moulding assy.-L.H.		*	1	73-74 3 Cpe.-4 Cpe.
C 124560	Front door window finish moulding assy.-R.H.		*	1	75 3 Cpe.-4 Cpe.
C 124561	Front door window finish moulding assy.-L.H.		*	1	75 3 Cpe.-4 Cpe.
C 122554	Front door window finish moulding-R.H		*	1	71 Cv.Cpe.-Cv.Bro.
C 122555	Front door window finish moulding-L.H		*	1	71 Cv.Cpe.-Cv.Bro.
C 122556	Front door window finish moulding-R. H		*	1	72 Cv.Cpe.-Cv.Bro.
C 122557	Front door window finish moulding-L.H		*	1	72 Cv.Cpe.-Cv.Bro.
C 122558	Front door window finish moulding-R.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 122559	Front door window finish moulding-L.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 121340	Rear door window finish moulding assy.-R.H		*	1	71-72-78 Sed.
C 121341	Rear door window finish moulding assy.-L.H		*	1	71-72-78 Sed.
C 121342	Rear door window finish moulding assy.-R.H.	First type 3 tone walnut	*	1	73-74-76 Sed.
C 121343	Rear door window finish moulding assy.-L.H.		*	1	73-74-76 Sed.
C 121344	Rear door window finish moulding assy.-R.H.		*	1	75-77 Sed.
C 121345	Rear door window finish moulding assy.-L.H.		*	1	75-77 Sed.
C 123684	Rear door window finish moulding assy.-R.H.	Second type 2 tone walnut	*	1	73-74-76 Sed.
C 123685	Rear door window finish moulding assy.-L.H.		*	1	73-74-76 Sed.
C 123686	Rear door window finish moulding assy.-R.H.		*	1	75-77 Sed.
C 123687	Rear door window finish moulding assy.-L.H.			1	75-77 Sed.
C 124562	Rear door window finish moulding assy.-R.H.	Third type walnut pearl	*	1	73-74-76 Sed.
C 124563	Rear door window finish moulding assy.-L.H.		*	1	73-74-76 Sed.
C 124564	Rear door window finish moulding assy.-R.H.		*	1	75-77 Sed.
C 124565	Rear door window finish moulding assy.-L.H.		*	1	75-77 Sed.
C 121348	Quarter window finish moulding-R.H		*	1	71-72 Bro.
C 121349	Quarter window finish moulding-L.H		*	1	71-72 Bro.
C 121356	Quarter window finish moulding-R.H		*	1	71-72-78 Sed.
C 121357	Quarter window finish moulding-L.H		*	1	71-72-78 Sed.
C 116546	Quarter window finish moulding-R.H		*	1	70 U Co.
C 116547	Quarter window finish moulding-L.H		*	1	70 U Co.
C 121366	Quarter window finish moulding assy.-R.H		*	1	71-72 3 Cpe.-4 Cpe.
C 121367	Quarter window finish moulding assy.-L.H		*	1	71-72 3 Cpe.-4 Cpe.
C 121364	Quarter window finish moulding assy.-R.H		*	1	71-73 Bs.Cpe.,70 U Cpe.
C 121365	Quarter window finish moulding assy.-L.H		*	1	71-73 Bs.Cpe.,70 U Cpe.


ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
WINDOW FINISH MOULDINGS (Cont'd.)				
C 121348	Quarter window finish moulding-R.H.	} First type 2 tone walnut	*	1 73-74-75 Bro.
C 121349	Quarter window finish moulding-L.H.		*	1 73-74-75 Bro.
C 121356	Quarter window finish moulding-R.H.		*	1 73 thru 77 Sed.
C 121357	Quarter window finish moulding-L.H.		*	1 73 thru 77 Sed.
C 121366	Quarter window finish moulding assy.-R.H.		*	1 73-74-75-3 Cpe.-4 Cpe.
C 121367	Quarter window finish moulding assy.-L.H.		*	1 73-74-75 3 Cpe.-4 Cpe.
C 124566	Quarter window finish moulding-R.H.	} Second type Walnut Pearl	*	1 73-74-75 Bro.
C 124567	Quarter window finish moulding-L.H.		*	1 73-74-75 Pro.
C 124568	Quarter window finish moulding-R.H.		*	1 '73 thru 77 Sed.
C 124569	Quarter window finish moulding-L.H.		*	1 73 thru '77 Sed.
C 124570	Quarter window finish moulding-R.H.		*	1 73-74-75 3 Cpe.-4 Cpe.
C 124571	Quarter window finish moulding-L.H.		*	1 73-74-75 3 Cpe.-4 Cpe.
C 116536	Rear window finish moulding-R.H.		1	71 thru 77 closed models, 70 U Co.-U Cpe., 78 Sed.
C 116537	Rear window finish moulding-L.H.		1	71 thru 77 closed models, 70 U Co.-U Cpe., 78 Sed.
C 118838	Rear window finish moulding assembly		2	70-78 Cab-Cab Pu. 75-77 closed models
BO 121614	Door window finish moulding plaque		*	2-4 75-77 closed models
BO 71718	Door window finish moulding plaque nut	10-32 spr.type	AR	All closed models exc.Station
BO 71699	Finish moulding screw-door	8 x 1"	AR	All closed models exc.Station
BO 71697	Finish moulding screw-door	8 x 3/4"	AR	All closed models exc.Station
BO 170039	Finish moulding screw-front	8x1-1/8"	*	2 Sedan
BO 170040	Finish moulding screw-rear door-upper center	8x7/8"	*	2 71 thru 77 closed models, 70 U
BO 71606	Finish moulding screw-rear window	8x1/2"	16	Co.-U Cpe.
BO 17912	Finish moulding screw-rear window	8x5/8"	12	70-78 Cab-Cab Pu.
BO 71698	Finish moulding screw-quarter window	8x7/8"	AR	Bro.-Sed.--U Co.
BO 71606	Finish moulding screw-quarter window	3x1/2"	16	All coupes
BO 71701	Finish moulding screw washer-door & quarter window		AR	All models except Station

TOP-CLOSED BODIES

C 121400	Roof bow No. 1		*	1 71 thru 75 Bro.-Cpes., 76-77-78 Sed., 70-78 U Co.-U Cpe.-Panel
C 121401	Roof bow No. 1		*	1 71 thru 75 Sed., 70-78 Cab-Cab Pu.
C 121402	Roof bow No. 2		*	1 71 thru 75 Sed.
C 122200	Roof bow No. 2		*	1 76-77-78 Sed.
C 121434	Roof bow No. 2		*	1 70-78-Cab-Cab Pu.
C 121406	Roof bow No. 2		*	1 3 Cpe.-4 Cpe.-Rs.Cpe.-U Cpe.
C 122198	Roof bow No. 2		*	1 71 thru 75 Bro., 70 U Co.
C 121403	Roof bow No. 3		*	1 71 thru 75 Bro., 70 U Co.
C 121403	Roof bow No. 3		*	2 76-77-78 Sed.
C 121404	Roof bow No. 3			1 71 thru 75 Sed.
C 121407	Roof bow No. 3		*	1 3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 121405	Roof bow No. 4		*	1 71 thru 75 Bro., 70 U Co.
C 121408	Roof bow No. 4		*	1 3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 123580	Roof bow No. 4		*	1 71 thru 78 Sed.
C 121420	Roof bow No. 5		*	1 Bro.-Sed.-U Co.
C 121421	Roof bow No. 6		*	1 Bro.-Sed.-U Co.
C 121423	Roof bow-rear		*	1 3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 121422	Roof bow-rear		*	1 Bro.-Sed.-U Co.
BO 71625	Roof bow attaching bolt-medium	1/4"-20x7/8"	AR	All closed models
BO 71626	Roof bow attaching bolt-long	1/4"-20x1-1/8"	AR	All closed models
BO 18464	Roof bow attaching bolt-short	1/4"-20x5/8"	AR	All closed models
BZ 18218	Roof bow attaching bolt-short	#5-6 rear bows)	10	Sed.
BO 117534	Roof bow bracket tapping plate		AR	All
BO 87602	Roof bow bracket tapping plate		4	Bro.-U Co.
BO 71629	Roof bow rivet	1/4"x1-1/16"	AR	All
C 120128	Windshield header assembly		*	1 All closed models
C 122244	Windshield header assembly		*	1 Cv.Cpe.-Cv.Bro.
C 122194	Body header assembly-R.H.		*	1 Bro.-U Co.
C 122195	Body header assembly-L.H.		*	1 Bro.-U Co.
C 121162	Body header assembly-R.H.		*	1 71 thru 75 Sed.
C 121163	Body header assembly-L.H.		*	1 71 thru 75 Sed.

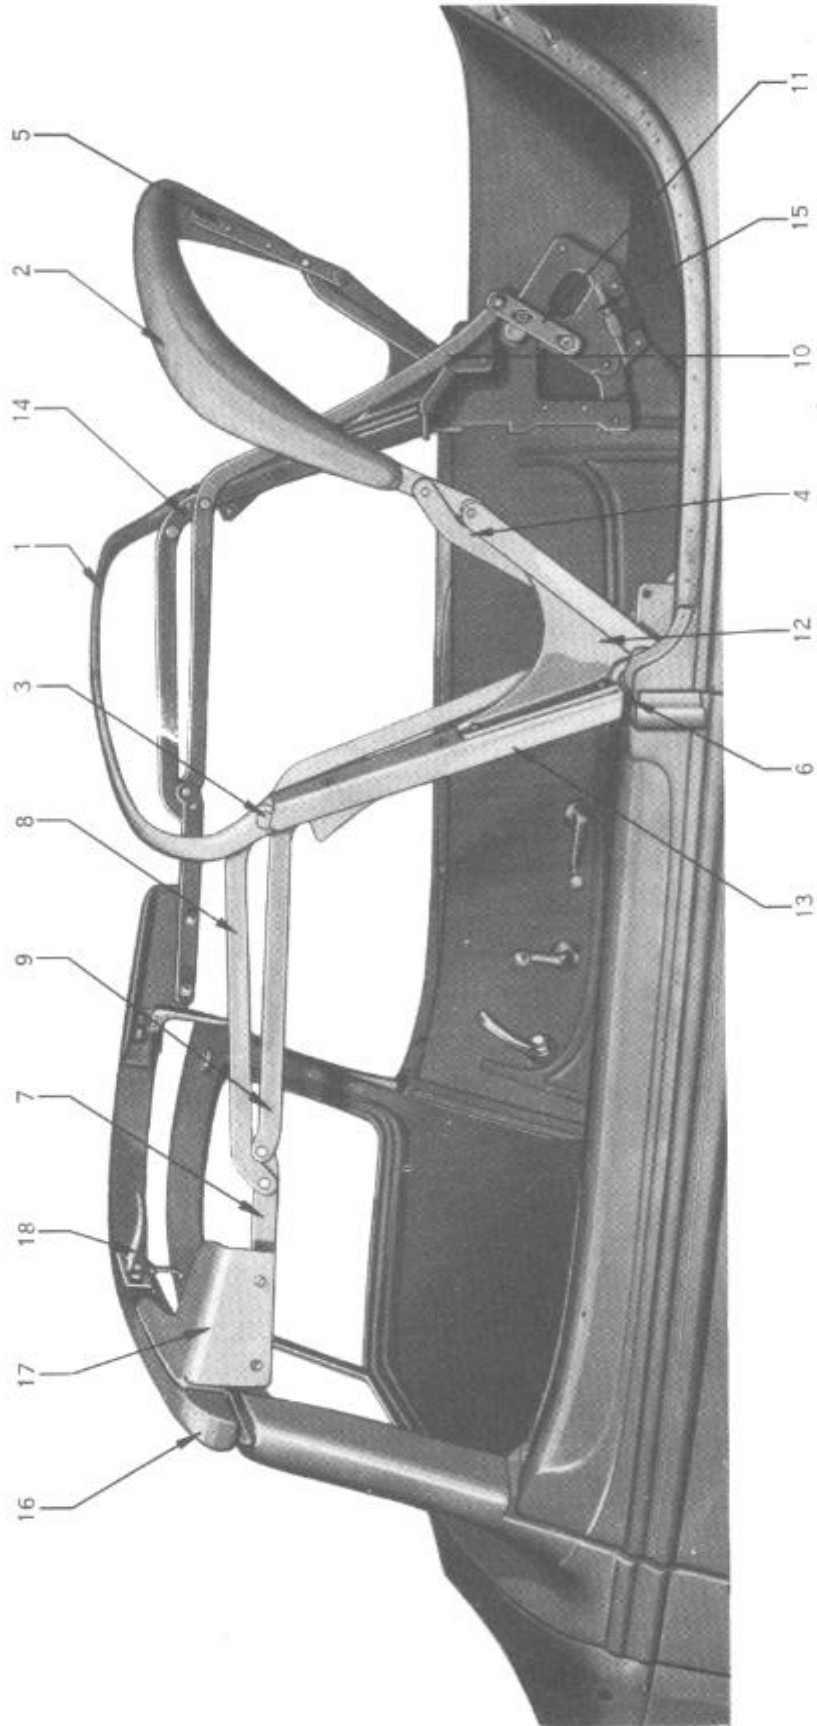

TOP CONVERTIBLE COUPE
Illustration H

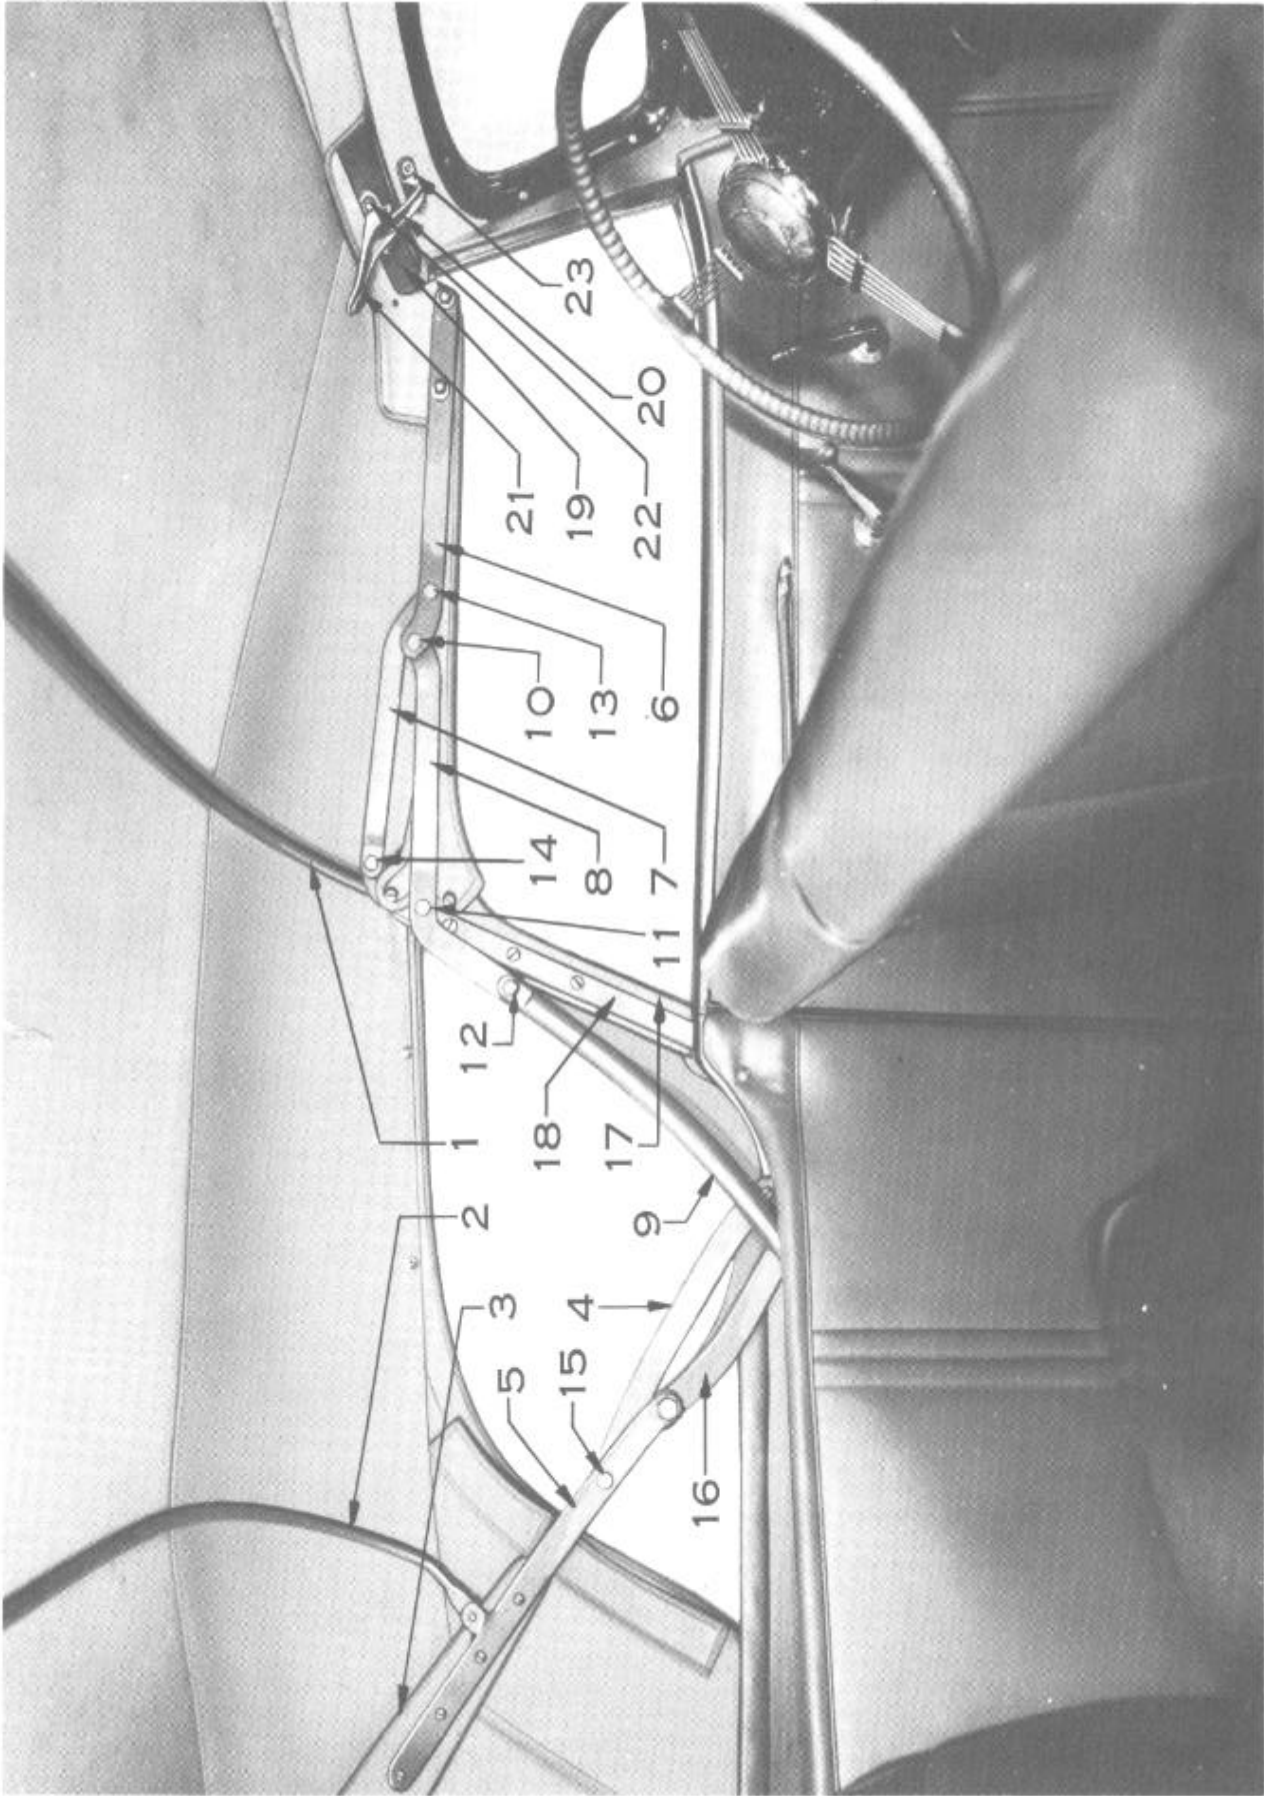

TOP—Convertible Brougham
Illustration J

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
TOP-CLOSED BODIES (Cont'd.)				
C 121164	Body header assembly-R.H		* 1	76-77-78 Sed.
C 121165	Body header assembly-L.H		* 1	76-77-78 Sed.
C 122196	Body header assembly-R.H		* 1	3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 122197	Body header assembly-L.H		* 1	3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C 120386	Body header assembly-R.H		* 1	70-78-Cab-Cab Pu.
C 120387	Body header assembly-L.H		* 1	70-78-Cab-Cab Pu.
C 122098	Body header assembly-R.H		* 1	70-78 Panel
C 122099	Body header assembly-L.H		* 1	70-78 Panel
C 120388	Body header assembly-R.H		* 1	70 Station
C 120389	Body header assembly-L.H		* 1	70 Station
BZ 71552	Body header wiring grommet	1/2" Rubber	1	75-77 Sedan
C 122966	Cab to panel roof joint moulding		* 1	70-78-Panel
BO 119887	Cab to panel roof joint moulding filler		AR	70-78 Panel
BO 119888	Cab to panel roof joint moulding binding tip		2	70-78 Panel
C 122967	Roof joint moulding		* 1	70 Station
BO 119887	Roof joint moulding filler		AR	70 Station
BO 124005	Roof joint moulding welt assembly		* 1	70 Station
C 123556	Roof drip moulding-R.H		* 1	70 Station
C 123557	Roof drip moulding-L.H		* 1	70 Station
BO 70733	Roof drip moulding sheet metal screw	#6x7/16"	8	70 Station
BO 119887	Roof drip moulding filler		AR	70 Station
BO 123558	Roof drip moulding end tip		* 2	70 Station
BO 170033	Roof drip moulding end tip drive screw.	#4x1/2"	* 2	70 Station
TOP-CONVERTIBLES				
C 123850	Top complete-trimmed		* 1	Cv.Cpe.
C 123960	Top complete-trimmed		* 1	Cv.Bro.
C 123853	Top deck and side quarters assembly		* 1	Cv.Cpe.
C 123963	Top deck and side quarters assembly		* 1	Cv.Bro.
C 123851	Rear curtain and window assembly		* 1	Cv.Cpe.
C 123961	Rear curtain and window assembly		* 1	Cv.Bro.
C 123760	Rear curtain glass frame-inner		* 1	Cv.Cpe.-Cv.Bro.
C 123761	Rear curtain glass frame-outer		* 1	Cv.Cpe.-Cv.Bro.
BO 71555	Rear curtain glass frame ret.screw	#6x3/8" Oval Hd.	* 14	Cv.Cpe.-Cv.Bro.
BO 123764	Rear curtain glass weatherstrip		* 1	Cv.Cpe.-Cv.Bro.
C 123716	Rear curtain upper reinforcement		* 1	Cv.Cpe.-Cv.Bro.
C 122724	Rear curtain bottom reinforcement		* 1	Cv.Cpe.-Cv.Bro.
C 122725	Rear curtain bottom reinforcement		* 1	Cv.Bro.
BO 123787	Rear curtain slide fastener assembly		* 2	Cv.Cpe.-Cv.Bro.
BO 170025	Rear curtain to rear bow fastener stud		* 5	Cv.Cpe.-Cv.Bro.
BO 71508	Rear curtain fastener eyelet		5	Cv.Cpe.-Cv.Bro.
BO 71305	Rear curtain fastener eyelet washer		5	Cv.Cpe.-Cv.Bro.
BO 170025	Rear curtain to rear compartment partition stud		* 2	Cv.Cpe.-Cv.Bro.
C 123856	Top quarter pad assembly-R.H		* 1	Cv.Cpe.
C 123857	Top quarter pad assembly-L.H		* 1	Cv.Cpe.
C 123966	Top quarter pad assembly-R.H		* 1	Cv.Bro.
C 123967	Top quarter pad assembly-L.H		* 1	Cv.Bro.
BO 123870	Top side quarter weatherseal flap assembly-R.H		* 1	Cv.Cpe.-Cv.Bro.
BO 123871	Top side quarter weatherseal flap assembly-L.H		* 1	Cv.Cpe.-Cv.Bro.
BO 18084	Weatherseal flap to folding pillar fastener stud		2	Cv.Cpe.-Cv.Bro.
BO 12244	Weatherseal flap to folding pillar fastener cap		2	Cv.Cpe.-Cv.Bro.
BO 12243	Weatherseal flap to folding pillar fastener socket		2	Cv.Cpe.-Cv.Bro.
BO 71507	Weatherseal flap to slat iron fastener stud		2	Cv.Cpe.-Cv.Bro.
BO 71491	Weatherseal flap to slat iron fastener stud		4	Cv.Cpe.-Cv.Bro.
BO 12244	Weatherseal flap to slat iron fastener cap		2	Cv.Cpe.-Cv.Bro.
BO 12243	Weatherseal flap to slat iron fastener socket		6	Cv.Cpe.-Cv.Bro.
BO 12222	Weatherseal flap to slat iron fastener socket plate		4	Cv.Cpe.-Cv.Bro.
BO 112664	Folding top strap retainer		2	Cv.Cpe.-Cv.Bro.
BO 71527	Folding top strap retainer screw	#6 x 3/8"	4	Cv.Cpe.-Cv.Bro.
C 123858	Top back stay assembly-R.H		* 1	Cv.Cpe.
C 123859	Top back stay assembly-L.H		* 1	Cv.Cpe.
C 123970	Top back stay assembly-R.H		* 1	Cv.Bro.
C 123971	Top back stay assembly-L.H		* 1	Cv.Bro.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
TOP CONVERTIBLES (Cont'd.)				
	BO 12244	Top lower fastener cap (on belt)	2	Cv.Cpe.
	BO 12243	Top lower fastener socket (on belt)	2	Cv.Cpe.
	BO 71477	Binding end tip-pointed (Front end of binding on Body belt)	2	Cv.Cpe.-Cv.Bro.
	BO 71477	Binding end tip-pointed (End of binding on front and rear bows).	4	Cv.Cpe.-Cv.Bro.
	BO 71476	Binding end tip-square (Rear end of binding on belt)	2	Cv.Cpe.-Cv.Bro.
	BO 71482	Binding end tip screw #4x5/8"	2	Cv.Cpe.-Cv.Bro.
	BO 70891	Binding end tip screw (for pointed tip) #8x1"	2	Cv.Cpe.-Cv.Bro.
	BO 170038	Binding end tip screw (for square tip) #6x7/8"	* 2	Cv.Cpe.-Cv.Bro.
	C 123974	Rear quarter window and curtain assembly-R.H	* 1	Cv.Bro.
	C 123975	Rear quarter window and curtain assembly-L.H	* 1	Cv.Bro.
	BO 123398	Quarter window curtain reinforcement-upper	* 2	Cv.Bro.
	BO 123399	Quarter window curtain reinforcement-lower	* 2	Cv.Bro.
	BO 123568	Quarter window retainer assembly-R.H	* 1	Cv.Bro.
	BO 123569	Quarter window retainer assembly-L.H	* 1	Cv.Bro.
	BO 170020	Quarter window retainer acorn nut #6-32	* 28	Cv.Bro.
	BO 123497	Quarter window glass weatherstrip	* 2	Cv.Bro.
	BO 12222	Quarter window fastener socket plate-front	* 2	Cv.Bro.
	BO 12244	Quarter window fastener cap	26	Cv.Bro.
	BO 12243	Quarter window fastener socket	26	Cv.Bro.
	BO 71507	Quarter window fastener stud-bottom	4	Cv.Bro.
	BO 71492	Quarter window fastener stud-bottom-long	8	Cv.Bro.
	BO 18084	Quarter window fastener stud-front	8	Cv.Bro.
	BO 18084	Quarter window fastener stud-rear	2	Cv.Bro.
	BO 4931	Quarter window fastener clinch stud-front-top	6	Cv.Bro.
	BO 170046	Quarter window fastener cap-top	* 4	Cv.Bro.
	BO 71492	Quarter wing fastener stud-inside rear pillar	2	Cv.Bro.
	BO 123865	Top dust boot assembly	* 1	Cv.Cpe.
	C 123973	Top dust boot assembly	* 1	Cv.Bro.
	BO 71507	Top dust boot fastener stud (on belt-rear)	5	Cv.Cpe.-Cv.Bro.
	BO 71760	Top dust boot fastener stud (on belt)	13	Cv.Cpe.-Cv.Bro.
	BO 18084	Top dust boot fastener stud (on strainer)	2	Cv.Cpe.
	BO 71507	Top dust boot fastener stud-front	4	Cv.Cpe.
	BO 18084	Top dust boot fastener stud (on inside of rear pillar).	2	Cv.Cpe.-Cv.Bro.
	BO 12244	Top dust boot fastener cap	AR	Cv.Cpe.-Cv.Bro.
	BO 12243	Top dust boot fastener socket	AR	Cv.Cpe.-Cv.Bro.
	BO 123872	Top dust boot bag assembly	* 1	Cv.Cpe.
	C 123976	Top dust boot bag assembly	* 1	Cv.Bro.
H-1	C 122834	Top bow No. 1	* 1	Cv.Cpe.
J-1	C 122844	Top bow No. 1	* 1	Cv.Bro.
J-2	C 122847	Top bow No. 2	* 1	Cv.Bro.
H-2	C 122835	Top rear bow	* 1	Cv.Cpe.
J-3	C 122845	Top rear bow	* 1	Cv.Bro.
	BO 122837	Rear bow extension to folding pillar hinge spacer	* 2	Cv.Cpe.
	BO 123481	Rear bow extension to folding pillar hinge spacer	* 2	Cv.Bro.
	BO 122838	Rear bow to side arm bolt	* 2	Cv.Cpe.-Cv.Bro.
	BO 123468	Top bow No. 1 to side arm assembly bolt	* 2	Cv.Bro.
	BO 112663	Top bow No. 2 to folding arm bolt	2	Cv.Bro.
H-3	BO 70865	Top bow No. 1 to pillar bolt 1/4"-20x9/16"	4	Cv.Cpe.
	BO 122832	Top rear bow folding arm assembly-R.H	* 1	Cv.Cpe.
	BO 122833	Top rear bow folding arm assembly-L.H	* 1	Cv.Cpe.
	BO 122842	Top rear bow folding arm assembly-R.H	* 1	Cv.Bro.
	BO 122843	Top rear bow folding arm assembly-L.H	* 1	Cv.Bro.
	BO 123458	Top rear bow folding arm-R.H	* 1	Cv.Cpe.
H-4	BO 123459	Top rear bow folding arm-L.H	* 1	Cv.Cpe.
	BO 123460	Top rear bow folding arm-R.H	* 1	Cv.Bro.
J-4	BO 123461	Top rear bow folding arm-L.H	* 1	Cv.Bro.
	BO 123454	Top rear bow extension-R.H	* 1	Cv.Cpe.
H-5	BO 123455	Top rear bow extension-L.H	* 1	Cv.Cpe.
	BO 123458	Top rear bow extension-R.H	* 1	Cv.Bro.
J-5	BO 123457	Top rear bow extension-L.H	* 1	Cv.Bro.
	BZ 123495	Rear bow extension to folding arm rivet	* 2	Cv.Cpe.-Cv.Bro.
	BO 123469	Rear bow extension to folding arm spacer	* 2	Cv.Cpe.-Cv.Bro.
	BO 122798	Body hinge pillar weatherstrip-R.H	1	Cv.Cpe.-Cv.Bro.
	BO 122799	Body hinge pillar weatherstrip-L.H	1	Cv.Cpe.-Cv.Bro.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
TOP CONVERTIBLES (Cont'd.)				
	BO 71420	Body hinge pillar weatherstrip screw	#8x1/2"	4 Cv.Cpe.-Cv.Bro.
	BO 123470	Front body pillar cover panel bottom weatherseal-R.	*	1 Cv.Cpe.-Cv.Bro.
H-6	BO 123471	Front body pillar cover panel bottom weatherseal-L.H	*	1 Cv.Cpe.-Cv.Bro.
	BO 71302	Front body pillar cover panel bottom weatherseal screw		4 Cv.Cpe.-Cv.Bro.
	90 122562	Front body pillar weatherstrip retainer-R.H		1 Cv.Cpe.-Cv.Bro.
	BO 122563	Front body pillar weatherstrip retainer-L.H		1 Cv.Cpe.-Cv.Bro.
	BO 71420	Front body pillar weatherstrip retainer screw	#8x1/2"	6 Cv.Cpe.-Cv.Bro.
	C 122848	Folding top side arm assembly-R.H	*	1 Cv.Cpe.
	C 122849	Folding top side arm assembly-L.H	*	1 Cv.Cpe.
	C 123054	Folding top side arm assembly-R.H	*	1 Cv.Bro.
	C 123055	Folding top side arm assembly-L.H	*	1 Cv.Bro.
	BO 123469	Folding top side arm bolt spacer	*	4-6 Cv.Cpe.-Cv.Bro.
	BO 123474	Top side arm #1-R.H	*	1 Cv.Cpe.
H-7	BO 123475	Top side arm #1-L.H	*	1 Cv.Cpe.
	BO 123484	Top side arm #1-R.H	*	1 Cv.Bro.
J-6	BO 123485	Top side arm #1-L.H	*	1 Cv.Bro.
	BO 123476	Top side arm #2-R.H	*	1 Cv.Cpe.
H-8	BO 123477	Top side arm #2-L.H	*	1 Cv.Cpe.
	BO 123486	Top side arm #2-R.H	*	1 Cv.Bro.
J-7	90 123487	Top side arm #2-L.H	*	1 Cv.Bro.
	BO 123478	Top side arm #3-R.H	*	1 Cv.Cpe.
H-9	BO 123479	Top side arm #3-L.H	*	1 Cv.Cpe.
	BO 123488	Top side arm #3-R.H	*	1 Cv.Bro.
J-8	BO 123489	Top side arm #3-L.H	*	1 Cv.Bro.
H-10	BO 123480	Top side arm #4	*	2 Cv.Cpe.
J-9	BO 123490	Top side arm #4	*	2 Cv.Bro.
	BO 123466	Side arm #1 to #3 Spacer	*	2 Cv.Cpe.-Cv.Bro.
H-11	BO 123670	Folding top tension plate-R.H	*	1 Cv.Cpe.-Cv.Bro.
	90 123671	Folding top tension plate-L.H	*	1 Cv.Cpe.-Cv.Bro.
J-10	BO 123491	Folding top No.1 arm to No.3 arm rivet	*	2 Cv.Cpe.-Cv.Bro.
J-11	BO 123492	Folding top No.3 arm to pillar extension rivet	*	2 Cv.Cpe.-Cv.Bro.
J-12	BO 123493	Folding top No.3 arm to No.4 arm rivet	*	2 Cv.Cpe.-Cv.Bro.
	80 123494	Folding top No.4 arm to tension plate rivet	*	2 Cv.Cpe.-Cv.Bro.
J-12	BZ 123495	Folding top No.1 arm to No.2 arm rivet	*	2 Cv.Cpe.-Cv.Bro.
J-14	BZ 123495	Folding top No.2 arm to pillar extension rivet	*	2 Cv.Cpe.-Cv.Bro.
J-15	BZ 123495	Folding top folding arm to rear bow extension rivet.	*	2 Cv.Cpe.-Cv.Bro.
	BO 122707	Top slat iron to pivot bracket bolt	*	2 Cv.Cpe.-Cv.Bro.
	BO 122708	Folding top pivot bolt	*	2 Cv.Cpe.-Cv.Bro.
	C 123052	Folding top pillar and hinge assembly-R.H	*	1 Cv.Cpe.
H-12	C 123053	Folding top pillar and hinge assembly-L.H	*	1 Cv.Cpe.
	C 123056	Folding top pillar and hinge assembly-R.H	*	1 Cv.Bro.
J-16	C 123057	Folding top pillar and hinge assembly-L.H	*	1 Cv.Bro.
	BO 123464	Folding top pillar-R.H	*	1 Cv.Cpe.
H-13	BO 123465	Folding top pillar-L.H	*	1 Cv.Cpe.
	BO 123482	Folding top pillar-R.H	*	1 Cv.Bro.
J-17	BO 123483	Folding top pillar-L.H	*	1 Cv.Bro.
	BO 122850	Folding top pillar filler-R.H	*	1 Cv.Cpe.
	BO 122851	Folding top pillar filler-L.H	*	1 Cv.Cpe.
	BO 123452	Folding top pillar filler-R.H	*	1 Cv.Bro.
	BO 123453	Folding top pillar filler-L.H	*	1 Cv.Bro.
	BO 123450	Folding top pillar hinge	*	2 Cv.Cpe.
	BO 123451	Folding top pillar hinge	*	2 Cv.Bro.
H-14	BO 123463	Folding top pillar extension arm	*	2 Cv.Cpe.
J-18	BO 123555	Folding top pillar extension arm	*	2 Cv.Bro.
	BO 123467	Folding top pillar extension arm to side arm No. 3 spacer	*	2 Cv.Bro.-Cv.Cpe.
	BM 70242	Folding top pillar to slat iron bolt.	1/4"-20x3/4"	4 Cv.Bro.-Cv.Cpe.
	BO 12120	Folding top pillar to slat iron bolt nut	1/4"-20x1/4"	4 Cv.Bro.-Cv.Cpe.
	BO 71516	Folding top pillar pivot bracket bolt		4 Cv.Bro.-Cv.Cpe.
	BO 70690	Folding top pillar screw finish washer	#10 Ctsk.	6 Cv.Bro.
	BO 109900	Folding top pillar bottom weatherseal-R.H		1 Cv.Cpe.-Cv.Bro.
	BO 109901	Folding top pillar bottom weatherseal-L.H		1 Cv.Cpe.-Cv.Bro.
	BO 17912	Folding top pillar bottom weatherseal screw	#8x5/8"	4 Cv.Cpe.-Cv.Bro.
	80 109876	Folding pillar weatherstrip		2 Cv.Cpe.-Cv.Bro.
	BO 71352	Folding pillar weatherstrip screw	#8x3/4"	6 Cv.Cpe.-Cv.Bro.
	BO 109877	Folding pillar weatherstrip retainer-R.H		1 Cv.Cpe.-Cv.Bro.
	BO 111733	Folding pillar weatherstrip retainer-L.H		1 Cv.Cpe.-Cv.Bro.
				4

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
--------------	-------------	------	------------	-------

TOP CONVERTIBLES (Cont'd.)

H-15	BO 71352	Folding pillar weatherstrip retainer screw...	#8x3/4"	4	Cv.Cpe.-Cv.Bro.	
	B0 122570	Folding top pivot bracket-R.H		* 1	Cv.Bro.	
	BO 122571	Folding top pivot bracket-L.H		* 1	Cv.Bro.	
	BO 122572	Folding top pivot bracket-R.H		* 1	Cv.Cpe.	
	BO 122573	Folding top pivot bracket-L.H		* 1	Cv.Cpe.	
	BO 70870	Folding top pivot bracket to pillar rivet	1/4"x11/16"	8	Cv.Cpe.-Cv.Bro.	
	BM 71307	Folding top pivot bracket to pillar rivet	1/4"x3/4"	4	Cv.Cpe.-Cv.Bro.	
	BO 122574	Folding top pivot bracket to wheelhouse strainer-R.H.		* 1	Cv.Cpe.-Cv.Bro.	
	BO 122575	Folding top pivot bracket to wheelhouse strainer-L.H.		* 1	Cv.Cpe.-Cv.Bro.	
	BO 70295	Folding top pivot bracket to wheelhouse strainer rivet		8	Cv.Cpe.-Cv.Bro.	
	C 123084	Pivot bracket to rear seat back tie arm-R.H		* 1	Cv.Bro.	
	C 123085	Pivot bracket to rear seat back tie arm-L.H.		* 1	Cv.Bro.	
	BO 71646	Pivot bracket to rear seat back tie arm bolt	1/4-20x3/4"	2	Cv.Bro.	
	BO 70452	Pivot bracket to rear seat back tie arm finish washer		2	Cv.Bro.	
BO 71642	Pivot brkt.to rear seat back tie arm bolt-	1/4"-20x7/8 "	4	Cv.Bro.		
H-16	C 122839	Top front header rail and bracket assembly		1	Cv.Cpe.-Cv.Bro.	
	C 122705	Top front header rail		* 1	Cv.Cpe.-Cv.Bro.	
	BO 71531	Top front header rail bolt	1-1/4"-20x1-3/8"	12	Cv.Cpe.-Cv.Bro.	
	BO 71528	Top front header rail bolt nut	1/4"-20x1/4"	12	Cv.Cpe.-Cv.Bro.	
	C 122721	Top front header rail panel assembly		* 1	Cv.Cpe.-Cv.Bro.	
	BO 112659	Top front header rail bumper		3	Cv.Cpe.-Cv.Bro.	
	BO 122706	Top front header rail weatherstrip		* 1	Cv.Cpe.-Cv.Bro.	
	BO 109897	Top front header rail weatherstrip-end		2	Cv.Cpe.-Cv.Bro.	
	BO 112658	Top front header rail weatherstrip retainer		2	Cv.Cpe.-Cv.Bro.	
	BO 71576	Top front header rail weatherstrip retainer screw		8	Cv.Cpe.-Cv.Bro.	
	H-17	BO 122702	Folding top front corner bracket-R.H		* 1	Cv.Cpe.-Cv.Bro.
	J-19	BO 122703	Folding top front corner bracket-L.H		* 1	Cv.Cpe.-Cv.Bro.
	BO 71656	Folding top front corner bracket to slat iron bolt		4	Cv.Cpe.-Cv.Bro.	
	BO 71513	Folding top front corner bracket to slat iron bolt nut		4	Cv.Cpe.-Cv.Bro.	
BO 122704	Folding top front center bracket		* 1	Cv.Cpe.-Cv.Bro.		
BO 71657	Folding top brkt.top hold down clamp bolt	5/16"-24x5/8"	6	Cv.Cpe.-Cv.Bro.		
BO 109886	Windshield header roof dowel screw		2	Cv.Cpe.-Cv.Bro.		
H-18	BO 118516	Top hold-down clamp assembly-center		1	Cv.Cpe.-Cv.Bro.	
	BO 122828	Top hold-down clamp assembly-ends		* 2	Cv.Cpe.-Cv.Bro.	
J-20	BO 109594	Top hold-down clamp spring		3	Cv.Cpe.-Cv.Bro.	
	BO 107866	Top hold-down clamp spring bushing		6	Cv.Cpe.-Cv.Bro.	
	BO 118517	Top hold-down clamp handle-center		1	Cv.Cpe.-Cv.Bro.	
J-21	BO 122829	Top hold-down clamp handle-ends		* 2	Cv.Cpe.-Cv.Bro.	
	BO 109597	Top hold-down clamp handle rivet		6	Cv.Cpe.-Cv.Bro.	
J-22	BO 118848	Top hold-down clamp bracket		3	Cv.Cpe.-Cv.Bro.	
J-23	BO 122525	Top hold-down clamp body bracket		* 3	Cv.Cpe.-Cv.Bro.	
	BO 71848	Top hold-down clamp body bracket to header bolt	1/4"-20x3/4"	6	Cv.Cpe.-Cv.Bro.	
	BO 71513	Top hold-down clamp to bracket nut	5/16"-24x7/16"	6	Cv.Cpe.-Cv.Bro.	

FLOOR

BO 120154	Toe board riser assembly-R.H	L.H.D.	*	1	All models
BO 120155	Toe board riser assembly-L.H	L.H.D.	*	1	All models
BO 120156	Toe board riser assembly R.H	R.H.D.	*	1	All models
BO 120157	Toe board riser assembly L.H	R.H.D.	*	1	All models
BO 170009	Toe board riser to floor panel rivet brkt.rivet	1/4"x5/16"		6	All models
BO 18474	Toe board riser to dash panel and	3/16"x5/16"		6	All models
BO 106300	Toe board riser hole plug			2	All models
BO 85747	Toe board riser wiring clip			1	All models
BO 122758	Toe board riser wiring clip		*	1	All models
C 120382	Transmission opening floor cover	L.H.D.	*	1	All models
C 120383	Transmission opening floor cover	R.H.D.	*	1	All models
BZ 70983	Transmission opening floor cover bolt	5/16"-24x11/16"		9	All models
BO 100924	Steering column hole cover (steel plate)			1	All models
C 121900	Front door scuff plate-R.H		*	1	71 All exc.Sed.,70 U Co.-U. Cpe.
C 121901	Front door scuff plate-L.H		*	1	71 All exc.Sed.,70 U Co.-U Cpe.
C 121908	Front door scuff plate-R.H		*	1	71 Sed.,70-78 Panel-Cab-Cab Pu.
C 121909	Front door scuff plate-L.H		*	1	71 Sed.,70-78 Panel-Cab-Cab Pu.
C 121902	Front door scuff plate-R.H		*	1	72 All exc.Sed.,78 Sed.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FLOOR (Cont'd.)				
C	121903	Front door scuff plate-L.H	*	1 72 All exc.Sed.,78 Sed.
C	121910	Front door scuff plate-R.H	*	1 72 Sed.
C	121911	Front door scuff plate-L.H	*	1 72 Sed.
C	121904	Front door scuff plate-R.H	*	1 73-74-75 All exc.Sed.
C	121905	Front door scuff plate-L.H	*	1 73-74-75 All exc.Sed.
C	121912	Front door scuff plate-R.H	*	1 73-74-75 Sed.
C	121913	Front door scuff plate-L.H	*	1 73-74-75 Sed.
C	121916	Front door scuff plate-R.H	*	1 78-77 Sed.
C	121917	Front door scuff plate-L.H	*	1 78-77 Sed.
C	122656	Front door scuff plate-R.H	*	1 70 Station
C	122657	Front door scuff plate-L.H	*	1 70 Station
BO	121920	Rear door scuff plate-R.H	*	1 71 Sed.
BO	121921	Rear door scuff plate-L.H	*	1 71 Sed.
BO	121922	Rear door scuff plate-R.H	*	1 72-78 Sed.
BO	121923	Rear door scuff plate-L.H	*	1 72-78 Sed.
BO	121924	Rear door scuff plate-R.H	*	1 73-74-75 Sed.
90	121925	Rear door scuff plate-L.H	*	1 73-74-75 Sed.
BO	121928	Rear door scuff plate-R.H	*	1 76-77 Sed.
BO	121929	Rear door scuff plate-15.H	*	1 76-77 Sed.
C	122658	Rear door scuff plate	*	2 70 Station
BO	71703	Door scuff plate screw	#8x1/2"	AR All models
C	123570	Rear seat tray assembly	*	1 71 thru 75 Bro.-Sed.,76-77-78 Sed.
C	123571	Rear seat tray assembly	*	1 70 U Co.
C	123572	Rear seat tray assembly	*	1 71 thru 75 3 Cpe.--Bs.Cpe.,70 U Cpe.
C	124341	Rear seat tray assembly (second type)	*	1 71 thru 75 3 Cpe.
C	123574	Rear seat tray assembly	*	1 71 thru 75 Cv.Cpe.
C	123575	Rear seat tray assembly	*	1 71 thru 75 Cv.Cpe.
BO	122075	Rear seat tray partition clip assembly	*	4 71 thru 75 4 Cpe.-Bs.Cpe.
BO	122745	Rear seat tray partition clip assembly	*	7 70 U Cpe.
BO	120075	Rear seat tray drain hole cover plate	*	1 71 thru 77 A11,70 U Co.-U Cpe., 78 Sed.
BO	71302	Rear seat tray drain hole cover plate screw	#8x1/2"	2 71 thru 77 All 70 U Co.-U Cpe., 78 Sed.
BO	121849	Body air cleaner assembly	*	1 71 thru 77 All, 70 U Co.-U Cpe., 78 Sed.
C	120550	Underbody panel assembly	*	1 71 thru 75 Bro.-3 Cpe.-Bs.Cpe.,70 U Co.
C	120551	Underbody panel assembly	*	1 71 thru 75 Sed.
C	120552	Underbody panel assembly	*	1 76-77-78 Sed.
C	120546	Underbody panel assembly	L.H.D. *	1 71 thru 75 4 Cpe.
C	120558	Underbody panel assembly	R.H.D. *	1 71 thru 75 4 Cpe.
C	120556	Underbody panel assembly	*	1 70 Panel-Cab-Cab Pu.
C	123577	Underbody panel assembly	*	1 78 Panel-Cab-Cab Pu.
C	123578	Underbody panel assembly	*	1 70 U Cpe.
C	124009	Underbody panel assembly	*	1 70 Station
C	123096	Underbody panel assembly	*	1 Cv.Cpe.-Cv.Bro.
C	120064	Underbody panel extension-R.H	*	1 70 thru 75 All closed models
C	120065	Underbody panel extension-L.H	*	1 70 thru 75 All closed models
C	120066	Underbody panel extension-R.H	*	1 78-77 Sed.,78 All
C	120067	Underbody panel extension-L.H	*	1 76-77 Sed.,78 All
C	124006	Underbody panel extension-R.H	*	1 Cv.Cpe.-Cv.Bro.
C	124007	Underbody panel extension-L.H	*	1 Cv.Cpe.-Cv.Bro.
REAR FLOOR CARPETS				
BO	122488	Rear floor carpet assembly	*	1 Bro.
BO	122488	Rear floor carpet assy.(with divided back seat)	*	1 3 Cpe.-Bs.Cpe.
BO	124383	Rear floor carpet assembly (with solid seat)	*	1 3 Cpe.-Bs.Cpe.
BO	122489	Rear floor carpet assembly	*	1 71 thru 75 Sed.
BO	122490	Rear floor carpet assembly	*	1 76-77-78 Sed.
BO	123583	Rear floor carpet assembly	L.H.D. *	1 U Co.
BO	123584	Rear floor carpet assembly	R.H.D. *	1 U Co.
BO	123808	Rear floor carpet assembly	*	1 U Cpe.
BO	123890	Rear floor carpet assembly	*	1 Cv.Bro.
BO	123837	Rear floor carpet assembly	*	1 Cv.Cpe.
BO	122920	Rear floor carpet assembly	*	1 4 Cpe.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
--------------	-------------	------	------------	-------


REAR FLOOR CARPETS (Cont'd.)

BO 123896	Rear body pillar floor carpet assembly		*	2	Cv.Cpe.-Cv.Bro.
BO 1238916	Rear compartment floor carpet assembly		*	1	Cv.Bro.
BO 123892	Rear compartment wheelhouse carpet assembly-R.H		*	1	Cv.Bro.
BO 123893	Rear compartment wheelhouse carpet assembly-L.H		*	1	Cv.Bro.
BO 124372	Rear compartment wheelhouse carpet assembly-R.H		*	1	Cv.Cpe.
BO 124373	Rear compartment wheelhouse carpet assembly-L.H		*	1	Cv.Cpe.
BO 71348	Carpet to floor screw	#8x1/2"	AR		All
BO 70350	Carpet to floor screw	#8 Ctsk.	AR		All
BO 123079	Rear compartment floor mat-Side tire mount		*	1	Bro.-Sed.

**FRONT SEAT-
DIVIDED BACK TYPE**

NOTE: Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.-U. Cpe.
First type 3 Cpe.-Bs.Cpe.

C 122364	Front seat cushion complete		*	1	71 Bro.-3 Cpe.-4 Cpe.,71-73 Bs. Cpe.,70 U Cpe.
C 122365	Front seat cushion complete		*	1	72 Bro.-3 Cpe.-4 Cpe.
C 122366	Front seat cushion complete		*	1	73-74 Bro.-3 Cpe.-4 Cpe.
C 122367	Front seat cushion complete		*	1	75 Bro.-3 Cpe.-4 Cpe.
C 123821	Front seat cushion complete		*	1	71-72 Cv.Cpe.-Cv.Bro.
C 123826	Front seat cushion complete		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 123827	Front seat cushion trim assembly		*	1	Cv.Cpe.-Cv.Bro.
C 122347	Front seat back complete-driver	L.H.D.	*	1	71 Bro.-3 Cpe.-4 Cpe.
C 122348	Front seat back complete-driver	R.H.D.	*	1	71 Bro.-3 Cpe.-4 Cpe.
C 123769	Front seat back complete-driver	L.H.D.	*	1	70 U Cpe.,71-73 Rs.Cpe.
C 123770	Front seat back complete-driver	R.H.D.	*	1	70 U Cpe.,71-73 Rs.Cpe.
C 122351	Front seat back complete-driver	L.H.D.	*	1	72-73-74 Bro.-3 Cpe.-4 Cpe.
C 122352	Front seat back complete-driver	R.H.D.	*	1	72-73-74 Bro.-3 Cpe.-4 Cpe.
C 122353	Front seat back complete-driver	L.H.D.	*	1	75 Bro.
C 122354	Front seat back complete-driver	R.H.D.	*	1	75 Bro.
C 123237	Front seat back complete-driver	L.H.D.	*	1	75 3 Cpe.-4 Cpe.
C 123238	Front seat back complete-driver	R.H.D.	*	1	75 3 Cpe.-4 Cpe.
C 123813	Front seat back complete-driver	L.H.D.	*	1	71-72-Cv.Cpe.-Cv.Bro.
C 123814	Front seat back complete-driver	R.H.D.	*	1	71-72 Cv.Cpe.-Cv.Bro.
C 123815	Front seat back complete-driver	L.H.D.	*	1	73-74-75 Cv.Cpe.-Cv.Rro.
C 123816	Front seat back complete-driver	R.H.D.	*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 123822	Front seat back trim assembly-R.H		*	1	71-72-Cv.Cpe.-Cv.Bro.
C 123823	Front seat back trim assembly-L.H		*	1	71-72 Cv.Cpe.-Cv.Bro.
C 123824	Front seat back trim assembly-R.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 123825	Front seat back trim assembly-L.H		*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 122491	Front seat back complete-passenger	L.H.D.	*	1	71 Bro.-4 Cpe.
C 122492	Front seat back complete-passenger	R.H.D.	*	1	71 Bro.-4 Cpe.
C 123495	Front seat back complete-passenger	L.H.D.	*	1	72-73-74 Bro.-4 Cpe.
C 122496	Front seat back complete-passenger	R.H.D.	*	1	72-73-74 Bro.-4 Cpe.
C 122497	Front seat back complete-passenger	L.H.D.	*	1	75 Bro.
C 122498	Front seat back complete-passenger	R.H.D.	*	1	75 Bro.
C 123239	Front seat back complete-passenger	L.H.D.	*	1	75 4 Cpe.
C 123240	Front seat back complete-passenger	R.H.D.	*	1	75-4 Cpe.
C 123817	Front seat back complete-passenger	L.H.D.	*	1	71-72 Cv.Cpe.-Cv.Bro.
C 123818	Front seat back complete-passenger	R.H.D.	*	1	71-72 Cv.Cpe.-Cv.Bro.
C 123819	Front seat back complete-passenger	L.H.D.	*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 123820	Front seat back complete-passenger	R.H.D.	*	1	73-74-75 Cv.Cpe.-Cv.Bro.
C 122491	Front seat back complete-passenger	L.H.D.	*	1	71 3 Cpe.
C 122495	Front seat back complete-passenger	To car	*	1	72-73-74 3 Cpe.
C 123239	Front seat back complete-passenger	Nos.70577	*	1	75 3 Cpe.
C 123773	Front seat back complete-passenger	7113518	*	1	Bs.Cpe.-U Cpe.
C 122492	Front seat back complete-passenger	724720	*	1	71 3 Cpe.
C 122496	Front seat back complete-passenger	732359	*	1	72-73-74 3 Cpe.
C 123240	Front seat back complete-passenger	742004	*	1	75 3 Cpe.
C 123774	Front seat back completepassenger	751097	*	1	Bs.Cpe.-U Cpe.

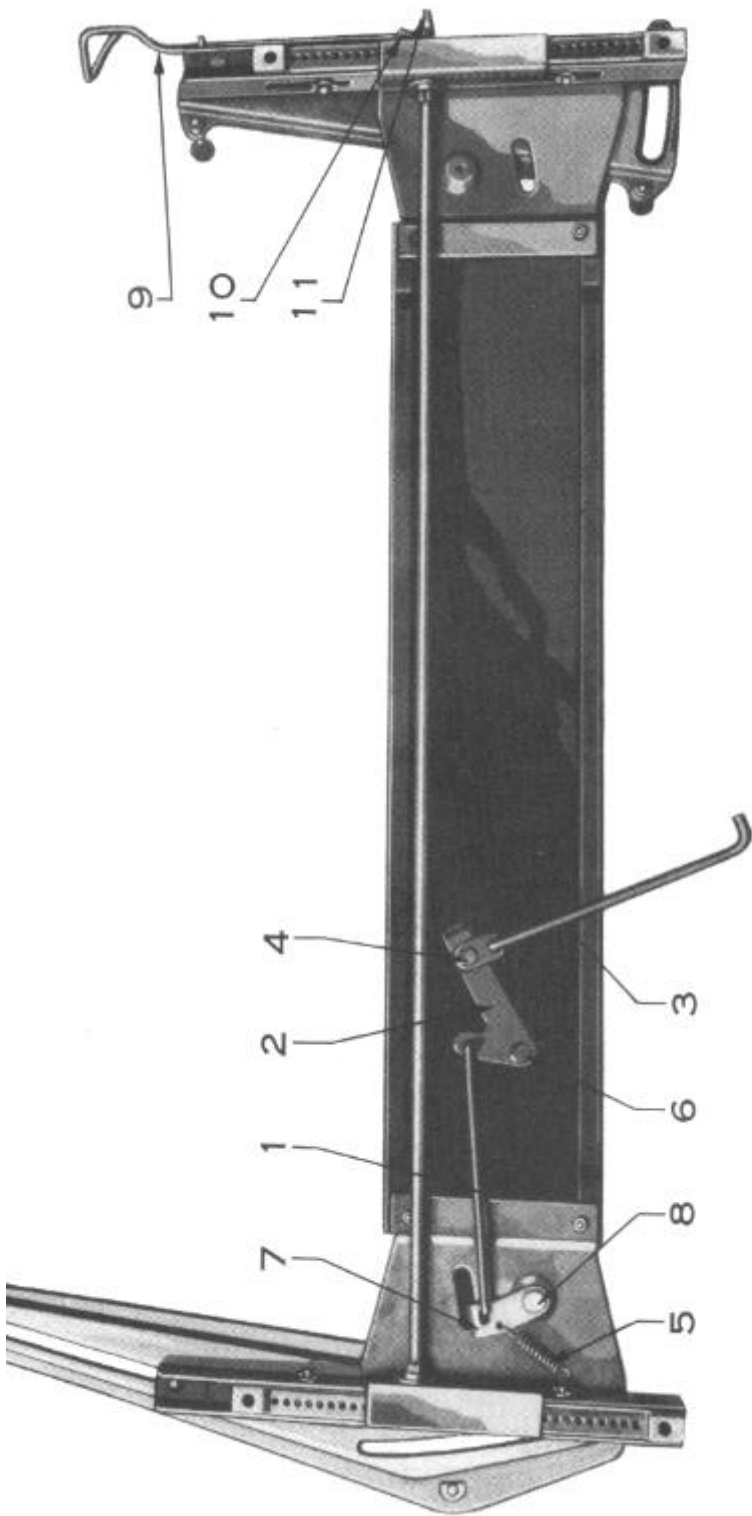

FRONT SEAT TRACK
Illustration K

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT SEAT DIVIDED BACK TYPE (Cont'd.)				
C	122348	Front seat back complete-passenger	After	L.H.D. * 1 71 3 Cpe.
C	122352	Front seat back complete-passenger	car nos.	L.H.D. * 1 72-73-74 3 Cpe.
C	123238	Front seat back complete-passenger	70577	L.H.D. * 1 75 3 Cpe.
C	123770	Front seat back complete-passenger	7113518	L.H.D. * 1 Bs.Cpe.-U Cpe.
C	122347	Front seat back complete-passenger	724720	R.H.D. * 1 71 3 Cpe.
C	122351	Front seat back complete-passenger	732359	R.H.D. * 1 72-73-74 3 Cpe.
C	123237	Front seat back complete-passenger	742004	R.H.D. * 1 75 3 Cpe.
C	123769	Front seat back complete-passenger	751097	R.H.D. * 1 Bs.Cpe.-U Cpe.
C	122167	Front seat cushion spring		* 1 71-72 Bro.-3 Cpe.-4 Cpe.-71-73 Be. Cpe.,70 U Cpe.
C	124086	Front seat cushion spring		* 1 71-72 Cv.Cpe.-Cv.Bro.
C	124622	Front seat cushion spring		* 1 73-74-75 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
C	122170	Front seat back spring-R.H		* 1 Bro.-3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C	122171	Front seat back spring-L.H		* 1 Bro.-3 Cpe.-4 Cpe.-Bs.Cpe.-U Cpe.
C	124084	Front seat back spring-R.H		* 1 Cv.Cpe.-Cv.Bro.
C	124085	Front seat back spring-L.H		* 1 Cv.Cpe.-Cv.Bro.
C	121550	Front seat cushion assembly	L.H.D.	* 1 Bro.-4 Cpe.
C	121551	Front seat cushion frame assembly	R.H.D.	* 1 Bro.-4 Cpe.
C	122101	Front seat cushion frame assembly	L.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
C	122100	Front seat cushion frame assembly	R.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
C	123510	Front seat cushion frame assembly	L.H.D.	* 1 Cv.Cpe.-Cv.Bro.
C	123511	Front seat cushion frame assembly	R.H.D.	* 1 Cv.Cpe.-Cv.Bro.
C	121552	Front seat back frame assembly-R.H	L.H.D.	* 1 4 Cpe.-Cv.Cpe.,71 thru 74 Bro.-Cv.Bro.
C	121553	Front seat back frame assembly-L.H	L.H.D.	* 1 4 Cpe.-Cv.Cpe.,71 74 Bro.-Cv.Bro.
C	121554	Front seat back frame assembly-R.H	R.H.D.	* 1 4 Cpe.-Cv.Cpe.,71 74 Bro.-Cv.Bro.
C	121555	Front seat back frame assembly-L.H	R.H.D.	* 1 4 Cpe.-Cv.Cpe.,71 74 Bro.-Cv.Bro.
C	121588	Front seat back frame assembly-R.H	L.H.D.	* 1 75 Bro.-Cv.Bro.
C	121587	Front seat back frame assembly-L.H	L.H.D.	* 1 75 Bro.-Cv.Bro.
C	121588	Front seat back frame assembly-R.H	R.H.D.	* 1 75 Bro.-Cv.Bro.
C	121589	Front seat back frame assembly-L.H	R.H.D.	* 1 75 Bro.-Cv.Bro.
C	121554	Front seat back frame assembly-R.H	L.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
C	121553	Front seat back frame assembly-L.H	R.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
BO	121581	Front seat back frame stop		* 2 70 U Cpe.,71 thru 75 exc. Sed.
BO	18459	Front seat back frame stop screw	10--32x1/2"	* 4 70 U Cpe.,71 thru 75 exc. Sed.
BO	108529	Front seat back frame side pivot pin retainer		2 70 U Cpe.,71 thru 75 exc. Sed.
BO	70135	Front seat back frame pivot pin retainer taper pin		2 70 U Cpe.,71 thru 75 exc. Sed.
BO	121556	Front seat back support assembly-side-R.H		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	121557	Front seat back support assembly-side-L.H		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	121562	Front seat back support-side-to back frame brkt.-R.H		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	121563	Front seat back support-side-to back frame brkt.-L.H		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	121560	Front seat back support-side-to cushion frame bracket		* 4 70 U Cpe.,71 thru 75 exc. Sed.
BO	70875	Front seat back support-side-to cushion frame rivet.		4 70 U Cpe.,71 thru 75 exc. Sed.
BO	70295	Front seat back support-side-to cushion frame brkt. rivet		8 70 U Cpe.,71 thru 75 exc. Sed.
BZ	70874	Front seat back support-side-to cushion frame bolt nut		2 70 U Cpe.,71 thru 75 exc. Sed.
BO	121572	Front seat back support assembly-center		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	121573	Front seat back support center pivot pin		* 1 70 U Cpe.,71 thru 75 exc. Sed.
BO	71618	Front seat back support-center-to cushion frame rivet		4 70 U Cpe.,71 thru 75 exc. Sed.
BO	70875	Front seat back support-center-to cushion frame rivet		* 4 70 U Cpe.,71 thru 75 exc. Sed.
BO	121573	Front seat back support-center-pivot pin		1 70 U Cpe.,71 thru 75 exc. Sed.
BO	108529	Front seat back support-center-pivot pin retainer		2 70 U Cpe.,71 thru 77 exc. Sed.
BO	70135	Front seat back support-center-pivot pin ret. taper pin		2 70 U Cpe.,71 thru 77 exc. Sed.
BO	122169	Front seat back to operating rod anti-rattle spring.		* 1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro
C	123380	Front seat track assembly	L.H.D.	* 1 Cv.Bro.
C	123381	Front seat track assembly	R.H.D.	* 1 Cv.Bro.
C	121565	Front seat track assembly	L.H.D.	* 1 Bro.-4 Cpe.-Cv.Cpe.
C	121564	Front seat track assembly	R.H.D.	* 1 Bro.-4 Cpe.-Cv.Cpe.
BO	121446	Front seat adjusting track assembly-R.H	L.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
AO	121445	Front seat adjusting track assembly-L.H	L.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
BO	121444	Front seat adjusting track assembly-R.H	R.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
BO	121447	Front seat adjusting track assembly-L.H	R.H.D.	* 1 3 Cpe.-Bs.Cpe.-U Cpe.
BO	121574	Front seat track adjusting rod		* 1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
BO	121576	Front seat track adjusting rod lever		* 1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
BO	121580	Front seat track adjusting stop rod	L.H.D.	* 1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
BO	121581	Front seat track adjusting stop rod	R.H.D.	* 1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT SEAT DIVIDED BACK TYPE (Cont'd.)				
K-4	BO 121578	Front seat track adjusting stop rod to lever rivet	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-5	BO 96779	Front seat track adj. stop rod to lever spring washer		1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro
K-6	BO 121578	Front seat track adjusting stop rod lever to track		
		crossmember rivet	*	1 .Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	BO 121584	Front seat track adjusting stop lever L.H.D.	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-7	BO 121585	Front seat track adjusting stop lever R.H.D.	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-8	BO 121579	Front seat track adjusting stop lever to track		
		crossmember rivet	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	BO 122169	Front seat track to operating rod anti-rattle spring.	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-9	BO 124792	Front seat adjusting track lock handle L.H.D.	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	RO 124795	Front seat adjusting track lock handle R.H.D.	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-10	BO 124793	Front seat adjusting track lock handle spring	*	1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
K-11	BO 124794	Front seat adjusting track cam		1 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	BO 121439	Front seat adjusting track lock rod		1 3 Cpe.-Bs.Cpe.-U Cpe.
	BO 123997	Front seat adjusting track klock rod anti-rattle spring	*	1 3 Cpe.-Bs.Cpe.-U Cpe.
	BZ 63371	Front seat adj. track lock and anti-rattle spring clip	*	1 3 Cpe.-Bs.Cpe.-U Cpe.
	BM 71016	Front seat track to cushion frame bolt-front 5/16"-18x2 1/2"		2 3 Cpe.-Bs.Cpe.-U Cpe
	BO 70752	Front seat track to cushion frame bolt rear 5/16"-18x1 1/2"		2 .3 Cpe.-Bs.Cpe.-U Cpe.
	BO 71737	Front seat track to cushion frame bolt-front 1/4"-20x2"		4 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	BO 71461	Front seat track to cushion frame bolt-rear 1/4"-20x1-1/4"		4 Bro.-4 Cpe.-Cv.Cpe.-Cv.Bro.
	RO 170030	Front seat track to floor bolt-front 5/16"-24x1 1/4"	*	2 71 thru 75 all exc. Sed.
	BO 70096	Front seat track to floor bolt-rear 5/16"-24x3/4"		2 71 thru 75 all exc.Sed.
	BO 71648	Front seat track stop screw 10-32x3/8"		1 Cv.Bro.
	BO 71073	Front seat track stop screw nut 10-32x1/8"		1 Cv.Bro.
FRONT SEATS-SOLID BACK				
NOTE: All Sedans- Second type 3 Cpe. and Bs.Cpe.				
C 122323	Front seat cushion complete		*	1 71 Sed.-3 Cpe.,71-73 Bs.Cpe.
C 122324	Front seat cushion complete-	Cloth	*	1 72 Sed.-3 Cpe.,78 Sed.
C 122674	Front seat cushion complete	Leather		1 78 Sed.
C 122325	Front seat cushion complete		*	1 73-74 Sed.-3 Cpe.,76 Sed.
C 122326	Front seat cushion complete		*	1 75 Sed.-3 Cpe.,77 Sed.
C 124385	Front seat back complete		*	1 71 3 Cpe.,71-73 Bs.Cpe.
C 124386	Front seat back complete		*	1 72-73-74 3 Cpe.
C 124387	Front seat back complete		*	1 75 3 Cpe.
C 124528	Front seat back complete	Cloth		1 78 Sed.
C 124529	Front seat back complete	Leather		1 78 Sed.
C 122313	Front seat back complete		*	1 71 Sed.
C 122314	Front seat back complete		*	1 72 Sed.
C 122315	Front seat back complete		*	1 73-74 Sed.
C 122316	Front seat back complete		*	1 75 Sed.
C 122317	Front seat back complete		*	1 76 Sed.
C 122318	Front seat back complete		*	1 77 Sed.
C 124025	Front seat back complete		*	1 71 Sed.
C 124026	Front seat back complete		*	1 72 Sed.
C 124027	Front seat back complete		*	1 73-74 Sed.
C 123702	Front seat back complete		*	1 75 Sed.
C 124028	Front seat back complete		*	1 76 Sed.
C 123706	Front seat back complete		*	1 77 Sed.
C 122163	Front seat cushion spring		*	1 71-72 Sed.-3 Cpe.,71-73 Bs.Cpe.
C 124523	Front seat cushion spring		*	1 73 thru 77 Sed.,73-74-75 3 Cpe.
C 123523	Front seat back spring		*	1 Sedan-3 Cpe.-Bs.Cpe.
C 121442	Front seat cushion frame assembly		*	1 71 thru 75 Sed.
C 121443	Front seat cushion frame assy. (used without folding Table)		*	1 76-77-78 Sed.
C 123353	Front seat cushion frame assy. (used with folding table)		*	1 76-77 Sed.
C 121443	Front seat cushion frame assembly		*	1 3 Cpe.-Bs.Cpe.
C 121448	Front seat back frame assembly		*	1 3 Cpe.-Bs.Cpe.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT SEATS-SOLID BACK (Cont'd.)				
	C 121448	Front seat back frame assembly (used without folding table)	* 1	Sedan
	C 123352	Front seat back frame assembly (used with folding table)	* 1	Sedan
	C 123350	Front seat side rail assembly-R.H.	} Used with folding table	* 1 Sedan
	C 123351	Front seat side rail assembly-L.H.		* 1 Sedan
	BZ 70980	Front seat side rail to back frame bolt		2 Sedan
	C 121440	Front seat side rail assembly-R.H.	} Used with out folding table	* 1 Sedan-Bs.Cpe.
	C 121441	Front seat side rail assembly-L.H.		* 1 Sedan-Bs.Cpe.
	BO 18455	Front seat side rail to back frame bolt		2 Sedan-Bs.Cpe.-3 Cpe.
	BO 71737	Front seat side rail to back frame bolt nut	1/4"-20x1/4"	2 Sedan-Bs.Cpe.-3 Cpe.
	BZ 70874	Front seat side rail to frame bolt nut	1/4"-20x1/4"	4 Sedan-Bs.Cpe.-3 Cpe.
	BO 71313	Front seat side rail to frame bolt	1/4"-20x2-1/2"	4 Sedan-Bs.Cpe.-3 Cpe.
	BO 70874	Front seat side rail to cushion frame bolt nut	1/4"-20x1/4"	4 Sedan-Bs.Cpe.-3 Cpe.
	BO 117101	Front seat corner bracket		2 Sedan-Bs.Cpe.-3 Cpe.
	BO 18187	Front corner bracket to back frame bolt	1/4"-20x1-1/2"	4 Sedan-Bs.Cpe.-3 Cpe.
	BZ 12849	Front seat corner bracket to cushion frame bolt	1/4"-20x1/4"	4 Sedan-Bs.Cpe.-3 Cpe.
	BZ 70874	Front seat corner bracket to frame bolt nut	1/4"-20x1/4"	8 Sedan-3 Cpe.-Bs.Cpe.
	BO 121446	Front seat adjusting track assembly-R.H.	L.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 121445	Front seat adjusting track assembly-L.H.	L.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 121444	Front seat adjusting track assembly-R.H.	R.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 121447	Front seat adjusting track assembly-L.H.	R.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 121439	Front seat adjusting track lock rod	*	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 123997	Front seat adjusting track rod anti-rattle spring	*	1 Sedan-3 Cpe.-Bs.Cpe.
	BZ 63371	Front seat adjusting track lock rod anti-rattle spring clip		1 Sedan-3 Cpe.-Bs.Cpe.
K-9	BO 124792	Front seat adjusting track lock handle	L.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
	BO 124795	Front seat adjusting track lock handle	R.H.D. *	1 Sedan-3 Cpe.-Bs.Cpe.
K-10	BO 124793	Front seat adjusting track lock handle spring	*	1 Sedan-3 Cpe.-Bs.Cpe.
K-11	BO 124794	Front seat adjusting track lock handle cam	*	1 Sedan-3 Cpe.-Bs.Cpe.
	BM 71250	Front seat track to cushion frame bolt-front	5/16-18x3"	2 Sedan-3 Cpe.-Bs.Cpe.
	BO 170047	Front seat track to cushion frame bolt-rear	5/16"-16x1-1/2"	* 2 Sedan-3 Cpe.-Bs.Cpe.
	BO 123378	Front seat track to cushion frame bolt counter-sunk washer	*	4 Sedan-3 Cpe.-Bs.Cpe.
	BO 70096	Front seat track to floor bolt	5/16"-24x3/4"	4 Sedan-3 Cpe.
FRONT SEATS-COMMERCIAL BUCKET TYPE				
	C 122889	Front seat cushion complete-driver	L.H.D. *	1 U Co.-U Cpe.
	C 122890	Front seat cushion complete-driver	R.H.D. *	1 U Co.-U Cpe.
	C 123013	Front seat cushion complete-driver	L.H.D. *	1 Panel
	C 123014	Front seat cushion complete-driver	R.H.D. *	1 Panel
	C 122895	Front seat cushion complete-passenger	L.H.D. *	1 U Co.-U Cpe.
	C 122896	Front seat cushion complete-passenger	R.H.D. *	1 U Co.-U Cpe.
	C 123019	Front seat cushion complete-passenger	L.H.D. *	1 Panel
	C 123020	Front seat cushion complete-passenger	R.H.D. *	1 Panel
	C 123024	Front seat cushion trim assembly-R.H.	*	1 Panel
	C 123025	Front seat cushion trim assembly-L.H.	*	1 Panel
	C 122887	Front seat back complete-driver	L.H.D. *	1 U Co.-U Cpe.
	C 122888	Front seat back complete-driver	R.H.D. *	1 U Co.-U Cpe.
	C 123011	Front seat back complete-driver	L.H.D. *	1 Panel
	C 123012	Front seat back complete-driver	R.H.D. *	1 Panel

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
FRONT SEATS-COMMERCIAL (Cont'd.)				
BUCKET TYPE				
C 122893	Front seat back complete-passenger	L.H.D.	* 1	U Co.-U Cpe.
C 122894	Front seat back complete-passenger	R.H.D.	* 1	U Co.-U Cpe.
C 123017	Front seat back complete-passenger	L.H.D.	* 1	Panel
C 123018	Front seat back complete-passenger	R.H.D.	* 1	Panel
C 123022	Front seat back trim assembly-R.H		* 1	Panel
C 123023	Front seat back trim assembly-L.H		* 1	Panel
BZ 122515	Driver seat stop		* 1	
BO 71302	Driver seat stop to floor bolt	#8x1/2	1	Panel
C 119190	Folding seat cushion spring-2.H		1	Panel
C 119191	Folding seat cushion spring-L.H		1	U Co.-U Cpe.-Panel
C 117910	Folding seat back spring-2.H		1	U Co.-U Cpe.-Panel
C 117911	Folding seat back spring-L.H		1	U Co.-U Cpe.-Panel
C 122210	Seat cushion frame assembly-driver	R.H.D.	* 1	U Co.-U Cpe.-Panel
C 122211	Seat cushion frame assembly-driver	L.H.D.	* 1	U Co.-U Cpe.-Panel
C 122210	Seat cushion frame assembly-passenger	L.H.D.	* 1	U Co.-U Cpe.-Panel
C 122211	Seat cushion frame assembly-passenger	R.H.D.	* 1	U Co.-U Cpe.-Panel
C 117220	Seat back frame assembly-driver	R.H.D.	1	U Co.-U Cpe.-Panel
C 117221	Seat back frame assembly-driver	L.H.D.	1	U Co.-U Cpe.-Panel
C 117222	Seat back frame assembly-passenger	L.H.D.	1	U Co.-U Cpe.-Panel
C 117223	Seat back frame assembly-passenger	R.H.D.	1	U Co.-U Cpe.-Panel
BO 117224	Folding seat back support-R.H		1	U Co.-U Cpe.-Panel
BO 117225	Folding seat back support-L.H		1	U Co.-U Cpe.-Panel
BO 71617	Folding seat back support to cushion frame rivet		8	U Co.-U Cpe.-Panel
BO 108529	Seat back pivot collar		2	U Co.-U Cpe.-Panel
BO 71428	Seat back pivot collar washer	17/32x1x1/8	2	U Co.-U Cpe.-Panel
BO 70135	Seat back pivot collar taper pin	3/4"	2	U Co.-U Cpe.-Panel
BO 122212	Folding seat cushion frame seat slide bracket		* 4	U Co.-U Cpe.-Panel
BO 71734	Folding seat cushion frame seat slide brkt. to frame rivet		8	U Co.-U Cpe.-Panel
BZ 70511	Folding seat track to seat slide brkt-bolt	1/4"-28x5/8"	4	U Co.-U Cpe.-Panel
BO 71738	Folding seat track to floor bolt	5/18"-24x9/16"	4	U Cp.-U Cpe.-Panel
BZ 71359	Folding seat track to floor bolt	5/16-24x7/8" Thin Hd.	1	Panel
BO 122213	Driver seat adjusting track lock rod		* 1	U Co.-U Cpe.-Panel
BO 122214	Driver seat adjusting track assembly-R.H	R.H.D.	* 1	U Co.-U Cpe.-Panel
BO 122215	Driver seat adjusting track assembly-L.H	L.H.D.	* 1	U Co.-U Cpe.-panel
BO 122216	Driver seat adjusting track assembly-R.H	L.H.D.	* 1	U Co.-U Cpe.-Panel
BO 122217	Driver seat adjusting track assembly-L.H	R.H.D.	* 1	U Co.-U Cpe.-Panel
BO 117228	Passenger seat frame to back frame bracket-R.H		1	U Co.-U Cpe.-Panel
BO 117227	Passenger seat frame to back frame bracket-L.H		1	U Co.-U Cpe.-Panel
BZ 70692	Passenger seat frame to back frame bracket bolt		2	U Co.-U Cpe.-Panel
8070674	Passenger seat frame to back frame bracket bolt nut		2	U Co.-U Cpe.-Panel
BO 109954	Passenger seat frame support bracket-upper		2	U Co.-U Cpe.-Panel
BO 122218	Passenger seat frame support bracket-lower		* 2	U Co.-U Cpe.-Panel
BZ 549	Seat cushion frame support bracket clevis pin		2	U Co.-U Cpe.-Panel
BO 71734	Passenger seat frame support bracket to cushion frame rivet		4	U Co.-U Cpe.-Panel
BO 71600	Passenger seat frame support bracket to floor bolt		2	U Co.-U Cpe.-Panel
FRONT SEATS-COMMERCIAL				
CAB AND CAB PICKUP				
C 122934	Seat cushion complete		* 1	Cab-Cab Pu.
C 122935	Seat cushion trim assembly		* 1	Cab-Cab Pu.
C 122932	Seat back complete		* 1	Cab-Cab Pu.
C 122933	Seat back trim assembly		* 1	Cab-Cab Pu.
C 121295	Seat cushion frame assembly		* 1	Cab-Cab Pu.
C 121296	Seat back frame assembly		* 1	Cab-Cab Pu.
BO 89828	Seat cushion frame to back frame hinge assembly		3	Cab-Cab Pu.
BO 170055	Hinge bolt	1/4"-20x1 1/4"	* 9	Cab-Cab Pu.
BZ 70874	Hinge bolt nut	1/4"-20x1/4"	9	Cab-Cab Pu.
BO 70975	Seat cushion riser to floor bolt		4	Cab-Cab Pu.
BO 82312	Seat cushion dowel		2	Cab-Cab Pu.
BZ 70874	Seat cushion dowel nut	1/4"-20x1/4"	2	Cab-Cab Pu.
C 123090	Seat cushion spring		* 1	Cab-Cab Pu.
C 123091	Seat back spring		* 1	Cab-Cab Pu.
BO 102828	Seat back spring hanger bracket		2	Cab-Cab Pu.
BO 12187	Seat back spring hanger bracket wood screw		4	Cab-Cab Pu.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
REAR SEATS				
C 122340	Rear seat cushion complete	First type with high cushion springs	*	1 71 Bro.-Sed.
C 122341	Rear seat complete		*	1 72 Bro.-Sed.
C 122342	Rear seat cushion complete		*	1 73-74- Bro.-Sed.,76 Sed.
C 122343	Rear seat cushion complete		*	1 75 Bro.-Sed.,70 Sed.
C 122899	Rear seat cushion complete		*	1 U Co.
C 122376	Rear seat back complete		*	1 71 Bro.
C 122377	Rear seat back complete		*	1 72-03-74 Bro.
C 122378	Rear seat back complete		*	1 05 Bro.
C 122334	Rear seat back complete		*	1 71 Sed.
C 122335	Rear seat back complete		*	1 72-73-74-76 Sed.
C 122336	Rear seat back complete		*	1 75-77 Sed.
C 122898	Rear seat back complete		*	1 U Co.
C 124430	Rear seat cushion complete	Second type with lower cushion springs	*	1 71 Bro.-Sed.
C 124431	Rear seat cushion complete-cloth		*	1 72 Bro.-Sed.,78 Sed.
C 124422	Rear seat back complete		*	1 71 Bro.
C 124432	Rear seat cushion complete		*	1 73-74-Bro.-Sed.,76 Sed.
C 124433	Rear seat cushion complete		*	1 75 Bro.-Sed.,77 Sed.
C 124438	Rear seat cushion complete		*	1 U Co.
C 124434	Rear seat cushion complete-leather		*	1 78 Sed.
C 124423	Rear seat back complete		*	1 72-03-74 Bro.
C 124424	Rear seat back complete		*	1 75 Bro.
C 124426	Rear seat back complete		*	1 71 Sed.
C 124427	Rear seat back complete-cloth		*	1 72-03-74-78-78 Sed.
C 124429	Rear seat back completeleather		*	1 08 Sed.
C 124428	Rear seat back complete		*	1 75-77 Sed.
C 124436	Rear seat back complete		*	1 U Co.
C 123834	Rear seat cushion complete		*	1 71-72 Cv.Bro.
C 123835	Rear seat cushion complete		*	1 73-74-75 Cv.Bro.
C 123836	Rear seat cushion trim assembly		*	1 Cv.Bro.
C 123830	Rear seat back complete		*	1 71-72 Cv.Bro.
C 123831	Rear seat back complete		*	1 73-74-75 Cv.Bro.
C 123832	Rear seat back trim assembly		*	1 71-72 Cv.Bro.
C 123833	Rear seat back trim assembly		*	1 73-74-75 Cv.Bro.
C 121449	Rear seat back frame assembly		*	1 Bro.-Sed.
C 122970	Rear seat back frame assembly		*	1 U Co.
C 123094	Rear seat back frame assembly		*	1 Cv.Bro.
C 122164	Rear seat cushion spring	First type high cushion spring	*	1 71-72 Bro.-Sed.,70 U Co.
C 122166	Rear seat cushion spring		*	1 73-74-75 Bro.-Sed.,76-77 Sed.
C 122169	Rear seat back spring with		*	1 U Co.-Bro.
C 122161	Rear seat back spring		*	1 Sed.
C 124190	Rear seat cushion spring	Second type lower cushion spring	*	1 71-72 Bro.-Sed.
C 124191	Rear seat cushion spring with		*	1 73-74-75 Bro.-Sed.,78-77 Sed.
C 124469	Rear seat cushion spring		*	1 U Co.
C 124192	Rear seat back spring		*	1 Bro.-U Co.
C 124193	Rear seat back spring		*	1 Sed.
C 124088	Rear seat cushion spring		*	1 71-72 Cv.Bro.
C 124089	Rear seat cushion spring		*	1 73-74-75 Cv.Bro.
C 124090	Rear seat back spring		*	1 Cv.Bro.
C 122756	Rear seat cushion riser assembly		*	1 Cv.Bro.
BZ 122757	Rear seat cushion riser bracket		*	4 Cv.Bro.
BO 71302	Rear seat cushion riser bracket to floor screw			4 Cv.Bro.
BO 124520	Rear seat cushion riser carpet assembly		*	1 Cv.Bro.
C 123712	Rear seat back frame curtain container assembly			1 Cv.Bro.
BO 122972	Rear seat back frame to wheelhouse bracket		*	2 U Co.
BO 170022	Rear seat back frame bracket to wheelhouse wing bolt		*	2 U Co.
BT 71497	Rear seat back frame to bracket bolt - 1/4"-20x1-7/8"			4 U Co.
BO 170021	Rear seat back frame to bracket wing bolt - 1/4"-20x2"		*	2 U Co.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
AUXILIARY SEAT 4 Cpe. and Cv. Cpe.				
C 123589	Auxiliary seat cushion complete	L.H.D.	* 1	71 4 Cpe.
C 123590	Auxiliary seat cushion complete	R.H.D.	* 1	71 4 Cpe.
C 123597	Auxiliary seat cushion complete	L.H.D.	* 1	72-73-74-75 4 Cpe.
C 123598	Auxiliary seat cushion complete	R.H.D.	* 1	72-73-74-75 4 Cpe.
C 123585	Auxiliary seat back complete	L.H.D.	* 1	71 4 Cpe.
C 123586	Auxiliary seat back complete	R.H.D.	* 1	71 4 Cpe.
C 123593	Auxiliary seat back complete	L.H.D.	* 1	72-73-74--75 4 Cpe.
C 123594	Auxiliary seat back complete	R.H.D.	* 1	72-73-74-75 4 Cpe.
C 123092	Auxiliary seat cushion spring		* 1	4 Cpe.
C 123093	Auxiliary seat back spring		* 1	4 Cpe.
BO 122118	Auxiliary seat cushion bottom attaching plate		* 1	4 Cpe.
BO 71302	Auxiliary seat cushion bottom attaching plate to floor screw.		1	4 Cpe.
HA 124367	Auxiliary seat complete	Service	* 1	Cv.Cpe.
C 124370	Auxiliary seat cushion complete		* 1	Cv.Cpe.
C 124368	Auxiliary seat back complete		* 1	Cv.Cpe.
C 124311	Auxiliary seat cushion frame		* 1	Cv.Cpe.
BO 96023	Auxiliary seat cushion frame tee nut		3	Cv.Cpe.
BO 124313	Auxiliary seat back support bracket		* 1	Cv.Cpe.
BO 71531	Auxiliary seat back support brkt. bolt	1/4"-20x1 3/8"	3	Cv.Cpe.
BO 89887	Auxiliary seat back support		1	Cv.Cpe.
BO 70781	Auxiliary seat back support hinge bolt		1	Cv.Cpe.
BO 70782	Auxiliary seat back support hinge bolt acorn nut		1	Cv.Cpe.
FOLDING TABLE				
C 123700	Table top and trim assembly		* 1	71-72-73-74-76 Sed.
C 123698	Table top and trim assembly		* 1	75-77 Sedan
C 123377	Table top board assembly		* 1	71-72-73-74-76 Sedan
C 123371	Table top board assembly		* 1	75-70 Sedan
C 123372	Table top moulding-upper-R.H		* 1	Sedan
C 123373	Table top moulding-upper-L.H		* 1	Sedan
C 124374	Table top moulding-end-R.H		* 1	Sedan
C 124375	Table top moulding-end-L.H		* 1	Sedan
C 123376	Table top moulding-lower		* 1	Sedan
BO 71698	Table top moulding screw	#8x7/8"	17	Sedan
BO 71701	Table top moulding screw finish washer	#28 Special	17	Sedan
BO 123354	Table support arm-lower-R.H.		* 1	Sedan
BO 123355	Table support arm-lower-L.H		* 1	Sedan
BO 17922	Table support arm-lower-wood screw	#10x1 1/4"	8	Sedan
C 123358	Table support arm rod assembly		* 1	Sedan
BO 123360	Table support arm guide bolt		* 2	Sedan
BO 71513	Table support arm guide bolt nut	5/18"-24x7/16"	2	Sedan
BO 123363	Table support arm guide bolt roller		* 2	Sedan
BO 123361	Table support arm pivot pin		* 2	Sedan
BO 123362	Table support arm rod spacer		* 2	Sedan
BO 123364	Front seat back frame partition panel		* 1	Sedan
BO 123366	Table support arm guide-R.H		* 1	Sedan
BO 123367	Table support arm guide-L.H		* 1	Sedan
BZ 18419	Table support arm guide to partition panel rivet		1	Sedan
BO 123365	Table lock retaining plate		* 1	Sedan
BO 123369	Table top lock catch-first type		* 1	Sedan
BO 124416	Table top lock catch-second type		* 1	Sedan
BO 123370	Table lock assembly		* 1	Sedan
BO 170010	Table lock screw	8-32x3/4"	* 1	Sedan
BO 121747	Table pull-to assembly		* 1	Sedan

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
REAR COMPARTMENT Brougham-Sedan-Utility Coach				
C 120356	Rear compartment door assembly		* 1	Bro.-Sed.-U Co. (Without trunk)
C 120362	Rear compartment door panel-outside		* 1	Bro.-Sed.-U Co. (Without trunk)
C 120375	Trunk lid assembly		* 1	Bro.-Sed.-U Co. (trunk models)
C 121891	Trunk lid liner assembly		* 1	Bro.-Sed.-U Co. (trunk models)
BO 123133	Rear compartment door weatherstrip		* 1	Bro.-Sed.-U Co.
BO 121174	Rear compartment door ornament		* 1	Bro.-Sed.-U Co.71-72 Bro.-Sed., 70 U Co.,78 Sed.
BO 121175	Rear compartment door ornament		* 1	73 thru '77 Bro.-Sed.
BO 71073	Rear compartment door ornament nut	10-32x1/8"	4	Bro.-Sed.-U Co.
BZ 71260	Rear compartment door ornament washer	13/64"x1/2"x1/324"	4	Bro.-Sed.-U Co.
BO 116816	Rear compartment door ornament seal		4	Bro.-Sed.-U Co.
BO 118620	Door hinge bracket-R.H		1	Bro.-Sed.-U Co.
BO 116621	Door hinge bracket-L.H		1	Bro.-Sed.-U Co.
BO 116262	Door hinge assembly		2	Bro.-Sed.-U Co.
BX 3197	Door hinge rivet	5/16"x7/8"	2	Bro.-Sed.-U Co.
9Z 1062	Door hinge to panel bolt	3/8"-24x7/8"	4	Bro.-Sed.-U Co. (without trunk)
BZ 1061	Door hinge to panel bolt	3/8"-24x1/8"	4	Bro.-Sed.-U Co. (trunk models)
BZ 4963	Door hinge to panel bolt washer	25/64"x1-5/16"x1/8"	4	Bro.-Sed.-U Co. (without trunk)
BZ 4963	Door hinge to panel bolt washer	25/64"x1-5/16"x1/8"	8	Bro.-Sed.-U Co. (trunk models)
BX 12415	Door hinge to panel bolt	3/8"-24x21/64"	4	Bro.-Sed.-U Co. (trunk models)
BO 107540	Door hinge tapping plate		2	Bro.-Sed.-U Co. (without trunk)
BO 121390	Door check arm assembly	To car Nos.	* 1	Bro.-Sed.-U Co.
BO 121391	Door check arm-upper	701426,7121900	* 1	Bro.-Sed.-U Co.
BO 121392	Door check arm-lower	727265,733049	* 1	Bro.-Sed.-U Co.
BO 116257	Door check arm bracket-on door	742458,751431	1	Bro.-Sed.-U Co.
BZ 70970	Door check arm rivet	76650	2	Bro.-Sed.-U Co.
BO 121395	Door check arm spring retainer rivet	771790	* 1	Bro.-Sed.-U Co.
BO 124260	Door check arm assembly	After above car numbers	* 1	Bro.-Sed.-U Co.
BO 124262	Door check arm-upper		* 1	Bro.-Sed.-U Co.
BO 124263	Door check arm-lower		* 1	Bro.-Sed.-U Co.
BO 124261	Door check arm bracket-on door		* 1	Bro.-Sed.-U Co.
BO 124399	Door check arm rivet		* 2	Bro.-Sed.-U Co.
BO 96779	Door check arm rivet spring washer		4	Bro.-Sed.-U Co.
BO 124271	Door check arm spring ret. rivet		* 1	Bro.-Sed.-U Co.
BO 121394	Door check arm spring		* 1	Bro.-Sed.-U Co.
BO 83191	Door check arm bracket tapping plate		1	Bro.-Sed.-U Co.
BO 9159	Door check to door panel bolt	1/4"-20x5/8"	2	Bro.-Sed.-U Co.
BO 70242	Door check to opening reinf. bolt	1/4"-20x3/4"	2	Bro.-Sed.-U Co.
BZ 70874	Door check to opening reinf. bolt nut.	1/4"-20x1/4"	2	Bro.-Sed.-U Co.
BO 121396	Door check arm spring rivet		* 2	Bro.-Sed.-U Co.
BO 116779	Door lock assembly		2	Bro.-Sed.-U Co.
BO 18464	Door lock attaching bolt	1/4"-20x5/8"	2	Bro.-Sed.-U Co.
BO 116085	Door lock striker plate		2	Bro.-Sed.-U Co.
BO 121824	Door lock handle and cylinder complete		* 2	Bro.-Sed.-U Co. (without trunk)
BO 121828	Door lock handle-less cylinder		* 2	Bro.-Sed.-U Co. (without trunk)
BO 121825	Trunk lock handle and cylinder complete		* 2	Bro.-Sed.-U Co. (trunk models)
BO 121827	Trunk lock handle-less cylinder		* 2	Bro.-Sed.-U Co. (trunk models)
BO 121846	Lock cylinder and keys assembly		* 2	Bro.-Sed.-U Co.
BO 121828	Lock cylinder-blank		* 2	Bro.-Sed.-U Co.
BO 109079	Lock key Specify number		4	Bro.-Sed.-U Co.
BO 70526	Lock handle to door screw	10-32x7/8"	1	Bro.-Sed.-U Co.
BO 120579	Lock handle pad *		1	Bro.-Sed.-U Co.
C 120621	Rear compartment floor board		* 1	Bro.-Sed.
C 124475	Rear compartment floor board		* 1	U Co.
C 120622	Floor board riser-R.H	6.00 tires	* 1	Bro.-Sed.-U Co. Without
C 120623	Floor board riser-L.H	6.00 tires	* 1	Bro.-Sed. trunk
C 122084	Floor board riser-R.H	7.00 tires	* 1	Bro.-Sed.
C 122085	Floor board riser-L.H	7.00 tires	* 1	Bro.-Sed.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
REAR COMPARTMENT (Cont'd.) Brougham-Sedan-Utility Coach				
C 120624	Trunk floor board assembly-front		* 1	Bro.-Sed.
C 124474	Trunk floor board assembly-front		* 1	U Co.
C 120625	Trunk floor board assembly-rear		* 1	Bro.-Sed.-U Co.
C 120626	Floor board riser-R.H.	6.00 tires	* 1	Bro.-Sed.-U Co.
C 120727	Floor board riser-L.H.	6.00 tires	* 1	Bro.-Sed.-U Co.
C 122090	Floor board riser-R.H.	7.00 tires	* 1	Bro.-Sed.
C 122091	Floor board riser-L.H.	7.00 tires	* 1	Bro.-Sed.
BO 117148	Floor board riser bracket-upper		6	Bro.-Sed.-U Co.
BO 117479	Floor board riser bracket-lower		6	Bro.-Sed.-U Co.
BO 71630	Floor board riser bracket rivet	1/4x1 1/16"	12	Bro.-Sed.-U Co.
BO 9159	Floor board riser bracket bolt	1/4"-20x5/8"	6	Bro.-Sed.-U Co.
C 120629	Floor board cross bar	6.00 tires	* 1	Bro.-Sed.
C 124472	Floor board cross bar	6.00 tires	* 1	U Co.
C 121778	Floor board cross bar	7.00 tires	* 1	Bro.-Sed.
BO 71664	Floor board cross bar bolt	5/16"-18x2-1/4"	4	Bro.-Sed.-U Co.
BO 70674	Floor board cross bar bolt nut	5/16"-18x5/16"	4	Bro.-Sed.-U Co.
BO 108898	Trunk strap		2	Bro.-Sed.
BO 71392	Trunk strap loop		4	Bro.-Sed.
BO 71630	Trunk strap loop to floor board rivet		8	Bro.-Sed.
C 117790	Trunk strap rear compartment bar		1	Bro.-Sed.
C 12194	Trunk strap rear compartment bar Bolt	5/16"-18x1-1/4"	4	Bro.-Sed.
BO 70674	Trunk strap rear compartment bar bolt nut		4	Bro.-Sed.
BO 71392	Trunk strap loop		2	Bro.-Sod.
BO 71334	Trunk strap loop screw	12-28x5/8"	4	Bro.-Sed.
BZ 70795	Trunk strap loop screw nut	12-28x3/16"	4	Bro.-Sed.
HA 123565	Trunk complete-service kit		* 1	Bro.-Sed.-U Co. (Side Mount)
HA 123034	Trunk complete-service kit	6.00 tires	* 1	Bro.-Sed.-U Co. (Rear Mount)
HA 123035	Trunk complete-service kit	7.00 tires	* 1	Bro.-Sed. (Rear mount)

**REAR COMPARTMENT
Coupes and Convertibles**

C 120868	Deck door assembly		* 1	71 thru 77 Coupes and Conv.
C 123128	Deck door assembly		* 1	U Cpe.
C 120858	Deck door outside panel (with license brkt. holes)		* 1	All coupes and Conv.
C 123421	Deck door outside panel (without license brkt. holes)		* 1	U Cpe.
C 120860	Deck door inside panel		* 1	71 thru 75 Coupes and Conv.
BO 123130	Deck door inside panel		* 1	U Cpe.
BO 121262	Deck door weatherstrip		* 1	Coupes and Conv.
BO 121174	Deck door ornament		* 1	70-71-72 Coupes and Conv.
BO 121175	Deck door ornament		* 1	73-74-75 Coupes and Conv.
BO 71073	Deck door ornament nut	10-32x1/8"	4	Coupes and Conv.
BZ 71260	Deck door ornament washer	10/64"x1/2"x1/32"	4	Coupes and Conv.
BO 116816	Deck door ornament seal		4	Coupes and Conv.
BO 121782	Deck door hinge assembly		* 2	Coupes and Conv.
BZ 8683	Hinge clevis pin	5/16"x1- 3/4"	2	Coupes and Conv.
BZ 1062	Hinge to door panel bolt	3/8"-24x7/8"	4	Coupes and Conv.
BO 107540	Hinge tapping plate		2	Coupes and Conv.
BO 123121	Door check arm assembly-L.H.	First type,	* 1	Coupes and Conv.
BO 123120	Door check arm assembly-R.H.	to car	* 1	U Cpe.
BO 123126	Door check arm-upper Nos.	701426-	* 1-2	Coupes and Conv.
BO 123123	Door check arm-lower-L.H.	7121900-	* 1	Coupes and Conv.
BO 123122	Door check arm-lower-R.H.	727265-	* 1	U Cpe.
BO 123125	Door check arm brkt.-L.H. (on door)	733049-	* 1	Coupes and Conv.
BO 123124	Door check arm brkt.-R.H. (on door)	742458-	* 1	U Cpe.
BZ 70970	Door check arm rivet 1/4"x5/8"	751431	2-4	Coupes and Conv.
BO 121395	Door check spring ret. rivet		* 1-2	Coupes and Conv.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
REAR COMPARTMENT (Cont'd.) Coupes and Convertibles				
BO 124265	Door check arm assembly-L.H.	Second type	* 1	Coupes and Conv.
BO 124264	Door check arm assembly-R.H.	After	* 1	U Cpe.
PO 124270	Door check arm-upper	car nos.	* 1	Coupes and Conv.
BO 124267	Door check arm-lower-L.H.	701426	* 1	Coupes and Conv.
90 124266	Door check arm-lower-R.H.	7121900	* 1	U Cpe.
BO 124399	Door check arm bracket-L.H.(on door)	727265	* 1	Coupes and Conv.
BO 124268	Door check arm bracket-R.H.(on door)	733049	* 1	U Cpe.
BO 124399	Door check upper arm to bracket	742458	* 2-4	Coupes and Conv.
BO 124271	Door check spring retainer rivet	751431	* 1-2	Coupes and Conv.
BO 96779	Door check rivet spring washer		4-8	Coupes and Conv.
BO 120865	Door check arm bracket-on body		* 1-2	Coupes and Conv.
90 121397	Door check arm bracket attaching plate		* 1-2	Coupes and Conv.
BO 9159	Door check to panel bolt	1/4"-20x5/8"	* 2-4	Coupes and Conv.
09 121394	Door check spring		* 1-2	Coupes and Conv.
60 121396	Door check spring rivet		* 1-2	Coupes and Conv.
BM 70242	Door check to opening reinforcement bolt		2-4	Coupes and Conv.
BZ 70874	Door check to opening reinforcement bolt nut		2-4	Coupes and Conv.
BO 116779	Deck door lock assembly		2	Coupes and Conv.
BO 18464	Deck door lock attaching bolt		8	Coupes and Conv.
BO 116085	Lock striker plate		2	Coupes and Conv.
BO 121824	Lock handle and cylinder complete		* 2	Coupes and Conv.
BO 121826	Lock handle-less cylinder		* 2	Coupes and Conv.
BO 121846	Lock cylinder and keys assembly		* 2	Coupes and Conv.
90 121828	Lock cylinder-blank		2	Coupes and Conv.
BO 109079	Lock key		2	Coupes and Conv.
BO 70526	Lock handle to door screw		4	Coupes and Conv.
BO 120579	Lock handle escutcheon pad		* 4	Coupes and Conv.
C 122301	Rear compartment floor board		* 1	71 thru 75 Coupes and Conv.
BO 71630	Floor board rivet		6	71 thru 75 Coupes and Conv.
C 120622	Floor board riser-R.H.	5.50 or 6.00 tires	* 1	71 thru 75 Coupes and Conv.
C 120623	Floor board riser-L.H.	5.50 or 6.00 tires	* 1	71 thru 75 Coupes and Conv.
C 122084	Floor board riser-R.H.	7.00 tires	* 1	71 thru 75 Coupes and Conv.
C 122085	Floor board riser-L.H.	7.00 tires	* 1	71 thru 75 Coupes and Conv.
90 117479	Floor board riser bracket-lower		6	71 thru 75 Coupes and Conv.
BO 117478	Floor board riser bracket-upper		6	71 thru 75 Coupes and Conv.
BO 122587	Floor board riser bracket-front		* 2	71 thru 75 Coupes and Conv.Cpe.
BO 71630	Floor board riser bracket rivet		12	71 thru 75 Coupes and Conv.
BO 9159	Floor board riser bracket bolt		6	71 thru 75 Coupes and Conv.
C 123099	Floor cross bar	6.00 & 7.00 tires	* 1	71 thru 75 Coupes and Conv.
C 123957	Floor cross bar	5.50 tires	* 1	Bs.Cpe.
BO 71664	Floor cross bar to panel or riser bolt		4	71 thru 75 Coupes and Conv.
BZ 70674	Floor cross bar to panel or riser bolt nut	1/4-20x1/4	4	71 thru 75 Coupes and Conv.
C 123099	Floor cross bar		* 1	Cv.Bro. } With
BO 71664	Floor cross bar to panel or riser bolt		4	Cv.Bro. } side mount
BZ 70674	Floor cross bar to panel or riser bolt		4	Cv.Bro. } tires
C 122110	Rear compartment partition assembly (First type-without package compartment)		* 1	3 Cpe.-Rs.Cpe.
C 124359	Rear compartment partition assembly (Second type-with package compartment)		* 1	3 Cpe.-Rs.Cpe.
C 122080	Rear compartment partition assembly		* 1	4 Cpe.
C 123088	Rear compartment partition assembly		* 1	Cv.Cpe.
C 123086	Rear compartment partition assembly		* 1	Cv.Bro.
C 124845	Package compartment panel assembly		* 1	3 Cpe.-Bs.Cpe.
PICKUP BOX UTILITY COUPE				
C 122500	Pickup box assembly		* 1	U Cpe.
BO 123406	Box support-front		* 1	U Cpe.
BO 123405	Box support-spacer		* 2	U Cpe.
8Z 1062	Box support-front-to side member bolt	3/8"-24x7/8"	4	U Cpe.
BX 12415	Box support-front-to side member bolt nut	3/8"-24x21/64"	4	U Cpe.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
PICKUP BOX (Cont'd.) UTILITY COUPE				
C	123407	Box support-rear	*	1 U Cpe.
BZ	1062	Box support-rear-to side member bolt	3/8"-24x7/8"	2 U Cpe.
BZ	70674	Box support-rear-to side member bolt nut	5/16"-18-5/16"	2 U Cpe.
BO	101798	Box support-rear-spacer		2 U Cpe.
C	123408	Box support-side-R.H	*	1 U Cpe.
C	123409	Box support-side-L.H	*	1 U Cpe.
BO	71302	Seat tray to side support crossmember screw	#8x1/2"	13 U Cpe.
BX	71252	Seat tray to side support crossmember bolt	3/8"-24x1 1/4"	2 U Cpe.
BX	12415	Seat tray to side support crossmember bolt nut	3/8"-24x21/64"	2 U Cpe.
BO	123415	Roller assembly	*	6 U Cpe.
BO	123402	Roller stud	*	6 U Cpe.
PT	598	Roller stud nut	5/8"-18x35/64"	6 U Cape
BO	170049	Roller stud spacer	41/64x1"x3/32"	* AR U Cpe.
BO	123411	Box stop	*	4 U Cpe.
BZ	1062	Box stop bolt	3/8"-24x7/8"	8 U Cpe.
BX	12415	Box stop bolt nut	3/8"-24x21/84"	8 U Cpe.
C	123418	Lock rod-R.H	*	1 U Cpe.
C	123419	Lock rod-L.H	*	1 U Cpe.
BO	123412	Lock rod bracket-front	*	2 U Cpe.
BO	70157	Lock rod bracket-front-bolt	1/4"-20x1/2"	4 U Cpe.
AZ	70874	Lock rod bracket-front-bolt nut	1/4"-20x1/4"	4 U Cpe.
BO	123413	Lock rod bracket-rear	*	2 U Cpe.
BO	18454	Lock rod bracket-rear-rivet	3/16"x7/16"	4 U Cpe.
BO	123414	Lock bracket	*	2 U Cpe.
BZ	1062	Lock bracket bolt	3/8"-24x7/8"	4 U Cpe.
BO	123416	Lock pin	*	2 U Cpe.
BO	95978	Lock pin retainer		2 U Cpe.
BO	97308	Lock pin retainer pin		2 U Cpe.
BO	123417	Lock spring	*	2 U Cpe.
INTERIOR FITTINGS				
BO	116996	Rear view mirror and clamp assembly-less bracket		1 All except Panel-Cab & Cab Pu.
BO	119940	Rear view mirror stud		1 All except Panel-Cab & Cab Pu.
BO	117477	Rear view mirror bracket		1 All except Panel--Cab & Cab Pu.
BO	70704	Rear view mirror to header screw	10-32x1 1/4"	2 All except Panel-Cab & Cab Pu.
BO	121269	Dome lamp reflector and socket assembly	*	1 71-72 closed models, 70 U Co.-U Cape
BO	121272	Dome lamp reflector and socket assembly	*	1 73 thru 78 Sed.
BO	121282	Dome lamp reflector and socket assembly	*	1 73-74-75 Bro.-3 Cp.4 Cpe.Bs.Cpe.
BO	108071	Dome lamp glass		1 71 thru 77 closed models,78 Sed., 70 U Co.-U Bro. Sed., 70 U Co.-U Bro.
BO	108072	Dome lamp glass retaining ring		1 71 thru 77 closed models,78 Sed., 70 U Co.-U Bro.
BO	121275	Dome lamp switch	*	1 73 thru 78 Sed.
BO	121274	Dome lamp switch escutcheon plate	*	1 73 thru 78 Sed.
80	71523	Dome lamp switch escutcheon plate screw	#8-32	2 73 thru 78 Sed.
BO	154194	Rear door dome lamp switch	*	1 75-77 Sed.
BO	154195	Rear door dome Lamp switch nut	*	1 75-77 Sed.
BO	170002	Rear door dome lamp switch lockwasher	1/2"	* 1 75-77 Sed.
BO	121505	Cigar lighter assembly	*	1-2 75-76--77
BO	121506	Cigar lighter base assembly	*	1-2 75-76-77
BO	121518	Cigar lighter heating element and knob assembly	*	1-2 75-76-77
HA	122924	Cigar lighter heating element	*	1-2 75-76-77
BO	121508	Cigar lighter knob	*	1-2 75-76-77
BO	121514	Cigar lighter base clamp	*	1-2 75-76-77
BO	70122	Cigar lighter attaching nut	3/8"-24x5/32"	1-2 75-76-77
BO	121509	Cigar lighter mounting bezel		1 75-76-77
BO	121620	Instrument panel ash receiver assembly	*	1 70,71,72,78
BO	121623	Instrument panel ash receiver assembly	*	1 73,74,75,76,77

ILLUS NO.	PART NO.	NAME		PER CAR	MODEL
INTERIOR FITTINGS (Cont'd.)					
BO 121621	Instrument panel ash receiver tray assembly			*	1 70-71-72-78
BO 121624	Instrument panel ash receiver tray assembly			*	1 73,74,75,76,77
BO 121627	Instrument panel ash receiver tray knob			*	1 All
BO 121622	Instrument panel ash receiver tray cover			*	1 70,71,72,78
BO 121625	Instrument panel ash receiver tray cover			*	1 73,74,75,76,77
BO 121626	Instrument panel ash receiver tray guide			*	1 All
BO 71716	Instrument panel ash receiver guide screw	10-32x3/8"		2	All
BO 71073	Instrument panel ash receiver guide screw nut	10-32x1/8"		2	All
BO 121263	Seat back ash receiver assembly			*	1 71-72-78 Sed.
BO 121263	Seat back ash receiver assembly-first type, walnut			*	1 73-74 Sed.
BO 124577	Seat back ash receiver assembly-second type, walnut pearl			*	1 73-74 Sed.
BO 121265	Seat back ash receiver tray assembly			*	1 71-72-73-74-78 Sed.
BO 121277	Rear quarter ash receiver assembly			*	1 72 Bro.
BO 121278	Rear quarter ash receiver tray and cover assembly			*	1 72 Bro.
BO 121277	Rear quarter ash receiver assembly	}	First* type * walnut	2	73-74 Bro.
BO 121277	Rear quarter ash receiver tray and cover assy.			2	73-74 Bro.
BO 124578	Rear quarter ash receiver assy.	}	Second type walnut pearl	*	2 73-74 Bro.
BO 124579	Rear quarter ash receiver tray and cover assembly			*	2 73-74 Bro.
BO 70042	Rear quarter ash receiver to trimboard rivet			2	72-73-74 Bro.
BO 7762	Rear quarter ash receiver to trimboard rivet washer			2	72-73-74 Bro
BO 121630	Arm rest ash receiver tray assy.	}	First type walnut	*	2 75-78-77 Bro.-Sed.
BO 121632	Arm rest ash receiver finish plate-R.H.			*	1 75-76-77 Bro.-Sed.
BO 121633	Arm rest ash receiver finish plate-L.H.			*	1 75-76-77 Bro.-Sed.
BO 124602	Arm rest ash receiver tray assy.	}	Second type walnut pearl	*	2 75-76-77 Bro.-Sed.
BO 124582	Arm rest ash receiver finish plate-R.H.			*	1 75-76-77 Bro.-Sed.
BO 124583	Arm rest ash receiver finish plate-L.H.			*	1 75-76-77 Bro.-Sed.
C 122660	Foot rest assembly			*	1 76-78 Sed.
C 122661	Foot rest bar assembly			*	1 76-78 Sed.
BO 4985	Foot rest bar acorn nut			2	76-78 Sed.
BO 122662	Foot rest bracket-R.H.			*	1 76-78 Sed.
BO 122663	Foot rest bracket-L.H.			*	1 76-78 Sed.
C 122665	Foot rest assembly			*	1 77 Sed.
BO 122666	Foot rest bracket and arm assembly-R.H.			*	1 77 Sed.
BO 122667	Foot rest bracket and arm assembly-L.H.			*	1 77 Sed.
C 95225	Foot rest bar			1	77 Sed.
C 70889	Foot rest bar to arm screw	12-24x7/16		6	77 Sed.
BO 170008	Foot rest to floor sheet metal screw	14x1"		4	76-77-78 Sed.
HA 122612	Inside visor complete	}	Hinge type Specify trim desired	*	1-2 71
BO 71686	Visor attaching screw-upper			1-2 71	
BO 70818	Visor attaching screw-lower			1-2 71	
HA 122613	Inside visor complete	}	Swivel type, Specify trim desired	*	1-2 72 thru 77,78 Sed.
BO 120672	Visor bracket arm			*	1-2 72 thru 77,78 Sed.
BO 120668	Visor support rod clamp			*	1-2 72 thru 77,78 Sed.
BO 120677	Visor header hinge clamp			*	1-2 72 thru 77,78 Sed.
BO 120676	Visor header hinge plate			*	1-2 72 thru 77,78 Sed.
BO 71385	Visor header hinge clamp to plate screw			*	1-2 72 thru 77,78 Sed.
BO 71385	Visor bracket arm to clamp screw			*	1-2 72 thru 77,78 Sed.
BO 120894	Visor header hinge clamp bolt			*	2-4 72 thru 77,78 Sed.
NOTE: In ordering the visor only (without bracket and arm) order by description, giving car serial number and color of trim.					
HA 123566	Front door pull-to straps-complete-for two doors			*	1 71-72-73-74 Bro.-Cpe.-Conv.Cpe.- Conv.Bro.,78-78 Sed.,70 U Co.-U Cpe.
HA 123567	Front door pull-to straps-complete-for two doors			*	1 71-72-73-74 Sed.

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
INTERIOR FITTINGS (Cont'd.)				
BO 121747	Door pull-to strap assembly (included in 1167568)		* 2	75 Bro.-Cpe., 77 Sed.
BO 121746	Door pull-to strap assembly (included in 1167567)		* 2	75 Sed.
BO 71449	Pull to attaching screw	8x1-1/4"	8	75-77
121355	Robe hanger assembly	Twist trim	* 16	75 Bro.
121762	Robe hanger assembly	Mohair trim	* 16	75 Bro.
123312	Robe hanger assembly	Blue leather	* 16	75 Bro.
167717	Robe hanger assembly	Green leather	* 16	75 Bro.
167714	Robe hanger assembly	Taupe leather	* 16	75 Bro.
161820	Robe rail assembly	Metal	* 16	73-74-76 Sed.
121715	Robe hanger assembly	Mohair trim	* 16	71-72 Sed.
121716	Robe hanger assembly	Boucle trim	* 16	71-716 Sed. Without
121717	Robe hanger assembly	Blue leather	* 1	71-716 Sed. folding
121718	Robe hanger assembly	Green leather	* 1	71-716 Sed. table
121719	Robe hanger assembly	Taupe leather	* 1	71-72 Sed.
123334	Robe hanger	Green leather	* 1	71 thru 77 Sed. Used
123335	Robe hanger assembly	Blue leather	* 1	71 thru 77 Sed. with
123336	Robe hanger assembly	Green leather	* 1	71 thru 77 Sed. folding
123337	Robe hanger assembly	Taupe leather	* 1	71 thru 77 Sed. table
BO 3010	Robe hanger assembly attaching screw-with folding table		4	Sed.
BO 262	Robe hanger assembly bracket space	Without 17/64"x9/16"x1/16	4-8	Sed.—Bro.
BO 17922	Robe hanger bracket screw	folding #10x1-1/4	4	Sed.
BO 18470	Robe hanger bracket screw	table #10-72x5/8	8	Bro.
HA 122611	Assist strap-complete		* 2-4	Bro.-Sed.
BO 70818	Assist strap bracket screw	10x5/8"	2-4	Bro.-Sed.
HA 124450	Front door arm rest-complete-R.H		* 1	All except station
HA 124451	Front door arm rest-complete-L.H		* 1	All except station
BO 71461	Arm rest block to door panel bolt	1/4"-160x1 1/4"	6	All except station
BO 71461	Arm rest block to door panel bolt washer		6	All except station
COMMERCIAL CAR MISCELLANEOUS PARTS Wagon				
NOTE: Body parts for Panel Delivery and Station no shown in this book should be ordered direct from the York-Hoover Body Corporation, York, Penna.				
Parts for the Cab Pick-up box not shown here should be ordered direct from Luce Body Company, Lansing, Michigan.				
C 123692	Quarter trim protector panel assembly-R.H		* 1	U Co.
C 123693	Quarter trim protector panel assembly-L.H		* 1	U Co.
BO 170022	Quarter trim protector panel wing bolt	5/16"-18x3/4"	* 4	U Co.
C 118594	Quarter window opening blind assembly-R.H		1	U Co.
C 118595	Quarter window opening blind assembly-L.H		1	U Co.
BO 111057	Quarter window opening blind bracket		4	U Co.
BO 71408	Quarter window opening blind bracket rivet	9/64"x1/4"	4	U Co.
BO 121174	Tail gate ornament		* 1	Cab Pu.
BO 71073	Tail gate ornament nut	10-32x1/8"	4	Cab Pu.
BO 107214	Tail gate bumper		2	Cab Pu.
BO 75152	Tail gate bumper retainer		2	Cab Pu.
BO 71642	Tail gate bumper bolt	1/4"-20x7/8"	2	Cab Pu.
BZ 70874	Tail gate bumper bolt nut	1/4"-20x1/4"	2	Cab Pu.
C 123060	External rear view mirror assembly		* 1	Cab-Cab Pu-Panel
BO 124783	External rear view mirror arm		* 1	Cab-Cab Pu-Panel
HA 122527	External rear view mirror assembly		* 1	78 Sed.
BO 121174	Rear roof panel ornament		* 1	Panel
BO 116816	Rear roof panel ornament seal washer		4	Panel
BZ 71260	Rear roof panel ornament washer	13/64"x1/2"x1/32"	4	Panel
BO 71073	Rear roof panel ornament nut	10-32x1/8"	4	Panel
BO 123621	Tool box lid assembly		* 1	Panel
BO 123657	Inside adjusting brace		* 2	Panel

ILLUS NO.	PART NO.	NAME	PER CAR	MODEL
--------------	-------------	------	------------	-------

COMMERCIAL CAR MISCELLANEOUS PARTS (Cont'd.)

BO 71590	Inside adjusting brace nut	1/2"-13x7/16"	4	Panel	
C 123632	Roof drip moulding-rear	*	1	Panel	
C 119887	Roof drip moulding-rear-filler		AR	Panel	
C 123633	Roof drip moulding binding tip-rear	*	2	Panel	
BO 119872	Rear door check arm assembly-R.H		1	P	
BO 119873	Rear door check arm assembly-L.H		1	Panel	
BO 119874	Rear door check arm bracket-body half		2	Panel	
BO 119900	Rear door check arm bracket screw		2	Panel	
BO 119890	Rear door hinge-upper-R.H	Door half	1	Panel	
BO 119891	Rear door hinge-upper-L.H.	Door half	1	Panel	
BO 119892	Rear door hinge-upper-R.H	Body half	1	Panel	
BO 119893	Rear door hinge-upper-L.H	Body half	1	Panel	
BO 119894	Rear door hinge-lower-R.H	Door half	1	Panel	
BO 119895	Rear door hinge-lower-L.H	Door half	1	Panel	
BO 119896	Rear door hinge-lower-R.H	Body half	1	Panel	
BO 119897	Rear door hinge-lower-L.H	Body half	1	Panel	
BO 114844	Rear door hinge pin		6	Panel	
BO 123915	Rear door hinge pillar weatherstrip	*	2	Panel	
BO 123916	Rear door top weatherstrip	*	2	Panel	
BO 119882	Rear door weatherseal (for left door)		1	Panel	
BO 119875	Rear door striker plate-upper		2	Panel	
BO 123658	Rear door lock assembly-R.H	Without handle	*	1	Panel
BO 123659	Rear door lock assembly-L.H	With inside handle	*	1	Panel
BO 123660	Rear door latch assembly		*	4	Panel
PO 122205	Rear door outside handle and lock cylinder complete.		*	1	Panel
BO 122206	Rear door outside handle-less cylinder		*	1	Panel
BO 121828	Rear door outside handle lock cylinder	Blank	*	1	Panel

GROUP INDEX
CHASSIS SECTION

Axle-Front	7	Horns	72
Axle-Rear	9	Hydraulic Hill Hold	17
Axle to Frame Arm	9	Instruments and Mounting	74
Battery	71	Lamps	88
Bonnet	61	Headlamps	68
Brakes	11	Fender Lamps	69
Brake Control	13	Tail and Stop Lamp	69
Brake-Hand	18	License Plate Lamp	70
Bumper-Front	26	License Plate Bracket	70
Bumper-Rear	26	Muffler and Exhaust Pipe	58
Canadian Parts Supplement	97	Pedals	19
Carburetor	39	Propeller Shaft	54
Carburetor Air Cleaner	39	Radiator	59
Clutch	41	Radio	79
Clutch Control	43	Antenna	82
Clutch Vacuum Control	43	Capacitors	80
Coil-Ignition	71	Chassis Parts	80
Distributor	71	Control	79
Differential & Carrier	10	Miscellaneous	82
Drag Link	57	Resistors	80
Drive Shaft	11	Speaker	81
Electric Hand	49	Running Boards	66
Engine	31	Shock Absorbers	23
Camshaft	35	Splash Guards	65
Connecting Rod	36	Spring Chart	96
Cylinder	32	Springs-Front	21
Cylinder Head	32	Springs-Rear	22
Exhaust Manifold	33	Spring Stabilizer--Front	23
Flywheel and Crankshaft	34	Spring Stabilizer-Rear	24
Intake Manifold	33	Starting Motor	71
Oil Pan	38	Steering Gear	55
Oil Pump and Check Valve	38	Steering Spindle	7
Piston	36	Switches	72
Timing Gears and Cover	39	Throttle Control	41
Valves	36	Tie Rod	7
Vibration Dampener	38	Tire Cover	21
Water Pump and Fan	38	Tools	66
Fenders-Front,	63	Transmission	47
Fenders-Rear	64	Transmission Control-Conventional	49
Frame	27	Wheels	19
Frame Cross Members	29	Wheel Bearings-Rear	11
Front Floor Mats and Pads	67	Wheel Carrier-Rear Mount	20
Fuel Pump	40	Wheel Carrier-Side Mount	20
Gasoline Tank and Pipes	57	Wheel Carrier-Utility Coupe	20
Generator and Control	71	Windshield Cleaner	73
Heater	77	Wiring	67

**GROUP INDEX
BODY SECTION**

Body Bolts and Shims	107	Seats	135
Commercial Car Miscellaneous Parts	148	Auxiliary Seat	142
Cowl Ventilator	109	Front Seats-Cab and Cab Pickup	140
Door Assemblies	115	Front Seats-Commercial Bucket Type	139
Door Hinges	117	Front Seat-Divided Back Type	135
Door Locks and Handles	115	Front Seat-Solid Back	138
Door Miscellaneous Parts	118	Rear Seats	141
Floor	133	Top-Closed Bodies	127
Floor Carpets-Rear	134	Top-Convertibles	130
Folding Table	142	Trim Rails and Retainers	113
Front End	107	Windows	119
Interior Fittings	146	Front Door Window-Divided Type	120
Mouldings-Outside Belt	114	Front Door Window-Sliding Type	119
Panels-Metal	112	Front Door Wing	123
Pickup Box	145	Rear Door Window	124
Pillars	113	Windows-Quarter and Rear	124
Rear Compartment	143	Window Finish Mouldings	125
Rear Deck-Coupes	144	Window Regulators	124
		Windshield	109

INDEX OF ILLUSTRATIONS

Axle-Front	6	Door Wing-Disappearing Type	122
Axle-Rear	6	Electric Hand	50
Body-Brougham	111	Engine-Cross Section	30
Body-Coupe	110	Frame	28
Body-Sedan	111	Generator	88
Body Front End	110	Oil Check Valve	37
Brake Control	12	Oil Pump	37
Hydraulic Hill Hold	17	Propeller Shaft	54
Master Cylinder	14	Radiator	60
Wheel Cylinder	14	Radio Parts	78
Carburetor-Dual	84	Seat Track-Pivoted Type	136
Carburetor-Single	84	Shock Absorbers	24
Clutch	42	Starting Motor	90
Clutch Vacuum Control	44	Steering Gear	58
Distributor	92	Top-Convertible Brougham	129
Door-Front-Divided Glass Type	116	Top-Convertible Coupe	128
Door-Front-Sliding Glass Type	116	Transmission	46
Door Wing-72-73	122	Water Pump	37
		Windshield Cleaner	73

