1929 # BODY Models

Parts List

Essex The Challenger

Roadster	Town Sedan
Phaeton	Coupe
Coach	Convertible Coupe

Standard Sedan

APRIL

1929

Cars Numbered 9268658 Upward

HUDSON MOTOR CAR COMPANY

Warranty

The factory obligation with respect to replacement of alleged defective parts is fully covered by our warranty as follows:

" We warrant the automobiles manufactured by us to be free from defects in material under normal use and service, our obligation under this warranty being limited to making good any part or parts thereof which shall, within ninety (90) days after delivery of such automobile to the original purchaser, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective.

" This warranty is expressly in lieu of all other warranties expressed or implied, and of all other obligations or liabilities on our part, and we neither assume nor authorize any other person to assume for us any other liability in connection with the sale of our automobiles.

" This warranty shall not apply to any Essex automobile which shall have been repaired or altered outside of our factory in any way so as, in our judgment, to affect its stability or reliability, or which has been subject to misuse, negligence, or accident.

" We make no warranty whatsoever in respect to tires, rims, ignition apparatus, tops, upholstery, horns or other signaling devices, batteries, speedometers, or other trade accessories."

HUDSON MOTOR CAR COMPANY
Detroit, Michigan

The factory does not participate in any labor costs incident to the replacement of parts under the warranty. The warranty under which Essex motor cars are sold will be interpreted by the Distributor or Dealer from whom the car was purchased. If you are touring and require service, be sure to get in touch with your nearest authorized Essex Distributor or Dealer.

Hudson Motor Car Company

Detroit, Michigan

Over 6,800 repair parts stocks are maintained by Essex and Hudson Dealers throughout the United States and Canada, and owners are urged to avail themselves of this service

INSTRUCTIONS FOR ORDERING PARTS

1—Order parts through the nearest Distributor or Dealer.
2—Always give PART NUMBER and NAME of each part ordered.
3—Mail and Parcel Post orders should be accompanied by an amount sufficient to cover POSTAGE.
4—Specify how shipments are to be made.
5—Orders for parts should be written separately from correspondence pertaining to other *matters.*

TELEGRAPH CODE

To save expense, to expedite ordering and for your convenience, we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts:

Sultex—Ship to me (us) by express.
Sulkline—Ship by express to
Sulkate—Ship to me (us) by freight.
Sulmost—Ship to me (us) by parcel post.
Sulwire—When and how did you ship parts called for in my (our) telegram of
Sultwich—When and how will you ship parts called *for in* my (our) telegram of
Sulteen—When and how will you ship parts called for in my (our) letter of

INDEX
PARTS GROUPS

	Coach	Coupe	Conv. Coupe	Phae-ton	Road-ster	Sedan	Town Sedan
FRONT SECTION							
Cowl and Dash	7	17	25	31	35	39	47
Cowl Ventilator	7	17	25	31	35	39	47
Front Pillar and Windshield Panels	7	17	25	x	x	39	47
Instrument Panel	8	18	26	31	35	40	48
Windshield	8	18	26	31	35	40	48
Windshield Visor	8	18	x	x	x	40	48
CENTER SECTION							
Center Pillar (Sedan)	x	x	x	x	x	40	48
Door Assembly	8	18	26	32	36	40	48
Door Dovetails and Bumpers	9	19	27	32	x	41	49
Door Finish Strips	10	x	27	x	x	42	50
Door Glass and Channels	9	19	27	x	x	41	49
Door Handles	9	19	27	32	36	41	49
Door Hinges	9	19	26	32	36	41	49
Door Locks	9	19	26	32	36	41	49
Door Weatherstrips and Trim Retainers	9	19	x	x	x	42	50
Door Windlace	10	20	27	32	x	42	50
Door Window Regulator	10	20	27	x	x	42	50
Ash Tray	x	x	x	x	x	44	53
Leather Trim--Export only	12	21	x	x	x	43	52
REAR SECTION							
Deck Lid	x	21	28	x	36	x	x
Hinge and Quarter Pillars	10	20	x	x	37	42	x
Outside Panels and Mouldings	11	20	x	x	x	43	51
Quarter Glass and Channels	11	x	x	x	x	x	51
Quarter Window Weatherstrips and Retainers.	11	x	x	x	x	x	51
Quarter Window Frame	11	x	x	x	x	x	51
Quarter Window Regulator	11	x	x	x	x	x	51
Rear Hinge Pillars (Sedans)	x	x	x	x	x	42	48
Rear Upholstered Panels	12	x	x	x	x	43	52
Rear Window.	12	21	x	x	x	43	52
Rear Window Regulator	x	21	x	x	x	x	x
TOP SECTION							
Top and Curtains	x	x	x	32	36	x	x
Curtain Fasteners	x	x	x	33	37	x	x
Dome Lamp	13	22	x	x	x	44	52
Roof	12	21	28	x	x	43	52
FLOOR SECTION							
Carpets, Mats and Pads.	15	23	29	33	37	45	53
Scuff Plates	14	23	29	33	37	45	54
Seats and Cushions	14	22	28	33	37	44	53
Toe and Floor Boards	14	23	29	33	37	45	**53**
Sill Filler	14	23	x	x	x	45	54

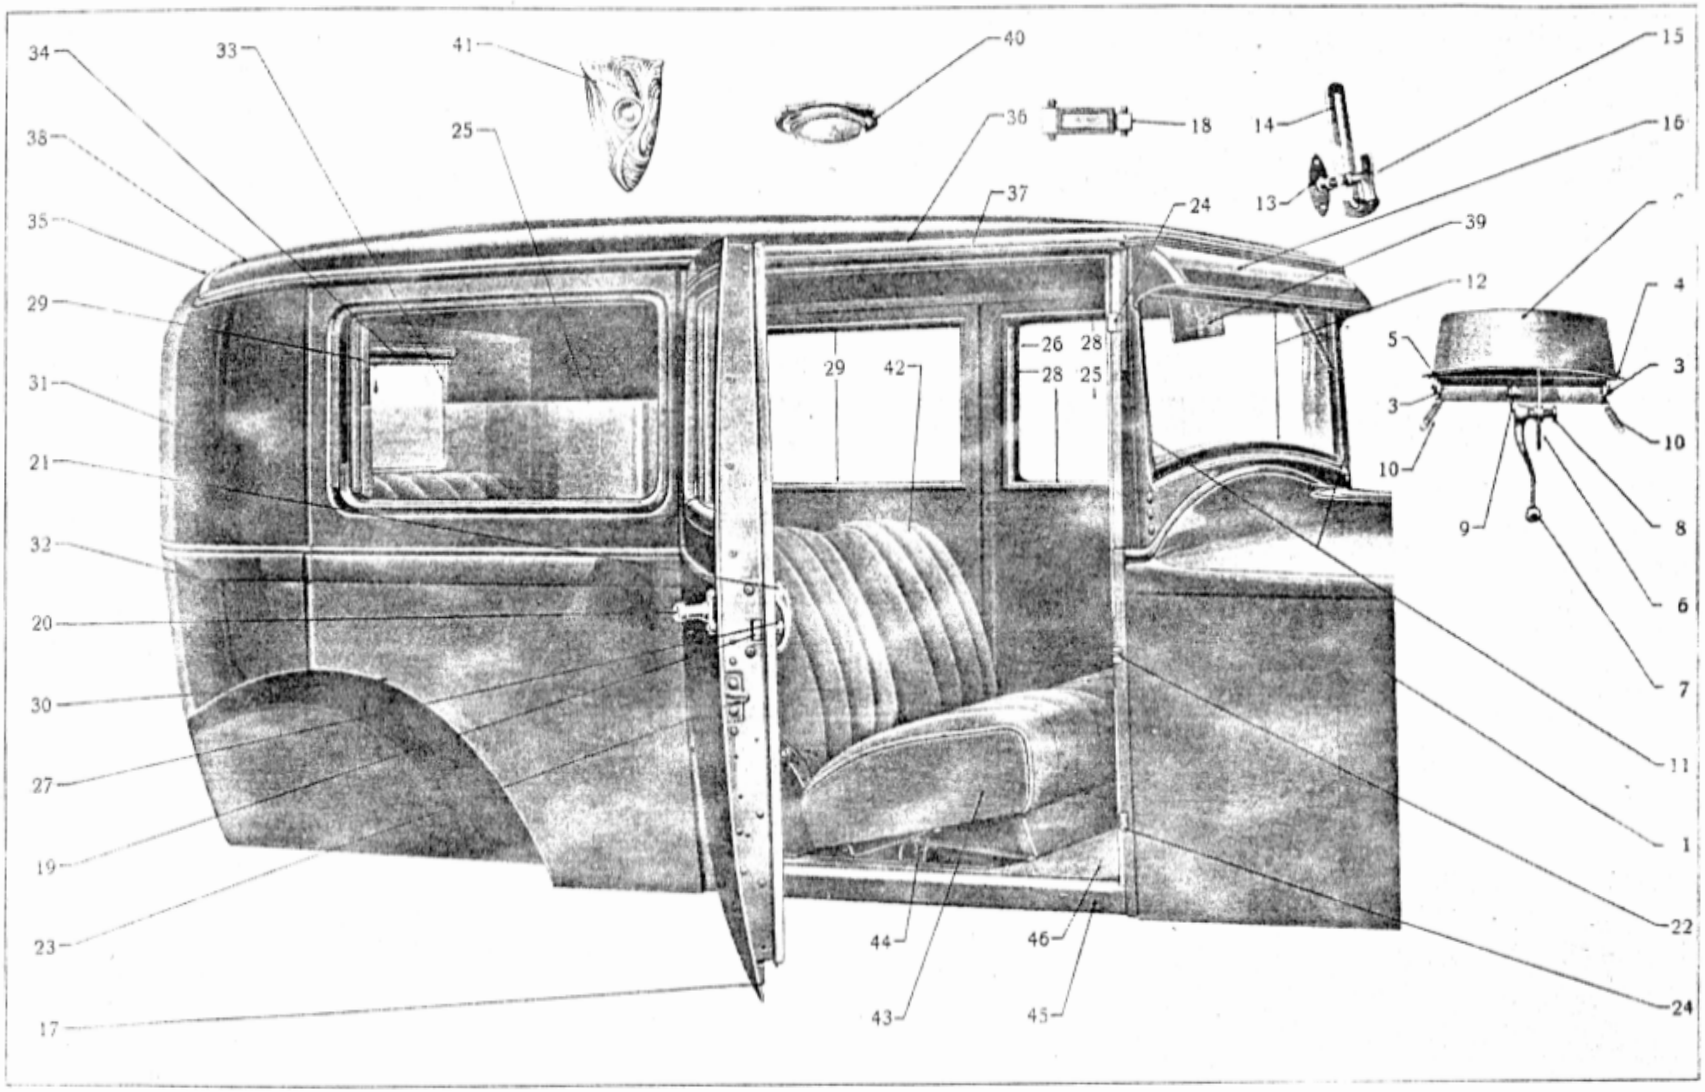

Essex Coach Body

ESSEX COACH

BODY COMPLETE

Illus. No	Part No.	Description	Per Car
. . .	CO 75000	BODY COMPLETE—L. H. D.	1
. . .	CO 75519	BODY COMPLETE--R. H. D.	1
. . .	BO 81923	Shim—rubber	2
. . .	BO 80472	Shim—thick	10
. . .	BO 12320	Bolt (7/16"-14x3-1/4" carriage)	8
. . .	BO 70011	Bolt (7/16"-14-1/2" carriage)	2
. . .	BO 551	Nut (7/16"-14x3/8")	12

FRONT SECTION

COWL AND DASH

1	CO 82082	COWL AND DASH ASSEMBLY	1
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 81282	Lacing—dash bonnet	2
. . .	BO 18353	Rivet—dash bonnet lacing	26
. . .	BO 79425	Cowl quarter kick panel—R. H	1
. . .	BO 79426	Cowl quarter kick panel—L. H.	I
. . .	BO 18470	Screw (No. 10-32x5/8”. round head)	10
. . .	GO 12316	Washer (No. 10 countersunk?	10
. . .	BO 78797	Cowl panel retainer—R. H	1
. . .	BO 78798	Cowl panel retainer—L. H.	1
. . .	BO 70308	Screw (1/4"-20x1-3/8")	10
. . .	BO 12120	Nut (1/4"-20x1/4" square)	8
. . .	BO 76356	Dash to bonnet hinge bracket	1
. . .	BO 2352	Bolt (5/16”-24x1")	1
. . .	BO 76390	Dash to radiator tie rod plate	1
. . .	BO 79732	Cowl panel silencer—felt	2
. . .	BO 70395	Rubber ferrule (9/16")	1
. . .	BO 70142	Rubber ferrule (11/16")	3

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Weatherstrip	1
3	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18164	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4"-201/4” square)	4
. . .	BO 70519	Rivet (5/16''x13/32")	2
4	BO 81628	Hinge—R. H.—on cowl	1
5	BO 81629	Hinge—L. H.—on cowl	1
. . .	BO 18419	Rivet (3/16"x7/32”)	1
6	BO 81636	Control bracket	1
. . .	BO 70028	Rivet (3/16"x3/8” truss head)	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube !rubber)	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Screw—drain tube clip (No. 10-32x1/2")	3
. . .	BO 18479	Nut—drain tube clip	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Spring—cover to instrument panel	2
. . .	BO 82524	Spring clip	2
. . .	BO 18453	Spring clip screw	2
. . .	BO 12120	Spring clip screw nut	2

FRONT PILLAR AND WINDSHIELD PANELS

11	CO 81378	FRONT PILLAR ASSEMBLY	
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 78923	Cowl to windshield belt panel shim—cork	1
. . .	BO 78949	Lock pillar finish plate	2
. . .	BO 18432	Screw (No. 8x1/2" sheet metal)	4
. . .	CO 82189	Finish panel—over windshield—trimmed	1

FRONT PILLAR AND WINDSHIELD PANELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO18470	Screw (No. 10-32x5/8" oval head)	4
. . .	GO 12316	Finish washer No. 10 countersunk)	4
. . .	CO 78591	Finish panel—under windshield	1
. . .	BO 70455	Screw (No. 8-32x3/4")	7
. . .	BO 18447	Screw (No. 10-32x5/8"	4
. . .	BO 70071	Lockwasher—shakeproof	4
. . .	BO 79567	Finish panel Retainer assembly—R. H	1
. . .	BO 79568	Finish panel retainer assembly—L. H.	1
. . .	BO 70397	Clinch nut (No. 10-32 short)	4
. . .	BO 79507	Windshield belt panel corner filler—R. H.—lead	1
. . .	BO 79508	Windshield belt panel corner filler—L. H.—lead	1
. . .	BO 78924	Windshield belt finish panel shim—fibre	1
. . .	BO 81386	Lock pillar to dash bracket and toe board riser assembly—R.H	1
. . .	BO 81387	Lock pillar to dash bracket and toe board riser assembly—L. H	1

INSTRUMENT PANEL

. . .	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79147	Steering gear cowl bracket—L. H. D.	1
. . .	BO 79146	Steering gear cowl bracket—R. H. D.	1
. . .	BO 70400	Clinch nut (3/8"-16 flat side)	2
. . .	BO 7923	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BM 304	Bolt (3/8"-16x1")	2
. . .	BY 551	Nut (7/16"-14x3/8"')	1
. . .	BO 70337	Bolt (7/16"-14x2-1/2")	1

WINDSHIELD

12	CO 81893	WINDSHIELD ASSEMBLY (less glass)	1
. . .	BO 18447	Screw (No. 10-32x5/8")	7
. . .	BO 18479	Nut (No. 10-32 square)	7
. . .	81292	Glass (not supplied—see note page 55)	1
. . .	BO 81288	Hinge—body half	1
. . .	BO 79251	Windshield hinge weatherstrip	1
. . .	BO 76517	Glass clip—R. H	1
. . .	BO 76541	Glass clip—L. H.	I
. . .	BO 76505	Screw—Glass clip	2
. . .	BO 76506	Nut—Glass clip screw	2
13	BO 79026	Swing arm body bracket	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 79027	Swing arm frame bracket	2
14	BO 75230	Swing arm	2
. . .	BO 24172	Swing arm washer	4
. . .	BO 75275	Pivot screw	2
. . .	BO 70007	Pivot screw nut (1/4"-20x1/8")	2
. . .	BO 75541	Pivot screw washer	2
15	BO 26191	Wing screw	2
. . .	BO 75470	Rubber bumper	2
. . .	BO 79028	Rubber bumper post	2
. . .	BO 83339	Windshield weatherstrip	1

WINDSHIELD VISOR

16	CO 81256	VISOR ASSEMBLY	2
. . .	BO 18458	Screw (1/4"-20x11/16")	2
. . .	BO 70127	Finish washer	2

CENTER SECTION
DOORS

17	CO 81342	DOOR COMPLETE—R. H.—trimmed—specify color	1
. . .	CO 81343	DOOR COMPLETE—L. H.—trimmed—specify color	1
. . .	CO 81336	DOOR ASSEMBLY—R. H.—skeleton—less trim	1
. . .	CO 81337	DOOR ASSEMBLY—L. H.—skeleton—less trim	1
. . .	CO 79366	Door upholstered panel—R. H.	1
. . .	CO 79367	Door upholstered panel—L. H.	1
18	130 78641	Door check strap	2
. . .	BO 78595	Door check strap retainer	2
. . .	BO 70304	Screw (No. 10-32x3/4")	4

DOOR HINGES

Illus. No	Part No.	Description	Per Car
. . .	BO 80263	DOOR HINGE. AND REINFORCEMENT ASSEMBLY—body half	2
. . .	BO 78531	Door hinge—door half	2
. . .	BO 75174	Door hinge rod	2
. . .	BO 18464	Screw (1/4"-20x11/16"	28

DOOR LOCKS

19	BO 81862	DOOR LOCK ASSEMBLY—R. H	1
. . .	BO 81860	DOOR LOCK ASSEMBLY—L. H. ,	1
. . .	BO 18453	Screw (1/4"-20x11/16" round head)	4
. . .	BO 18464	Screw (1/4"-20x11/16" special head)	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
. . .	BO 18461	Shakeproof lockwasher	4
. . .	BO 82587	Door lock reinforcement plate	2
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	4

DOOR HANDLES

20	BO 82601	OUTSIDE HANDLE AND LOCK CYLINDER ASSEMBLY—R. H	1
. . .	BO 70526	Screw No. 10-32x5/8")	2
. . .	BO 31240	Key	2
. . .	BO 81809	Outside handle—L. H.	1
. . .	BO 70526	Screw (No. 10-32x5/8")	2
21	BO 81664	Inside handle	2
. . .	BO 70526	Screw (No. 10-32x5/6")	4
. . .	BO 81778	Inside handle spring	2

DOOR DOVETAILS AND BUMPERS

22	BO 79946	DOVETAIL COMPLETE—female	2
. . .	BO 79228	Dovetail case	2
. . .	BO 18458	Screw (1/4"-20x 11/16")	4
. . .	BO 70399	Clinch nut (1/4"-20)	4
. . .	BO 18475	Shakeproof lockwasher (1/4' countersunk)	4
. . .	BO 79150	Dovetail rubber bumper	4
. . .	BO 79149	Dovetail rubber bumper retainer	4
23	BO 78994	Dovetail—male	2
. . .	BO 78995	Dovetail plate	2
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	4
. . .	BO 18475	Shakeproof lock washer	4
. . .	BO 78596	Striker plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	2
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
24	BO 75151	Rubber bumper—door	4
. . .	BO 75152	Rubber bumper retainer	4
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	4

DOOR GLASS AND CHANNELS

25	78808	Door glass not supplied—see note page 55)	2
. . .	BO 78274	Door glass rubber bumper	2
		Door glass upper channel—see weatherstrip	
26	BO8 1535	Door glass side channel assembly	4
. . .	BO 75261	Door glass side channel clip	
. . .	BO 70028	Rivet (No. 9x1/4' crown head)	8
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	12
. . .	BO 78581	Door glass bottom channel—R. H	1
. . .	BO 78582	Door glass bottom channel—L. H.	1
. . .	BO 78823	Cork shim--glass to channel—thin	4
. . .	BO 78824	Cork shim—glass to channel—medium	4
. . .	BO 78825	Cork shim—glass to channel—thick	2

DOOR WEATHERSTRIPS AND TRIM RETAINERS

. . .	BO 79044	DOOR GLASS WEATHERSTRIP AND RETAINER ASSEMBLY—top—am door	2
. . .	BO 79043	DOOR GLASS WEATHERSTRIP AND RETAINER ASSEMBLY—outer—belt—on door	
. . .	BO 79138	DOOR GLASS WEATHERSTRIP—inner—belt—on door	2

DOOR WEATHERSTRIPS AND TRIM RETAINERS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 18482	Screw (No. 8x1/2" sheet metal) .	2
. . .	BO 79071	Door aide trim retainer—R. H.—trimmed—on door	2
. . .	BO 79072	Door side trim retainer—L. H.—trimmed—on door	2
. . .	BO 18447	Screw (No. 10-32x5/8")	12
. . .	BO 79054	Door weatherstrip and retainer assembly—bottom—on door	2
. . .	BO 18447	Screw (No. 10-32x 5/8" round head)	10
. . .	BO 81582	Rear quarter trim retainer—bottom	2
. . .	BO 18447	Screw (No. 10-32x5/8" round head)	2
. . .	BO 18454	Rivet (3/16"x7/16") truss head	4
. . .	BO 18479	Nut (No. 10-32x3/16" square)	2

DOOR WINDLACE

. . .	BO 79736	WINDLACE AND RETAINER ASSEMBLY—R. H. over door	1
. . .	BO 79737	WINDLACE AND RETAINER ASSEMBLY—L. H. over door	1
. . .	BO 81741	WINDLACE AND RETAINER ASSEMBLY—lock pillar—R. H.	1
. . .	BO 81742	WINDLACE AND RETAINER ASSEMBLY—lock pillar—L. H	1
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 12316	Finish washer (No. 10 countersunk)	4
. . .	BO 79738	WINDLACE AND RETAINER ASSEMBLY—hinge pillar—R. H.	1
. . .	BO 79739	WINDLACE AND RETAINER ASSEMBLY—hinge pillar—L. H.	1
. . .	BO 18464	Screw (1/4"-20x11/16")	8
. . .	BO 70105	Screw (1/4"-20x1")	6

DOOR WINDOW REGULATOR

. . .	BO 79240	DOOR WINDOW REGULATOR ASSEMBLY—R. H	1
. . .	BO 79241	DOOR WINDOW REGULATOR ASSEMBLY—L. H	1
. . .	BO 18458	Screw (1/4"-20x11/16")	6
. . .	BO 18475	Shakeproof lockwasher (1/4' countersunk)	4
. . .	BO 76339	Coil spring	2
. . .	BO 80383	Pinion	2
. . .	BO 80380	Arm and sector assembly—R. H.	1
. . .	BO 80381	Arm and sector assembly—L. H.	1
. . .	BO 80353	Regulator arm roller	2
. . .	BO 80393	Regulator roller spring	2
. . .	BO 80382	Regulator roller washer	2
27	BO 81637	Regulator handle	2
. . .	BO 81639	Regulator handle escutcheon plate	2
. . .	BO 79308	Regulator handle escutcheon pin	2
. . .	BO 79709	Regulator handle escutcheon spring	2

DOOR WINDOW FINISH STRIPS

28	CO 81643	DOOR WINDOW FINISH MOULDING ASSEMBLY	2
. . .	BO 70455	Screw (8-32x3/4")	16
. . .	BO 79746	Door finish strip—top—trimmed	2

REAR SECTION

HINGE AND QUARTER PILLARS

. . .	CO 79174	HINGE PILLAR ASSEMBLY—R. H.	1
. . .	CO 79175	HINGE PILLAR ASSEMBLY—L. H.	1
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	4
. . .	BO 70398	Clinch nut (1/4"x20 round type—long)	26
. . .	BO 70028	Rivet (3/16"x7/8" truss head)	4
. . .	BO 81460	Rear quarter pillar assembly—R. H.	1
. . .	BO 81461	Rear quarter pillar assembly—L. H.	1
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	4
. . .	BO 70398	Clinch nut (1/20"x20 round type—long)	10
. . .	BO 70028	Rivet (3/16"x3⁄8" truss head)	4

QUARTER GLASS AND CHANNELS

Illus. No	Part No.	Description	Per Car
. . .	78808	Quarter window glass , see note page 55	2
. . .	BO 81538	Quarter window side channel assembly	4
. . .	BO 78581	Quarter window channel assembly—R. H.—bottom	1
. . .	BO 78582	Quarter window channel assembly—L. H.—bottom	1
. . .	BO 78823	Cork shim—glass to bottom channel—thin	**2**
. . .	BO 78824	Cork shim—glass to bottom channel—medium	**2**
. . .	BO 78825	Cork shim—glass to bottom channel—thick	2
. . .	BO 79252	Anti-rattler spring	12
. . .	CO 79335	Quarter window frame and regulator panel assembly	2
. . .	BO 79334	Quarter window regulator panel assembly	2
. . .	BO 18419	Rivet (3/16"x7/32" crown head)	16
. . .	BO 18464	Screw (1/4"-20x7/32" special head)	10

QUARTER WINDOW WEATHERSTRIPS AND TRIM RETAINER

. . .	BO 79044	Quarter window weatherstrip and retainer—top	2
. . .	BO 79043	Quarter window weatherstrip and retainer—belt—outer	2
. . .	BO 79138	Quarter window weatherstrip—belt—inner	2
. . .	BO 18482	ScrewNo. 8x1/2" sheet metal)	16
. . .	BO 81581	Trim retainer—rear quarter bottom	2
. . .	BO 18454	Rivet (3/16"x7/16" truss head)	8

QUARTER WINDOW FRAME

29	CO 81643	QUARTER WINDOW FINISH MOULDING ASSEMBLY	1
. . .	BO 70455	Screw No. 8-32x3/4" oval head)	16

QUARTER WINDOW REGULATOR

. . .	BO 79240	QUARTER WINDOW REGULATOR ASSEMBLY—R. H.	1
. . .	BO 79241	QUARTER WINDOW REGULATOR ASSEMBLY—L. H.	1
. . .	BO 18458	Screw (1/4"-20x11/16" flat head)	12
. . .	BO 18475	Shakeproof lockwasher ($^1/_4$" countersunk,	12
. . .	BO 76339	Coil spring	2
. . .	BO 80383	Pinion	2
. . .	BO 80380	ARM AND SECTOR ASSEMBLY—R. H.	1
. . .	BO 80381	ARM AND SECTOR ASSEMBLY—L. H.	1
. . .	BO 80353	Regulator arm roller	2
. . .	BO 80393	Regulator arm roller spring	2
. . .	BO 80382	Regulator arm roller washer	2
. . .	BO 81637	Regulator handle	2
. . .	BO 81639	Regulator handle escutcheon plate.	2
. . .	BO 79308	Regulator handle escutcheon pin	2
. . .	BO 79709	Regulator handle escutcheon spring	2
. . .	BO 78967	Regulator arm stop	2
. . .	BO 18459	Screw (No. 10-32x1/2")	4
. . .	BO 18479	Nut (No. 10x3/16")	4

OUTSIDE PANELS AND MOULDINGS

30	CO 81446	QUARTER PANEL AND WHEELHOUSE ASSEMBLY—R. H.	1
	CO 81447	QUARTER PANEL AND WHEELHOUSE **ASSEMBLY—L. H.**	**1**
. . .	BO 18333	Rivet (3/16"x1/4" crown head)	20
. . .	BO 18459	Screw (No. 10-32,0·2")	20
. . .	BO 18453	Screw (1/4"-20x11/16" round head)	20
. . .	BO 12120	Nut ($^1/_4$°-20x$^1/_4$" square)	20
. . .	BO 18479	Nut (No. 10-32x3/16" square)	20
31	CO 81109	BACK PANEL ASSEMBLY—upper.	1
32	CO 81108	Back panel—lower	1
. . .	BO 70004	Rivet (^{3}/16"X ^{I}/2" truss head)	**22**
. . .	BO 70288	Rivet (3/16"x9/16" truss head)	**4**
. . .	BO 18453	Screw (^{1}4"-20x11/16)	12
.. . .	BO 18449	Nail (1/16x1/16" countersunk)	48

OUTSIDE PANELS AND MOULDINGS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 18419	Rivet (3/16”x7/32”tubular)	11
. . .	BO 70183	Screw (1/4"-20x1" oval head)	2
. . .	BO 75233	Cage—fender bolt nut	4
. . .	BO 75280	Cage—fender bolt nut	16
. . .	CO 78606	Moulding—upper to lower back panel	1
. . .	BO 81583	Moulding—back panel to quarter panel	2

REAR UPHOLSTERED PANELS

. . .	CO 79545	Rear quarter upholstered panel—R. H.	1
. . .	CO 79546	Rear quarter upholstered panel—L. H	1

LEATHER TRIM—EXPORT

(Parts that are different from cloth-trimmed jobs)

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82801	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82803	BODY HINGE PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82804	BODY HINGE PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	1
. . .	CO 82808	DOOR TRIM PANEL RETAINER ASSEMBLY—left	1
. . .	CO 82811	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82812	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82836	LOWER QUARTER TRIM PANEL ASSEMBLY—right	1
. . .	CO 82837	LOWER QUARTER TRIM PANEL ASSEMBLY—left	1
. . .	CO 82857	DOOR TRIM PANEL ASSEMBLY—right and left	2
. . .	CO 82927	Rear seat cushion (complete)	1
. . .	CO 82940	Rear seat back (complete	1
. . .	CO 82981	Folding seat (complete) (driver's)	1
. . .	CO 82982	Folding seat (complete) (passenger's)	1
. . .	CO 82985	FOLDING SEAT BACK TRIM ASSEMBLY—front	1
. . .	CO 82989	FOLDING SEAT BACK TRIM PANEL ASSEMBLY	1
. . .	CO 83001	W/S HEADER TRIM PANEL ASSEMBLY	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	1
. . .	CO 82990	FOLDING SEAT CUSHION TRIM ASSEMBLY	1

REAR WINDOW

. . .	81626	Rear window glass (not supplied—see note page 55)	1
. . .	BO 76842	Channel—rear window—long	2
. . .	BO 81503	Channel—rear window—short	2
33	BO 81579	Rear window moulding assembly	1
. . .	BO 81647	REAR WINDOW FRAME ASSEMBLY	1
34	BO 82182	REAR WINDOW CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 79454	Rear window curtain cord	2
. . .	BO 82345	Rear window curtain roller end bracket	1

TOP SECTION

ROOF

. . .	CO 82741	Roof rail—front	1
. . .	CO 80286	Roof rail—rear	1
. . .	CO 80287	Roof rail—side—R. H	1
. . .	CO 80288	Roof rail—side—L. H	1
. . .	BO 80278	Bow No. I	1
. . .	BO 80279	Bow No. 2	1
. . .	BO 80280	Bow No. 3	1
. . .	BO 80281	Bow No. 4	1
. . .	BO 80282	Bow No. 5	1
. . .	BO 80391	Bow No. 6	1
35	BO 79849	Binding—roof rail (specify length)	1
36	CO 78811	Drip moulding—R. H.	1
. . .	CO 78812	Drip moulding—L. H.	1
. . .	BO 70070	Nail (5/64"x1" countersunk head)	48
37	BO 78813	Finish strip—drip moulding—R. H.	1
. . .	BO 78814	Finish strip—drip moulding—L. H.	1
38	BO 79385	Top deck material (cut to size)1	1
39	BO 81710	REAR VIEW MIRROR ASSEMBLY	1
. . .	BO 70044	Screw (No. 10-32x7/8")	2
. . .	BO 81705	Rear view mirror to panel spacer	1

DOME LAMP

Illus. No	Part No.	Description	Per Car
40	BO 81640	DOME LAMP ASSEMBLY	1
41	BO 81783	DOME LAMP DOOR AND GLASS ASSEMBLY	1
. . .	BO 81638	SWITCH AND ESCUTCHEON PLATE ASSEMBLY	1
. . .	BO 70416	Screw (No. 6-32x5/8")	2
. . . .	BO 70467	Screw (No. 6-32x3/16") (on switch)	1
. . .	BO 80101	Switch tapping plate	1
. . .	BO 80037	GROUND WIRE ASSEMBLY	1

FLOOR SECTION

FOLDING SEATS AND CUSHIONS

(Cars 928658 to 952087
(Specify color)

42	CO 76994	Folding seat (complete) (driver's) . . .	1
43	CO 76995	Folding seat (complete) (passenger's)	1
. . .	BO 27757	FOLDING SEAT CUSHION SPRING ASSEMBLY	2
. . .	BO 27760	FOLDING SEAT BACK SPRING ASSEMBLY.	2
. . .	BO 77789	Folding seat slide (complete) (driver's)	1
44	BO 77790	Folding seat slide (complete) (passenger's)	1
. . .	BO 76959	FOLDING SEAT HINGE AND BRACKET ASSEMBLY	2
. . .	BO 9159	Bolt—hinge to floor	6
. . . .	BO 70053	Bolt—hinge to seat	6
. . .	BO 12120	Nut (1/4'-20x1/4")	6
. . .	BO 76989	Cage—hinge to seat nut	6
. . .	BO 76976	Hinge—renter	2
. . .	BO 76977	Hinge—lower and upper	4
. . .	BO 76980	Hinge pin—upper	2
. . .	BO 75981	Hinge pin—lower	2
. . .	BO 76978	Adjusting bracket	2
. . .	BO 70982	Adjusting bracket cross arm	2
. . .	BO 76979	Folding sent slide	4
. . .	BO 70412	Bolt (5/16"-18x1-3/4")	8
. .	BO 18483	Nut—slide to seat bolt	8
. .	BO 75280	Cage—slide to seat bolt nut	8
. .	BO 76983	Folding seat slide locking plate	1
. .	BO 76433	Folding seat slide locking plate spring	1
. .	BO 76985	Folding seat slide pin	4
. .	BO 76426	Folding scat slide pin spring	4
. .	CO 75566	Folding seat back assembly—trimmed	2
. .	BO 28033	Folding seat back support	4
. .	BO 18442	Folding seat back adjusting screw	4
. .	BO 77400	Folding seat wood frame assembly	2
. . .	BO 75568	Covering—folding seat back	2

FOLDING SEATS AND CUSHIONS

(Cars 952087 and upward)
(Specify color)

42	CO 82695	FOLDING SEAT COMPLETE—driver's	I
43	CO 82696	FOLDING SEAT COMPLETE—passenger's	1
. . .	BO 82580	Driver's scat hinge panel and pivot assembly	1
. . .	BO 82581	Passenger scat hinge panel assembly	1
. . .	BO 82619	Folding seat back trim panel assembly—rear	2
. . .	BO 82620	Folding seat back trim panel assembly—front	2
. . .	BO 82621	Folding seat cushion trim assembly	2
. . .	BO 82617	Folding seat cord welt	2
. . .	BO 76977	Seat hinge—upper and lower	4
. . .	BO 70053	Bolt—hinge to seat	6
. . .	BO 9159	Bolt—hinge to floor	6
. . . .	BO 12120	Nut—hinge to floor bolt	12

FOLDING SEATS AND CUSHIONS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 76989	Nut—cage (1/4")	12
. . .	BO 76980	Hinge pin—upper	2
. . .	BO 76981	Hinge pin—lower	2
44	BO 76979	Seat_ slide	4
. . .	BO 28033	Folding seat back support	4
. . .	BO 18442	Folding seat back adjusting screw	4
. . .	BO 76978	Folding seat adjusting bracket	4
. . .	BO 76982	Folding seat adjusting bracket cross arm	2
. . .	BO 70288	Folding seat adjusting bracket cross arm rivet	4
. . .	BO 76985	Folding seat slide pin	1
. . .	BO 81925	Folding seat adjusting screw	1
. . .	BO 81926	Folding scat adjusting screw locking collar	1
. . .	BZ 3037	Folding seat adjusting screw taper pin	1
. . .	BO 81929	Folding scat adjusting screw spring washer	I
. . .	BO 81937	Folding seat adjusting screw pivot plate	1
. . .	BO 18454	Folding seat adjusting screw pivot plate rivet.	2
. . .	BO 81941	Folding seat adjusting screw handle	1
. . .	BZ 3037	Folding seat adjusting screw handle taper pin	1
. . .	BO 82001	Folding seat adjusting screw yoke	1
. . .	BO 82003	Folding seat adjusting screw yoke bolt	1
. . .	BO 82561	Folding seat adjusting screw pivot assembly	1
. . .	GM 1483	Folding seat adjusting screw pivot to seat screw	2
. . .	CO 82573	Folding seat back frame assembly	2
. . .	CO 82574	Folding scat back spring	2
. . .	CO 82575	Folding seat cushion spring	2
. . .	BO 79723	Folding seat bottom trim board	2

REAR SEAT AND CUSHIONS

(Specify color)

. . .	BO 79380	REAR SEAT CUSHION ASSEMBLY	1
. . .	CO 82333	Rear seat cushion spring	1
. . .	BO 75149	Rear seat cushion dowel	2
. . .	CO 79381	Rear seat back cushion assembly	1
. . .	CO 82331	Rear seat back spring	1
. . .	BO 79040	Rear seat back hinge	1
. . .	BO 79643	Rear seat back cord welt assembly	1
. . .	CO 81143	Rear seat tool tray	1
. . .	BO 18447	Screw (No. 10-32x5/8" round head)	11
. . .	BO 18479	Nut (No. 10-32x3/16" square)	8
. . .	BO 83622	Upholstering button	x

SILL WOOD FILLERS

. . .	CO 1762	Sill filler—R. H	1
. . .	CO 81763	Sill filler—L. H.	1

TOE AND FLOOR BOARDS

. . .	BO 81374	TOE BOARD RISER ASSEMBLY—R. H	1
. . .	BO 81375	TOE BOARD RISER ASSEMBLY—L. H	1
. . .	BO 533	Bolt (1/4"-20x5/8")	4
. . .	BO 70399	Clinch nut (1/4"-20 round head type—short)	4
. . .	BO 12120	Nut (1/4"-20x1/4")	4
. . .	CO 79462	Toe plate assembly	1
. . .	BZ 26554	Shim—toe plate	10
. . .	BO 18453	Screw (1/4"-20x11/16" round head).	7
. . .	CO 76391	Front floor board—steel	1
. . .	BO 18453	Screw (1/4"-20x11/16" round head)..	3
. . .	CO 75141	Front floor board—wood	1
. . .	BO 18455	Bolt (1/4"-20x1-1/2" Flat head)	4
. . .	BO 80607	Center floor board—R. H	1
. . .	CO 82308	Battery cover assembly	2
. . .	BO 18455	Bolt (1/4"-20x1-1/2" flat head)	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
. . .	BO 76432	Rear floor board	1
. . .	BO 13455	Bolt (1/4"-20x1-1/2")	9
. . .	BO 12120	Nut (1/4"-20x1/4' square)	3
45	BO 81600	Scuff plate	2

CARPETS, MATS AND PADS

Illus. No	Part No.	Description	Per Car
. . .	BO 79388	Rear floor carpet assembly	1
. . .	BO 12223	Glove fastener button and drive screw	5
. . .	BO 70010	Carpet fastener	5
. . .	BO 70256	Glove fastener button	3
. . .	BO 12799	Nut (No. 10-32x1/8" hex.)	3
. . .	BO 79394	Rear seat heel board carpet assembly	1
. . .	BO 70280	Carpet fastener	8
46	BO 81979	Front floor mat and pad assembly—L. H. D.	1
. . .	BO 81980	Front floor mat and pad assembly—R. H. D.	1
. . .	BO 79732	Cowl panel silencer—felt	2
. . .	BO 18349	Lift-the-dot fastener post	4
. . .	BO 18313	Lift-the-dot fastener socket	4
. . .	BO 12247	Lift-the-dot fastener plate	4
. . .	BZ 12799	Lift-the-dot fastener post nut	4
. . .	BO 81847	Dash pad—felt	1
. . .	BO 18359	Clinch button (3/16"x1-1/2"	7

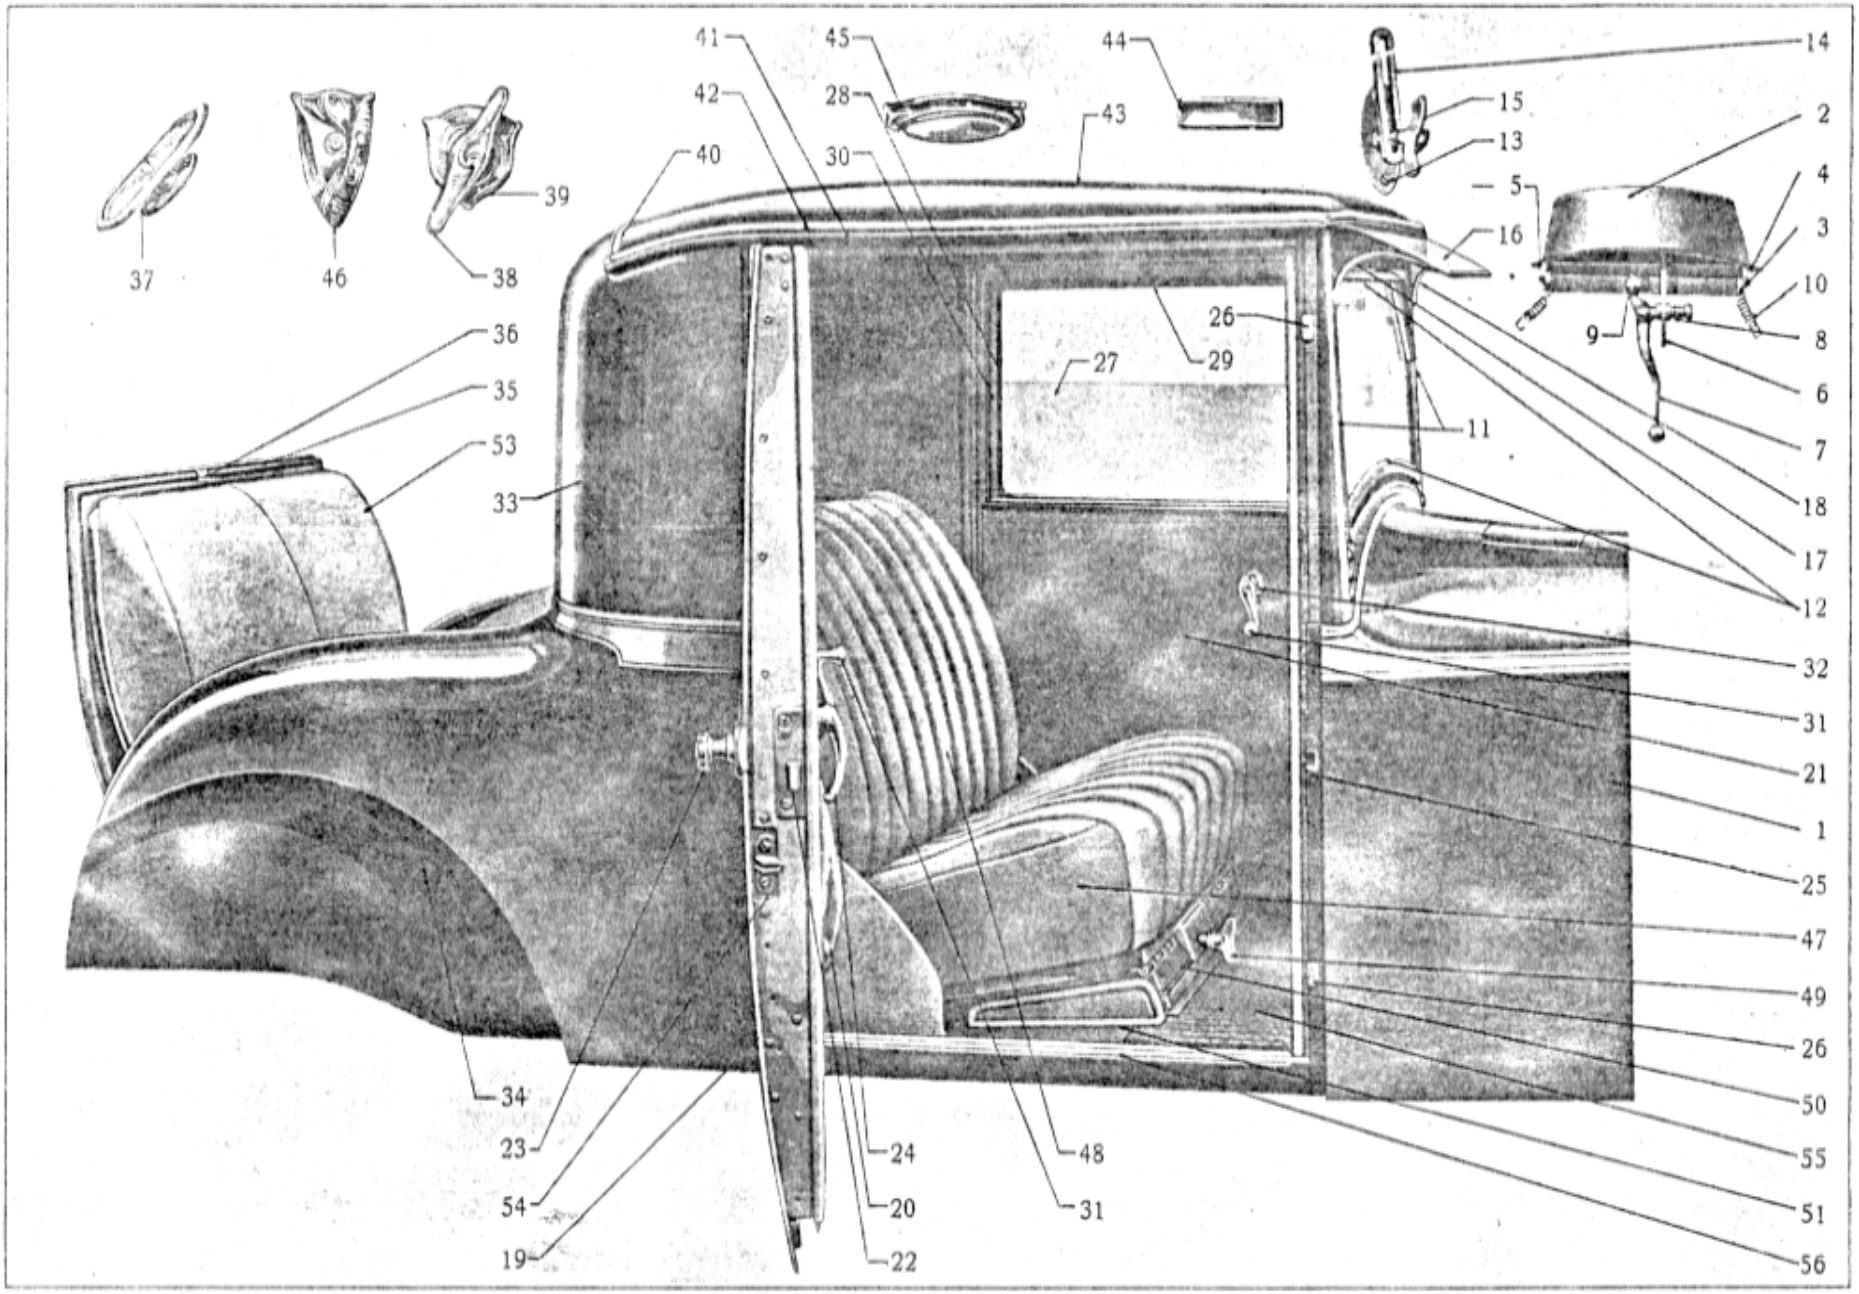

Essex Coupe Body

ESSEX COUPE

BODY COMPLETE

Illus. No	Part No.	Description	Per Car
. . .	CO 76075	BODY COMPLETE—L. H. D.	1
. . .	CO 76076	BODY COMPLETE—R. H. D	1
. . .	BO 12320	Bolt (7/16"-14x3-1/4") body to frame	10
. . .	BO 70011	Bolt (7/16"-14x1-1/2") body to frame.	2
. . .	BY 551	Nut—body to frame bolt (7/16" -14x3/8")	12
. . .	BO 12442	Plain washer-body to frame bolt (7/16"x1-3/4")	12
. . .	BO 81923	Body shim—thin	4
. . .	BO 80472	Body shim—thick	10

FRONT SECTION

COWL AND DASH

1	CO 82082	COWL AND DASH ASSEMBLY	1
. . .	BO 81282	Bonnet lacing—cowl	2
. . .	BO 18353	Rivet—cowl bonnet lacing	26
. . .	BO 79425	Cowl quarter kick panel—R. H.	1
. . .	BO 79426	Cowl quarter kick panel—L. H.	1
. . .	BO 18470	Screw (No. 10-32x5/8")	10
. . .	GO 12316	Washer (No. 10 countersunk)	10
. . .	BO 78797	Cowl panel retainer—R. H	1
. . .	BO 78798	Cowl panel retainer—L. H	1
. . .	BO 70308	Screw (1/4"-20x1-3/8")	10
. . .	BO 12120	Nut (1/4 -20x1/4" square) 8	1
. . .	BO 76356	Dash to bonnet hinge bracket	1
. . .	BO 2352	Bolt (5/16".24x1")	1
. . .	BO 76390	Dash to radiator tie rod plate.	1
. . .	BO 79732	Cowl panel silencer—felt	2
. . .	BO 70395	Clinch nut (No. 8-32 round type short)	7
. . .	BO 70221	Rubber ferrule (11/32"x9/16")	1

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Cover weatherstrip	1
3	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4"-20x 1/4' square)	4
. . .	BO 70519	Rivet (5/16"x13/32")	2
4	BO 81628	Hinge—R. H.-on cowl	1
5	BO 81629	Hinge —L. H.—on cowl	1
. . .	BO 18419	Rivet (3/16"x7/32)	4
6	BO 81636	Control bracket	4
. . .	BO 70028	Rivet (3/16"x3/8") truss head)	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube (rubber)	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Screw—drain tube clip (No. 10-32x1/2")	3
. . .	BO 18479	Nut—drain tube clip screw	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Spring—cover to instrument panel	2
. . .	BO 82524	Spring clip	2
. . .	BO 18453	Spring clip screw	2
. . .	BO 12120	Spring clip screw nut	2

FRONT PILLAR AND WINDSHIELD PANELS

11	CO 81378	FRONT PILLAR ASSEMBLY.	1
. . .	BO 81386	LOCK PILLAR TO DASH BRACKET AND TOE BOARD RISER ASSEMBLY	1
. . .	BO 81387	LOCK PILLAR TO DASH BRACKET AND TOE BOARD RISER ASSEMBLY	1
. . .	BO 70086	Clinch nut 5/16"-24)	7
. . .	BO 70396	Clinch nut (No. 10-32" long)	2
. . .	BO 70398	Clinch nut (1/4"-20 long)	4
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 78923	Cowl to windshield belt panel shim (cork)	1
. . .	BO 80392	Cowl and windshield bell panel reinforcement	2
. . .	BZ 12275	Bolt (5/16"-18x1)	10
. . .	BO 18483	Nut (5/16"x1/4" square)	10
. . .	BO 78949	Lock pillar finish plate	2
. . .	BO 18482	Screw (No. 8x1/2" sheet metal,	4
. . .	CO 82189	FINISH PANEL ASSEMBLY—over windshield—trimmed	1

FRONT PILLAR AND WINDSHIELD PANELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 18470	Screw (No. 10-32x5/8" oval head)	4
. . .	BO 12316	Finish washer (No. 10 countersunk)	4
. . .	BO 78591	Finish panel—under windshield—specify color	1
. . .	BO 70455	Screw (No. 8-32x3/4" oval head)	7
. . .	BO 18447	Screw (No. 10-32x5/8")	4
. . .	BO 70071	Shakeproof lockwasher	4
. . .	BO 70455	Screw (No. 8-32x3/4")	4
. . .	BO 79567	Finish panel retainer assembly-R. H.	1
. . .	BO 79568	Finish panel retainer assembly—L. H.	1
. . .	BO 70397	Clinch nut (No. 10-32 short)	4
. . .	BO 79507	Windshield belt panel corner filler—R. H.—lead	1
. . .	BO 79508	Windshield belt panel corner filler—L. H.—lead	1
. . .	BO 78924	Finish panel shim—fibre	1

INSTRUMENT PANEL

. . .	CO 81390	INSTRUMENT PANEL ASSEMBLY-L. H. D	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY-R. H. D	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79147	Steering gear cowl bracket—L. H. D.	1
. . .	BO 79146	Steering gear cowl bracket-R. H. D	1
. . .	BO 70400	Clinch nut (3/8-16 flat side)	2
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BM 304	Bolt (3/8"-16x1")	2
. . .	BY 551	Nut (14'-14x3/8")	1
. . .	BO 70337	Bolt (7/16”x2-1/2")	1
. . .	BO 81818	Instrument panel escutcheon plate	1

WINDSHIELD

12	CO 81893	WINDSHIELD ASSEMBLY (less glass)	1
. . .	BO 18447	Screw (No. 10-32x5/8")	7
. . .	BO 18479	Nut (No. 10-32 square)	7
. . .	81292	Glass (10-29/32" deep) (not supplied-see note page 55)	1
. . .	BO 81288	Hinge—body half	1
. . .	BO 79251	Windshield hinge weatherstrip	1
. . .	BO 76517	Glass clip—R. H.	1
. . .	BO 76541	Glass clip—L. H.	1
. . .	BO 76505	Screw-glass clip	2
. . .	BO 76506	Nut—glass clip screw	2
13	BO 79026	Swing arm body bracket	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 79027	Swing arm frame bracket	2
14	BO 5230	Swing arm	2
. . .	BO 24172	Swing arm washer	4
. . .	BO 75275	Pivot screw	2
. . .	BO 70007	Pivot screw nut (1/4"-20x1/8")	2
. . .	BO 75541	Pivot screw washer	2
15	BO 26191	Wing screw	2
. . .	BO 75470	Rubber bumper	2
. . .	BO 79028	Rubber bumper post	2
. . .	BO 83339	Side weatherstrip	2
. . .	BO 30376	Bottom weatherstrip	1

WINDSHIELD VISOR

16	CO 81683	Visor	1
17	BO 81691	Visor bracket-R. H	1
18	BO 81692	Visor bracket—L. H.	1
. . .	BO 70514	Screw (No. 10-32x3/16")	2
. . .	BO 70509	Screw (1/4"-20x7/8”)	2
. . .	GO 12316	Finish washer (No. 10—countersunk)	12

CENTER SECTION

DOORS

19	CO 81342	DOOR COMPLETE-R. H.—trimmed—specify color	1
. . .	CO 81343	DOOR COMPLETE—L. H.—trimmed—specify color	1
. . .	CO 81336	DOOR ASSEMBLY—R. H.—skeleton—less trim	1
. . .	CO 1337	DOOR ASSEMBLY—L. H.—skeleton-less trim	1
20	BO 9366	Door upholstered panel-R. H. (specify color)	1
21	BO 79367	Door upholstered panel—L. H. (specify color)	1
. . .	BO 78641	Door check strap	2
. . .	BO 78395	Door check strap retainer	2
. . .	BO 70304	Screw (No. 10-32x3/4" flat head)	4

DOOR HINGES

Illus. No	Part No.	Description	Per Car
. . .	BO 80263	DOOR HINGE AND REINFORCEMENT ASSEMBLY—body half	2
. . .	BO 78531	Door hinge—door half	2
. . .	BO 75174	Door binge rod	2
. . .	BO 18464	Screw (1/4" - 20x11/16")	28

DOOR LOCKS

22	BO 81862	DOOR LOCK ASSEMBLY--R. H.	1
. . .	BO 81860	DOOR LOCK ASSEMBLY—L. H.	1
. . .	BO 18453	Screw (1/4"-20x11/16" round head)	4
. . .	BO 18464	Screw (1/4" 20x11/16" special head)	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
. . .	BO 18461	Shakeproof lockwasher	4
. . .	BO 32587	Door lock reinforcement plate	2
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	4

DOOR HANDLES

23	BO 82601	OUTSIDE HANDLE AND LOCK CYLINDER ASSEMBLY—R. H.	
. . .	BO 70526	Screw (No. 10-32x7/8")	2
. . .	BO 31240	Key	2
. . .	BO 81809	Outside handle--L. H	1
. . .	BO 70526	Screw (No. 10-32x7/8")	2
24	BO 81664	Inside handle	2
. . .	BO 70526	Screw (No. 10-32x5/8"').	4
. . .	BO 81778	Inside handle spring	2

DOVE TAILS AND BUMPERS

25	BO 79946	DOVETAIL COMPLETE—female	2
. . .	BO 73228	Dovetail case	2
. . .	BO 18458	Clinch nut (1/4"-20)	4
. . .	BO 18475	Shakeproof lockwasher (1/4" countersunk)	4
. . .	BO 79150	Dovetail rubber bumper.	4
. . .	BO 79149	Dovetail rubber bumper retainer	2
54	BO 78994	Dovetail—male	2
. . .	BO 78995	Dovetail plate.	2
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	4
. . .	BO 18475	Shakeproof lockwasher	4
. . .	BO 78596	Striker plate	2
26	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4'-20x1/4' square)	4
. . .	BO 75151	Door rubber bumper	8
. . .	BO 75152	Door rubber bumper retainer	8
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	8

DOOR GLASS AND CHANNELS

27	78508	Door glass (not supplied—see note page 55).	2
. . .	BO 78724	Door glass rubber bumper	2
		Door glass upper channel—see weatherstrips	
28	BO 79265	Door glass side channel assembly	4
. . .	BO 75261	Door glass side channel retainer clip	8
. . .	BO 70042	Rivet (No. 9x%' crown head)	8
. . .	BO 78581	Door glass bottom channel assembly—R. H.	1
. . .	130 78582	Door glass bottom channel assembly—L. H	1
. . .	BO 78823	Cork shim—glass to channel—thin.	4
. . .	BO 78824	Cork shim—glass to channel—medium	4
. . .	BO 78825	Cork shim—glass to channel—thick	4

DOOR WEATHERSTRIPS, TRIM RETAINERS AND FINISH STRIPS

. . .	BO 79044	Door glass weatherstrip and retainer—top	2
. . .	BO 79043	Door glass weatherstrip and retainer—belt outer	2
. . .	BO 79138	Door glass weatherstrip—inner	2
. . .	BO 18482	Screw (No. 8x1/2" sheet metal)	8
. . .	BO 79071	Door side trim retainer—R. H.—trimmed	2
. . .	BO 79072	Door side trim retainer—L. H.—trimmed	2
. . .	BO 18447	Screw (No. 10-32x5/8")	16
. . .	BO 79054	DOOR BOTTOM WEATHERSTRIP AND TRIM RETAINER ASSEMBLY	2
. . .	BO 18447	Screw (No. 10-32x5/8" round head)	10
29	BO 79746	Door finish moulding—top—trimmed	2
. . .	BO 70455	Screw (No. 8-32x3/4"')	4
. . .	BO 70350	Finish washer (No. 8 countersunk)	4
. . .	BO 70395	Clinch nut (No. 8-32 round type—short)	8
30	BO 81643	DOOR WINDOW FRAME FINISH MOULDING ASSEMBLY	2
. . .	BO 70455	Screw (No. 8-32x3/4")	16

DOOR WINDLACE

Illus. No	Part No.	Description	Per Car
. . .	BO 79736	WINDLACE AND RETAINER ASSEMBLY—R. H.—over door	1
. . .	BO 79737	WINDLACE AND RETAINER ASSEMBLY—L. H.—over door	1
. . .	BO 81741	WINDLACE AND RETAINER ASSEMBLY—lock pillar—R. H	1
. . .	BO 81742	WINDLACE AND RETAINER ASSEMBLY—lock pillar—L. H	1
. . .	BO 18170	Screw (No. 10-32x5/8")	4
. . .	GO 12316	Finish washer (No. 10 countersunk)	4
. . .	BO 79738	WINDLACE AND RETAINER ASSEMBLY—hinge pillar—R. H	1
. . .	BO 79739	WINDLACE AND RETAINER ASSEMBLY—hinge pillar—L. H.	1
. . .	BO 13464	Screw (1/4"-20x11/16")	8
. . .	BO 70105	Screw (1/4"20x1")	6

DOOR WINDOW REGULATOR

. . .	BO 79240	DOOR WINDOW REGULATOR ASSEMBLY—R. H.	1
. . .	BO 79241	DOOR WINDOW REGULATOR ASSEMBLY—L. H.	1
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	6
. . .	BO 18475	Shakeproof lockwasher (1/4" countersunk)	6
. . .	BO 76339	Coil spring	2
. . .	BO 80383	Pinion	2
. . .	BO 80380	ARM AND SECTOR ASSEMBLY—R. H.	1
. . .	BO 80381	ARM AND SECTOR ASSEMBLY—L. H.	1
. . .	BO 80393	Regulator roller spring.	2
. . .	BO 80382	Regulator roller washer	2
. . .	BO 80353	Regulator arm roller	2
31	BO 81637	Regulator handle	2
32	BO 81539	Regulator handle escutcheon plate.	2
. . .	BO 79308	Regulator handle escutcheon pin	2
. . .	BO 79709	Regulator handle escutcheon spring	2

REAR SECTION

HINGE PILLAR

. . .	CO 79176	HINGE PILLAR ASSEMBLY—R. H.	1
. . .	CO 79177	HINGE PILLAR ASSEMBLY—L. H	1
. . .	BO 70396	Clinch nut (No. 10-32)	4
. . .	BO 70398	Clinch nut (1/4"-20)	26
. . .	BO 18454	Rivet (3/16"x7/16")	10

OUTSIDE PANELS AND MOULDINGS

33	CO 81106	Back panel—upper	1
. . .	CO 81419	DECK PANEL AND TROUGH ASSEMBLY—upper	1
. . .	CO 81468	Deck panel—lower	1
. . .	BO 18333	Rivet (3/16"x1/4")	9
. . .	BO 70048	Screw (1/4"-20x1")	6
. . ..	BO 18459	Screw (No. 10-32x1/2")	4
. . .	BO 18479	Nut (No. 10-32x")	10
. . .	BO 12481	Nut (5/16"-24x17/64")	19
. . .	BO 70095	Bolt (5/16"-24x7/8")	19
. . .	BM 272	Nut (1/4"-20x 1/4")	2
. . .	BO 12431	Bolt (5/16"x24x13/16")	6
34	CO 81462	QUARTER PANEL ASSEMBLY—R. H.	1
. . .	CO 81463	QUARTER PANEL ASSEMBLY—L. H.	1
. . .	BO 18459	Screw (No. 10-32x1/2" round head)	10
. . .	BO 18479	Nut (No. 10-32x3/16")	10
. . .	BO 70216	Rivet (3/16"x3/8") truss head	2
. . .	BO 70028	Rivet (3/16"x3/8")	2
. . .	BO 75233	Fender bracket nut cage	2
. . .	BO 75280	Fender bracket nut cage—5/16"	8
. . .	CO 78742	Belt moulding	1
. . .	BO 80243	Deck moulding—vertical—R. H	1
. . .	BO 80244	Deck moulding—vertical—L. H.	1
. . .	BO 12120	Nut (1/4"-20x1/4" square)	16
. . .	BO 18453	Screw (1/4"-20x11/16")	6
. . .	BO 70048	Screw (1/4"-20x1")	10
. . .	BO 2352	Bolt (5/16"-24x1")	6
. . .	BO 12481	Nut (5/16"-24x17/64")	6
. . .	BO 70096	Bolt (5/16-24x3/4")	10

DECK LID

Illus. No	Part No.	Description	Per Car
35	CO 80260	DECK LID ASSEMBLY (less trim)	1
. . .	BO 80217	Deck lid hinge—body half—R. H	1
. . .	BO 80218	Deck lid hinge—body half--L. H.	1
. . .	BO 80214	Deck lid hinge—door half	2
. . .	BO 70004	Rivet ((3/16)	12
. . .	BO 80199	Deck lid hinge bolt	2
. . .	BO 18073	Deck lid hinge bolt nut (1/2"-13x5/16")	2
36	BO 81950	DECK LID LOCK ASSEMBLY	1
37	BO 82485	DECK LID HANDLE AND CYLINDER ASSEMBLY	1
. . .	BO 70526	Screw (No. 10-32x3/4")	2
. . .	BO 31240	Deck handle cylinder key	2
. . .	BO 80201	Deck lid striker plate	1
. . .	BO 18069	Screw (No. 10-32x3/4")	2
. . .	BO 12799	Nut (No. 10-32x3/16")	2
. . .	BO 80202	Deck lid bumper	2
. . .	BO 80203	Deck lid bumper retainer	2
. . .	BO 12799	Nut (No. 10-32x134")	2
. . .	BO 70428	Screw (No. 10-32x1-1/8")	2
. . .	BO 80210	Deck trough—R. H. side	1
. . .	BO 80211	Deck trough—L. H. side	1
. . .	BO 80206	Deck trough—upper	1
. . .	CO 80125	Deck panel upper reinforcement	1
. . .	BO 80126	Deck panel reinforcing plate	2
. . .	BO 70486	Bolt (5/16"-24x1-1/8")	8
. . .	BO 12481	Nut (5/16"-24x17/64")	8
. . .	BO 82454	DECK DOOR WINDLACE AND RETAINER ASSEMBLY	2

LEATHER TRIM— E X P O R T

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82801	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82803	BODY HINGE PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82804	BODY HINGE PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	1
. . .	CO 82808	DOOR TRIM PANEL RETAINER ASSEMBLY—left	1
. . .	CO 82811	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82812	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82857	DOOR TRIM PANEL ASSEMBLY—right and left	2
. . .	CO 82897	SEAT SIDE SHIELD TRIM PANEL ASSEMBLY—right	1
. . .	CO 82898	SEAT SIDE SHIELD TRIM PANEL ASSEMBLY—left	1
. . .	CO 82902	GLOVE BOX BOTTOM TRIM BOARD ASSEMBLY	1
. . .	CO 82906	SEAT BACK COMPLETE	1
. . .	CO 82910	SEAT BACK FRAME EXT. ASSEMBLY	1
. . .	CO 82919	SEAT CUSHION COMPLETE	1
. . .	CO 83001	WINDSHIELD HEADER TRIM PANEL ASSEMBLY	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	2

REAR WINDOW

. . .	81627	Rear window glass (not supplied—see note page 55)	1
. . .	BO 79034	West herstrip—upper	1
. . .	BO 81533	Side channel	2
. . .	BO 78581	BOTTOM CHANNEL ASSEMBLY	1
. . .	BO 81579	REAR WINDOW MOULDING ASSEMBLY	1
. . .	BO 82182	REAR WINDOW CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 79456	REAR WINDOW CURTAIN CORD	2
. . .	BO 81648	REAR WINDOW FRAME AND REGULATOR BOARD ASSEMBLY	1
. . .	BO 82345	Rear window curtain roller end bracket	1

REAR WINDOW REGULATOR

. . .	BO 78792	REAR WINDOW REGULATOR ASSEMBLY	1
. . .	BO 70304	Screw (No. 10-32,00	4
. . .	BO 79308	Regulator handle escutcheon pin	1
. . .	BO 79709	Regulator handle escutcheon spring	1
38	BO 81663	Regulator handle	1
39	BO 81639	Regulator handle escutcheon	1
. . .	BO 18479	Nut (No. 10-32x3/16")	4

TOP SECTION

TOP

Illus. No	Part No.	Description	Per Car
. . .	CO 82741	Roof rail—front	1
. . .	CO 82742	Roof rail—rear	1
. . .	CO 82744	Side rail—R. H.	1
. . .	CO 82745	Side rail—L. H.	1
. . .	BO 79701	Door header finish strip—R. H.—on body	1
. . .	BO 79702	Door header finish strip—L. H.—on body	1
. . .	BO 82748	Bow No. 1	1
. . .	BO 82751	Bow No. 2	1
. . .	BO 82754	Bow No. 3	1
40	BO 79849	Binding—roof rail—front and rear (specify length)	1
41	CO 81716	Drip moulding—R. H	1
. . .	CO 81717	Drip moulding—L. H	1
. . .	BO 70070	Nail (5/64"x1" countersunk head)	26
42	BO 81720	Drip moulding finish plate—R. H	1
. . .	BO 81721	Drip moulding finish plate—L. H.	1
43	BO 79872	Top deck	1
44	BO 81710	Rear view mirror	1
. . .	BO 70044	Screw (No. 10-32x74")	2
. . .	BO 81705	Rear view mirror spacer	1

DOME LAMP

45	BO 81640	DOME LAMP ASSEMBLY	I
. . .	BO 81783	DOME LAMP DOOR ASSEMBLY	1
. . .	BO 82002	DOME LAMP BASE ASSEMBLY	1
46	BO 81638	DOME LAMP SWITCH ASSEMBLY	1
. . .	BO 70416	Screw (No. 6-32x5/8” oval head)	2
. . .	BO 70467	Screw (No. 6-32x3/16” fillister head) (on switch)	2

FLOOR SECTION

SEATS AND CUSHIONS

47	CO 82281	FRONT SEAT CUSHION ASSEMBLY	1
48	CO 82271	FRONT SEAT BACK ASSEMBLY	1
. . .	CO 82329	FRONT SEAT CUSHION SPRING ASSEMBLY	1
. . .	CO 82328	FRONT SEAT BACK SPRING ASSEMBLY	1
. . .	BO 82312	Front seat cushion dowel	2
. . .	BO 81925	Adjusting screw	1
. . .	BO 81927	Adjusting screw trunnion	1
49	BO 81941	Adjusting screw handle	1
. . .	BO 3037	Adjusting screw handle taper pin	I
. . .	BO 81926	Adjusting screw collar	1
. . .	BO 82001	Adjusting screw yoke	1
. . .	BO 82003	Adjusting screw yoke bolt	1
. . .	BO 82005	ADJUSTING SCREW PIVOT ASSEMBLY	1
. . .	BO 81929	Adjusting screw spring washer	1
. . .	BO 81937	Adjusting screw pivot plate	1
56	CO 81497	HINGE PANEL AND PIVOT ASSEMBLY	1
. . .	BO 81919	Hinge—upper and lower	2
. . .	BO 9159	Hinge bolt	6
. . .	BO 12120	Hinge bolt square nut	4
. . .	BO 81930	Hinge rod	2
51	BO 82041	Seat side finish panel—R. H. (Aluminum)	1
. . .	BO 82042	Seat side finish panel—L. H. (Aluminum)	1
. . .	BO 18465	Seat side finish panel screw	6
. . .	BO 82048	SEAT ROLLER ASSEMBLY	2
. . .	BZ 122	Seat roller nut (5/16".18x5/16")	4
. . .	BZ 908	Seat roller bolt (5/16"-18x7/8")	4
. . .	BO 82313	Seat slide	2
. . .	BO 70554	Seat slide screw	4
. . .	BO 12120	Seat slide screw nut	4
. . .	BO 82314	Seat slide "T" bolt	2
. . .	BO 18045	Seat slide "T" bolt nut—thin	2
. . .	BO 79040	SEAT BACK HINGE ASSEMBLY	2
. . .	BO 82401	Seat back slide button	2
. . .	BO 75280	Nut cage (IV)	2

SEATS AND CUSHIONS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 18483	Nut (5/16"-18x1/4" square)	2
. . .	BO 76989	Nut cage (1/4")	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
. . .	BO 82349	TRIMBOARD ASSEMBLY—seat back panel	1
. . .	CO 79873	RUMBLE SEAT CUSHION ASSEMBLY	1
53	CO 30299	RUMBLE SEAT BACK ASSEMBLY	1
. . .	CO 82235	Rumble seat trim panel—R. H	1
. . .	CO 82235	Rumble seat trim panel—L. H.	1
. . .	BO 83622	Upholstering button (specify color)	x

SILL FILLERS

. . .	CO 81762	Sill filler (wood)—R. H.	1
. . .	CO 81763	Sill filler (wood)—L. H.	1

TOE AND FLOOR BOARDS

. . .	BO 81374	TOE BOARD RISER ASSEMBLY—R. H.	1
. . .	BO 81375	TOE BOARD RISER ASSEMBLY—L. H.	1
. . .	BO 18447	Screw (No. 10-32x5/8")	4
. . .	BO 18466	Clinch nut (No. 10-32x5/64")	4
. . .	BO 18479	Screw (No. 10-32x3/16"" square)	4
. . .	CO 79462	TOE PLATE ASSEMBLY	1
. . .	BO 18453	Screw (1/4"-20x11/16")	7
. . .	CO 76391	Front floor board—steel	1
. . .	BO 18453	Screw (1/4"-20x11/16")	3
. . .	CO 75141	Front floor board—wood	1
. . .	BO 80607	Center floor board—R. H.	1
. . .	BO 82308	BATTERY COVER ASSEMBLY	2
. . .	BO 18455	Bolt (1/4"-20x1-1/2" flat head)	10
. . .	BO 12120	Nut (1/4'-20x1/4" square)	2
. . .	CO 79137	Rear floor board	1
. . .	BO 18455	Screw (1/4"-20x1-1/2" flat head)	9
. . .	BO 12120	Nut (1/4 -20x1/4")	9
. . .	BO 81600	Scuff plate	2
. . .	CO 78846	Rumble seat toe board	1
. . .	BO 70419	Screw (1/4"-20x1-1/4"" round head)	4
. . .	BO 12120	Nut (1/4"-20x1/4")	4

CARPETS, MATS AND PADS

. . .	BO 81981	MAT AND PAD ASSEMBLY—L. H. D	1
. . .	BO 81982	MAT AND PAD ASSEMBLY—R. H. D.	1
. . .	BO 12247	Lift-the-dot fastener Rocket plate	6
. . .	BO 18313	Lift-the-dot fastener socket	6
. . .	BO 18349	Lift-the-dot fastener post	6
. . .	BZ 12799	Nut (No. 10-32x -1/8")	6
. . .	BO 79408	RUMBLE SEAT FLOOR CARPET ASSEMBLY	1
	BO 79732	Cowl panel silencer—felt	2
. . .	BO 12223	Clove fastener button and drive screw	6
. . .	BO 70010	Carpet fastener	6
. . .	BO 81847	Dash pad—felt	1
. . .	BO 18359	Clinch button (3/16"x1-1/2")	7

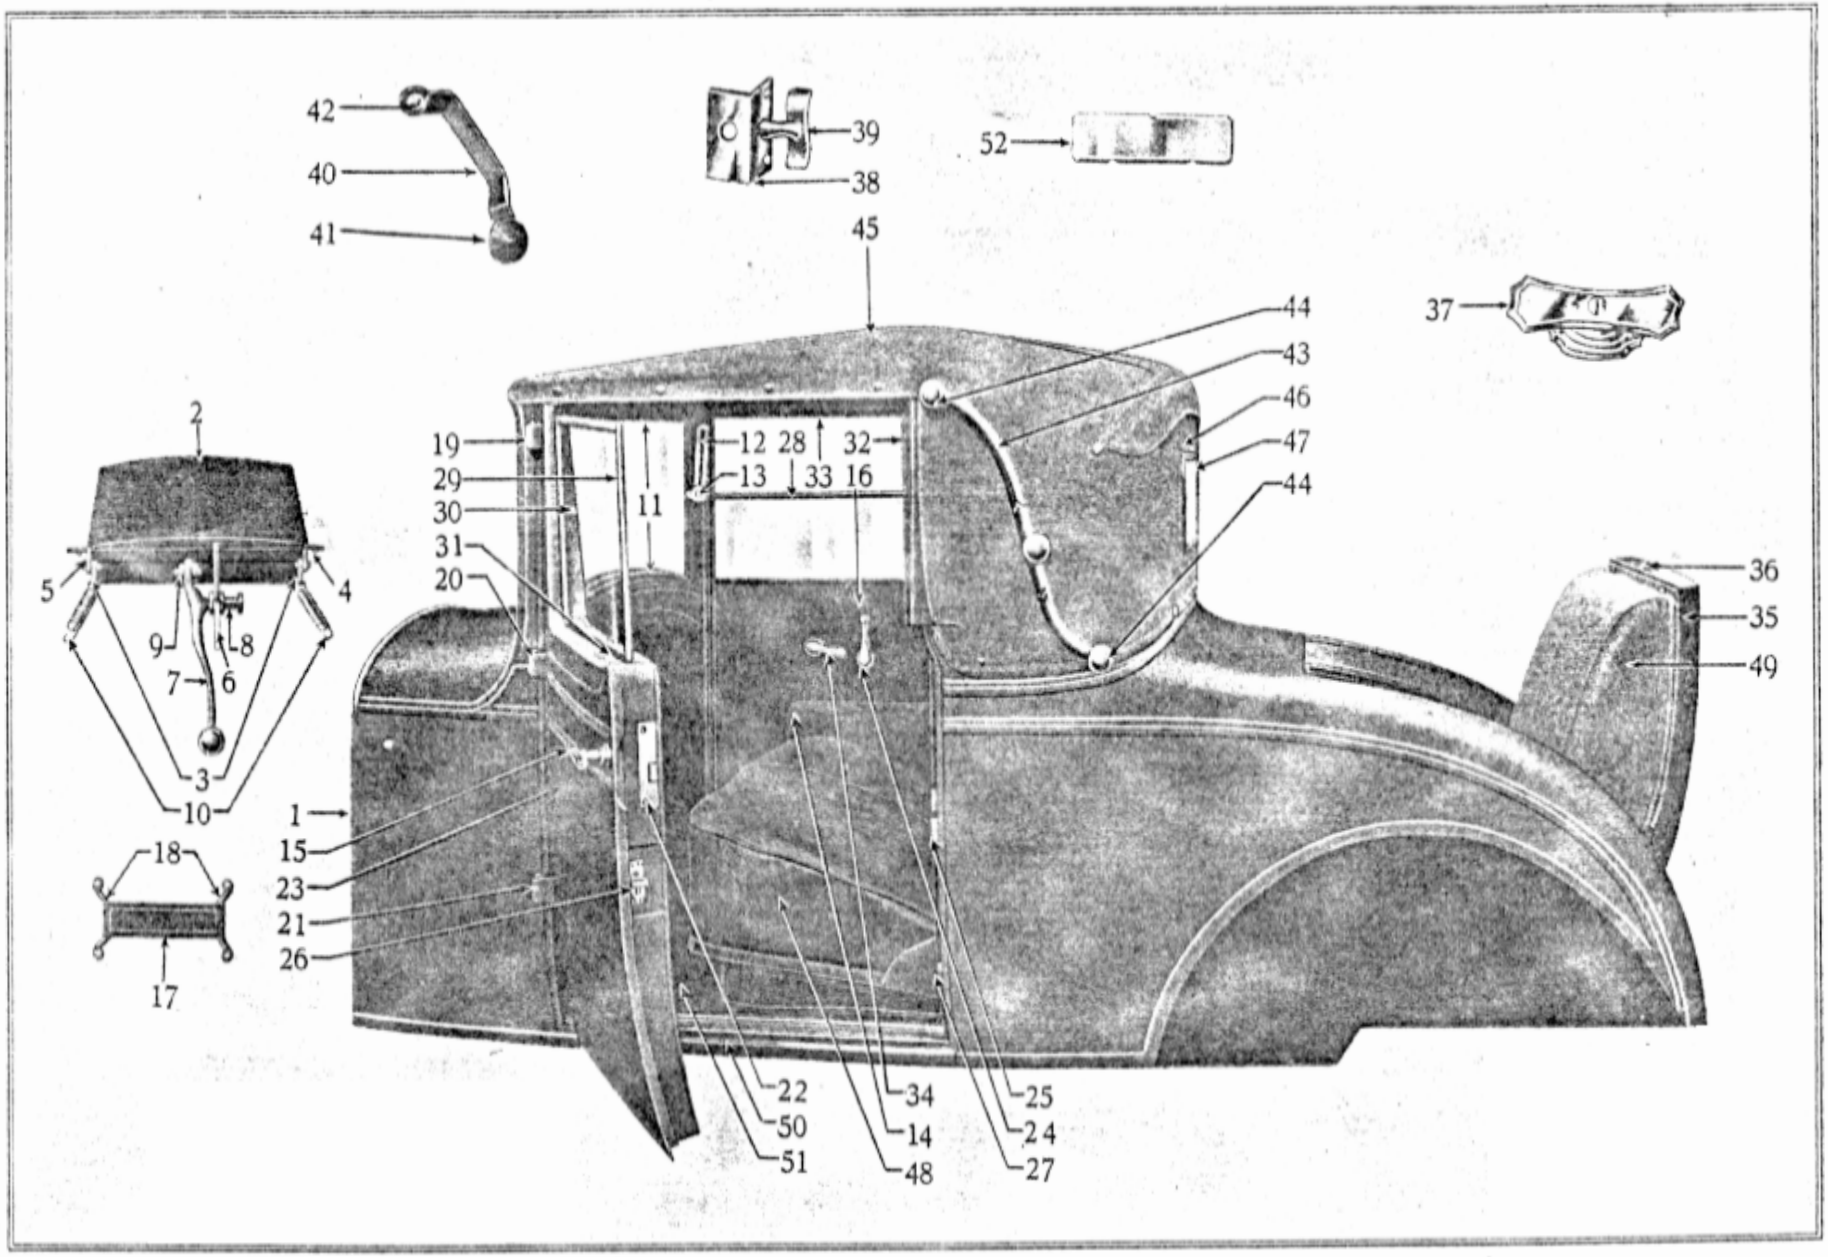

Essex Convertible Coupe Body

ESSEX CONVERTIBLE COUPE

BODY

Illus. No	Part No.	Description	Per Car
. . .	CO 82418	BODY COMPLETE—L. H. D	1
. . .	CO 82419	BODY COMPLETE—R. H. D	1
. . .	BO 12320	Bolt (7/16"-14x3-1/4")	10
. . .	BO 70011	Bolt (7/16"-14x1-1/2")	2
. . .	BO 70573	Nut (7/16"-14x3/8")	12
. . .	BO 80472	Body shim	8
. . .	BO 81923	Body shim	4

FRONT SECTION

COWL AND DASH

1	CO 82082	COWL AND DASH ASSEMBLY	1
. . .	BO 81282	Bonnet lacing—cowl	2
. . .	BO 18353	Bonnet lacing rivet	26
. . .	BO 70243	Rubber ferrule—dash—large. . .	5
. . .	BO 70504	Rubber ferrule—dash—small	4
. . .	CO 84106	Cowl quarter kick panel—R. H.	1
. . .	CO 84107	Cowl quarter kick panel—L. H	1
. . .	GO 12316	Cowl quarter kick panel finish washer	8
. . .	BO 76356	Dash to bonnet hinge bracket	1
. . .	BO 2352	Dash to bonnet hinge bracket bolt (5/16"-24x1")	1
. . .	BO 76390	Dash to radiator tie plate	1
. . .	BO 79732	Cowl panel silencer—felt	1

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Cover weatherstrip	1
3	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4"-20x13/16"square)	4
. . .	BO 70519	Rivet (5/16"x13/32"	2
4	BO 81628	Hinge—R. H.—on cowl	1
5	BO 81629	Hinge—L. H.—on cowl..	1
. . .	BO 18419	Rivet (3/16"x7/32")	1
6	BO 81636	Control bracket	1
. . .	BO 70028	Rivet (3/16"x3/8")	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube (rubber)	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Drain tube clip screw	3
. . .	BO 18479	Drain tube clip screw nut	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Ventilator handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Cover to instrument panel spring	2
. . .	BO 82524	Cover to instrument panel spring clip..	2
. . .	BO 18453	Spring clip screw	2
. . .	BO 12120	Spring clip screw nut	2

FRONT PILLAR

. . .	CO 84117	FRONT PILLAR AND BELT PANEL ASSEMBLY	1
. . .	BO 78923	Cowl to windshield belt panel—cork	2
. . .	CO 78591	Finish panel—under windshield (specify color)	1
. . .	GO 12316	Finish washer	x
. . .	BO 84108	Windshield front pillar finish plate—R. H.	1
. . .	BO 84109	Windshield front pillar finish plate—L. H.	1

INSTRUMENT PANEL

Illus. No	Part No.	Description	Per Car
. . .	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79147	Steering gear cowl bracket—L. H. D	1
. . .	BO 79146	Steering gear cowl bracket—R. 11 D.	1
. . .	BO 70400	Clinch nut (3/8"-16 flat side)	2
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BM 304	Bolt (3/8"-16x11")	2
. . .	BY 551	Nut (7/16"-14x3/8"	1
. . .	BO 70337	Bolt (7/16"-14x2-1/2")	1
. . .	BO 81818	Instrument panel escutcheon plate	1

WINDSHIELD

11	CO 83542	WINDSHIELD ASSEMBLY (less glass)	1
. . .	83055	Glass (not supplied—see note page 55)	1
. . .	BO 84118	Windshield gasket—top	1
. . .	BO 84111	Hinge—female	1
. . ..	BO 84119	Weatherstrip—bottom and sides	1
. . .	BO 83830	Glass clip—R. H	1
. . .	BO 83831	Glass clip—L. H	1
. . .	BO 84112	Glass clip bolt	2
. . .	BO 83692	Glass clip nut	2
. . .	BO 84120	Windshield rubber bumper	2
12	BO 83659	Swing arm	2
. . .	BO 83674	Swing arm body bracket	2
. . .	BO 83670	Swing arm body bracket bolt	2
. . .	BO 83675	Swing arm frame bracket	2
. . .	BO 84121	Swing arm pivot screw—male	2
. . .	BO 84124	Swing arm pivot screw—female	2
. . .	BO 83843	Swing arm washer—rubber	2
. . .	BO 83743	Swing arm washer—cup style—N. P	2
13	BO 84110	Swing arm knurled nut	2
. . .	BO 83375	Header dowel	2
. . .	BO 83475	Header dowel thumb screw	2
52	BO 82774	Rear view mirror	1

CENTER SECTION

DOORS

14	CO 84070	DOOR COMPLETE—R. H.—trimmed (specify color)	1
15	CO 84071	DOOR COMPLETE—L. H.—trimmed (specify color)	1
. . .	CO 84072	DOOR ASSEMBLY—R. H.—skeleton (specify color)	1
. . .	CO 84073	DOOR ASSEMBLY—L. H.—skeleton (specify color)	11
. . .	CO 84074	Door upholstered panel—R. H. (includes pocket flaps)	1
. . .	CO 84075	Door upholstered panel—L. H. (includes pocket flaps).	1
17	BO 83480	Door check strap	2
18	BO 83418	Door check strap loop	4

DOOR HINGES

. . .	BO 84076	DOOR HINGE ASSEMBLY—R. H.—upper	1
19	BO 84077	DOOR HINGE ASSEMBLY—L. H.—upper	1
. . .	BO 84078	DOOR HINGE ASSEMBLY—R. H.—center	1
20	BO 84079	DOOR HINGE ASSEMBLY—L. H.—center..	1
. . .	BO 84030	DOOR HINGE ASSEMBLY—R. H.—lower	1
21	BO 84081	DOOR HINGE ASSEMBLY—L. H.—lower	1
. . .	BO 83457	Door hinge pin	6

DOOR LOCKS

. . .	BO 83553	DOOR LOCK ASSEMBLY—R. H.—remote control	1
22	BO 83554	DOOR LOCK ASSEMBLY—L. H.—remote control	1

DOOR HANDLES

Illus. No	Part No.	Description	Per Car
. . .	BO 83540	OUTSIDE HANDLE AND CYLINDER ASSEMBLY—R. H.	1
. . .	BO 31240	Key	1
23	BO 83541	Outside handle—L. H	1
24	BO 83535	Inside handle—remote control	2
. . .	BO 83436	Inside handle escutcheon plate	2
. . .	BO 83476	Door outside handle safety screw—inside	2
. . .	BO 83490	Door outside handle safety screw washer	2
. . .	BO 84114	Escutcheon plate pin—remote control handle	2
. . .	BO 84113	Escutcheon plate spring—remote control handle	2

DOOR DOVETAILS AND BUMPERS

25	BO 83557	DOVETAIL COMPLETE—female	2
26	BO 83374	Dovetail—male	2
. . .	BO 83443	Striker plate	2
27	BO 83676	Door rubber bumper	4
. . .	BO 83739	Door rubber bumper retainer	4

DOOR GLASS AND CHANNELS

. . .	83059	Door glass (not supplied—see note page 55)	2
. . .	BO 83348	Door glass rubber bumper	2
. . .	BO 83349	Door glass rubber bumper	2
. . .	BO 83472	Door glass channel—hinge pillar—felt	2
28	CO 83559	DOOR GLASS CHANNEL ASSEMBLY—R. H. COMPLETE—chromium	1
29	CO 83560	DOOR GLASS CHANNEL ASSEMBLY—L. H. COMPLETE—chromium	1

DOOR WINDLACE

. . .	BO 84084	Door windlace—hinge pillar	2
. . .	BO 84085	Door windlace—lock pillar—lower	2
32	BO 84086	Door wirdlace-lock pillar—upper—block type—R. H.	1
33	BO 84087	Door windlace—lock pillar—upper—block type—L. H.	1
. . .	BO 84166	Door header windlace—block type—R. H.	1
. . .	BO 84167	Door header windlace—block type—L H.	1

FINISH STRIPS

. . .	BO 83425	Finish moulding—R. H. Side—front	1
30	BO 83426	Finish moulding—L. H. Side—front	1
. . .	BO 83423	Finish moulding—R. H.—bottom	1
. . .	BO 83424	Finish moulding—L. H.—bottom	1

DOOR WINDOW REGULATORS

. . .	BO 84088	DOOR WINDOW REGULATOR. ASSEMBLY—R. H.	1
. . .	BO 84089	DOOR WINDOW REGULATOR ASSEMBLY—L. H.	1
34	BO 83536	Regulator handle	2
. . .	BO 83437	Regulator handle escutcheon plate	2
. . .	BO 83714	Regulator handle escutcheon plate pin	2
. . .	BO 83481	Regulator handle escutcheon plate spring	2

REAR DECK

Illus. No	Part No.	Description	Per Car
35	CO 83880	DECK LID ASSEMBLY	
. . .	BO 83498	Deck lid hinge—R. H	1
. . .	BO 83499	Deck lid hinge—L. H.	1
. . .	BO 83487	Deck lid stop—R. H	1
. . .	BO 83488	Deck lid stop—L. H	1
. . .	BO 83456	Deck lid hinge pin	2
. . .	BO 83474	Deck lid hinge adjusting screw	2
. . .	BO 83429	Deck lid hinge adjusting screw nut..	2
. . .	BO 83431	Deck lid hinge adjusting screw nut—side	2
36	BO 83537	DECK LID LOCK ASSEMBLY	2
37	BO 83538	DECK LID HANDLE AND CYLINDER ASSEMBLY	1
. . .	BO 31240	Deck lid handle key	1
. . .	BO 83444	Deck lid striker plate	1
. . .	BO 83347	Deck lid bumper	2

TOP SECTION

. . .	CO 83464	Side rail—R. H	1
. . .	CO 83465	Side rail—L. H.	1
. . .	CO 84090	Top rail—front	1
38	BO 84091	Top to windshield bracket	2
39	BO 84096	Top to windshield bracket wing screw	2
. . .	CO 84092	TOP BOW ASSEMBLY—center	1
. . .	CO 84115	TOP BOW ASSEMBLY—rear	1
40	BO 83419	Roof side rail to lock pillar link—R. H.—N. P.	1
. . .	BO 83420	Roof side rail to lock pillar link—L. H.—N. P	1
41	BO 84093	Roof side rail to lock pillar link knurled thumb nut	2
42	BO 84094	Roof side rail to lock pillar link screw	2
. . .	BO 83402	Folding top hinge—upper—R. H.	1
. . .	BO 83403	Folding top hinge—upper—L. H.	1
. . .	BO 84098	Folding top hinge screw—front	2
. . .	BO 84127	Folding top hinge screw—rear	2
. . .	BO 83398	Folding top hinge—lower—upper half	2
. . .	BO 83400	Folding top hinge—lower—lower half	2
. . .	BO 84129	Folding top hinge—lower—body bracket	2
. . .	BO 84131	Folding top hinge—lower—to body bracket pin	2
. . .	BO 84122	Rear top how finish plate—bottom	2
. . .	BO 84133	Windshield header windlace	1
. . .	BO 84134	Windshield header sponge rubber	1
43	BO 84095	Side arm	2
44	BO 83400	Side arm nut	4
. . .	BO 83907	Side arm nut lock	4
. . .	BO 84123	Side arm bracket	2
. . .	BO 84125	Side arm bracket leather cover	2
. . .	BO 84126	Side arm bracket leather cover washer	2
45	CO 84097	TOP DECK AND SIDE QUARTERS ASSEMBLY—less rear curtain	1
. . .	BO 83923	Top "hiders" binding (specify length)	x
. . .	BO 83925	Top "hidem" binding end clip	4
46	CO 83886	BACK CURTAIN ASSEMBLY	1
. . .	83064	Back curtain glass not supplied—see note page 55)	1
47	CO 83526	Back curtain glass frame (includes retainer)	1

FLOOR SECTION

SEATS AND CUSHIONS

48	CO 84099	SEAT CUSHION ASSEMBLY	1
. . .	BO 83496	Seat cushion dowel	2
. . .	CO 84100	Scat cushion spring	1
. . .	CO 84101	SEAT BACK CUSHION ASSEMBLY	1
. . .	CO 84102	Seat back cushion spring	1
. . .	CO 83897	RUMBLE SEAT CUSHION ASSEMBLY	1
49	CO 83898	RUMBLE SEAT BACK CUSHION ASSEMBLY	1
. . .	BO 84037	Rumble seat cushion dowel	2
. . .	BO 83415	Seat adjusting handle	1
. . .	BO 83473	Seat operating screw	1
. . .	BO 83428	Seat operating screw nut	1
. . .	BO 83435	Seat operating screw escutcheon plate	1
. . .	BO 83572	SEAT ADJUSTING RETAINING BRACE ASSEMBLY	1
. . .	BO 83539	SEAT PINION GEAR AND SHAFT ASSEMBLY	1
. . .	BO 83486	Seat adjusting stop	2
. . .	BO 83516	Seat detachable back attaching clip	6
. . .	BO 83341	Seat slide button	4
. . .	BO 83378	Seat pinion gear	2

TOE AND FLOOR BOARDS

Illus. No	Part No.	Description	Per Car
. . .	CO 81374	TOE BOARD RISER ASSEMBLY—R. H.	1
. . .	CO 81375	TOE BOARD RISER ASSEMBLY—L. H.	1
. . .	BO 18447	Screw (No. 10-32x5/8")	4
. . .	BO 18466	Clinch nut (No. 10-32x5/64")	4
. . .	BO 18479	Nut (No. 10-32x3/16" square)	4
. . .	CO 79462	Toe plate	1
. . .	CO 75141	Front floor board—wood	1
. . .	CO 84103	Rear floor board	1
. . .	CO 84104	Rumble seat toe board	1
. . .	BO 83397	Rumble seat toe board hinge	4
. . .	BO 83445	Scuff plate—R. H.	1
50	BO 83446	Scuff plate—L. H.	1

MATS, PADS AND CARPETS

51	BO 82405	MAT AND PAD ASSEMBLY—L. H. D.	1
. . .	BO 82406	MAT AND PAD ASSEMBLY—R. H. D	1
. . .	BO 12247	Lift-the-dot fastener socket plate	6
. . .	BO 18313	Lift-the-dot fastener socket plate	6
. . .	BO 18349	Lift-the-dot fastener post	6
. . .	BO 12799	Nut (No. 10-32x1/8")	6
. . .	BO 84135	Rumble seat floor carpet	1
. . .	CO 84137	Rumble sent compartment trim board—R. H.	1
. . .	CO 84138	Rumble seat compartment trim board—L. H	1

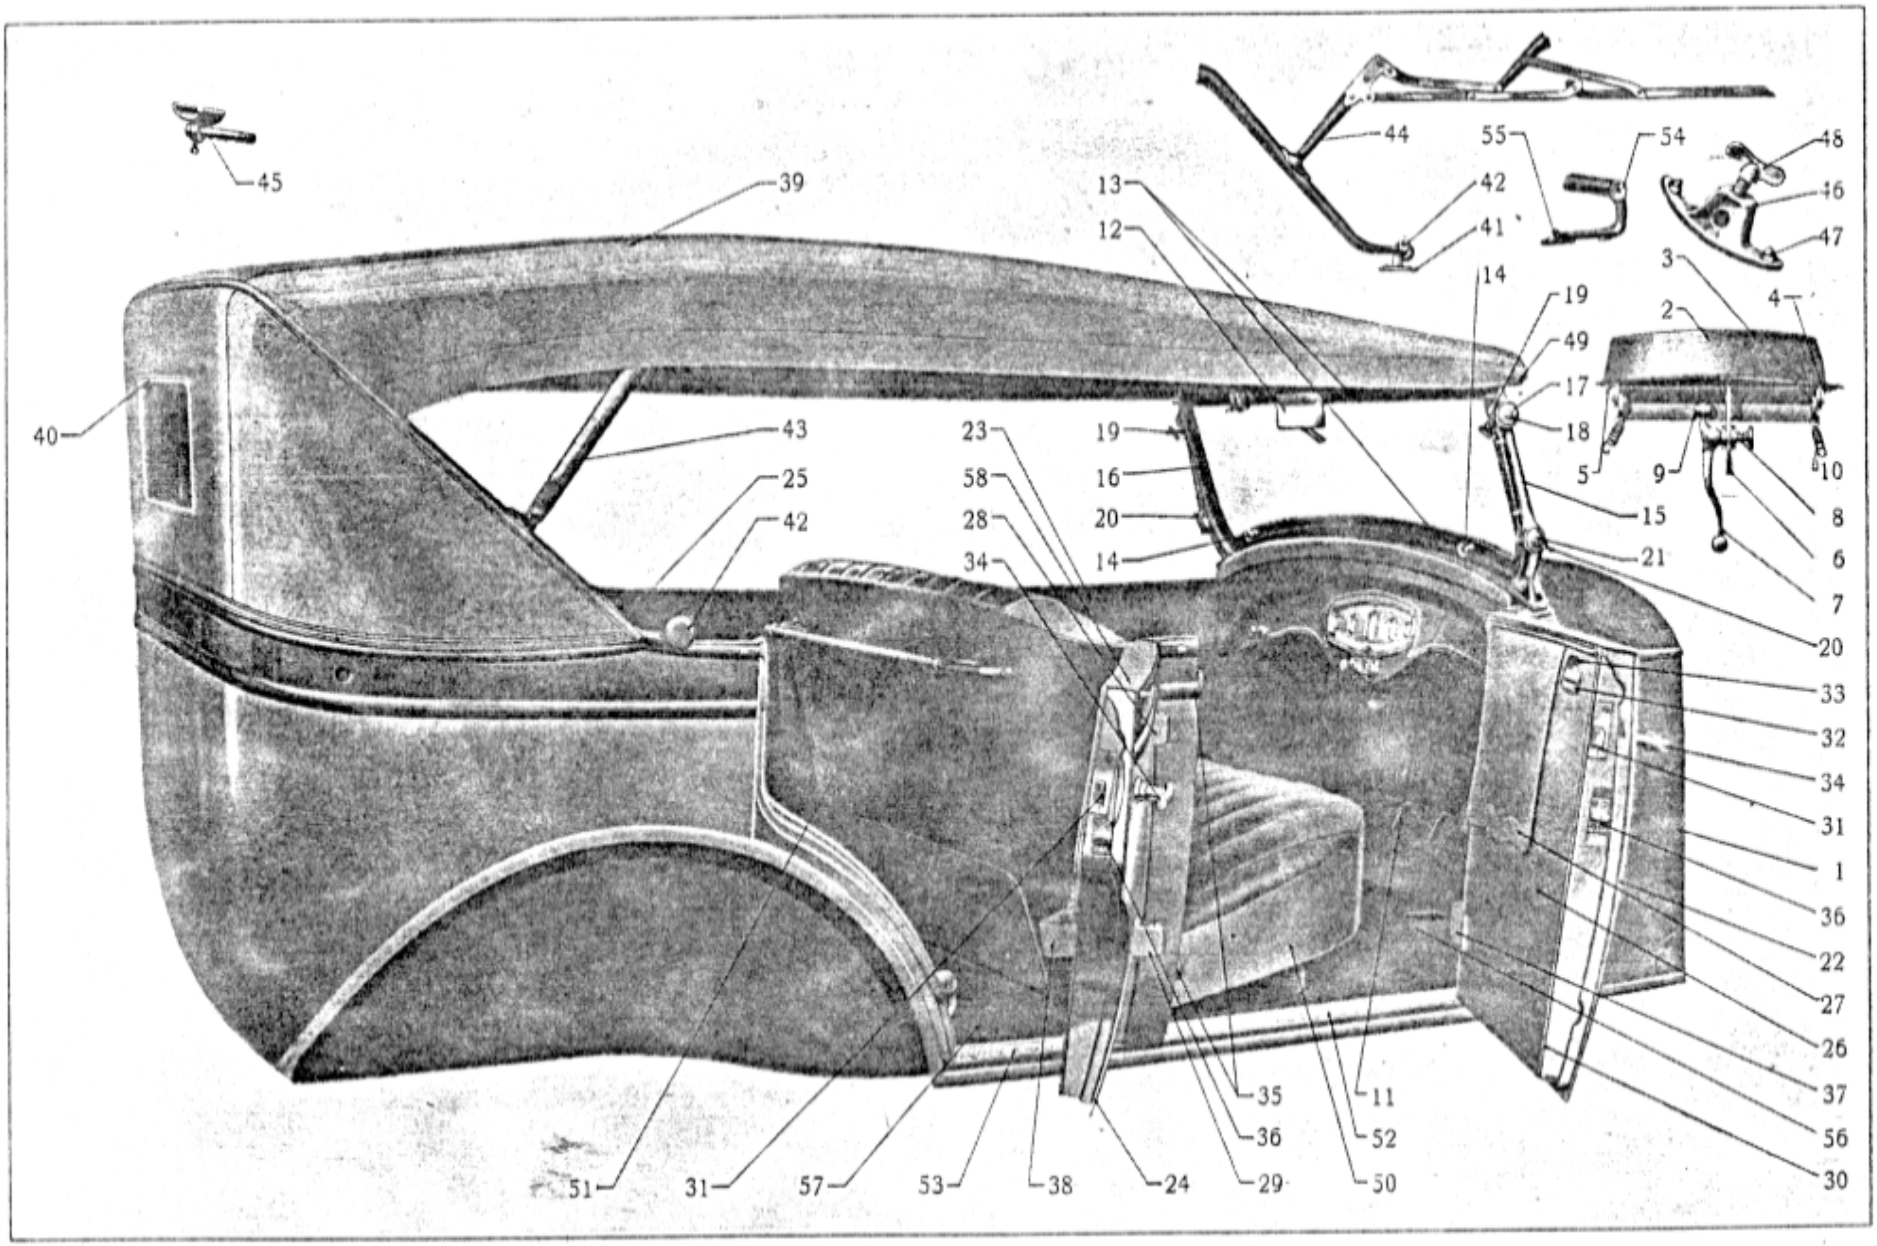

Essex Phaeton Body

ESSEX PHAETON BODY

Illus. No	Part No.	Description	Per Car
. . .	CO 60740	BODY COMPLETE—L. H. D	1
. . .	CO 60830	BODY COMPLETE—R. H.	1
. . .	BO 81923	Body shim	2
. . .	BO 80472	Body shim	12
. . .	BO 12320	Body bolt (7/16"-14x3-1/4")	10
. . .	BO 70011	Body bolt (7/16"-14x1-1/2")	2
. . .	BO 70573	Body bolt nut (7/16"-14x3/8")	12
		FRONT SECTION	
		COWL AND DASH	
1	CO 83668	COWL AND DASH ASSEMBLY	1
. . .	BO 81282	Bonnet ledge lacing—cowl	2
. . .	BO 18353	Bonnet ledge lacing rivet	24
. . .	BO 76356	Dash bonnet hinge bracket	1
. . .	BO 76390	Dash to radiator tie rod plate	1
. . .	BO 18392	Rivet (9/64"x1/4" tubular)	4
. . .	BO 70243	Rubber ferrule (7/8")	4
. . .	BO 70504	Rubber ferrule (11/16")	1
. . .	BO 70142	Rubber ferrule (3/8")	3
. . .	BO 83908	Cowl quarter kick panel—R. H.	1
. . .	BO 83909	Cowl quarter kick panel—L. H	1
		COWL VENTILATOR	
2	BO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
4	BO 81628	Hinge—R. H.—on cowl	1
5	BO 81629	Hinge—L. H.—on cow!	1
. . .	BO 18419	Rivet (3/16"x7/32")	4
6	BO 81636	Control bracket	4
. . .	BO 70028	Rivet (3/16"x3/8")	1
. . .	BO 81641	Drain pipe	3
. . .	BO 81669	Drain tube—rubber	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Drain tube clip screw	3
. . .	BO 18479	Drain tube clip screw nut	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Ventilator handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Cover to instrument panel spring	2
. . .	BO 82524	Cover to instrument panel spring clip	2
. . .	BO 18453	Cover to instrument panel spring clip screw	2
. . .	BO 12120	Cover to instrument panel spring clip screw nut	2
		INSTRUMENT PANEL	
11	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D.	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D.	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79146	Steering gear cowl bracket—R. H. D.	1
. . .	BO 79147	Steering gear cowl bracket—L. H. D.	1
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BO 70337	Steering column suspension bracket clamp bolt	1
. . .	BY 551	Steering column suspension bracket clamp bolt nut	1
. . .	BO 81818	Instrument panel escutcheon	1
		WINDSHIELD	
13	CO 83879	WINDSHIELD FRAME ASSEMBLY—less glass	1
14	BO 82797	Glass (not supplied—see note page 55)	1
. . .	BO 83413	Pull-to knob	7
. . .	BO 83876	Pull-to knob screw	2
. . .	BO 83577	ANCHOR POST SOCKET ASSEMBLY	2
. . .	BO 83575	Anchor post socket bracket—R. H.	1
. . .	BO 83576	Anchor post socket bracket—L. H	1
. . .	BO 83376	Anchor post to body filler—R. H.	1
. . .	BO 83377	Anchor post to body filler—L. H.	1
15	BO 83863	ANCHOR POST COMPLETE—R. H.	1
16	BO 83864	ANCHOR POST COMPLETE—L. H	1

WINDSHIELD—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 83533	ANCHOR POST ASSEMBLY—upper section—R. H.	1
. . .	BO 83534	ANCHOR POST ASSEMBLY—upper section—L. H	1
. . .	BO 83529	ANCHOR POST ASSEMBLY—lower section—R. H	1
. . .	BO 83530	ANCHOR POST ASSEMBLY—lower section—L. H.	1
. . .	BZ 12290	Anchor post. Nut	2
. . .	BO 83459	Anchor post pivot	2
17	BO 83869	Anchor post pivot end plug	2
18	BO 83870	Anchor post pivot end plug retaining screw	2
. . .	BO 84045	Anchor post pivot tapped head bolt	2
. . .	BO 83878	Anchor post pivot clamp.	2
19	BO 83871	Anchor post pivot wing screw—upper	2
20	BO 83872	Anchor post pivot wing screw—lower	2
21	BO 83875	Anchor post pivot lower wing screw finish washer.	2
. . .	BO 83877	Windshield cleaner tube clip	4
. . .	BO 83052	Rear view mirror	1

DOORS AND PARTS

22	CO 84046	DOOR COMPLETE—R. H.—front	1
23	CO 84047	DOOR COMPLETE—L. H.—front	1
24	CO 84048	DOOR COMPLETE—R. H.—rear	1
25	CO 84049	DOOR COMPLETE—L. H.—rear	1
26	CO 84050	Door trim panel—R. H.—front	1
. . .	CO 84051	Door trim panel—L. H.—front	1
. . .	CO 84052	Door trim panel—R. H.—rear	1
. . .	CO 84053	Door trim panel—L. H.—rear	1
27	BO 83911	Door trim panel pocket flaps	4
. . .	BO 83927	DOOR HINGE ASSEMBLY—R. H.—upper front	1
. . .	BO 83928	DOOR HINGE ASSEMBLY—L. H.—upper front	1
28	BO 83950	DOOR HINGE ASSEMBLY—R. H.—upper rear	1
. . .	BO 83951	DOOR HINGE ASSEMBLY—L. H.—upper rear	1
. . .	BO 83929	DOOR HINGE ASSEMBLY—R. H.—lower front	1
. . .	BO 83930	DOOR HINGE ASSEMBLY—L. H.—lower front	1
29	BO 83952	DOOR HINGE ASSEMBLY—R. H.—lower rear	1
. . .	BO 83953	DOOR HINGE ASSEMBLY—L. H.—lower rear	1
. . .	BO 83457	Door hinge pin	8
30	BO 83910	"Hidem" binding (specify length)	x
. . .	BO 83912	"Hidem" binding corner clip	8
31	BO 83523	DOOR LOCK ASSEMBLY—R. H	2
. . .	BO 83524	DOOR LOCK ASSEMBLY—L. H.	2
32	BO 83414	Door inside handle	4
33	BO 83895	Door inside handle pocket—R. H	2
. . .	BO 83934	Door inside handle pocket—L. H.	2
34	BO 83525	Door outside handle	4
35	BO 83346	Door rubber bumper	8
. . .	BO 83370	Door rubber bumper retainer	8
36	BO 83373	Door dovetail—male	4
. . .	BO 83558	DOOR DOVETAIL ASSEMBLY—female	4
. . .	BO 83438	Door lock striker plate	4
37	BO 84156	Door check strap—front	2
38	BO 84157	Door check strap—rear	2
. . .	BO 83956	Loop—rear check strap	2
. . .	BO 839114	Door windlace—rear (specify length)	4

TOP SECTION

TOP

39	CO 84054	TOP ASSEMBLY (includes curtains)	1
. . .	BO 84152	Top deck and side quarters	1
. . .	BO 84055	Side curtain—R. H.—front	1
. . .	BO 84056	Side curtain—L.. H.—front	1
. . .	BO 84057	Side curtain—R. H.—center	1
. . .	BO 84058	Side curtain—L. H.—center	1
. . .	BO 84059	Side curtain—R. H.—rear	1
. . .	BO 84060	Side curtain—L. H.—rear	1
. . .	BO 84061	BACK CURTAIN ASSEMBLY	1
. . .	83064	Back curtain glass (not supplied—see note page 55).	1
40	BO 83887	Back curtain glass frame (includes retainer)	1
. . .	BO 83856	Back curtain hold-down strap	1
. . .	BO 83965	Back curtain hold-down strap loop	2

. . .	CO 83355	Bow No. 3	1
. . .	CO 83357	Bow No. 4	1
45	BO 83866	TOP REST ASSEMBLY	2
46	BO 83915	Top to windshield clamp	2
47	BO 83916	Top to windshield clamp acorn nut	4
. . .	BO 83917	Top to windshield clamp bolt	4
48	BO 83968	Top to windshield clamp wing screw	2
49	BO 83923	"Hidem" binding (specify length)	2
. . .	BO 83925	"Hidem" binding end clip	2
. . .	CO 83858	TOP BOOT ASSEMBLY.	1
. . .	BO 83920	Top boot pocket fastener post	3
. . .	BO 83919	Top boot pocket fastener socket	3
. . .	BO 83918	Top boot pocket fastener socket plate	3
58	BO 83483	Curtain rod socket	3
. . .	BO 83471	Curtain rod	3

CURTAIN FASTENERS

. . .	BO 12234	Lift-the-dot fastener post—single type.	22
. . .	BO 12242	Lift-the-dot fastener post socket	51
. . .	BO 12247	Lift-the-dot fastener post socket plate	51
. . .	BO 12243	Glove fastener socket	28
. . .	BO 12250	Glove fastener socket cap	28
. . .	BO 18084	Glove fastener button and screw	28
. . .	BO 12244	Glove fastener button plate	10
. . .	BO 18127	Glove fastener stud	2
. . .	BO 4978	Glove fastener post	6
		FLOOR SECTION	

SEATS AND CUSHIONS

50	CO 84062	FRONT SEAT CUSHION ASSEMBLY	1
. . .	CO 84063	Front seat cushion spring	1
. . .	CO 84064	Front seat back cushion spring	1
. . .	CO 84065	REAR SEAT CUSHION ASSEMBLY	1
. . .	CO 84066	Rear seat cushion spring	1
. . .	CO 84067	Rear seat back cushion spring	1
. . .	BO 83497	Cushion dowel	4
51	BO 83531	ROBE RAIL ASSEMBLY.	1
. . .	BO 83910	"Hidem" binding (specify length)	x
. . .	BO 83913	"Hidem" binding end clip	6

TOE AND FLOOR BOARDS

. . .	CO 79462	TOE PLATE AND ACCELERATOR PEDAL ASSEMBLY	1
. . .	CO 81374	TOE PLATE RISER ASSEMBLY—R. 11	1
. . .	CO 81375	TOE PLATE RISER ASSEMBLY—L. H.	1
. . .	CO 76391	Front floor board—steel.	1
. . .	CO 75141	Front floor board—wood	I
. . .	CO 84153	Rear floor board	1
52	BO 83449	Front door scuff plate—R. H.	1
. . .	BO 83450	Front door scuff plate—L. H.	1
53	BO 83451	Rear door scuff plate—R. 11	1
. . .	BO 83452	Rear door scuff plate—L. H.	1
54	CO 83532	FOOT REST ASSEMBLY	1
. . .	BO 84162	FOOT REST BRACKET ASSEMBLY—R. H.	1
. . .	BO 84163	FOOT REST BRACKET ASSEMBLY—L. H.	1
55	BO 84154	Foot rest floor bracket	2

CARPETS, MATS AND PADS

56	CO 81996	MAT AND PAD ASSEMBLY—L. H. D.	I
. . .	CO 81997	MAT AND PAD ASSEMBLY—R. H. 0	1
. . .	BO 18352	Fastener post and screw	6
. . .	BO 18313	Fastener socket	6
. . .	BO 122.17	Fastener socket plate	6
57	BO 84068	Rear floor carpet	1
. . .	BO 841169	Rear sent heel board carpet	1
. . .	BO 12223	Glove fastener button and drive screw	5
. . .	BO 70010	Carpet fastener	6
. . .	BO 81847	Dash pad	1
. . .	BO 18339	Clincher button	7

TOP—Continued

Illus. No	Part No.	Description	Per Car
. . .	CO 83355	Bow No. 3	1
. . .	CO 83357	Bow No. 4	1
45	BO 83866	TOP REST ASSEMBLY	2
46	BO 83915	Top to windshield clamp	2
47	BO 83916	Top to windshield clamp acorn nut	4
. . .	BO 83917	Top to windshield clamp bolt	4
48	BO 83968	Top to windshield clamp wing screw	2
49	BO 83923	"Hidem" binding (specify length)	2
. . .	BO 83925	"Hidem" binding end clip	2
. . .	CO 83858	TOP BOOT ASSEMBLY.	1
. . .	BO 83920	Top boot pocket fastener post	3
. . .	BO 83919	Top boot pocket fastener socket	3
. . .	BO 83918	Top boot pocket fastener socket plate	3
58	BO 83483	Curtain rod socket	3
. . .	BO 83471	Curtain rod	3

CURTAIN FASTENERS

. . .	BO 12234	Lift-the-dot fastener post—single type.	22
. . .	BO 12242	Lift-the-dot fastener post socket	51
. . .	BO 12247	Lift-the-dot fastener post socket plate	51
. . .	BO 12243	Glove fastener socket	28
. . .	BO 12250	Glove fastener socket cap	28
. . .	BO 18084	Glove fastener button and screw	28
. . .	BO 12244	Glove fastener button plate	10
. . .	BO 18127	Glove fastener stud	2
. . .	BO 4978 F	Glove fastener post	6

FLOOR SECTION

SEATS AND CUSHIONS

50	CO 84062	FRONT SEAT CUSHION ASSEMBLY	1
. . .	CO 84063	Front seat cushion spring	1
. . .	CO 84064	Front seat back cushion spring	1
. . .	CO 84065	REAR SEAT CUSHION ASSEMBLY	1
. . .	CO 84066	Rear seat cushion spring	1
. . .	CO 84067	Rear seat back cushion spring	1
. . .	BO 83497	Cushion dowel	4
51	BO 83531	ROBE RAIL ASSEMBLY.	1
. . .	BO 83910	"Hidem" binding (specify length)	x
. . .	BO 83913	"Hidem" binding end clip	6

TOE AND FLOOR BOARDS

. . .	CO 79462	TOE PLATE AND ACCELERATOR PEDAL ASSEMBLY	1
. . .	CO 81374	TOE PLATE RISER ASSEMBLY—R. 11	1
. . .	CO 81375	TOE PLATE RISER ASSEMBLY—L. H.	1
. . .	CO 76391	Front floor board—steel.	1
. . .	CO 75141	Front floor board—wood	I
. . .	CO 84153	Rear floor board	1
52	BO 83449	Front door scuff plate—R. H.	1
. . .	BO 83450	Front door scuff plate—L. H.	1
53	BO 83451	Rear door scuff plate—R. 11	1
. . .	BO 83452	Rear door scuff plate—L. H.	1
54	CO 83532	FOOT REST ASSEMBLY	1
. . .	BO 84162	FOOT REST BRACKET ASSEMBLY—R. H.	1
. . .	BO 84163	FOOT REST BRACKET ASSEMBLY—L. H.	1
55	BO 84154	Foot rest floor bracket	2

CARPETS, MATS AND PADS

56	CO 81996	MAT AND PAD ASSEMBLY—L. H. D.	I
. . .	CO 81997	MAT AND PAD ASSEMBLY—R. H. 0	1
. . .	BO 18352	Fastener post and screw	6
. . .	BO 18313	Fastener socket	6
. . .	BO 122.17	Fastener socket plate	6
57	BO 84068	Rear floor carpet	1
. . .	BO 841169	Rear sent heel board carpet	1
. . .	BO 12223	Glove fastener button and drive screw	5
. . .	BO 70010	Carpet fastener	6
. . .	BO 81847	Dash pad	1
. . .	BO 18339	Clincher button	7

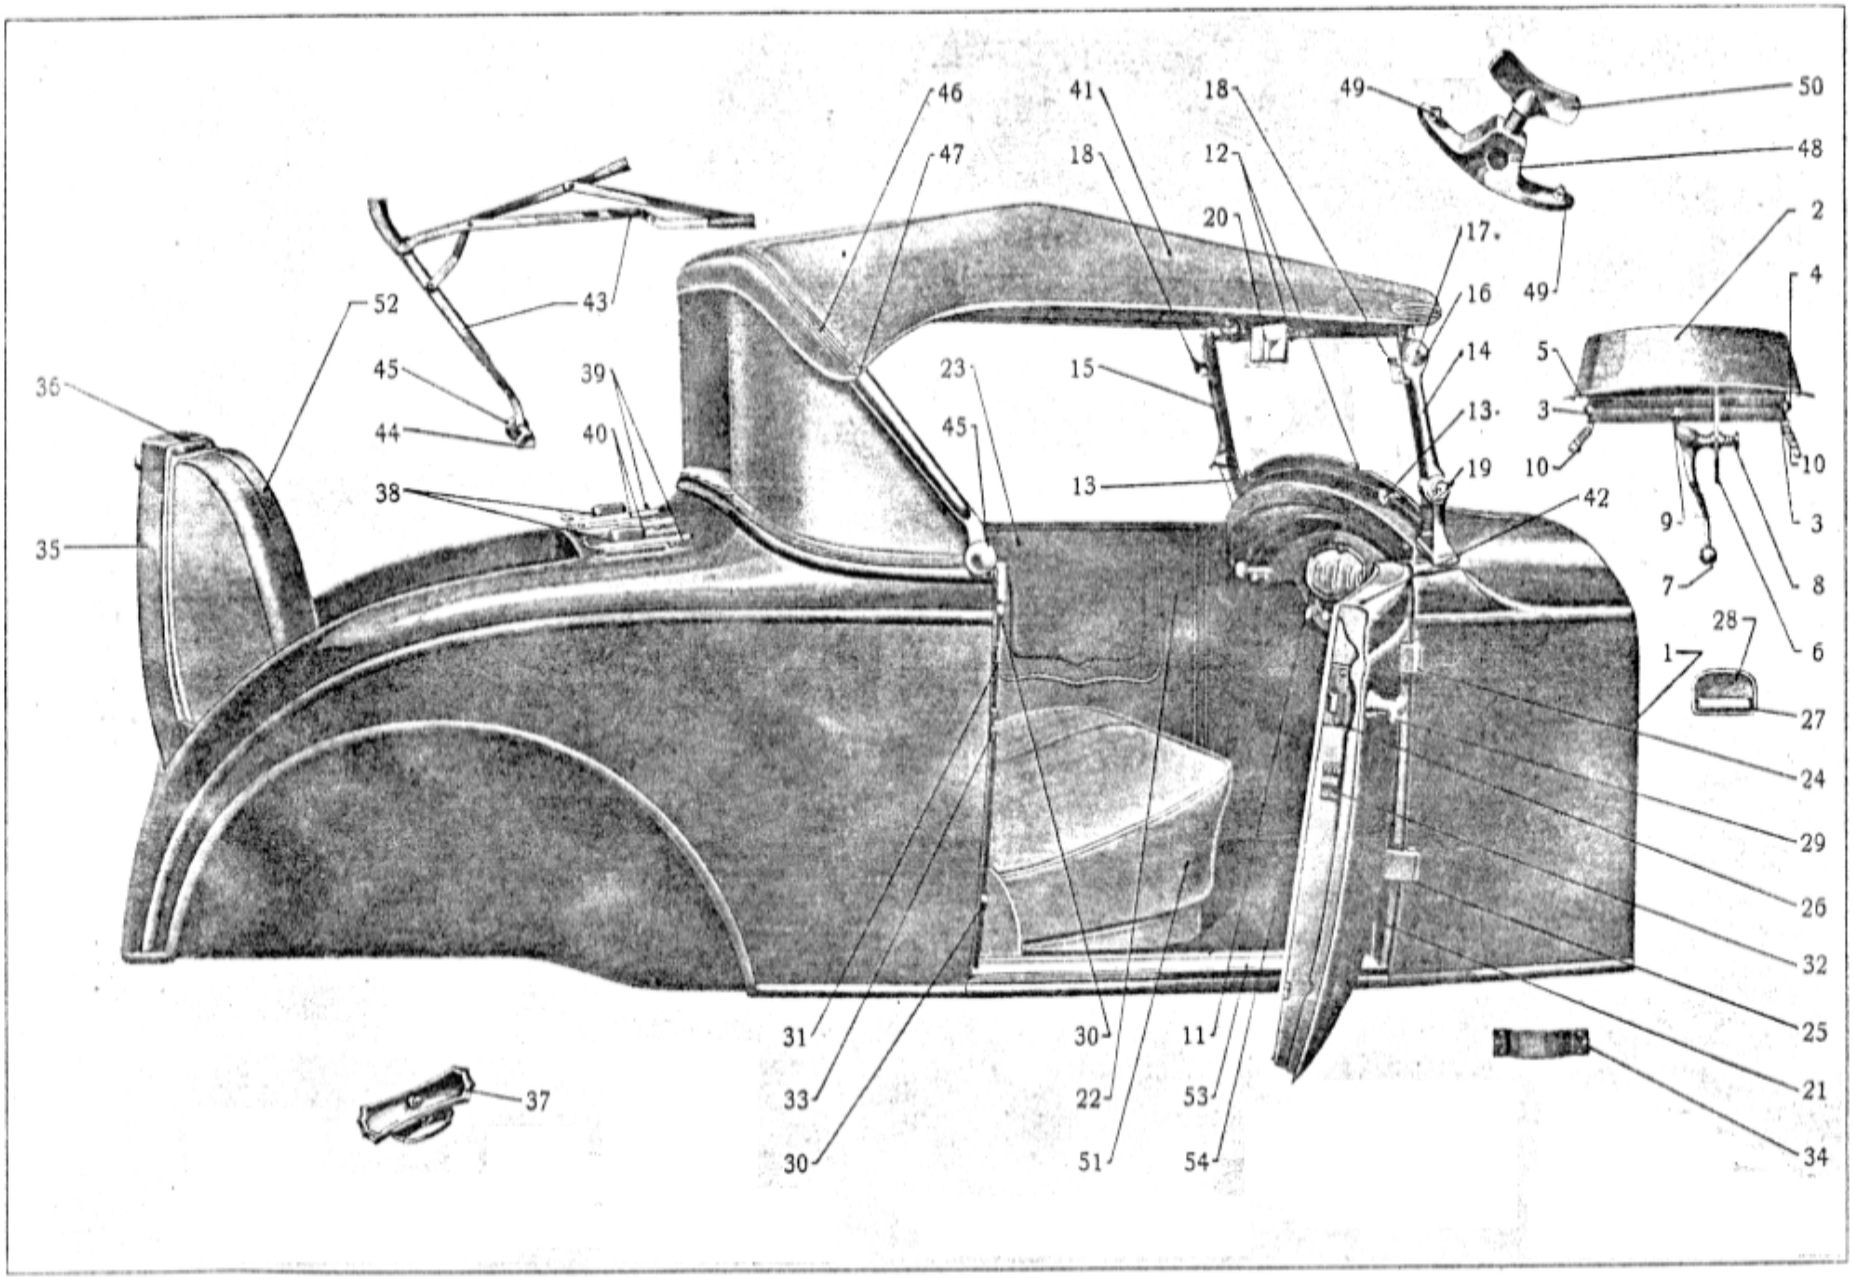

Essex Roadster Body

ESSEX ROADSTER

BODY COMPLETE

Illus. No	Part No.	Description	Per Car
. . .	CO 80356	BODY COMPLETE—L. H. D	1
. . .	CO 80357	BODY COMPLETE—R. H. D	1
. . .	BO 81923	Body shim	2
. . .	BO 80472	Body shim	12
. . .	BO 12320	Body bolt (7/16"-14x3-1/4")	10
. . .	BO 70011	Body bolt (7/16"-14x1-1/2")	2
. . .	BO 70573	Body bolt nut (7/16"-14x3/8")	12

FRONT SECTION
COWL AND DASH

1	CO 83668	COWL AND DASH ASSEMBLY	1
. . .	BO 81282	Bonnet ledge lacing—cowl	2
. . .	BO 18353	Bonnet ledge lacing rivet	48
. . .	BO 76356	Dash bonnet hinge bracket	1
. . .	BO 76390	Dash to radiator tie rod plate	1
. . .	BO 70243	Rubber ferrule (7/8")	4
. . .	BO 70504	Rubber ferrule (3/8")	1
. . .	BO 70142	Rubber ferrule (11/16")	3
. . .	BO 83908	Cowl to quarter trim board—R. H	1
. . .	BO 83909	Cowl to quarter trim board—L. H	1

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Cover weatherstrip	1
3	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (3/4"-20x1/2" square)	4
. . .	BO 81628	Hinge—R. H.—on cowl	1
5	BO 1629	Hinge—L. H.—on cowl	1
. . .	BZ 18419	Rivet (3/16"x7/32")	4
6	BO 81636	Control bracket	1
. . .	BO 70028	Rivet (3/16"x3/8")	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube—rubber	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Drain tube clip screw.	3
. . .	BO 18479	Drain tube clip screw nut	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Ventilator handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Cover to instrument panel spring	2
. . .	BO 82524	Cover to instrument panel spring clip	2
. . .	BO 18453	Cover to instrument panel spring clip screw	2
. . .	BO 12120	Cover to instrument panel spring clip screw nut	2

INSTRUMENT PANEL

11	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D.	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D	1
. . .	BO 70095	Instrument panel bolt (5/16-24X7/8")	7
. . .	BO 79146	Steering gear cowl bracket—R. H. D.	1
. . .	BO 79147	Steering gear cowl bracket—L. H. D.	1
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BO 70337	Steering column suspension bracket bolt.	1
. . .	BY 551	Steering column suspension bracket bolt nut	1
. . .	BO 81818	Instrument panel escutcheon	1

WINDSHIELD

12	CO 83878	WINDSHIELD FRAME ASSEMBLY (less glass)	1
. . .	82797	Glass (not supplied—see note page 55)	1
13	BO 83413	Pull-to knob	2
. . .	BO 83876	Pull-to knob screw	2
. . .	BO 83577	ANCHOR POST SOCKET ASSEMBLY	2
. . .	BO 83575	Anchor post socket bracket—R. II	1
. . .	BO 83576	Anchor post. socket bracket—L. II.	1

WINDSHIELD—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 83376	Anchor post to body filler—R. H	1
. . .	BO 83377	Anchor post to body filler—L. H	1
14	BO 3863	ANCHOR POST COMPLETE—R. H.	1
15	BO 83864	ANCHOR POST COMPLETE—L. H.	1
. . .	BO 83533	ANCHOR POST ASSEMBLY—upper section—R. H.	1
. . .	BO 83534	ANCHOR POST ASSEMBLY—upper section—L. H.	1
. . .	BO 83529	ANCHOR POST ASSEMBLY—lower section—R. H.	1
. . .	BO 83530	ANCHOR POST ASSEMBLY—lower section—L. H.	1
. . .	BZ 12290	Anchor post nut	2
. . .	BO 83459	Anchor post pivot	2
16	BO 83869	Anchor post. pivot end plug	2
17	BO 83870	Anchor post pivot end plug retaining screw	2
. . .	BO 84045	Anchor post pivot tapped head bolt	2
18	BO 83871	Anchor post pivot wing screw—upper	2
19	BO 83872	Anchor post pivot wing screw—lower	2
. . .	BO 83875	Anchor post pivot lower wing screw finish washer	2
. . .	BO 83877	Windshield cleaner tube clip	4
20	BO 83052	Rear view mirror	1

DOORS AND PARTS

21	CO 83881	DOOR COMPLETE—R. H.	1
. . .	CO 83882	DOOR COMPLETE—L. H	1
. . .	CO 83883	Door trim panel—R. H	1
22	CO 83884	Door trim panel—L. H	1
23	BO 83911	Door pocket flaps	2
24	BO 83927	DOOR HINGE ASSEMBLY—R. H.—upper	1
. . .	BO 83928	DOOR HINGE ASSEMBLY—L. H.—upper	1
25	BO 83929	DOOR HINGE ASSEMBLY—R. H.—lower	1
. . .	BO 83930	DOOR HINGE ASSEMBLY—L. H.—lower	1
. . .	BO 83457	Door hinge pin	4
26	BO 83523	DOOR LOCK ASSEMBLY—R. H.	1
. . .	BO 83524	DOOR LOCK ASSEMBLY—L. H.	1
27	BO 83414	Inside handle..	2
28	BO 83895	Inside handle pocket—R. H.	1
. . .	BO 83934	Inside handle pocket—L. H	1
29	BO 83525	Outside handle	2
30	BO 83346	Door rubber bumper	4
. . .	BO 83347	Door rubber bumper retainer	4
31	BO 83438	Door lock striker plate	2
32	BO 83373	Door dovetail—male	2
33	BO 83558	DOOR DOVETAIL ASSEMBLY—female	2
34	BO 83904	Door check strap	2
. . .	BO 83910	"Hidem" binding (specify length)	4
. . .	BO 83912	"Hidem" binding corner clips	4
. . .	BO 83913	"Hidem" binding end clips	4
. . .	BO 83914	Door windlace—rear	2

DECK LID

35	CO 83880	DECK LID ASSEMBLY—less trim	1
. . .	BO 83498	Deck lid hinge—R. H	1
. . .	BO 83499	Deck lid hinge—L. H.	1
. . .	BO 83456	Deck lid hinge pin	2
. . .	BO 83474	Deck lid hinge adjusting screw	2
. . .	BO 83429	Deck lid hinge adjusting screw nut	2
. . .	BO 83487	Deck lid stop—R. H.	1
. . .	BO 83488	Deck lid stop—L. H	1
. . .	BO 83431	Deck lid side adjusting screw nut	2
. . .	BO 83347	Deck lid bumper	2
36	BO 83537	DECK LID LOCK ASSEMBLY	I
37	BO 83533	DECK LID HANDLE AND CYLINDER ASSEMBLY	1
. . .	BO 31240	Deck lid key	1
. . .	BO 83444	Deck lid striker plate	1
38	BO 83350	Top to rear deck bumper	2
39	BO 83902	Top to rear deck finish bar—outer	2
40	BO 83903	Top to rear deck finish bar—inner	2

TOP SECTION

TOP

41	CO 83885	TOP ASSEMBLY (includes curtain)	
. . .	BO 83936	Top deck and side quarters	1
. . .	BO 83937	Side curtain—front—R. H.	1
. . .	BO 83938	Side curtain—front—L. H	1
. . .	BO 83939	Side curtain—rear—R. H.	1
. . .	BO 83940	Side curtain—rear—L. H.	1

	CO 83886	BACK CURTAIN ASSEMBLY	1
	83064	Back curtain glass (not supplied—see note page 55)	1
42	BO 83483	Curtain rod socket	2
. . .	BO 83471	Curtain rod	2
. . .	CO 84150	SLAT IRON ASSEMBLY—R. H.	1
43	CO 81151	SLAT IRON ASSEMBLY—L. H	1
. . .	CO 83547	SLAT IRON AND BOWS ASSEMBLY	1
. . .	CO 83544	Bow No. 1	1
. . .	CO 83545	Bow No. 2	1
. . .	CO 83546	Bow No. 3	1
. . .	BO 83887	REAR CURTAIN WINDOW FRAME ASSEMBLY (includes retainer)	1
44	BO 83905	Top prop bracket	2
45	BO 83906	Top prop bracket nut	2
. . .	BO 83907	Top prop bracket nut lock	2
. . .	BO 83854	TOP BOOT ASSEMBLY	1
. . .	BO 83920	Top boot pocket fastener post	3
. . .	BO 83919	Top boot pocket fastener socket	3
. . .	BO 83918	Top boot pocket fastener socket plate	3
46	BO 83923	"Hidem" binding—top (specify length)	x
47	BO 83925	"Hidem" binding corner clips	4
. . .	BO 83852	Top hold-down strap assembly	2
. . .	BO 83924	Top hold-down strap loop	2
48	BO 83915	Top to windshield clamp	2
49	BO 83916	Top to windshield clamp acorn nut	4
. . .	BO 83917	Top to windshield clamp bolt	4
50	BO 83968	Top to windshield clamp wing screw	2

CURTAIN FASTENERS

. . .	BO 12243	Glove fasteners	24
. . .	BO 12244	Glove fasteners plate.	24
. . .	BO 12242	Lift-the-dot fasteners	21
. . .	BO 12247	Lift-the-dot fastener plate	24
. . .	BO 12234	Lift-the-dot fastener post	12
. . .	BO 12250	Glove fastener socket cap	12
. . .	BO 18084	Glove fastener button and screw	6
. . .	BO 18127	Glove fastener stud	2
. . .	BO 4978	Glove fastener post	6

FLOOR SECTION

SEATS AND CUSHIONS

51	CO 83888	FRONT SEAT CUSHION	
. . .	CO 83889	Front seat cushion spring	
. . .	CO 83896	Front seat back cushion assembly	
. . .	CO 83890	Front seat back cushion spring.	1
. . .	BO 83516	Front seat back attaching plate	2
. . .	CO 83897	Rumble seat cushion assembly	1
52	CO 83898	Rumble seat back cushion assembly	1
. . .	BO 84037	Cushion dowel	2
. . .	CO 84042	Rumble seat compartment trim board—R. H.	1
. . .	CO 84043	Rumble seat compartment trim board—L. H.	1

TOE AND FLOOR BOARDS

. . .	CO 79462	Toe plate and accelerator pedal assembly	1
. . .	CO 81374	Toe plate riser assembly—R. H.	1
. . .	CO 81375	Toe plate riser assembly—L. H.	1
. . .	CO 76391	Front floor board—steel	1
. . .	CO 75141	Front floor board—wood	1
53	BO 83447	Scuff plate--R. H.	1
. . .	BO 83448	Scuff plate—L. H.	1

FLOOR MATS, PADS AND CARPETS

54	BO 81996	FLOOR MAT AND PADS ASSEMBLY—L.. H. D	1
. . .	BO 81997	FLOOR MAT AND PADS ASSEMBLY—R. H. D.	1
. . .	BO 18352	Fastener post and screw	6
. . .	BO 18313	Fastener socket	6
. . .	BO 12247	Fastener plate	6
. . .	BO 83921	Front seat corner floor carpet—R. H.	1
. . .	BO 83922	Front seat corner floor carpet—L. H.	1
. . .	BO 83399	Rumble seat compartment floor carpet	1
. . .	BO 83935	Rumble seat compartment toe board carpet	1

TOP—Continued

Illus. No	Part No.	Description	Per Car
	CO 83886	BACK CURTAIN ASSEMBLY	1
	83064	Back curtain glass (not supplied—see note page 55)	1
42	BO 83483	Curtain rod socket	2
. . .	BO 83471	Curtain rod	2
. . .	CO 84150	SLAT IRON ASSEMBLY—R. H.	1
43	CO 81151	SLAT IRON ASSEMBLY—L. H	1
. . .	CO 83547	SLAT IRON AND BOWS ASSEMBLY	
. . .	CO 83544	Bow No. 1	1
. . .	CO 83545	Bow No. 2	1
. . .	CO 83546	Bow No. 3	1
. . .	BO 83887	REAR CURTAIN WINDOW FRAME ASSEMBLY (includes retainer)	1
44	BO 83905	Top prop bracket	2
45	BO 83906	Top prop bracket nut	2
. . .	BO 83907	Top prop bracket nut lock	2
. . .	BO 83854	TOP BOOT ASSEMBLY	1
. . .	BO 83920	Top boot pocket fastener post	3
. . .	BO 83919	Top boot pocket fastener socket	3
. . .	BO 83918	Top boot pocket fastener socket plate	3
46	BO 83923	"Hidem" binding—top (specify length)	x
47	BO 83925	"Hidem" binding corner clips	4
. . .	BO 83852	Top hold-down strap assembly	2
. . .	BO 83924	Top hold-down strap loop	2
48	BO 83915	Top to windshield clamp	2
49	BO 83916	Top to windshield clamp acorn nut	4
. . .	BO 83917	Top to windshield clamp bolt	4
50	BO 83968	Top to windshield clamp wing screw	2

CURTAIN FASTENERS

. . .	BO 12243	Glove fasteners	24
. . .	BO 12244	Glove fasteners plate.	24
. . .	BO 12242	Lift-the-dot fasteners	21
. . .	BO 12247	Lift-the-dot fastener plate	24
. . .	BO 12234	Lift-the-dot fastener post	12
. . .	BO 12250	Glove fastener socket cap	12
. . .	BO 18084	Glove fastener button and screw	6
. . .	BO 18127	Glove fastener stud	2
. . .	BO 4978	Glove fastener post	6

FLOOR SECTION

SEATS AND CUSHIONS

51	CO 83888	FRONT SEAT CUSHION	
. . .	CO 83889	Front seat cushion spring	
. . .	CO 83896	Front seat back cushion assembly	
. . .	CO 83890	Front seat back cushion spring.	1
. . .	BO 83516	Front seat back attaching plate	2
. . .	CO 83897	Rumble seat cushion assembly	1
52	CO 83898	Rumble seat back cushion assembly	1
. . .	BO 84037	Cushion dowel	2
. . .	CO 84042	Rumble seat compartment trim board—R. H.	1
. . .	CO 84043	Rumble seat compartment trim board—L. H.	1

TOE AND FLOOR BOARDS

. . .	CO 79462	Toe plate and accelerator pedal assembly	1
. . .	CO 81374	Toe plate riser assembly—R. H.	1
. . .	CO 81375	Toe plate riser assembly—L. H.	1
. . .	CO 76391	Front floor board—steel	1
. . .	CO 75141	Front floor board—wood	1
53	BO 83447	Scuff plate--R. H.	1
. . .	BO 83448	Scuff plate—L. H.	1

FLOOR MATS, PADS AND CARPETS

54	BO 81996	FLOOR MAT AND PADS ASSEMBLY—L.. H. D	1
. . .	BO 81997	FLOOR MAT AND PADS ASSEMBLY—R. H. D.	1
. . .	BO 18352	Fastener post and screw	6
. . .	BO 18313	Fastener socket	6
. . .	BO 12247	Fastener plate	6
. . .	BO 83921	Front seat corner floor carpet—R. H.	1
. . .	BO 83922	Front seat corner floor carpet—L. H.	1
. . .	BO 83399	Rumble seat compartment floor carpet	1
. . .	BO 83935	Rumble seat compartment toe board carpet	1

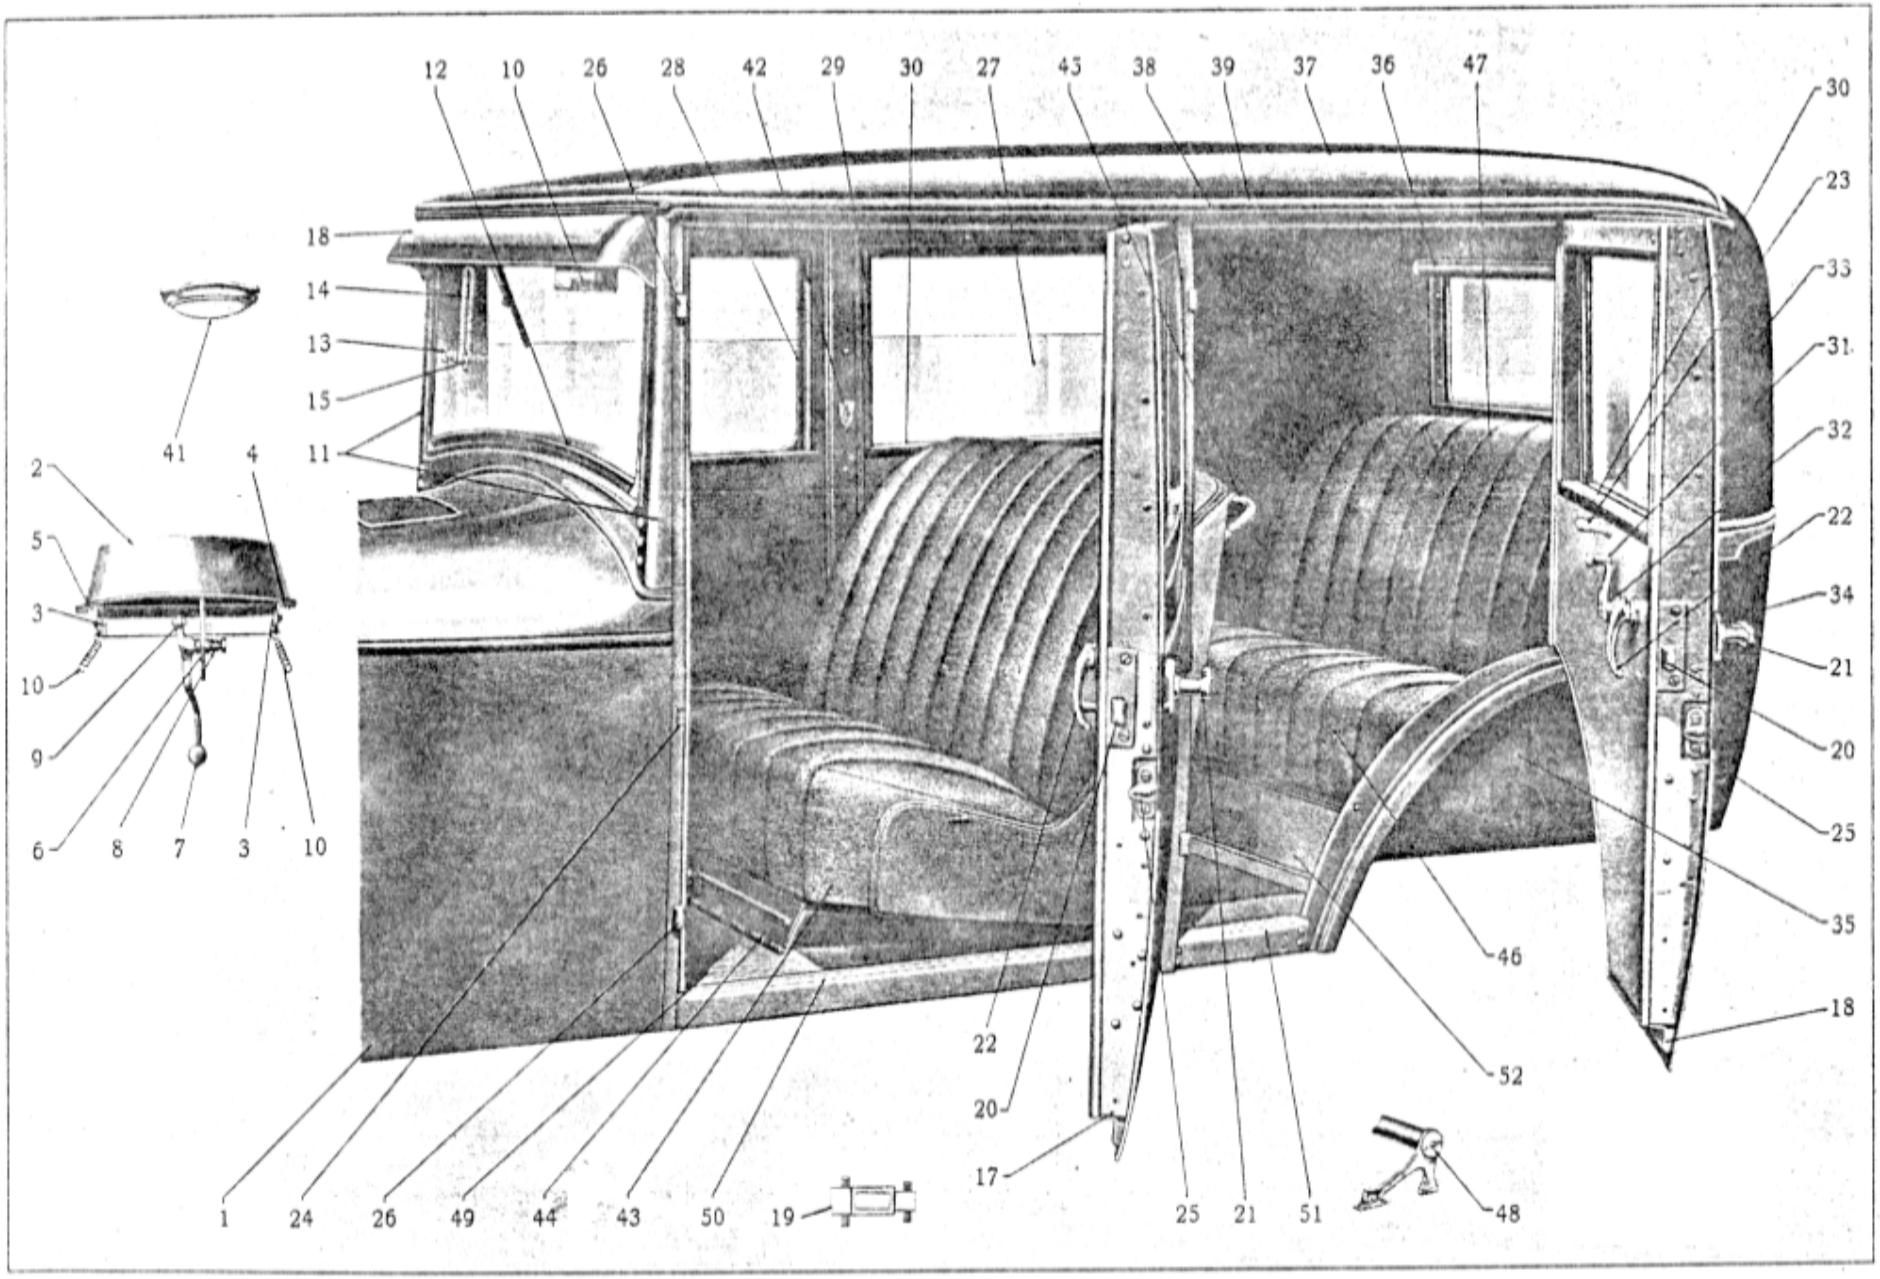

Essex Standard Sedan Body

ESSEX STANDARD SEDAN

BODY COMPLETE

Illus. No	Part No.	Description	Per Car
. . .	CO 76770	BODY COMPLETE—L. H D	1
. . .	CO 76771	BODY COMPLETE—R. H. D	1
. . .	BO 12320	Bolt (7/16"-14x31/4" carriage)	10
. . .	BO 70011	Belt (7/16"-14x1-1/2" carriage)	2
. . .	BO 81923	Shim—body—rubber	2
. . .	BO 80472	Shim—body—thick	8
. . .	BY 551	Nut (7/16"-14x3/8")	12

FRONT SECTION

COWL AND DASH

. . .	CO 82082	COWL AND DASH ASSEMBLY	1
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 81282	Lacing—dash bonnet ledge	2
. . .	BO 18353	Rivet—dash bonnet ledge lacing	26
. . .	BO 79425	Cowl quarter kick panel—R. H	1
. . .	BO 79426	Cowl quarter kick panel—L. H	1
. . .	BO 18470	Screw (No. 10-32x5/8" round head)	10
. . .	GO 12316	Finish washer (No. 10 countersunk)	10
. . .	BO 78757	Cowl panel retainer—R. H.	1
. . .	BO 78798	Cowl panel retainer—L. H	1
. . .	BO 70308	Screw (1/4"-20x1-3/8")	10
. . .	BO 12120	Nut (1/4"-20x1/4" square)	8
. . .	BO 76356	Dash to bonnet hinge bracket	1
. . .	BO 2352	Bolt (5/16"-24x1")	1
. . .	BO 76390	Dash to radiator tie rod plate	1
. . .	BO 76427	Ventilator dash drain	1
. . .	BO 79732	Cowl panel silencer—felt	2
. . .	BO 70505	Rubber ferrule (5/16")	1
. . .	BO 70221	Rubber ferrule (11/32"x9/16")	2

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
. . .	BO 81665	Cover weatherstrip	1
3	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4"-20x1/4" square)	4
. . .	BO 70519	Rivet (5/16"x11/32")	2
4	BO 81628	Hinge—R. H.—on cowl	1
5	BO 81629	Hinge—L. H.—on cowl	1
. . .	BO 18419	Rivet (3/16"x7/32")	4
6	BO 81636	Control bracket	1
. . .	BO 70028	Rivet (3/16"x3/8" truss head)	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube—rubber	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Screw—drain tube clip (No. 10-32x1/2")	3
. . .	BO 18479	Nut—drain tube clip screw	3
7	BO 81667	Ventilator handle	1
8	BO 81645	Handle stud spring	1
9	BO 70499	Clevis pin (1/4"x9/16")	1
10	BO 81644	Spring—cover to instrument panels	2
. . .	BO 82524	Spring clip	2
. . .	BO 18453	Spring clip screw	2
. . .	BO 12120	Spring clip screw nut	2

FRONT PILLAR AND WINDSHIELD PANELS

11	CO 81378	FRONT PILLAR ASSEMBLY	1
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 78923	Cowl to windshield belt panel shim	2
. . .	BO 78949	Lock pillar finish plate	2
. . .	BO 18482	Screw (No. 8x1/2" sheet metal)	4
. . .	BO 82189	Finish panel—over windshield—trimmed	1
. . .	BO 70397	Clinch nut (No. 10-32 short)	2
. . .	BO 18470	Screw (No. 10-32x5/8" oval head)	4
. . .	GO 12316	Finish washer (No. 10 countersunk)	4
. . .	CO 78591	Finish panel—under windshield	1
. . .	BO 70455	Screw (No. 8-32X5/8")	7
. . .	BO 18447	Screw (No. 10-32-5/8")	4
. . .	BO 70071	Shakeproof lockwasher	4
. . .	BO 79567	Finish panel retainer assembly—R. H	1

FRONT PILLAR AND WINDSHIELD PANELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 79568	Finish panel retainer assembly—L. H	1
. . .	BO 70397	Clinch nut (No. 10-32 short)	4
. . .	BO 79507	Windshield belt panel corner filler—R. H.—lead	1
. . .	BO 79508	Windshield belt panel corner filler—L. H.—lead	1
. . .	BO 78924	Windshield belt finish panel shim—fibre	1
. . .	BO 81386	Lock pillar to dash bracket and toe board riser assembly—R. H	1
. . .	BO 81387	Lock pillar to dash bracket and toe board riser assembly—L. H.	1

INSTRUMENT PANEL

. . .	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79147	Steering gear cowl bracket—L. H. D	1
. . .	BO 79146	Steering gear cowl bracket—R. H. D	1
. . .	BO 70400	Clinch nut (3/8"-16 flat side)	2
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BM 304	Bolt (3/8"-16x1")	2
. . .	BY 551	Nut (7/16"-14x3/8")	1
. . .	BO 70337	Bolt (7/16"-14x2-1/2")	1

WINDSHIELD

12	CO 81893	WINDSHIELD ASSEMBLY (less glass)	1
. . .	BO 38447	Screw (No. 10-32x5/8"°)	7
. . .	BO 18479	Nut (No. 10-32 square)	7
. . .	81292	Glass (not supplied—see note page 55)	1
. . .	BO 81288	Hinge—body half	1
. . .	BO 79251	Windshield hinge weatherstrip	1
. . .	BO 76517	Glass clip—R. H	1
. . .	BO 76541	Glass clip—L. H	1
. . .	BO 76505	Screw—glass clip	2
. . .	BO 76506	Nut—glass clip screw	2
13	BO 79026	Swing arm body bracket	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 79027	Swing arm frame bracket	2
14	BO 75230	Swing arm	2
. . .	BO 24172	Swing arm washer	4
. . .	BO 75275	Pivot screw	2
. . .	BO 70007	Pivot screw nut (1/4"-20x1/8")	2
. . .	BO 75541	Pivot screw washer	2
15	BO 26191	Wing screw	2
. . .	BO 75470	Rubber bumper	2
. . .	BO 79028	Rubber bumper post	2
. . .	BO 83339	Windshield side weatherstrip	2
. . .	BO 80376	Windshield bottom weatherstrip	1

WINDSHIELD VISOR

16	BO 81256	WINDSHIELD VISOR	
. . .	BO 18458	Screw (1/4"-20x11/16")	2
. . .	BO 70127	Finish washer (1/4" countersunk)	2

CENTER SECTION

CENTER PILLARS

. . .	CO 79166	CENTER PILLAR ASSEMBLY—R. H	1
. . .	CO 79167	CENTER PILLAR ASSEMBLY—L. H.	1
. . .	BO 79698	Center pillar trim board retaining clip	2
. . .	BO 18138	Screw (No. 10-32x1/2")	4
. . .	BO 81440	Rear door hinge pillar assembly—R. H.	1
. . .	BO 81441	Rear door hinge pillar assembly—L. H	

DOORS

. . .	CO 81342	DOOR COMPLETE—R. H. front (trimmed) (specify color) .	1
17	CO 81343	DOOR COMPLETE—L. H. front (trimmed) (specify color)	1
. . .	CO 81344	DOOR COMPLETE—R. H. rear (trimmed) (specify color)	1
18	CO 81345	DOOR COMPLETE—L. H. rear (trimmed) (specify color)	1
. . .	CO 81336	DOOR ASSEMBLY—R. H. front (skeleton) (less trim)	1

DOORS—Continued

Illus. No	Part No.	Description	Per Car
. . .	CO 81337	DOOR ASSEMBLY—L. H. front (skeleton) (less trim)	1
. . .	CO 81338	DOOR ASSEMBLY—R. H. rear (skeleton) (less trim)	1
. . .	CO 81339	DOOR ASSEMBLY—L. H. rear (skeleton) (less trim)	1
. . .	CO 79366	Front door upholstered panel—R. H.	1
. . .	CO 79367	Front door upholstered panel—L. H.	1
. . .	CO 79369	Rear door upholstered panel—R. H	1
. . .	CO 79370	Rear door upholstered panel—L. H	1
19	BO 78641	Door check strap	4
. . .	BO 78595	Door check strap retainer	4
. . .	BO 70304	Screw (No. 10-32x3/4") (round head)	8

DOOR HINGES

. . .	BO 80263	FRONT DOOR HINGE ASSEMBLY—body half	2
. . .	BO 78531	Front door hinge—door half	2
. . .	BO 80264	REAR DOOR HINGE ASSEMBLY—R. H.—body half	1
. . .	BO 80265	REAR DOOR HINGE ASSEMBLY—L. H.—body half	1
. . .	BO 78533	Rear door hinge—R. H.—door half	1
. . .	BO 78534	Rear door hinge—L. H.—door half	1
. . .	BO 75174	Front door hinge rod	2
. . .	BO 78821	Rear door hinge rod	2
. . .	BO 18464	Screw (1/4"-20x11/16" special)	44

LOCKS

. . .	BO 81862	LOCK ASSEMBLY—R. H. front	1
. . .	BO81861	LOCK ASSEMBLY—R. H. rear	1
20	BO 81860	LOCK ASSEMBLY—L. H. front and rear	2
. . .	BO 18453	Screw (1/4"-20x11/16" round head)	8
. . .	BO 18464	Screw (1/4"-20x11/16" special)	8
. . .	BO 12120	Nut (1/4"-20x1/4")	8
. . .	BO 18461	Shakeproof lockwasher (1/4")	a
. . .	BO 82587	Lock reinforcement plate	4
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	8

DOOR HANDLES

. . .	BO 82601	OUTSIDE HANDLE AND LOCK CYLINDER ASSEMBLY—R. H. front	1
. . .	BO 70526	Screw (No. 10-32x5/8")	2
. . .	BO 31240	Key	2
21	BO 81809	Outride handle assembly	3
. . .	BO 70526	Screw (No. 10-32x5/8")	6
. . .	BO 81664	Inside handle	4
. . .	BO 70526	Screw (No. 10-32x5/8")	8
. . .	BO 81778	Inside handle spring	4
. . .	BO 82528	Inside handle spring retaining plate	4
23	BO 81662	Pull-to handle	2
. . .	BO 70044	Screw No. 10-32x7/8")	1

DOOR DOVETAILS AND BUMPERS

24	BO 79946	DOVETAIL COMPLETE—female	4
. . .	BO 79228	Dovetail case	4
. . .	BO 18458	Screw (1/4"-20x11/16")	8
. . .	BO 70399	Clinch nut (1/4"-20)	8
. . .	BO 79150	Rubber bumper—dovetail	8
. . .	BO 79149	Rubber bumper retainer	4
25	BO 78994	Dovetail—male	4
. . .	BO 78995	Dovetail plate	4
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	8
. . .	BO 18475	Shakeproof lockwasher (1/4" countersunk)	8
. . .	BO 78596	Striker plate—door lock	4
. . .	BO 18464	Screw (1/4"-20x11/16" special)	8
. . .	BO 12120	Nut (1/4"-20x1/4" square)	8
26	BO 75151	Rubber bumper—door	4
. . .	BO 75152	Rubber bumper retainer	4
. . .	BO 18458	Rubber bumper screw (1/4"-20x11/16"" oval head)	8

DOOR GLASS AND CHANNELS

27	78808	DOOR GLASS (not supplied—see note page 55)	4
a . . .	BO 78724	Bumper—doora—thick	4

DOOR GLASS AND CHANNELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 78824	Cork—door glass—medium	4
. . .	BO 78825	Cork—door glass—thick	4
		Door glass top channel—see weatherstrips	
28	BO 81535	Door glass side channel assembly—front door	4
29	BO 81536	Door glass side channel assembly—rear door	4
. . .	BO 78581	Door glass bottom channel assembly—R. H.	2
. . .	BO 78582	Door glass bottom channel assembly—L. H	2
. . .	BO 75261	Clip—side channel	16

DOOR WEATHERSTRIPS AND TRIM RETAINERS

. . .	BO 79044	DOOR GLASS TOP WEATHERSTRIP AND RETAINER ASSEMBLY	4
. . .	BO 79043	DOOR GLASS BELT WEATHERSTRIP AND RETAINER ASSEMBLY—outer	4
. . .	BO 79138	Door glass belt weatherstrip—inner	4
. . .	BO 18482	Screw (No. 8x1/2" sheet metal)	24
. . .	BO 79054	Front door bottom weatherstrip and retainer assembly	2
. . .	BO 79055	Rear door bottom weatherstrip and retainer assembly	2
. . .	BO 79057	Rear door bottom extension weatherstrip and retainer assembly—R. H.	1
. . .	BO 79058	Rear door bottom extension weatherstrip and retainer assembly—L. H	1
. . .	BO 79071	Door trim panel retainer assembly—R. H. front—L. R. Rear—trimmed	3
. . .	BO 79072	Door trim panel retainer assembly—L. H. front—R. H. Rear—trimmed	3
. . .	BO 79052	Door trim panel retainer assembly—R. H. rear door rear—trimmed	1
. . .	BO 79053	Door trim panel retainer assembly—L. H. rear door rear—trimmed	1
. . .	BO 79056	Door trim panel retainer assembly—rear door extension—trimmed	2
. . .	BO 18447	Screw (No. 10-32x5/8")	36

DOOR WINDLACE

. . .	BO 79736	WINDLACE AND RETAINER ASSEMBLY (top) front R.—rear L	2
. . .	BO 79737	WINDLACE AND RETAINER ASSEMBLY (top) front L.—rear R.	2
. . .	BO 81741	WINDLACE AND RETAINER ASSEMBLY—R. H. front door lock pillar	2
. . .	BO 81742	WINDLACE AND RETAINER ASSEMBLY—L. H. front door lock pillar	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	GO 12316	Finish washer	4
. . .	CO 79710	WINDLACE AND RETAINER ASSEMBLY—center pillar..	4
. . .	BO 79740	WINDLACE AND RETAINER ASSEMBLY—R. H. rear door hinge pillar	1
. . .	BO 79741	WINDLACE AND RETAINER ASSEMBLY—L. H. rear door hinge pillar	1
. . .	BO 18464	Screw (1/4"-20x11/16" special head)	10

DOOR FINISH STRIPS

30	CO 81643	DOOR WINDOW FINISH MOULDING AND WEATHERSTRIP ASSEMBLY	4
. . .	BO 70455	Screw (No. 8-32x5/8")	32
. . .	BO 79746	Door finish strip—top—trimmed	4

DOOR WINDOW REGULATOR

.. . .	BO 79240	DOOR WINDOW REGULATOR ASSEMBLY—R. H.	2
. . .	BO 79241	DOOR WINDOW REGULATOR ASSEMBLY—L. H.	2
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	12
. . .	BO 18475	Shakeproof lockwasher	12
. . .	BO 76339	Coil spring	4
. . .	BO 80383	Pinion	4
. . .	BO 80380	Arm and sector assembly-R. H.	2
. . .	BO 80351	Arm and sector assembly—L. H.	2
. . .	BO 80353	Regulator arm roller	4
. . .	BO 80393	Regulator arm roller spring	2
. . .	BO 80382	Regulator arm roller spring washer	2
31	BO 81637	Regulator handle	4
32	BO 81639	Regulator handle escutcheon plate	4
. . .	BO 79308	Regulator handle escutcheon pin	4
. . .	BO 79709	Regulator handle spring	4

REAR SECTION

REAR HINGE PILLAR

. . .	CO 81440	REAR HINGE PILLAR ASSEMBLY	1
. . .	CO 81441	REAR HINGE PILLAR ASSEMBLY	1
. . .	BO 70398	Clinch nut (1/4"x20 round type—long)	18

OUTSIDE PANELS AND MOULDING

Illus. No	Part No.	Description	Per Car
33	CO 81104	BACK PANEL ASSEMBLY—upper	1
34	CO 81105	Back panel—lower	1
. . .	BO 70004	Rivet (3/16"x1/2" truss head)	27
. . .	BO 70288	Rivet (3/16"x9/16" truss head)	4
. . .	BO 70045	Rivet (No. 5x5/16" tubular)	12
. . .	BO 18333	Rivet (3/16"x3/16"x1/4" tubular)	11
. . .	BO 18459	Screw (No. 10-32x1/2" round head)	10
. . .	BO 18479	Nut (No. 10-32x3/16" square)	12
3 5	CO 81422	Wheelhouse panel assembly—R. H	1
. . .	CO 81423	Wheelhouse panel assembly—L. H.	1
. . .	CO 78606	Moulding—upper to lower back panels	1

REAR UPHOLSTERED PANELS

. . .	CO 79375	QUARTER TRIM PANEL ASSEMBLY—R. H	
. . .	CO 79376	QUARTER TRIM PANEL ASSEMBLY—L. H.	1

LEATHER TRIM—EXPORT

(Parts that are different from cloth-trimmed jobs)

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	2
. . .	CO 82801	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—left	2
. . .	CO 82805	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82806	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82811	LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	I
. . .	CO 82812	LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82869	CENTER PILLAR TRIM PANEL AND WINDLACE ASSEMBLY	2
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	2
. . .	CO 82808	DOOR TRI M PANEL RETAINER ASSEMBLY—left	2
. . .	CO 82815	REAR DOOR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82819	REAR BODY PILLAR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82823	REAR DOOR REAR TRIM RETAINER ASSEMBLY—right	2
. . .	CO 82824	REAR DOOR REAR TRIM RETAINER ASSEMBLY—left	1
. . .	CO 82854	FRONT DOOR TRIM PANEL ASSEMBLY—right and left	1
. . .	CO 82859	REAR DOOR TRIM PANEL ASSEMBLY—right	2
. . .	CO 82860	REAR DOOR TRIM PANEL ASSEMBLY—left	1
. . .	CO 82874	QUARTER TRIM PANEL ASSEMBLY—lower right	1
. . .	CO 82875	QUARTER TRIM PANEL ASSEMBLY—lower left	1
. . .	CO 82927	Rear seat cushion complete	1
. . .	CO 82940	Rear seat back complete	1
. . .	CO 82956	Front seat cushion complete	1
. . .	CO 82964	Front seat back complete	1
. . .	CO 82976	Front seat back trim assembly complete	1
. . .	CO 83001	W/S. Header trim panel assembly	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	2

REAR WINDOW

. . .	BO 81647	REAR WINDOW FRAME ASSEMBLY	1
. . .	81626	Glass—rear window (see note page 55)	1
36	BO 81579	MOULDING ASSEMBLY	1
. . .	BO 82182	CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 82345	Curtain roller end bracket	1
. . .	BO 76842	Channel—long	2
. . .	BO 81503	Channel—short	2

TOP SECTION

ROOF

. . .	CO 82741	Roof rail front	1
. . .	CO 80286	Roof rail—rear	1
. . . .	CO 80287	Roof rail—side R. H.	1
. . .	CO 80288	Roof rail—side L. H.	1
. . .	BO 80278	Bow No. 1	1
. . .	BO 80279	Bow No. 2	1
. . .	BO 80280	Bow No. 3	1
. . .	BO 80281	Bow No. 4	1
. . .	BO 80282	Bow No. 5	1
. . .	BO 80391	Bow No. 6	1
37	BO 79385	Top deck	1
. . .	BO 79849	Binding—roof rail (specify length)	2

ROOF—Continued

Illus. No	Part No.	Description	Per Car
33	CO 81104	BACK PANEL ASSEMBLY—upper	1
34	CO 81105	Back panel—lower	1
. . .	BO 70004	Rivet (3/16"x1/2" truss head)	27
. . .	BO 70288	Rivet (3/16"x9/16" truss head)	4
. . .	BO 70045	Rivet (No. 5x A' tubular)	12
. . .	BO 18333	Rivet (3/16"x3/16"x1/4" tubular)	11
. . .	BO 18459	Screw (No. 10-32x1/2" round head)	10
. . .	BO 18479	Nut (No. 10-32x3/16" square)	12
3 5	CO 81422	Wheelhouse panel assembly—R. H	1
. . .	CO 81423	Wheelhouse panel assembly—L. H.	I
. . .	CO 78606	Moulding—upper to lower back panels	1

REAR UPHOLSTERED PANELS

. . .	CO 79375	QUARTER TRIM PANEL ASSEMBLY—R. H	
. . .	CO 79376	QUARTER TRIM PANEL ASSEMBLY—L. Fl	1

LEATHER TRIM—EXPORT

(Parts that are different from cloth-trimmed jobs)

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	2
. . .	CO 82801	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—left	2
. . .	CO 82805	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82806	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82811	LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	I
. . .	CO 82812	LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82869	CENTER PILLAR TRIM PANEL AND WINDLACE ASSEMBLY	2
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	2
. . .	CO 82808	DOOR TRI M PANEL RETAINER ASSEMBLY—left	2
. . .	CO 82815	REAR DOOR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82819	REAR BODY PILLAR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82823	REAR DOOR REAR TRIM RETAINER ASSEMBLY—right	2
. . .	CO 82824	REAR DOOR REAR TRIM RETAINER ASSEMBLY—left	1
. . .	CO 82854	FRONT DOOR TRIM PANEL ASSEMBLY—right and left	1
. . .	CO 82859	REAR DOOR TRIM PANEL ASSEMBLY—right	2
. . .	CO 82860	REAR DOOR TRIM PANEL ASSEMBLY—left	1
. . .	CO 82874	QUARTER TRIM PANEL ASSEMBLY—lower right	1
. . .	CO 82875	QUARTER TRIM PANEL ASSEMBLY-lower left	1
. . .	CO 82927	Rear seat cushion complete	1
. . .	CO 82940	Rear seat back complete	1
. . .	CO 82956	Front seat cushion complete	1
. . .	CO 82964	Front seat back complete	1
. . .	CO 82976	Front seat back trim assembly complete	1
. . .	CO 83001	W/S. Header trim panel assembly	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	2

REAR WINDOW

. . .	BO 81647	REAR WINDOW FRAME ASSEMBLY	1
. . .	81626	Glass—rear window (see note page 55)	1
36	BO 81579	MOULDING ASSEMBLY	1
. . .	BO 82182	CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 82345	Curtain roller end bracket	1
. . .	BO 76842	Channel—long	2
. . .	BO 81503	Channel—short	2

TOP SECTION

ROOF

. . .	CO 82741	Roof rail front	1
. . .	CO 80286	Roof rail—rear	1
. . . .	CO 80287	Roof rail—side R. H.	1
. . .	CO 80288	Roof rail—side L. H.	1
. . .	BO 80278	Bow No. 1	1
. . .	BO 80279	Bow No. 2.	1
. . .	BO 80280	Bow No. 3	1
. . .	BO 80281	Bow No. 4	1
. . .	BO 80282	Bow No. 5	1
. . .	BO 80391	Bow No. 6	1
37	BO 79385	Top deck	1
. . .	BO 79849	Binding—roof rail (specify length)	2

TOE AND FLOOR BOARDS

Illus. No	Part No.	Description	Per Car
. . .	BO 81374	TOE BOARD RISER ASSEMBLY—R. H.	1
. . .	BO 81375	TOE BOARD RISER ASSEMBLY--L. H.	1
. . .	GY 553	Bolt (1/4"-20x5/8")	4
. . .	BO 79462	TOE PLATE ASSEMBLY	1
. . .	BO 26554	Shim—toe plate	7
. . .	BO 18453	Screw (1/4"-20x11/16")	7
. . .	A 76391	Front floor board—steel	1
. . .	BO 18447	Screw (No. 10-32x5/8")	3
. . .	BO 75141	Front floor board—wood	1
. . .	BO 18455	Screw (1/4"-20x1-1/2" flat head)	2
. . .	BO 80607	Center floor board—R. H.	1
. . .	BO 82308	BATTERY COVER ASSEMBLY	2
. . .	BO 18455	Bolt (1/4"-20x1-1/2")	2
. . .	BO 12120	Nut (1/4"-20x1/4" square)	2
. . .	BO 76432	Rear floor board	1
48	CO 82540	FOOT REST ASSEMBLY	1
. . .	BO 84154	Foot rest floor bracket	2

CARPETS, MATS AND PADS

. . .	BO 82541	Rear floor carpet (for cars with foot rest)	1
. . .	BO 82183	Rear floor carpet (for cars without foot rest)	1
. . .	BO 12223	Glove fastener button and drive screw.	2
. . .	BO 70010	Carpet fastener	5
. . .	BO 79394	Rear seat heel board carpet	1
. . .	BO 70280	Carpet fastener	8
49	BO 81981	FRONT FLOOR RUBBER MAT AND PAD ASSEMBLY—L. H. D	1
. . .	BO 81982	FRONT FLOOR RUBBER MAT AND PAD ASSEMBLY—R. H. D.	1
. . .	BO 12247	Lift-the-dot fastener socket plate	4
. . .	BO 18313	Lift-the-dot fastener socket	4
. . .	BO 18349	Lift-the-dot fastener socket post	4
. . .	BO 12799	Nut (No. 10-32x1/4" hex. head)	4
. . .	BO 79732	Cowl panel and lower felt	1
. . .	BO 81847	Dash pad	1
. . .	BO 18359	Clinch nut (3/16"x1-1/2")	7

SCUFF PLATE

50	BO 81600	Scuff plate—front	2
. . .	BO 81601	Scuff plate—rear--R. H	1
51	BO 81602	Scuff plate—rear—L. H	1

SILL WOOD FILLERS

. . .	CO 81762	Sill filler—R. H.	1
. . .	CO 81763	Sill filler—L. H.	1

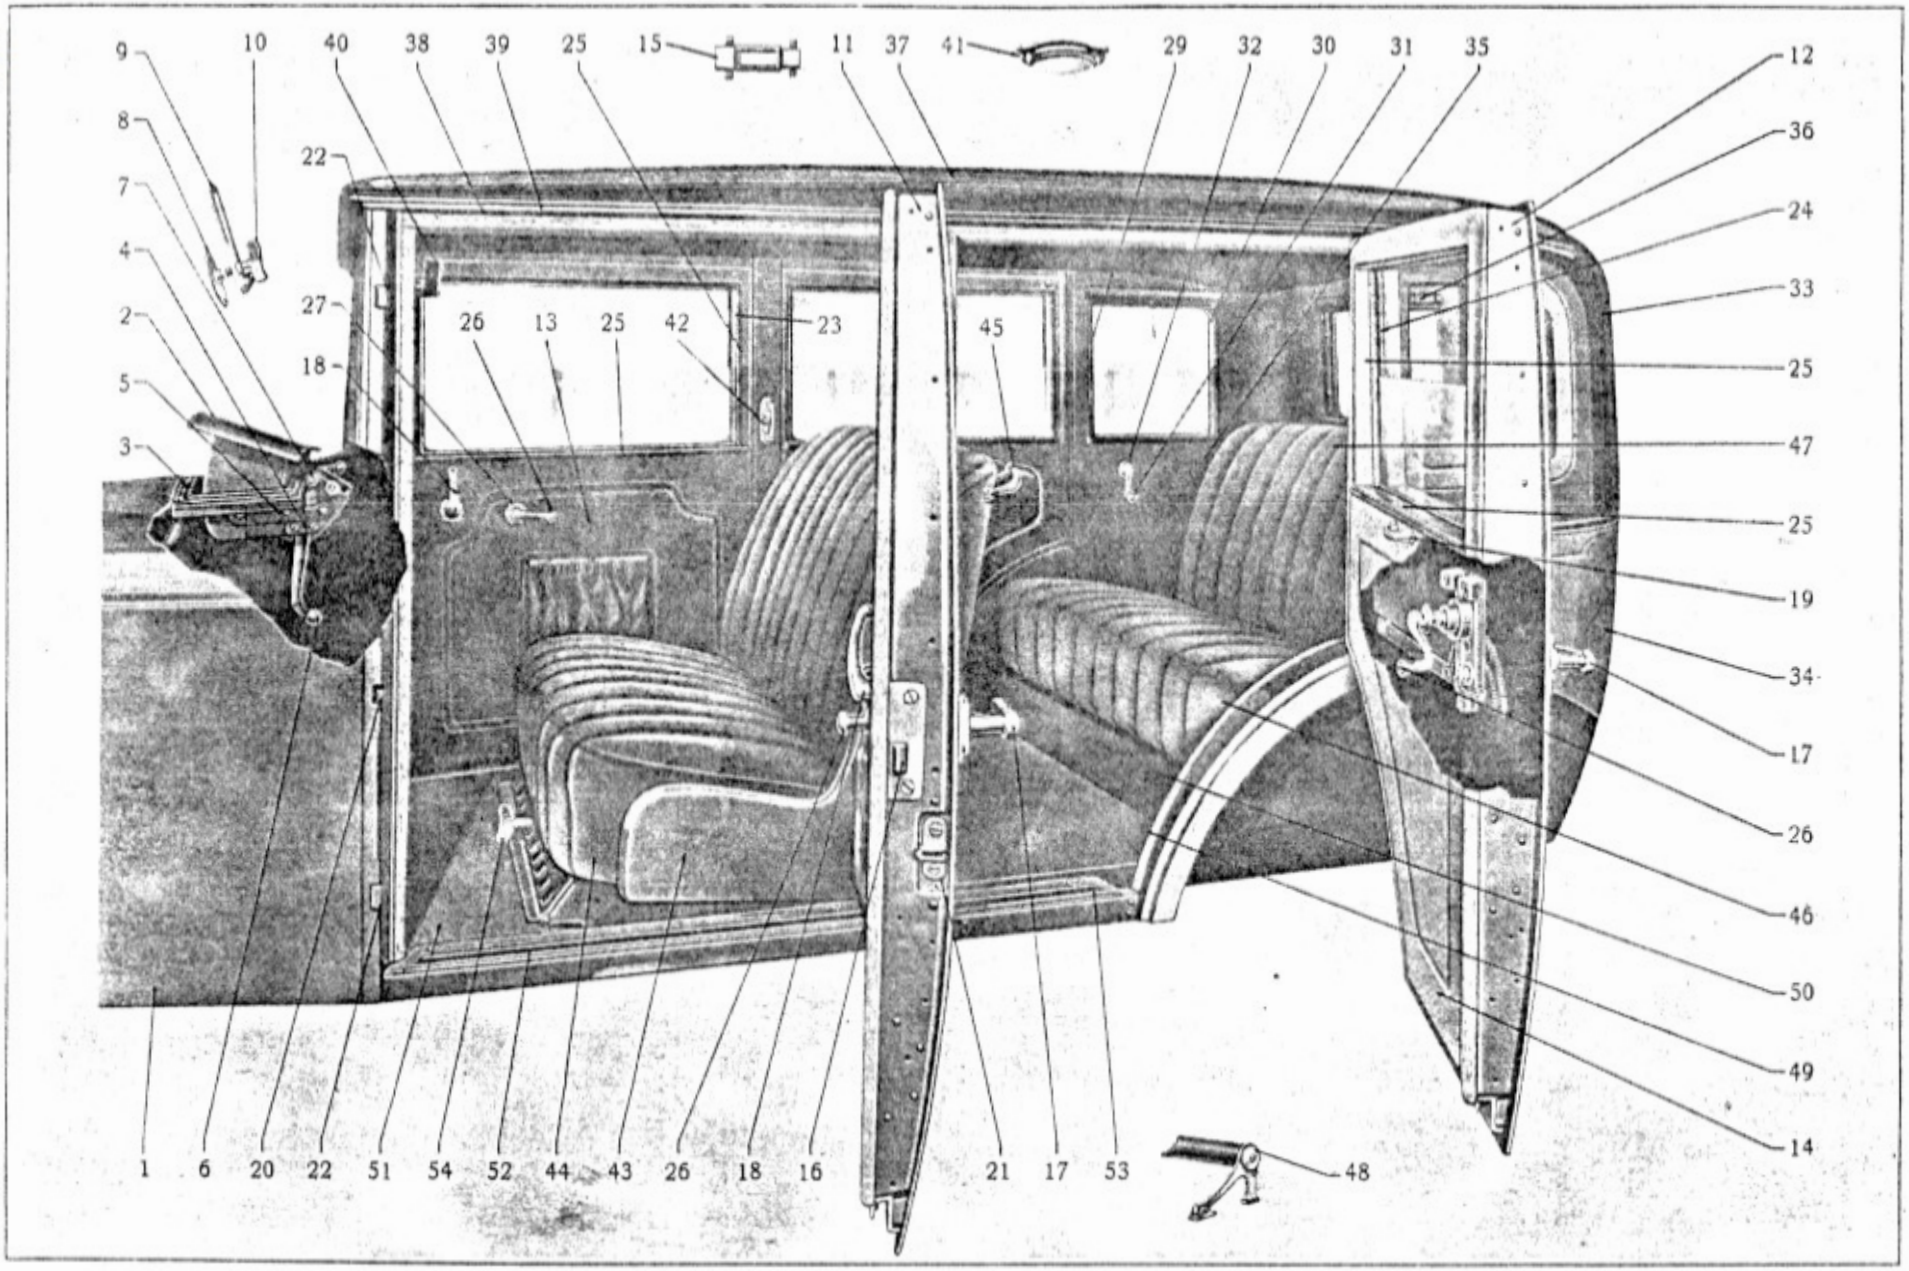

Essex Town Sedan Body

ESSEX TOWN SEDAN

BODY COMPLETE

Illus. No	Part No.	Description	Per Car
. . .	CO 81800	BODY COMPLETE—L. H. D.	1
. . .	CO 81801	BODY COMPLETE—R. H. D.	1
. . .	BO 12320	Bolt (7/16"-14x3-1/4" carriage)	10
. . .	BO 70011	Bolt (7/16"-14x1-1/2" carriage)	2
. . .	BY 551	Nut (7/16"-14x3/8")	12
. . .	BO 81923	Shim—body—thin	4
. . .	BO 80472	Shim—body—thick	8

FRONT SECTION

COWL AND DASH

1	CO 82082	COWL AND DASH ASSEMBLY	1
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 81282	Lacing—dash bonnet ledge	2
. . .	BO 18353	Rivet—dash bonnet ledge lacing	26
. . .	BO 79425	Cowl quarter kick panel—R. H	1
. . .	BO 79426	Cowl quarter kick panel—L. H.	1
. . .	BO 18470	Screw (No. 10-32x5/8" round head)	10
. . .	GO 12316	Finish washer (No. 10 countersunk)	10
. . .	BO 78797	Cowl panel retainer—R. H.	1
. . .	BO 78798	Cowl panel retainer—L. H	1
. . .	BO 70308	Screw (1/4"-20x1-3/8")	10
. . .	BO 12120	Nut (1/4"-20x1/4" square)	8
. . .	BO 76356	Dash to bonnet hinge bracket	1
. . .	BO 2352	Bolt (5/16"-24x1")	1
. . .	BO 76390	Dash to radiator tie rod plate	1
. . .	BO 79732	Cowl panel silencer—felt	2
. . .	BO 70505	Rubber ferrule (5/16")	1
. . .	BO 70221	Rubber ferrule (11/32"x9/16")	2

COWL VENTILATOR

2	CO 81415	COVER ASSEMBLY	1
3	BO 81665	Cover weatherstrip	1
4	BO 81623	Cover hinge adjusting plate	2
. . .	BO 18464	Screw (1/4"-20x11/16")	4
. . .	BO 12120	Nut (1/4 -20x1/4" square)	4
. . .	BO 70519	Rivet (5/15"x13/32")	2
. . .	BO 81628	Hinge—R. H.—on cowl	1
5	BO 81629	Hinge—L. H.—on cowl	1
. . .	BO 18419	Rivet (3/16"x7/32")	4
. . .	BO 81636	Control bracket	1
. . .	BO 70028	Rivet (3/16"x3/8" truss head)	3
. . .	BO 81641	Drain pipe	1
. . .	BO 81669	Drain tube (rubber)	1
. . .	BO 81675	Drain tube clip	3
. . .	BO 18459	Screw—drain tube clip (No. 10-32x1/2")	3
. . .	BO 18479	Nut—drain tube clip screw	3
6	BO 81667	Ventilator handle	1
. . .	BO 81645	Handle stud spring	1
7	BO 70499	Clevis pin (1/4"x9/16")	1
. . .	BO 81644	Spring—cover to instrument panel	2
. . .	BO 82524	Spring clip	2
. . .	BO 18453	Spring clip screw	2
. . .	BO 12120	Spring clip screw nut	2

FRONT PILLAR AND WINDSHIELD PANELS

. . .	CO 81378	FRONT PILLAR ASSEMBLY	
. . .	BO 78929	Cowl to lock pillar shim	2
. . .	BO 78923	Cowl to windshield belt panel shim	2
. . .	BO 78949	Lock pillar finish plate	2
. . .	BO 18482	Screw (No. 8x1/2" sheet metal)	4
. . .	BO 81386	Lock pillar to dash bracket and toe board riser assembly—R. H	1
. . .	BO 81387	Lock pillar to dash bracket and toe board riser assembly—L. H	1
. . .	BO 82189	Finish panel—over windshield—trimmed	1
. . .	BO 18470	Screw (No. 10-32x5/8"' oval head)	4
. . .	GO 12316	Finish washer (No. 10 countersunk)	4
. . .	CO 78591	Finish panel—under windshield	1
. . .	BO 70455	Screw (No. 8-32x3/4")	7
. . .	BO 18447	Screw (No. 10-32-5/8")	4
. . .	BO 70071	Shakeproof lockwasher	4

FRONT PILLAR AND WINDSHIELD PANELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 79567	Finish panel retainer assembly—R. H.	1
. . .	BO 79568	Finish panel retainer assembly—L. H	1
. . .	BO 70397	Clinch nut (No. 10-32 short)	4
. . .	BO 79507	Windshield belt panel corner filler—R. H.—lead	1
. . .	BO 79508	Windshield belt panel corner filler—L. H.—lead	1
. . .	BO 78924	Windshield belt finish panel shim—fibre	1

INSTRUMENT PANEL

. . .	CO 81390	INSTRUMENT PANEL ASSEMBLY—L. H. D.	1
. . .	CO 81391	INSTRUMENT PANEL ASSEMBLY—R. H. D.	1
. . .	BO 70095	Bolt (5/16"-24x7/8")	7
. . .	BO 79147	Steering gear cowl bracket—L. H. D	1
. . .	BO 79146	Steering gear cowl bracket—R. H. D	1
. . .	BO 70400	Clinch nut (3/8"-16 flat side)	2
. . .	BO 79238	Steering column suspension bracket	1
. . .	BO 79235	Steering column suspension bracket clamp	1
. . .	BM 304	Bolt (3/8"-16x1")	2
. . .	BY 551	Nut (7/16"x3/8"	1
. . .	BO 70337	Bolt (7/16"-14x2-1/2")	

WINDSHIELD

. . .	CO 81893	WINDSHIELD ASSEMBLY (less glass)	1
. . .	BO 18447	Screw (No. 10-32x5/8')	7
. . .	BO 18479	Nut (No. 10-32 square)	7
. . .	81292	Glass (not supplied—see note page 55)	1
. . .	BO 81288	Hinge—body half	1
. . .	BO 79251	Windshield hinge weatherstrip	1
. . .	BO 76517	Glass clip—R. H	1
. . .	BO 76541	Glass clip—L. H	1
. . .	BO 76505	Screw—glass clip	2
. . .	BO 76506	Nut—glass clip screw	2
8	BO 79026	Swing arm body bracket...	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 79027	Swing arm frame bracket	2
9	BO 75230	Swing arm	2
. . .	BO 24172	Swing arm washer	4
. . .	BO 75275	Pivot screw	2
. . .	BO 70007	Pivot screw nut (1/4"-20x1/8")	2
. . .	BO 75541	Pivot screw washer	2
10	BO 26191	Wing screw	2
. . .	BO 75470	Rubber bumper	2
. . .	BO 79028	Rubber bumper post	2
. . .	BO 83339	Windshield side weatherstrip	2
. . .	BO 80376	Windshield bottom weatherstrip	1

WINDSHIELD VISOR

16	CO 81256	Windshield visor	1
. . .	BO 18458	Screw (1/4"-20x1/2" oval head)	2
. . .	BO 70127	Finish washer	2

CENTER SECTION

CENTER PILLARS

. . .	CO 79166	CENTER PILLAR ASSEMBLY—R. H.	1
. . .	CO 79167	CENTER PILLAR ASSEMBLY—L. H.	1
. . .	BO 79698	Center pillar trim board retaining clip	2
. . .	BO 18138	Screw (No. 10-32x1/2")	4
. . .	BO 79178	REAR DOOR HINGE PILLAR ASSEMBLY—R. **H**	1
. . .	BO 79179	REAR DOOR HINGE PILLAR ASSEMBLY—L. H.	1

DOORS

. . .	CO 81342	DOOR COMPLETE—R. H. front (trimmed) (specify color)	1
. . .	CO 81343	DOOR COMPLETE—L. H. front (trimmed) (specify color)	1
. . .	CO 81344	DOOR COMPLETE—R. H. rear (trimmed) (specify color)	1
12	CO 81345	DOOR COMPLETE—L. H. rear (trimmed) (specify color)	1
. . .	CO 81336	DOOR ASSEMBLY—R. H. front (skeleton) (less trim)	1
. . .	CO 81337	DOOR ASSEMBLY—L. H. front (skeleton) (less trim)	1

DOORS—Continued

Illus. No	Part No.	Description	Per Car
. . .	CO 81338	DOOR ASSEMBLY—R. H. rear (skeleton) (less trim)	1
. . .	CO 81339	DOOR ASSEMBLY—L. H. rear (skeleton) (less trim)	1
13	CO 82107	Front door upholstered panel—R. H. and L. H.	2
. . .	CO 82109	Rear door upholstered panel—R. H	1
14	CO 82110	Rear door upholstered panel—L. H	1
15	BO 78641	Door check strap	4
. . .	BO 78595	Door check strap retainer	4
. . .	BO 70304	Screw (No. 10-32x3/4" flat head)	8

DOOR HINGES

. . .	BO 80263	FRONT DOOR HINGE ASSEMBLY—body half	2
. . .	BO 78531	Front door hinge—door half	2
. . .	BO 80264	REAR DOOR HINGE ASSEMBLY—R. H.—body half	1
. . .	BO 80265	REAR DOOR HINGE ASSEMBLY—L. H.—body half	1
. . .	BO 78533	Rear door hinge—R. H.—door half	1
. . .	BO 78534	Rear door hinge—L. H.—door half	1
. . .	BO 75174	Front door hinge rod	2
. . .	BO 78821	Rear door hinge rod	2
. . .	BO 18464	Screw (1/4"-20 11/16" special)	44

DOOR LOCKS

. . .	BO 81862	LOCK ASSEMBLY—R. H. Front	1
. . .	BO 81861	LOCK ASSEMBLY—R. H. Rear	1
16	BO 81860	LOCK ASSEMBLY—L. H. front and rear	2
. . .	BO 18453	Screw (1/4"-20x11/16" round head)	8
. . .	BO 18464	Screw (1/4"-2030-1" special)	8
. . .	BO 12120	Nut (1/4"-20x1/4")	8
. . .	BO 18461	Shakeproof lockwasher (1/4")	8
. . .	BO 82587	Lock reinforcement plate	4
. . .	BO 70396	Clinch nut (No. 10-32 round type—long)	8

DOOR HANDLES

. . .	BO 82601	OUTSIDE HANDLE AND LOCK CYLINDER ASSEMBLY—R. H. Front	1
. . .	BO 70526	Screw (No. 10-32x5/8")	2
. . .	BO 31240	Key	2
17	BO 81809	OUTSIDE HANDLE ASSEMBLY	3
18	BO 70526	Screw (No. 10-32x5/8")	6
. . .	BO 81664	Inside handle	4
. . .	BO 18470	Screw (No. 10-32x5/8")	8
19	BO 81662	Pull-to handle	2
. . .	BO 70044	Screw (No. 10-32x7/8")	4
. . .	BO 81778	Inside door handle spring	4
. . .	BO 82528	Inside door handle spring plate	4

DOOR DOVETAILS AND BUMPERS

20	BO 79946	Dovetail complete—female	4
. . .	BO 79228	Dovetail case	4
. . .	BO 18458	Screw (1/4"-20x11/16")	8
. . .	BO 70399	Clinch nut (1/4"-20)	8
. . .	BO 18475	Shakeproof lockwasher (1/4" countersunk)	8
. . .	BO 79150	Rubber bumper—dovetail	8
. . .	BO 79149	Rubber bumper retainer	4
21	BO 78994	Dovetail—male	4
. . .	BO 78995	Dovetail plate	4
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	8
. . .	BO 18475	Shakeproof lockwasher (1/4" countersunk)	8
. . .	BO 78596	Striker plate—door lock	4
. . .	BO 18464	Screw (1/4"-20x11/16" special)	8
. . .	BO 12120	Nut (1/4"-20x1/4" square)	8
22	BO 75151	Rubber bumper—door	4
. . .	BO 75152	Rubber bumper retainer	4
. . .	BO 18458	Rubber bumper screw (1/4"-20x11/16" oval head)	8

DOOR GLASS AND CHANNELS

. . .	78808	Door glass (not supplied—see note page 55)	4
. . .	BO 78724	Bumper—door glass	4
. . .	BO 78823	Cork—door glass—thick.	4
. . .	BO 78824	Cork—door glass—medium	4

DOOR GLASS AND CHANNELS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 78825	Cork—door glass—thick	4
		Door glass top channel—see weatherstrips	
23	BO 81535	DOOR GLASS SIDE CHANNEL ASSEMBLY—front door	4
24	BO 81536	DOOR GLASS SIDE CHANNEL ASSEMBLY—rear door	4
. . .	BO 78581	DOOR GLASS BOTTOM CHANNEL ASSEMBLY—R. H	2
. . .	BO 78582	DOOR GLASS BOTTOM CHANNEL ASSEMBLY—L. H	2
. . .	BO 75261	Clip—side channel	16

DOOR WEATHERSTRIPS AND TRIM RETAINERS

. . .	BO 79044	DOOR GLASS TOP WEATHERSTRIP AND RETAINER ASSEMBLY	4
. . .	BO 79043	DOOR GLASS BELT WEATHERSTRIP AND RETAINER ASSEMBLY—outer	4
. . .	BO 79138	Door glass belt weatherstrip—inner	4
. . .	BO 18182	Screw (No. 8x1/2" sheet metal)	24
. . .	BO 79054	FRONT DOOR BOTTOM WEATHERSTRIP AND RETAINER ASSEMBLY	2
. . .	BO 79055	REAR DOOR BOTTOM WEATHERSTRIP AND RETAINER ASSEMBLY	2
. . .	BO 79057	REAR DOOR BOTTOM EXTENSION WEATHERSTRIP AND RETAINER ASSEMBLY—R. H	
. . .	BO 79058	REAR DOOR BOTTOM EXTENSION WEATHERSTRIP AND RETAINER ASSEMBLY—L. H	1
. . .	BO 79071	DOOR TRIM PANEL RETAINER ASSEMBLY—R. H. front—L. H. rear—trimmed	3
. . .	BO 79072	DOOR TRIM PANEL RETAINER ASSEMBLY—L. H. front—R. H. rear—trimmed.	3
. . .	BO 79052	DOOR TRIM PANEL RETAINER ASSEMBLY—R. H. rear door rear—trimmed	1
. . .	BO 79053	DOOR TRIM PANEL RETAINER ASSEMBLY—L. H. rear door rear—trimmed.	1
. . .	BO 79056	DOOR TRIM PANEL RETAINER ASSEMBLY—rear door extension—trimmed.	2
. . .	BO 18447	Screw (No. 10-32x5/8" round head)	66

DOOR WINDLACE

. . .	BO 79736	WINDLACE AND RETAINER ASSEMBLY (top) front R.—rear L.	2
. . .	BO 79737	WINDLACE AND RETAINER ASSEMBLY (top) front L.—rear R.	2
. . .	BO 82651	WINDLACE AND RETAINER ASSEMBLY—R. H. front door lock pillar	2
. . .	BO 82652	WINDLACE AND RETAINER ASSEMBLY—L. H. front door lock pillar	2
. . .	BO 18470	Screw (No. 10-32x5/8")	4
. . .	BO 18480	Finish washer	4
. . .	CO 79710	WINDLACE AND RETAINER ASSEMBLY—center pillar	4
. . .	BO 79740	WINDLACE AND RETAINER ASSEMBLY—R. H. rear door hinge pillar	1
. . .	BO 79741	WINDLACE AND RETAINER ASSEMBLY—L. H. rear door hinge pillar	1
. . .	BO 18464	Screw (1/4"-20x11/16" special head)	10

DOOR FINISH STRIPS

25	CO 81643	DOOR WINDOW FINISH MOULDING AND WEATHERSTRIP ASSEMBLY	4
. . .	BO 70455	Screw (No. 8-32x5/8")	32
. . .	BO 79746	Door finish strip—top—trimmed	4

DOOR WINDOW REGULATOR

. . .	BO 79240	DOOR WINDOW REGULATOR ASSEMBLY—R. H.	2
. . .	BO 79241	DOOR WINDOW REGULATOR ASSEMBLY—L. H	2
. . .	BO 18458	Screw (1/4"-20x11/16" oval head)	12
. . .	BO 18475	Shakeproof lockwasher	12
. . .	BO 76339	Coil spring	4
. . .	BO 80383	Pinion	4
. . .	BO 80380	ARM AND SECTOR ASSEMBLY—R. H.	2
. . .	BO 80381	ARM AND SECTOR ASSEMBLY—L. H	2
. . .	BO 80353	Regulator arm roller	4
. . .	BO 80393	Regulator arm roller spring	2
. . .	BO 80382	Regulator arm roller spring washer	2
26	BO 81637	Regulator handle	4
27	BO 79294	Regulator handle escutcheon plate	4
. . .	BO 79308	Regulator handle escutcheon pin	4
. . .	BO 79709	Regulator handle spring	4

REAR SECTION

REAR PILLAR

Illus. No	Part No.	Description	Per Car
. . .	CO 81469	REAR BODY PILLAR ASSEMBLY—R. H.	1
. . .	CO 81470	REAR BODY PILLAR ASSEMBLY—L. H.	1
. . .	BO 70398	Clinch nut (1/4"-20 round type—long)	18

QUARTER GLASS AND CHANNELS

. . .	81607	Quarter window glass (not supplied, see note page 55)	2
. . .	BO 81608	Quarter window glass cork shim—thick	2
. . .	BO 81609	Quarter window glass cork shim—medium	2
. . .	BO 81610	Quarter window glass cork shim—thin	2
29	BO 81538	QUARTER WINDOW SIDE CHANNEL ASSEMBLY (felt)	4
. . .	BO 81596	QUARTER WINDOW CHANNEL ASSEMBLY—bottom—R. H	1
. . .	BO 81597	QUARTER WINDOW CHANNEL ASSEMBLY—bottom—L. H.	1
. . .	BO 81617	QUARTER WINDOW HEADER AND SIDE CHANNEL RETAINER ASSEMBLY	2
. . .	BO 81595	Quarter window glass stop	2
. . .	BO 18447	Screw (No. 10-32x5/8" round head)	2
. . .	BO 18479	Nut (No. 10-32x3/16" square)	2

QUARTER WINDOW WEATHERSTRIP AND RETAINERS

. . .	BO 81611	Quarter window weatherstrip—top	2
. . .	BO 81736	QUARTER WINDOW BELT WEATHERSTRIP AND RETAINER ASSEMBLY—outer	2
. . .	BO 18482	Screw (No. 8x IC flat head)	
. . .	BO 81612	Quarter window glass belt weatherstrip—inner	2

QUARTER WINDOW FRAME AND FINISH MOULDING AND CURTAINS

30	BO 81660	QUARTER WINDOW FRAME FINISH MOULDING ASSEMBLY—R. H.	1
. . .	BO 81661	QUARTER WINDOW FRAME FINISH MOULDING ASSEMBLY—L. H.	1
. . .	BO 81739	QUARTER WINDOW FRAME ASSEMBLY—R. H.—wood	1
. . .	BO 81740	QUARTER WINDOW FRAME ASSEMBLY—L. H.—wood	1
. . .	BO 82767	QUARTER WINDOW CURTAIN AND ROLLER ASSEMBLY (with uph. change)	1
. . .	BO 82180	QUARTER WINDOW CURTAIN AND ROLLER ASSEMBLY	1

QUARTER WINDOW REGULATOR

. . .	BO 81618	QUARTER WINDOW REGULATOR ASSEMBLY—R. H	1
. . .	BO 81619	QUARTER WINDOW REGULATOR ASSEMBLY—L. H.	1
. . .	BZ 12799	Nut (No. 10x32x1/8")	8
. . .	BO 70304	Screw (No. 10x32x3/4" flat head)	8
. . .	BO 80353	Regulator arm roller	2
. . .	BO 80382	Regulator arm roller washer	2
. . .	BO 84506	REGULATOR ARM AND SECTOR ASSEMBLY—R. H	1
. . .	BO 84507	REGULATOR ARM AND SECTOR ASSEMBLY—L. H	1
. . .	BO 80393	Regulator arm roller spring	2
31	BO 81663	Regulator handle	2
. . .	BO 79308	Regulator handle pin	2
32	BO 81639	Regulator handle escutcheon	2
. . .	BO 79709	Regulator handle escutcheon spring	2

OUTSIDE PANELS AND MOULDINGS

33	CO 81137	BACK PANEL ASSEMBLY—upper (includes quarter panels)	1
. . .	CO 81178	Back panel—lower	1
. . .	CO 81426	WHEELHOUSE PANEL ASSEMBLY—R. H.	1
34	CO 81427	WHEELHOUSE PANEL ASSEMBLY—L. H	I
. . .	BO 70045	Rivet (No. 5x5/16" tubular)	12
. . .	BO 18333	Rivet (3/16"x1/4" tubular)	11
. . .	BO 18459	Screw (No. 10-32x1/2" round head)	10
. . .	BO 18479	Nut (No. 10-32x3/16" square)	12
. . .	CO 78606	Moulding—upper to lower back panels	1
. . .	BO 70004	Rivet (3/16"x1/2") truss head	11
. . .	BO 70288	Rivet (3/16"x9/16" truss head)	4

REAR UPHOLSTERED PANELS

Illus. No	Part No.	Description	Per Car
35	CO 82120	QUARTER TRIM PANEL ASSEMBLY—R. H.—lower	1
. . .	CO 82121	QUARTER TRIM PANEL ASSEMBLY—L. H.—1ower	1

LEATHER TRIM—EXPORT

(Parts that are different from cloth-trimmed jobs)

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	2
. . .	CO 82801	BODY DOOR HEADER WI NDLACE AND RETAINER ASSEMBLY—left	2
. . .	CO 82805	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82806	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	2
. . .	CO 82808	DOOR TRIM PANEL RETAINER ASSEMBLY—left	2
. . .	CO 83007	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 83008	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82815	REAR DOOR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82819	REAR BODY PILLAR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82823	REAR DOOR REAR TRIM RETAINER ASSEMBLY—right	1
. . .	CO 82824	REAR DOOR REAR TRIM RETAINER ASSEMBLY—left	1
. . .	CO 82857	DOOR TRIM PANEL ASSEMBLY—front right and left..	2
. . .	CO 82859	REAR DOOR TRIM PANEL ASSEMBLY—right	1
. . .	CO 82860	REAR DOOR TRIM PANEL ASSEMBLY—left	1
. . .	CO 82869	CENTER PILLAR TRIM PANEL AND WINDLACE ASSEMBLY—right and left	2
. . .	CO 82876	QUARTER TRIM PANEL ASSEMBLY—lower right	1
. . .	CO 82877	QUARTER TRIM PANEL ASSEMBLY—lower left	1
. . .	CO 82928	Rear seat cushion complete	1
. . .	CO 82941	Rear seat back complete	1
. . .	CO 82956	Front seat cushion complete	1
. . .	CO 82965	Front seat back complete	1
. . .	CO 82976	Front seat back panel trim complete	1
. . .	CO 83001	WINDSHIELD HEAD TRIM PANEL ASSEMBLY	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	2

REAR WINDOW

. . .	CO 81646	REAR WINDOW FRAME ASSEMBLY.	1
. . .	81626	Glass—rear window (see note page 55)	1
. . .	BO 81579	MOULDING ASSEMBLY	
36	BO 82215	CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 79455	Curtain cord	2
. . .	BO 76842	Channel—long	2
. . .	BO 81503	Channel—short	2

OP SECTION

ROOF

. . .	BO 82741	Roof rail—front	1
. . .	BO 82743	Roof rail—rear	1
. . .	BO 82746	Roof rail—side R. H.	1
. . .	BO 82747	Roof rail—side L. H.	1
. . .	BO 82750	Bow No. I	1
. . .	BO 82753	Bow No. 2	1
. . .	BO 82756	Bow No. 3	1
. . .	BO 82757	Bow No. 4	1
. . .	BO 82759	Bow No. 5	1
. . .	BO 82760	Bow No. 6	1
37	CO 82179	Top deck	1
. . .	BO 79849	Binding—roof rail (specify length)	2
. . .	CO 81654	Drip moulding—R. H.	1
38	CO 81655	Drip moulding—L. H.	1
. . .	BO 81656	Drip moulding finish strip—R. H.	1
39	BO 81657	Drip moulding finish strip—L. H	1
. . .	BO 70070	Nail (5/64"x1")	48
46	BO 81710	Rear view mirror	1
. . .	BO 70044	Screw (No. 10-32x7/8")	2
. . .	BO 81705	Rear view mirror spacer	1

DOME LAMP

41	BO 81640	DOME LAMP ASSEMBLY	1
. . .	BO 81783	DOME LAMP DOOR AND GLASS ASSEMBLY	1
42	BO 81638	SWITCH AND ESCUTCHEON PLATE ASSEMBLY	1
. . .	BO 70416	Screw (No. 6-32x5/8")	2
. . .	BO 70467	Screw (No. 6-32x3/16" on switch)	2

ASH TRAY

Illus. No	Part No.	Description	Per Car
35	CO 82120	QUARTER TRIM PANEL ASSEMBLY—R. H.—lower	1
. . .	CO 82121	QUARTER TRIM PANEL ASSEMBLY—L. H.—1ower	1

LEATHER TRIM—EXPORT

(Parts that are different from cloth-trimmed jobs)

. . .	CO 82800	BODY DOOR HEADER WINDLACE AND RETAINER ASSEMBLY—right	2
. . .	CO 82801	BODY DOOR HEADER WI NDLACE AND RETAINER ASSEMBLY—left	2
. . .	CO 82805	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 82806	REAR BODY PILLAR WINDLACE AND RETAINER ASSEMBLY—left . .	1
. . .	CO 82807	DOOR TRIM PANEL RETAINER ASSEMBLY—right	2
. . .	CO 82808	DOOR TRIM PANEL RETAINER ASSEMBLY—left	2
. . .	CO 83007	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—right	1
. . .	CO 83008	BODY LOCK PILLAR WINDLACE AND RETAINER ASSEMBLY—left	1
. . .	CO 82815	REAR DOOR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82819	REAR BODY PILLAR EXTERIOR TRIM RETAINER ASSEMBLY	2
. . .	CO 82823	REAR DOOR REAR TRIM RETAINER ASSEMBLY—right	1
. . .	CO 82824	REAR DOOR REAR TRIM RETAINER ASSEMBLY—left	1
. . .	CO 82857	DOOR TRIM PANEL ASSEMBLY—front right and left..	2
. . .	CO 82859	REAR DOOR TRIM PANEL ASSEMBLY—right	1
. . .	CO 82860	REAR DOOR TRIM PANEL ASSEMBLY—left	1
. . .	CO 82869	CENTER PILLAR TRIM PANEL AND WINDLACE ASSEMBLY—right and left	2
. . .	CO 82876	QUARTER TRIM PANEL ASSEMBLY—lower right	1
. . .	CO 82877	QUARTER TRIM PANEL ASSEMBLY—lower left	1
. . .	CO 82928	Rear seat cushion complete	1
. . .	CO 82941	Rear seat back complete	1
. . .	CO 82956	Front seat cushion complete	1
. . .	CO 82965	Front seat back complete	1
. . .	CO 82976	Front seat back panel trim complete	1
. . .	CO 83001	WINDSHIELD HEAD TRIM PANEL ASSEMBLY	1
. . .	CO 83003	DOOR HEADER TRIM PANEL ASSEMBLY	2

REAR WINDOW

. . .	CO 81646	REAR WINDOW FRAME ASSEMBLY.	1
. . .	81626	Glass—rear window (see note page 55)	1
. . .	BO 81579	MOULDING ASSEMBLY	
36	BO 82215	CURTAIN AND ROLLER ASSEMBLY	1
. . .	BO 79455	Curtain cord	2
. . .	BO 76842	Channel—long	2
. . .	BO 81503	Channel—short	2

TOP SECTION

ROOF

. . .	BO 82741	Roof rail—front	1
. . .	BO 82743	Roof rail—rear	1
. . .	BO 82746	Roof rail—side R. H.	1
. . .	BO 82747	Roof rail—side L. H.	1
. . .	BO 82750	Bow No. I	1
. . .	BO 82753	Bow No. 2	1
. . .	BO 82756	Bow No. 3	1
. . .	BO 82757	Bow No. 4	1
. . .	BO 82759	Bow No. 5	1
. . .	BO 82760	Bow No. 6	1
37	CO 82179	Top deck	1
. . .	BO 79849	Binding—roof rail (specify length)	2
. . .	CO 81654	Drip moulding—R. H.	1
38	CO 81655	Drip moulding—L. H.	1
. . .	BO 81656	Drip moulding finish strip—R. H.	1
39	BO 81657	Drip moulding finish strip—L. H	1
. . .	BO 70070	Nail (5/64"x1")	48
46	BO 81710	Rear view mirror	1
. . .	BO 70044	Screw (No. 10-32x7/8")	2
. . .	BO 81705	Rear view mirror spacer	1

DOME LAMP

41	BO 81640	DOME LAMP ASSEMBLY	1
. . .	BO 81783	DOME LAMP DOOR AND GLASS ASSEMBLY	1
42	BO 81638	SWITCH AND ESCUTCHEON PLATE ASSEMBLY	1
. . .	BO 70416	Screw (No. 6-32x5/8")	2
. . .	BO 70467	Screw (No. 6-32x3/16" on switch)	2

CARPETS, MATS AND PADS—Continued

Illus. No	Part No.	Description	Per Car
. . .	BO 70010	Carpet fasteners	5
50	BO 82102	Rear seat heel board carpet	1
. . .	BO 70280	Carpet fastener	8
51	BO 81981	FRONT FLOOR RUBBER MAT AND PAD ASSEMBLY—L. H. D.	1
. . .	BO 81982	FRONT FLOOR RUBBER MAT AND PAD ASSEMBLY—R. H. D.	1
. . .	BO 12247	Lift-the-dot fastener socket plate	4
. . .	BO 18313	Lift-the-dot fastener socket	4
. . .	BO 18349	Lift-the-dot fastener socket post	4
. . .	BZ 12799	Nut (No. 10-32x3/8' hex.)	4
. . .	BO 81847	Dash pad	1
. . .	BO 18359	Clinch button (3/16"x1-1/2")	7
. . .	BO 79732	Cowl panel silencer felt	1
		SCUFF PLATE	
52	BO 81600	Scuff plate—front	2
. . .	BO 81603	Scuff plate—rear R. H.	1
53	BO 81604	Scuff plate--rear L. H.	1
		SILL WOOD FILLERS	
. . .	CO 81764	Sill filler—R. H	1
. . .	CO 81765	Sill filler—L. H.	1

Windshield and body glass for Essex cars is not carried in stock by us. The firms listed below have been furnished with blueprints of Essex glass, and in event of ordering from them be sure to supply the correct part number of the glass required.

PITTSBURGH PLATE GLASS COMPANY WAREHOUSES

Akron, Ohio	101 Lincoln St.
Albany, N. Y.	Ferry and Broadway
Atlanta, Ga.	56-60 W. Alabama St.
Baltimore, Md.	8-12 Paca St.
Birmingham, Ala.	2nd and 29th Sts.
Boston, Mass.	99-103 Portland St.
Brooklyn, N. Y.	3rd Ave. and Dean St.
Charlotte, N. C.	
Buffalo, N. Y.	101-107 Seneca St.
Chicago, Ill.	431-451 St. Clair St.
Cincinnati, Ohio	Broadway and Court Sts.
Cleveland, Ohio	3849 Hamilton Ave.
Columbus, Ohio	133-135 E. Spring St.
Dallas, Texas	Pearl St. and Pacific Ave.
Davenport, Iowa	414-428 Scott St.
Denver, Colorado	2552-60 Blake St.
Des Moines, Iowa	East Fourth and Vine Sts.
Detroit, Mich.	Hamilton and Holden Aves.
Ft. Worth, Texas	1105-7 Calhoun St.
Grand Rapids, Mich.	21-23 Ionia Ave., S. W.
Harrisburg, Pa.	17th and Brockwood Sts.
High Point, N. C.	431 Hamilton St.
Houston, Tex.	Crawford and Commerce Sts.
Indianapolis, Ind	1915 Madison Ave.
Jacksonville, Fla.	1530-32 Enterprise St.
Kansas City, Mo.	Fifth and Wyandotte Sts.
Long Island City, N. Y.	193 Hunterspoint Ave.
Memphis, Tenn.	181-3-5 Madison Ave.
Milwaukee, Wis	492-502 Market St.
Minneapolis, Minn.	616 South Third St.
Mt. Vernon, N. Y.	
Newark, N. J.	Elizabeth Ave. and Peddie St.
New Haven, Conn.	184 Brewery St.
New Orleans, La.	Girod and Commerce Sts.
Oklahoma City, Okla.	116-118 E. Grand Ave.
Omaha, Nebr.	14th and Jones Sts.
Philadelphia, Pa.	16th and Indiana Ave.
Pittsburgh, Pa.	632-642 Duquesne Way
Rochester, N. Y.	149 State St.
St. Louis, Mo.	10th and Spruce Sts.
St. Paul, Minn.	459-61 Jackson St.
San Antonio, Texas	1420-26 South Alamo St.
Savannah, Ga.	731-33 Wheaton St.
Shreveport, La.	Fannin and Commerce St.
Springfield, Mass.	126 Liberty St.
Syracuse, N. Y.	133-35 So. West St.
Tampa, Fla.	
Toledo, Ohio	2410 Albion St.
Tulsa, Okla.	

OTHER SOURCES

Boise, Idaho	W. P. Fuller Co.
Dallas, Texas	Windshield Glass Mfg. Co.
Fairfield, Iowa	Thoma & Son
Fresno, California	W. P. Fuller Co.
Lincoln, Nebraska	Western Paint & Glass Company
Los Angeles, California	W. P. Fuller Co.
Montreal, Canada	Consolidated Plate Glass Co.
Salt Lake City, Utah	W. P. Fuller Co.
San Diego, California	W. P. Fuller Co.
San Francisco, California	W. P. Fuller Co.
Seattle, Washington	C. C. Belknap Glass Co.
Spokane, Washington	W. P. Fuller Co.
Toronto, Canada	Consolidated Plate Glass Co.
Walla Walla, Washington	W. P. Fuller Co.
Yakima, Washington	W. P. Fuller Co.